



1 Pneumatic Height Adjustment

Pneumatic height adjustment is used to adjust the seat to fit different user heights. (1) Pull the lever up and lift the body out of the chair to raise the seat. (2) To lower the seat, remain seated and pull the lever up.

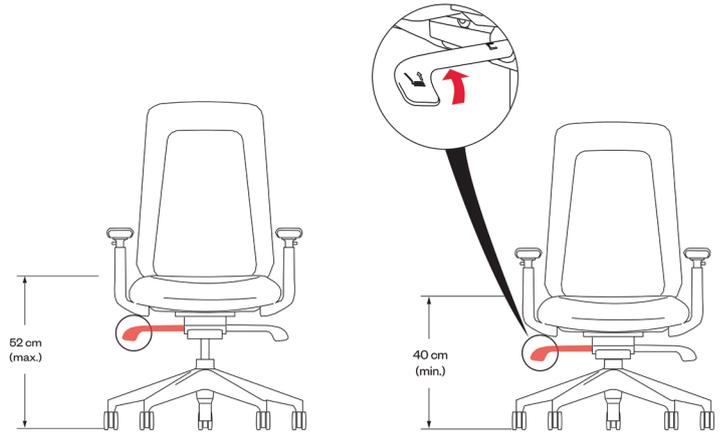


2 Seat Depth Adjustment

Seat depth adjustment moves the seat pan to accommodate different leg lengths. (1) Pull up the lever and slide the seat pan front to back.

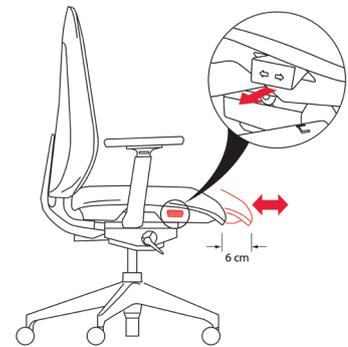


3 Back Lock

Back lock allows users to lock the back of chair at upright position for task application. (1) Pull down on the lever to activate the back lock. (2) Pull up on the lever to release the back stop.

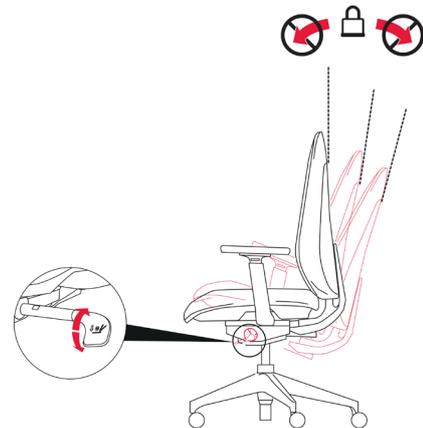

4 Back Height Adjustment

Back of chair allows user to adjust the back height as per curvature of lumbar. (1) Lift the back to raise the height of back as per requirement. (2) Slightly up the back to remove lock and can lower down back for main position.

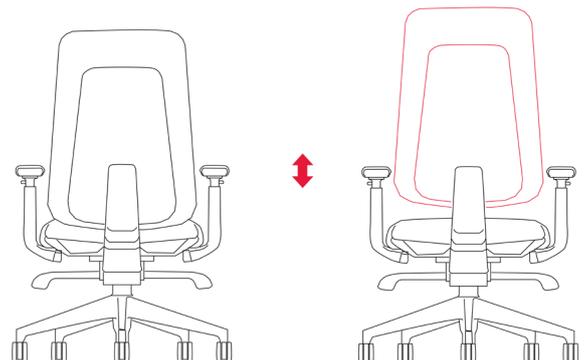

5 Arms

(1) Arm height adjustment raises and lowers the arms to keep the users shoulder in a neutral posture. To change the height of the armrest, pull up on the lever and slide the armrest up or down.

(2) Armrest side to side adjustment accomodates users with various shoulder width. Grasp the armrest cap and slide it side-to-side as needed.

(3) Armrest front-to-back adjustment allows users to get closer to their work surface while maintaining effective use of the backrest. Grasp the armrest and slide it forward or backward as needed.

(4) Armrest pivot allows the user to have proper support of the forearm when mousing or keying. To change the angle of the armrest, grasp the armrest cap and rotate the front of the armrest toward to away from the body.

