


## 1 Seat Height Adjustment

Pneumatic height adjustment is used to adjust the seat to fit different user heights. (1) Pull the lever up and lift the body out of the chair to raise the seat. (2) To lower the seat, remain seated and pull the lever up.


Seat height adjusts 120 mm from 400 mm to 520 mm on standard models and 220 mm from 580 mm to 800 mm on stool model.

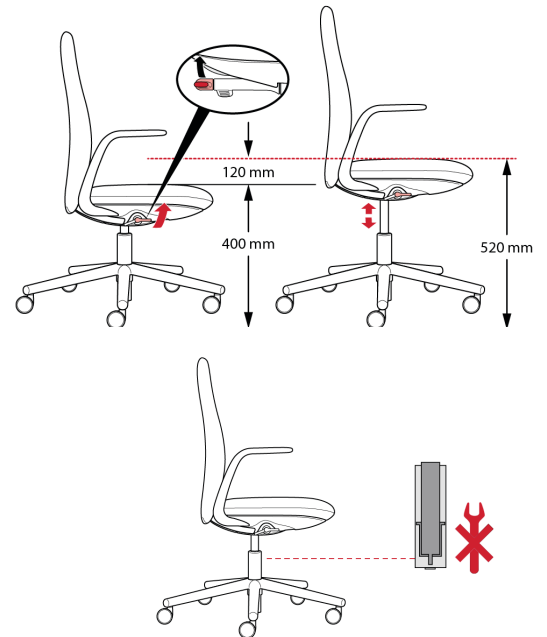

## 2 Back Lock

Back lock allows users to lock the back of chair at upright position for task application. (1) Pull up on the lever to activate back lock. (2) Push down on the lever to release.

Single position back lock to fix the backrest in the upright position. In total there are 5 back rest positions to fix.

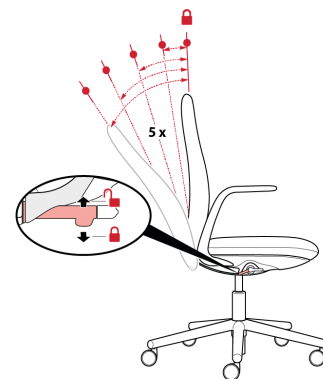

## 3 Pivoting Mechanism(optional)

A unique pivoting back accommodation mechanism allows quickly adapt to user postures without complicated adjustment controls. Pivoting mechanism is self adjusting and moves in combination with the seating mechanism to create 360° movement.

