 





JIVE®
Post Round & Extruded
 Disassembly & Recycling Instructions

Tools Required





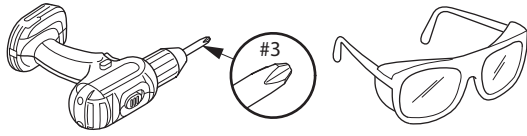


 ROUND

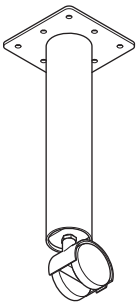

OR

     EXTRUDED

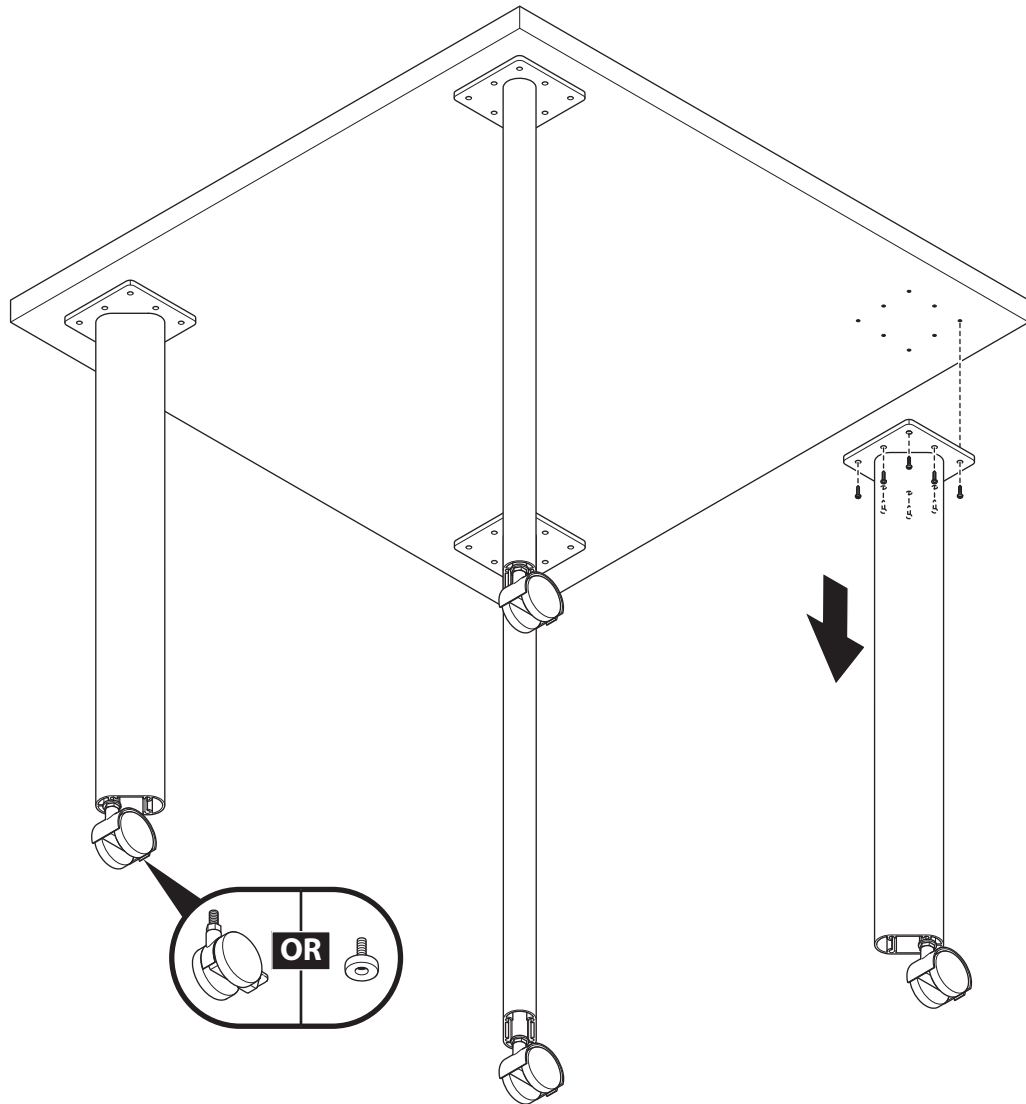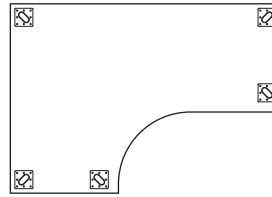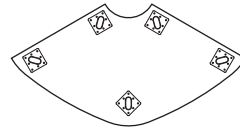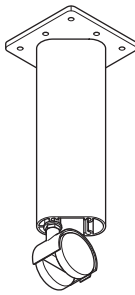

RECYCLE BINS

STEEL

 
WOOD/VENEER/LAMINATE

CUSTOMER SERVICE PHONE: 1-800-426-8562




JIVE®
C/T & Corner Post
 Disassembly & Recycling Instructions


Tools Required

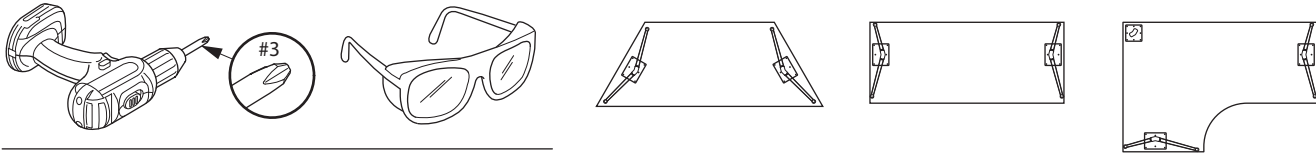

ROUND LEG



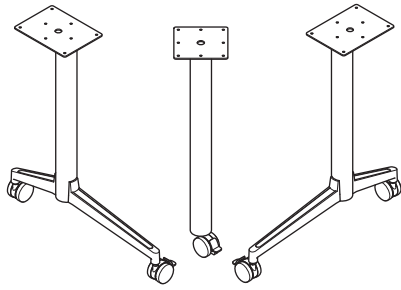 


EXTRUDED LEG

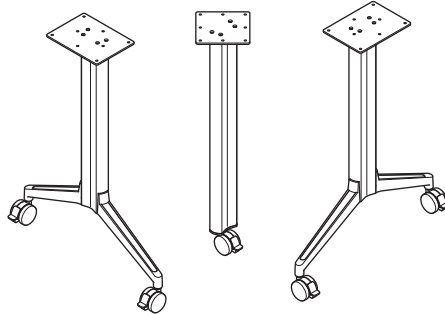 

OR

   RECYCLE BINS

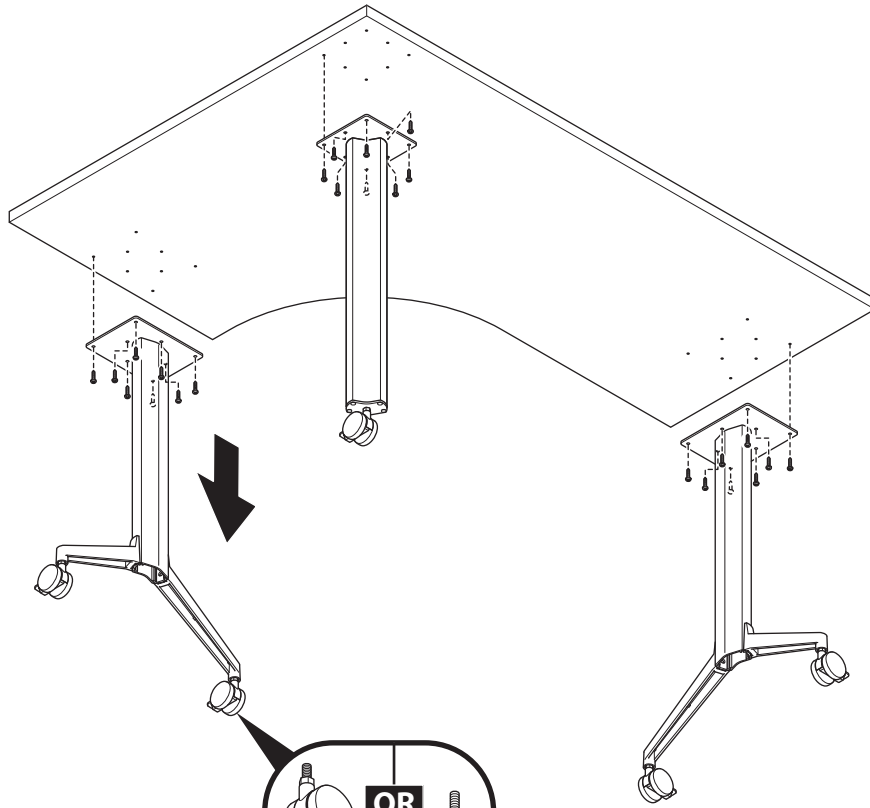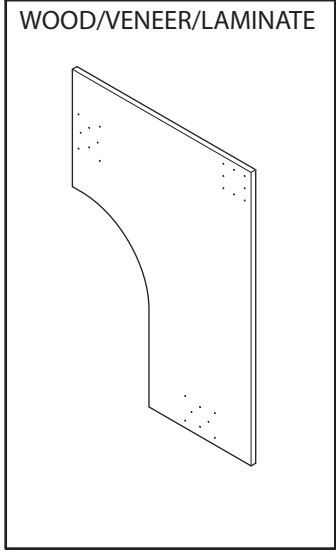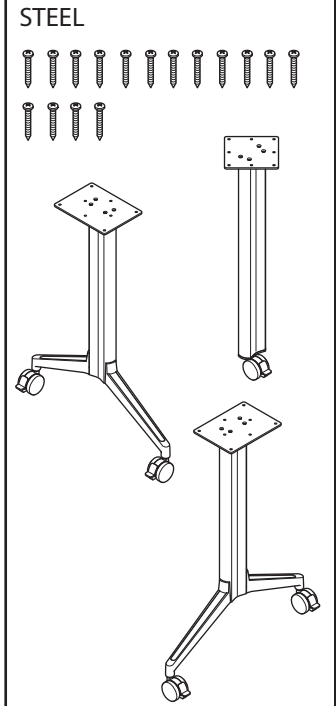

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: xxx-xxx

Page: 2 OF 4

Part No: Jive_post_recycle

Rev: 1

 
 
 
 
 
 
 
 


JIVE®

Magnetic Post



Disassembly & Recycling Instructions

Tools Required

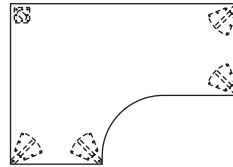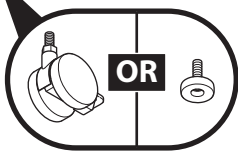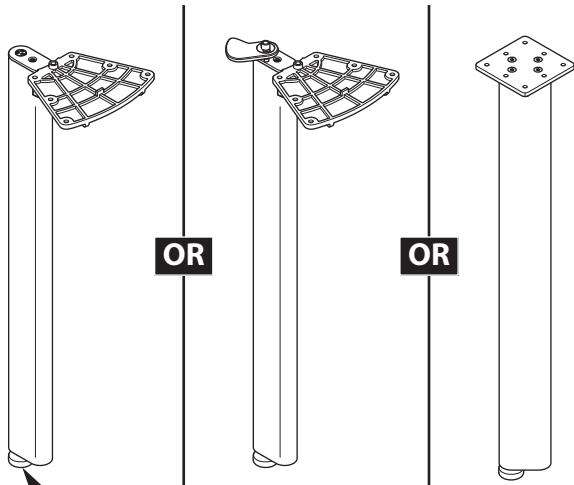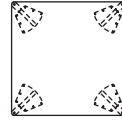
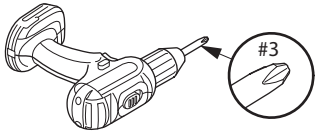


RECYCLE BINS

  STEEL

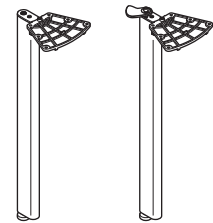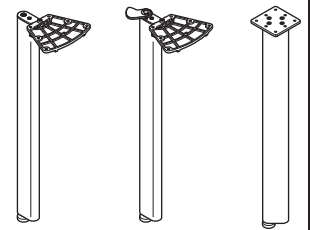

WOOD/VENEER/LAMINATE

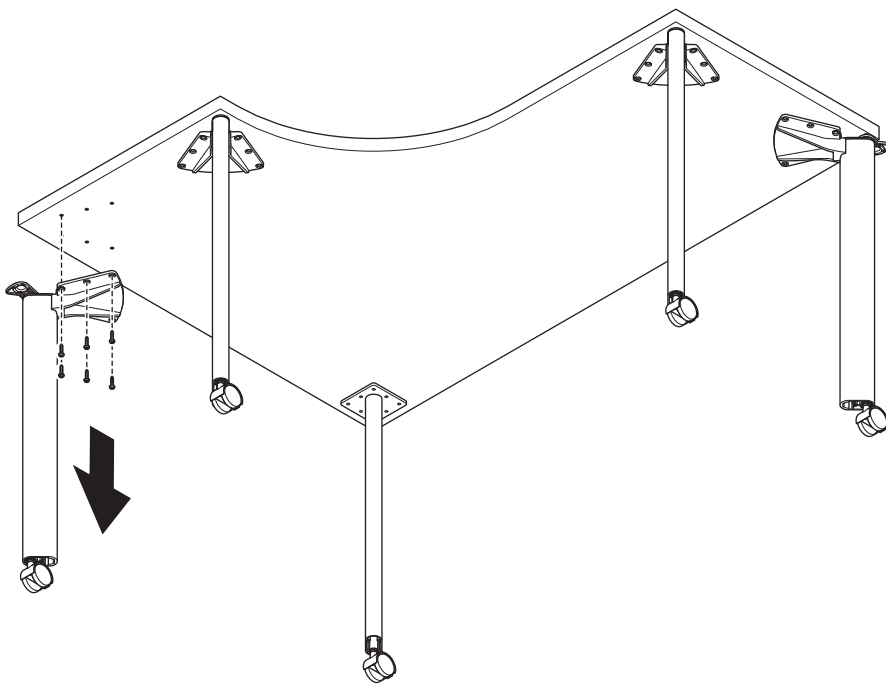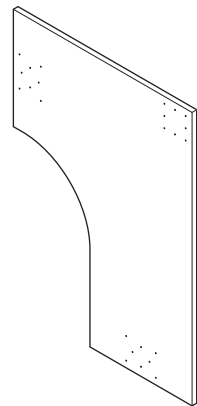  

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: xxx-xxx

Page: 3 OF 4

Part No: Jive_post_recycle

 
Rev: 1




JIVE®

X - Base, X-Power Base & Disc Base
Disassembly & Recycling Instructions



Tools Required

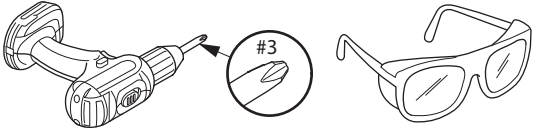

X,POWER - BASE TOPS

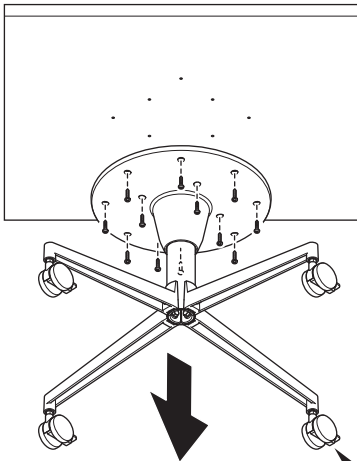 

X - BASE TOPS

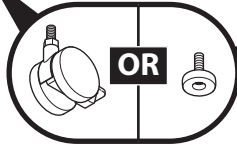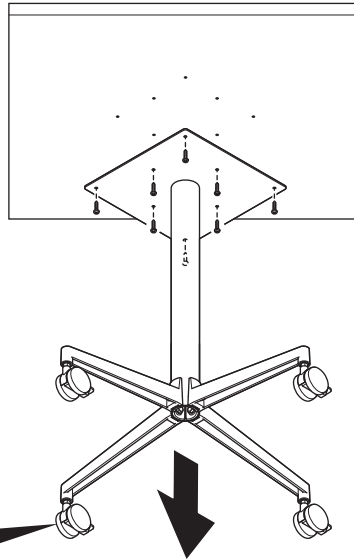  


RECYCLE BINS


STEEL

WOOD/VENEER/LAMINATE

 DISC - BASE TOPS

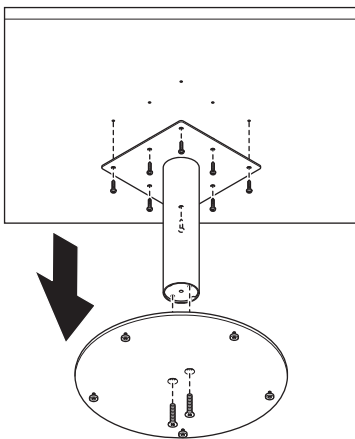

DISC - DOUBLE BASE TOPS

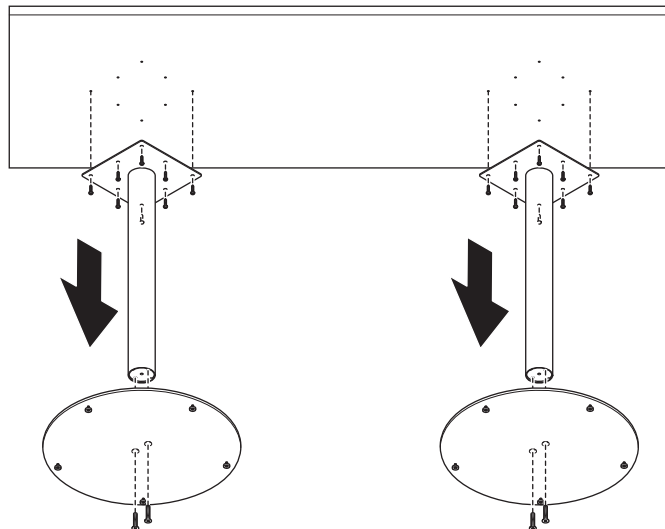 

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: xxx-xxx

Page: 4 OF 4

Part No: Jive_post_recycle

Rev: 1