



① Pneumatic Height Adjustment

Pneumatic height adjustment is used to adjust the seat to fit different user heights. (1) Pull the lever up and lift the body out of the chair to raise the seat. To lower the seat, remain seated and pull the lever up.

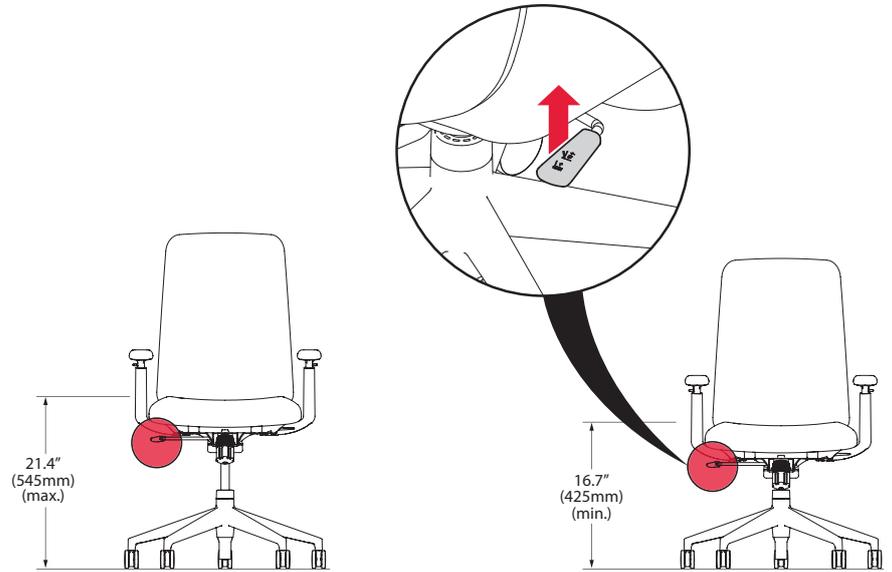


② Seat Depth Adjustment

Seat depth adjustment moves the seat pan to accommodate different leg lengths. Pull out and slide the seat pan front to back.

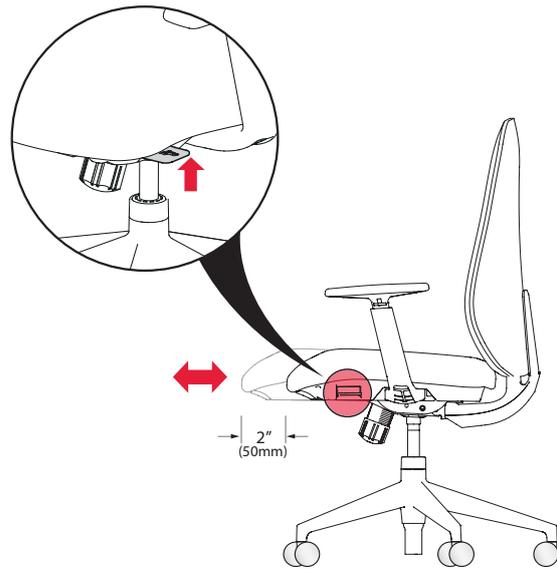


③ Back Lock

Back stop allows users to lock the back of chair at upright position for task application (1) Push the lever inward to activate the back lock. (2) Pull the lever outward to release the back stop.

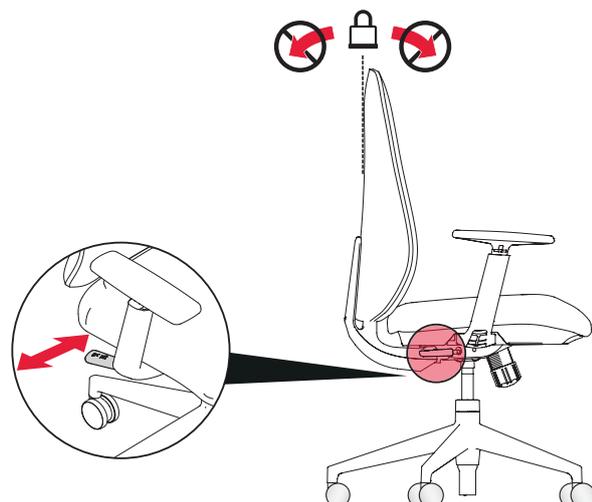


4 Back Height Adjustment

Back of chair allows user to adjust the back height as per curvature of lumbar. (1) Lift the back to raise the height of back as per requirement (2) Slightly up the back to remove lock and can lower down back for main position.

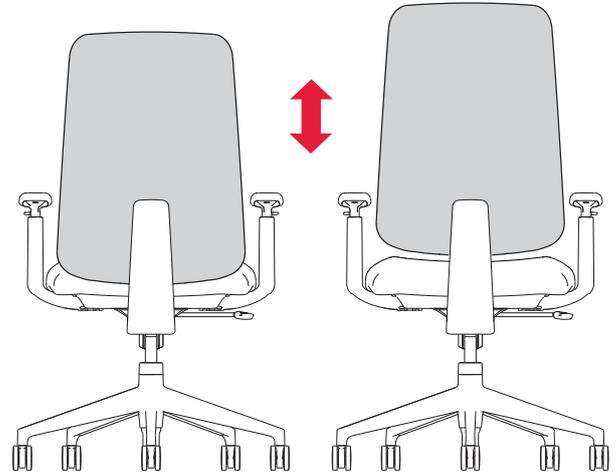

5 Arms

Arm height adjustment raises and lowers the arms to keep the users shoulder in a neutral posture. To change the height of the armrest, pull up on the lever and slide the armrest up or down.

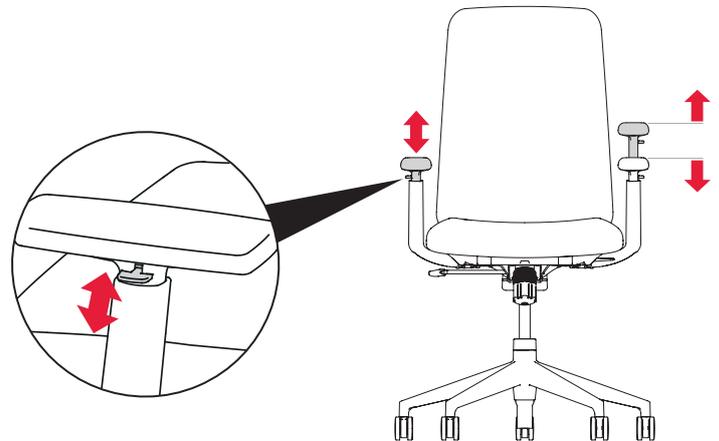

6 Tilt Tension Control

Tilt tension adjusts the force necessary for a user to recline in the chair. Turn the knob clockwise to loosen the tension and counter-clockwise to tighten the tension. Once the tension has reached its maximum in either direction, do not force the knob further.

