

REED PREMIER ®


LED Task Light

Installation Instructions

Tools Required

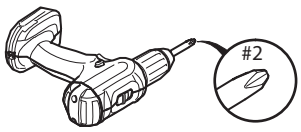

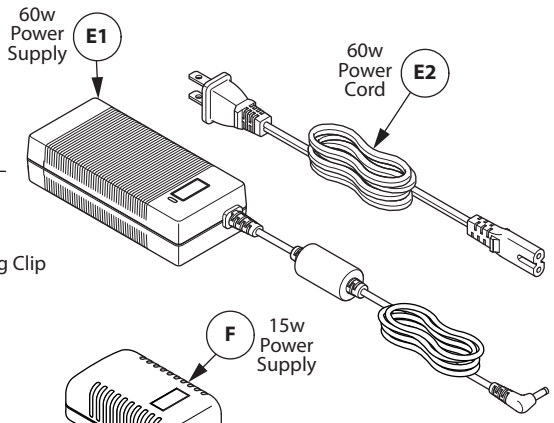

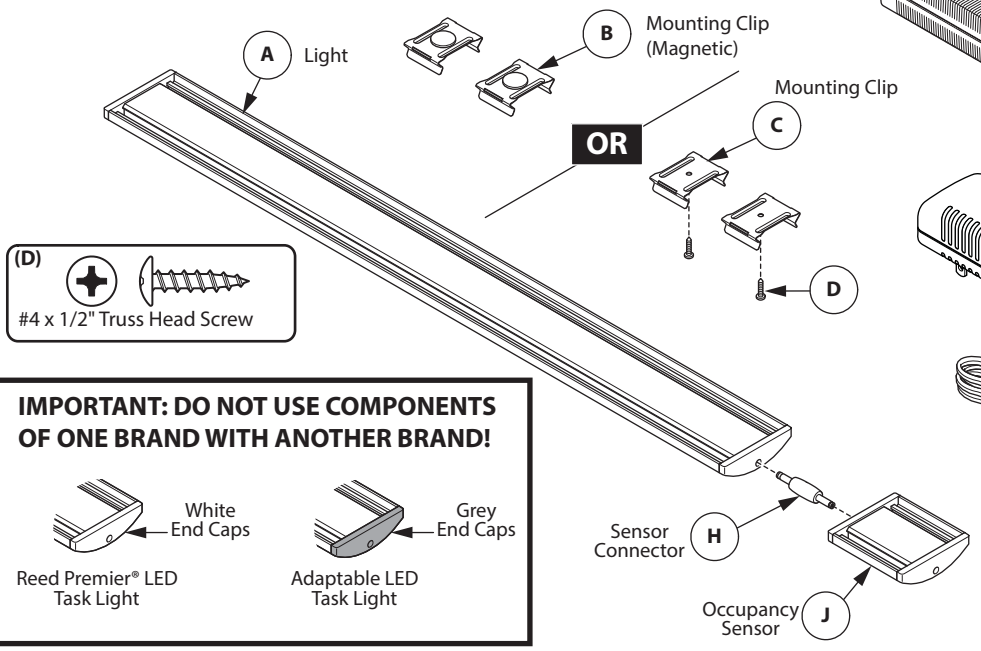


NOTE: Item **(G)** is ordered separately.

IMPORTANT: DO NOT USE COMPONENTS OF ONE BRAND WITH ANOTHER BRAND!


Reed Premier® LED Task Light

Adaptable LED Task Light

MOUNT TO STEEL SHELVES

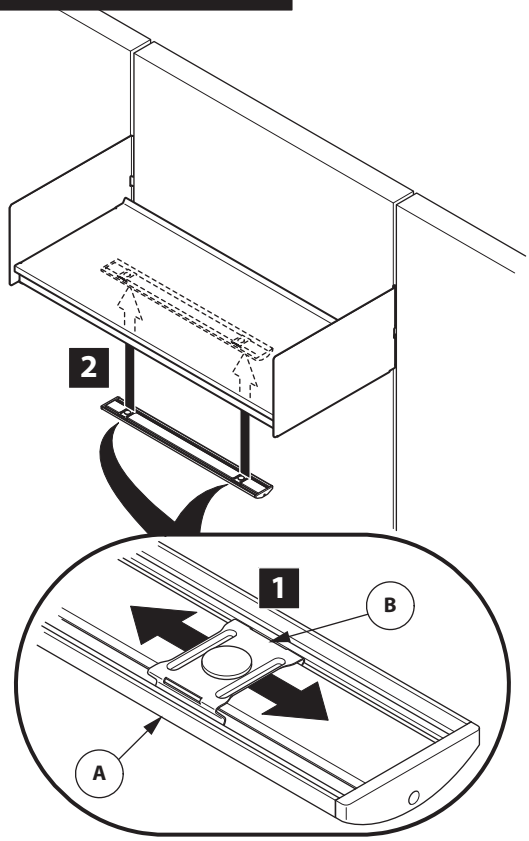


MOUNT TO WOOD SHELVES

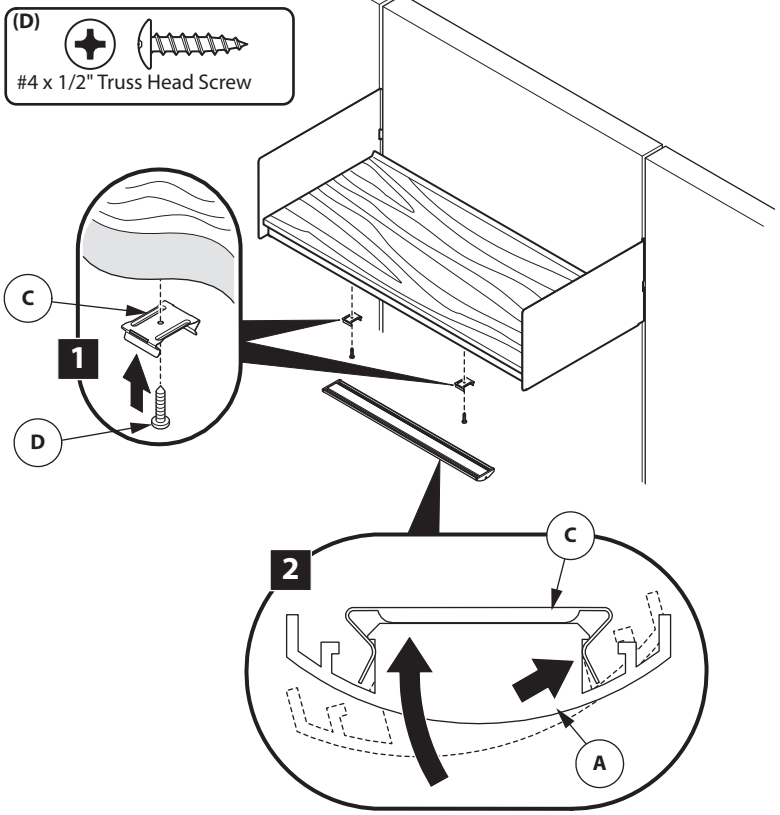

CUSTOMER SERVICE PHONE: 1-800-426-8562


15W POWER SUPPLY

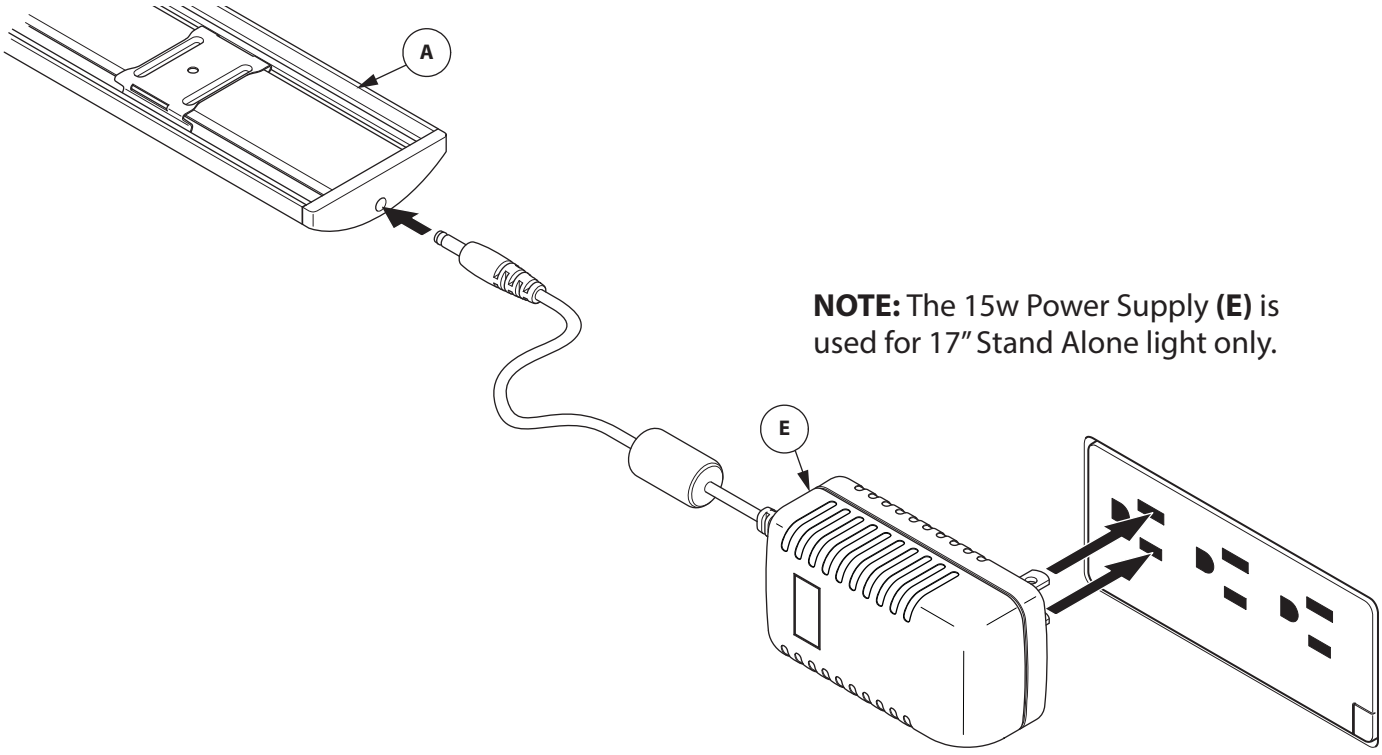

NOTE: The 15w Power Supply **(E)** is used for 17" Stand Alone light only.


OR

60W POWER SUPPLY

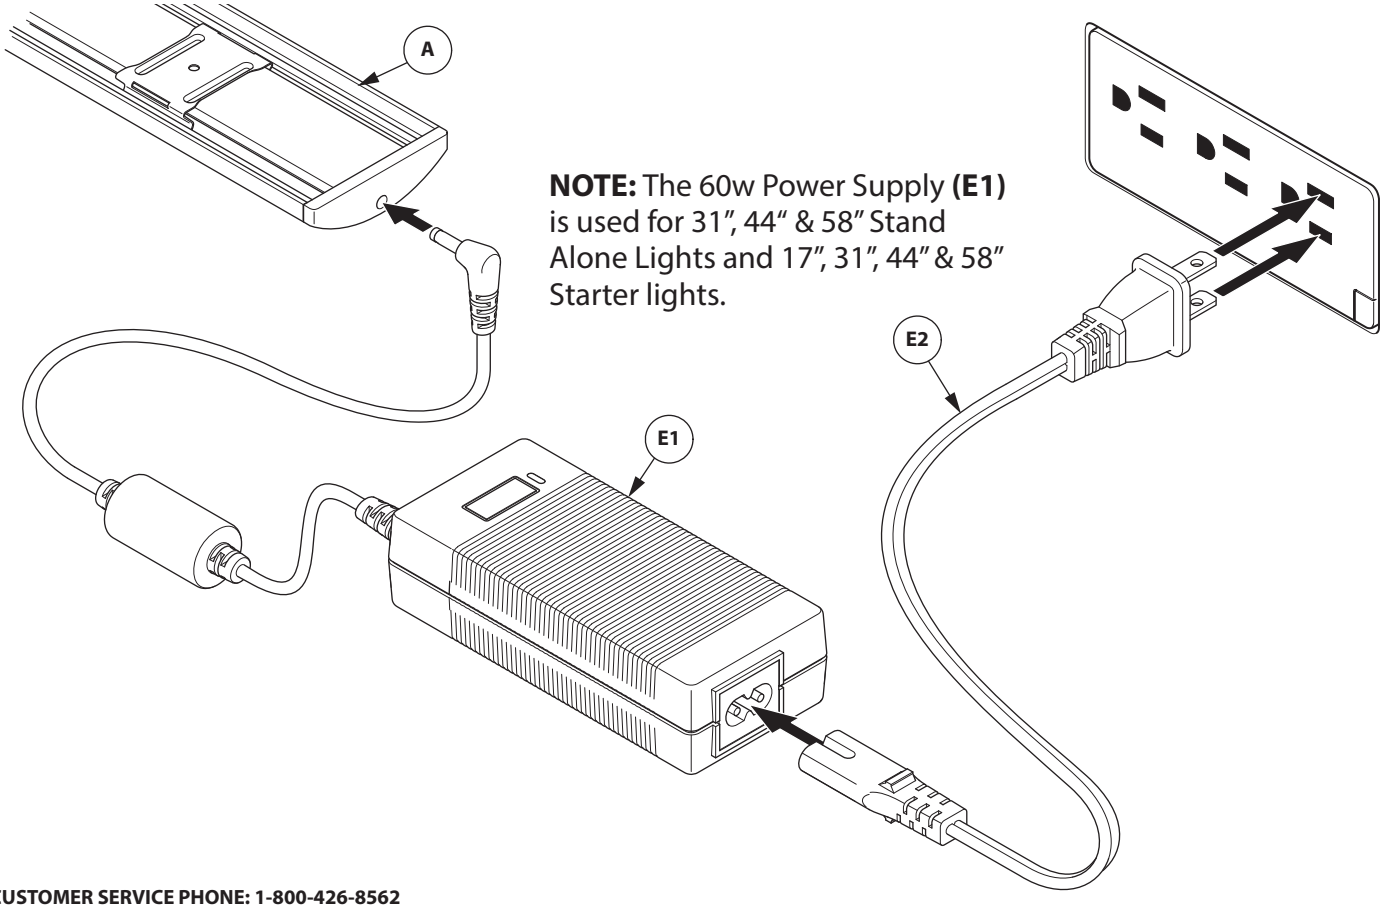


NOTE: The 60w Power Supply **(E1)** is used for 31", 44" & 58" Stand Alone Lights and 17", 31", 44" & 58" Starter lights.

OCCUPANCY SENSOR

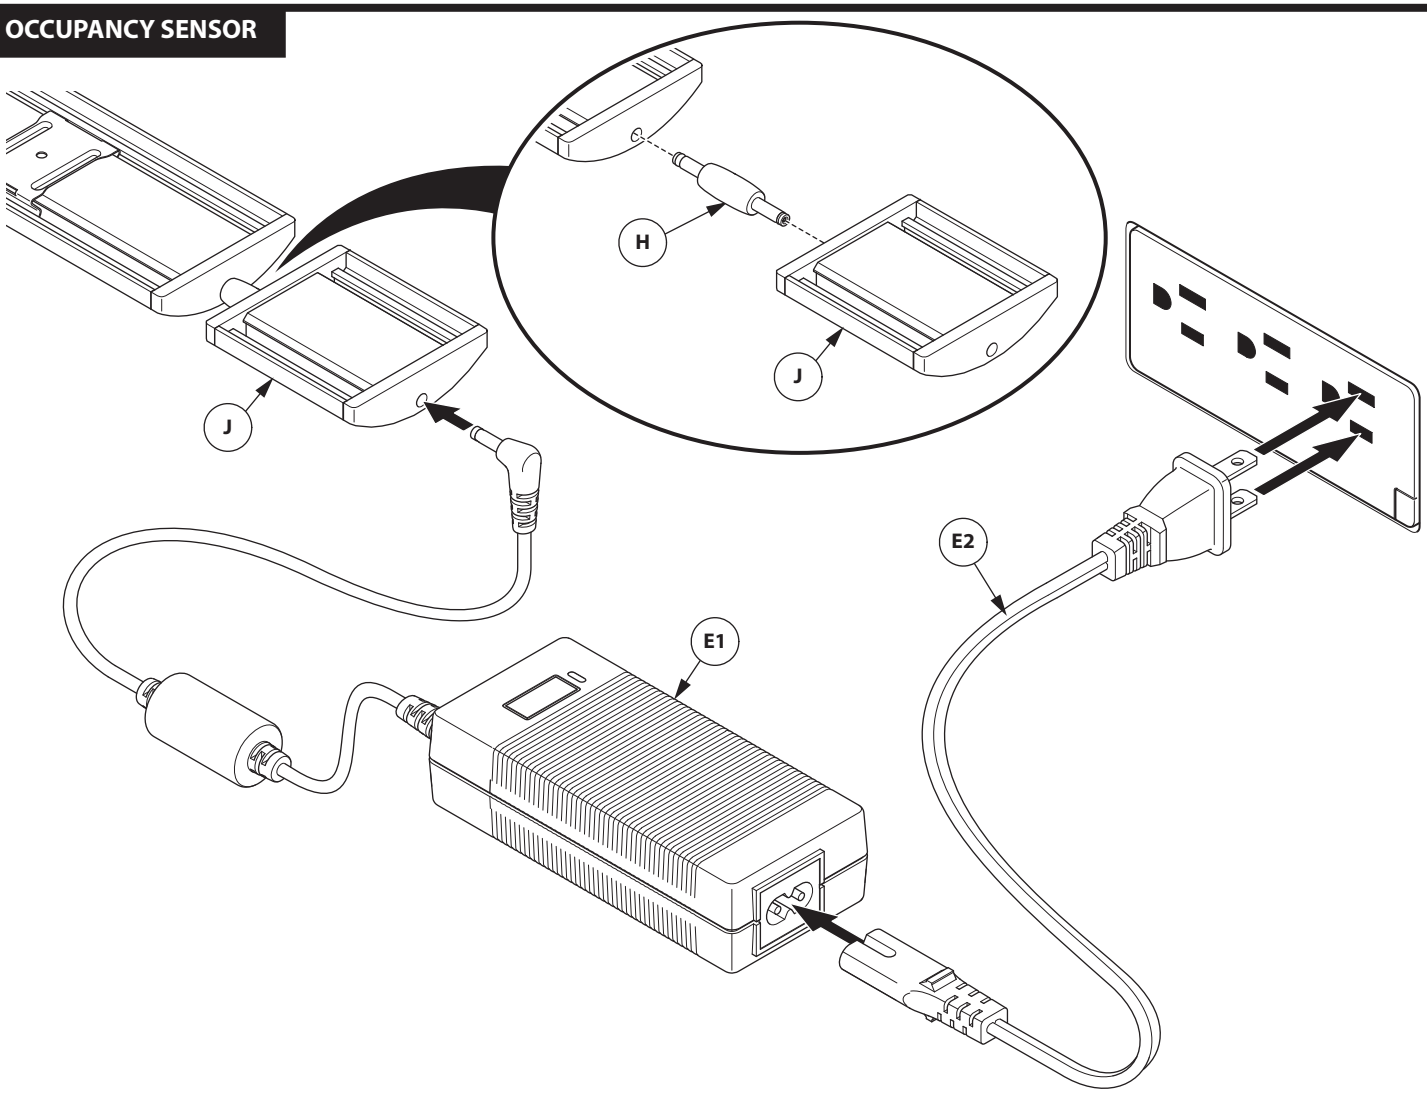


CONNECTING MULTIPLE FIXTURES (Daisy Chain)

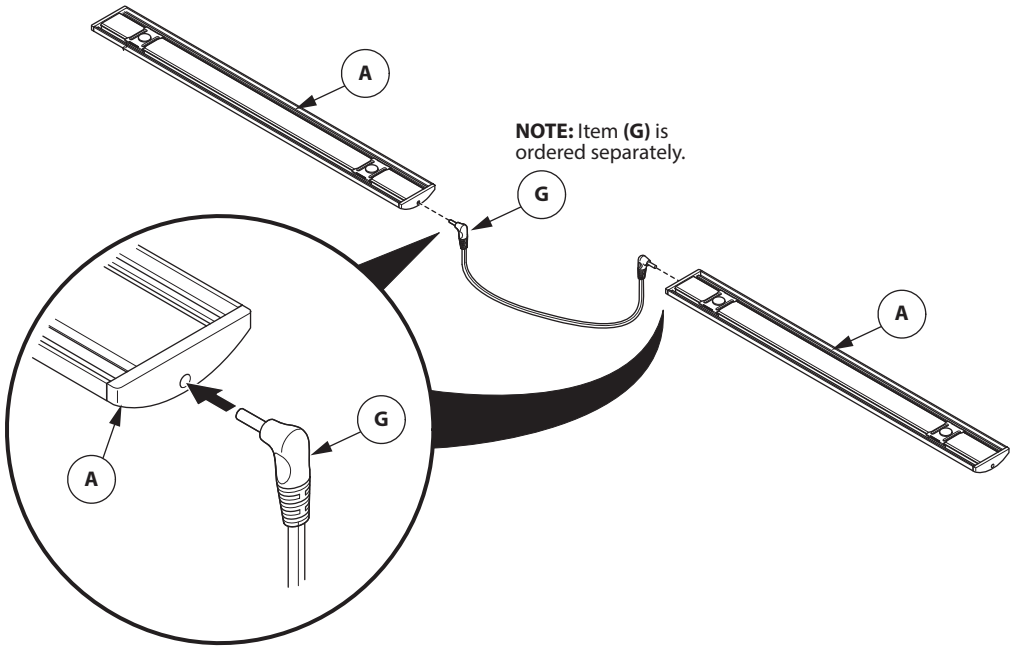

CUSTOMER SERVICE PHONE: 1-800-426-8562

OCCUPANCY SENSOR (SEPARATELY SPECIFIED)

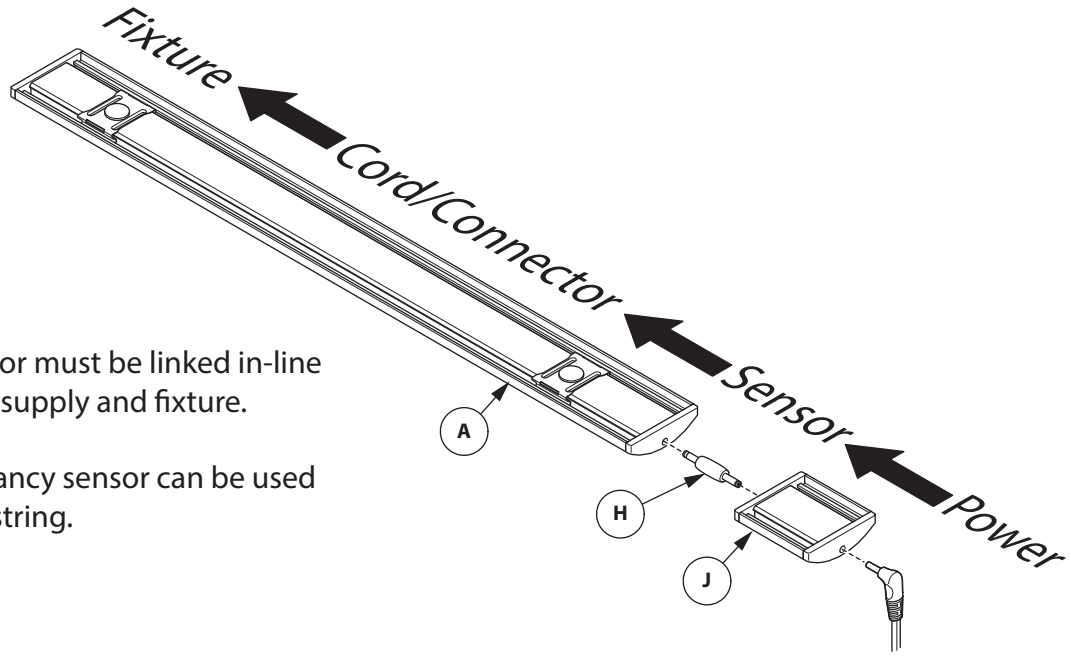

- Occupancy sensor must be linked in-line between power supply and fixture.
- Only one occupancy sensor can be used per daisy chain string.

DAISY CHAIN

Total daisy chain system wattage cannot exceed power supply wattage (see chart below).

Add-on kits include 8" daisy chain cord and 30" daisy chain cord. 54" daisy chain cord available (specified separately).

Do not daisy chain Adaptable LED light with Reed Premier light.

# of 17" Lights	# of 30" Lights	# of 44" Lights	# of 58" Lights
6	0	0	0
5	0	0	0
4	1	0	0
4	0	0	0
3	1	0	0
3	0	1	0
3	0	0	0
2	2	0	0
2	1	0	0
2	0	1	0
2	0	0	1
2	0	0	0
1	2	0	0
1	1	1	0
1	0	1	0
1	0	0	1
0	2	0	0
0	1	1	0
0	0	2	0