

Digital Lock

Installation Instructions


Tools Required

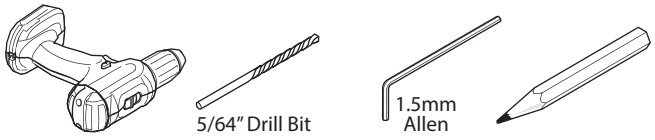


Parts

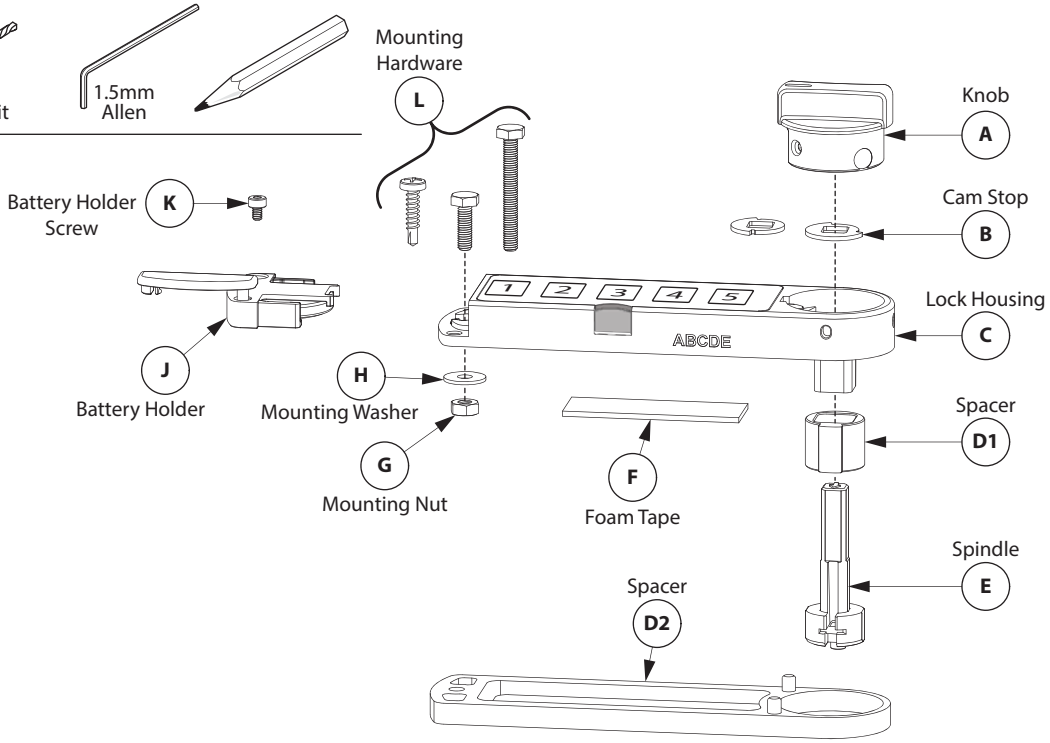

Gereral Dimensions

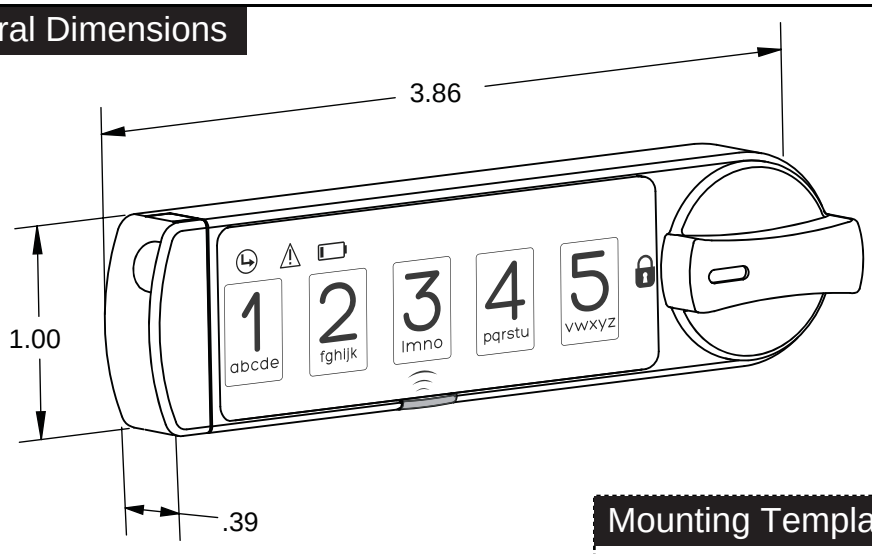


Mounting Template

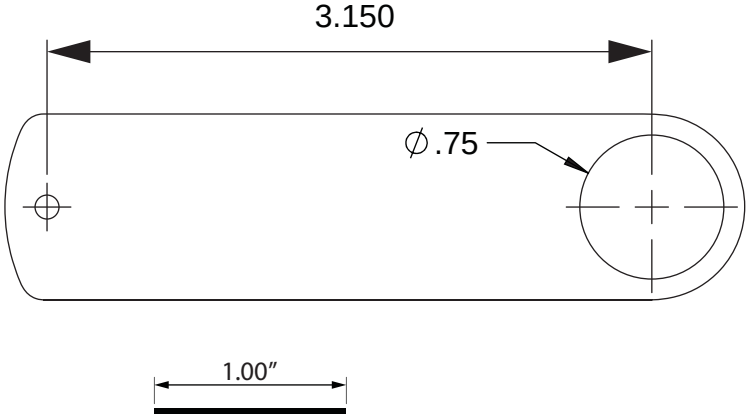


CUSTOMER SERVICE PHONE: 1-800-426-8562

INSTALLATION


1 **Remove lock core (AG) with round key (CK)**

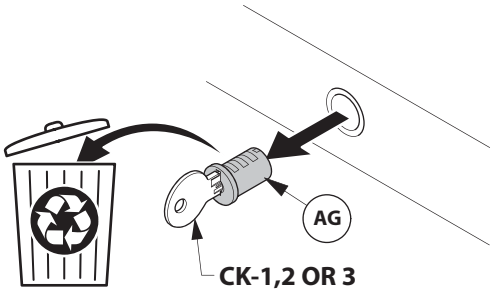


2

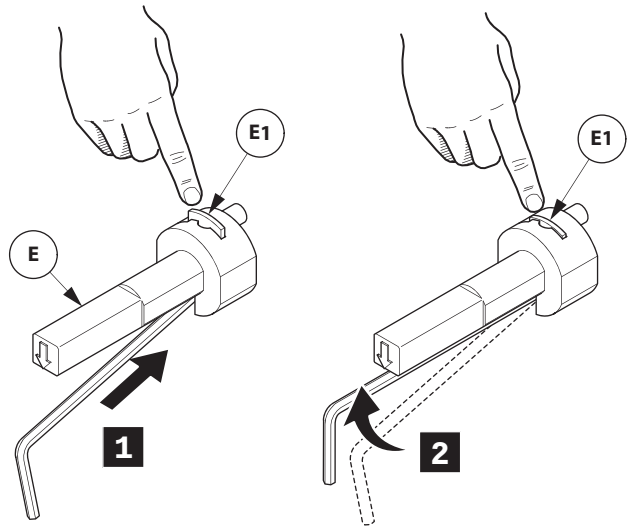


3

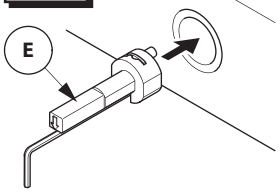


4

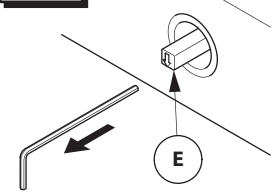


5

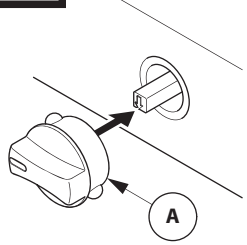

6

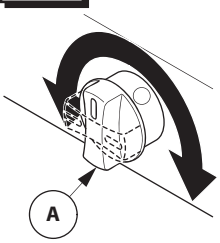

7

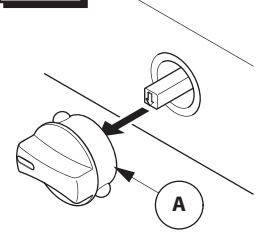


8a

NOTE: Allow double stick tape to cure for 72 hours.


NOTE: Tape **(F)** **NOT** used with spacer **(D2)**.

NOTE: The spacer **(D2)** is used only when trim ring **(D3)** is either not removable or by customer preference.

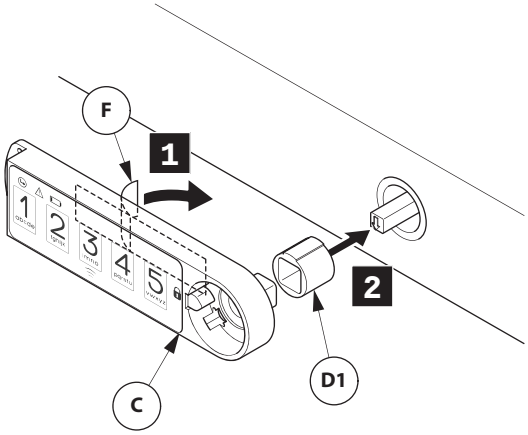

OR


8b

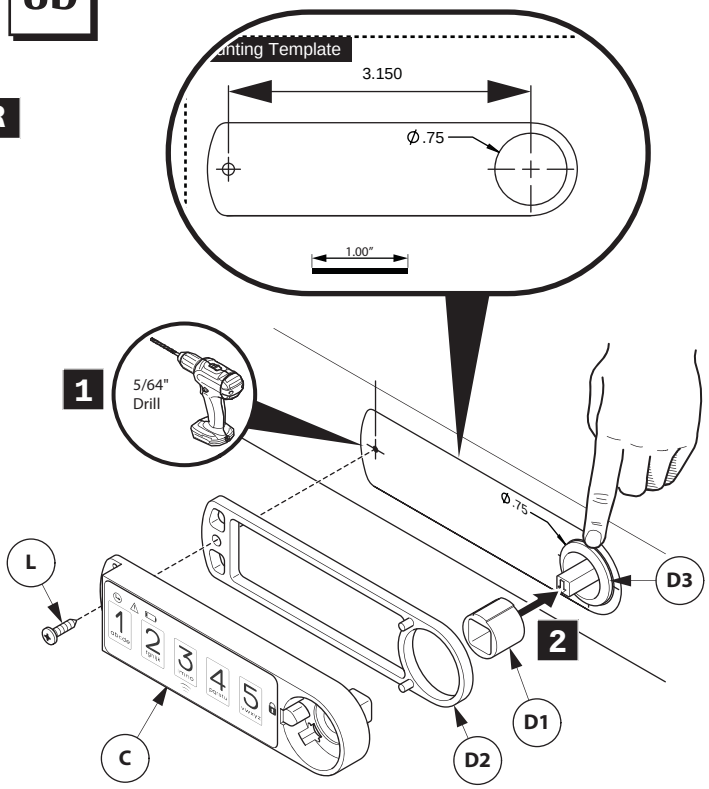


CUSTOMER SERVICE PHONE: 1-800-426-8562

OPTIONAL: ROTATIONAL STOP

9

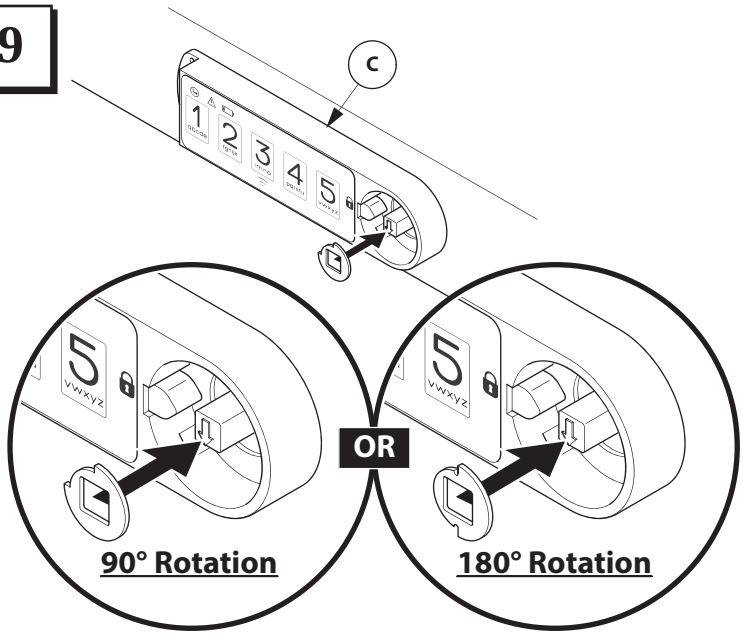


10

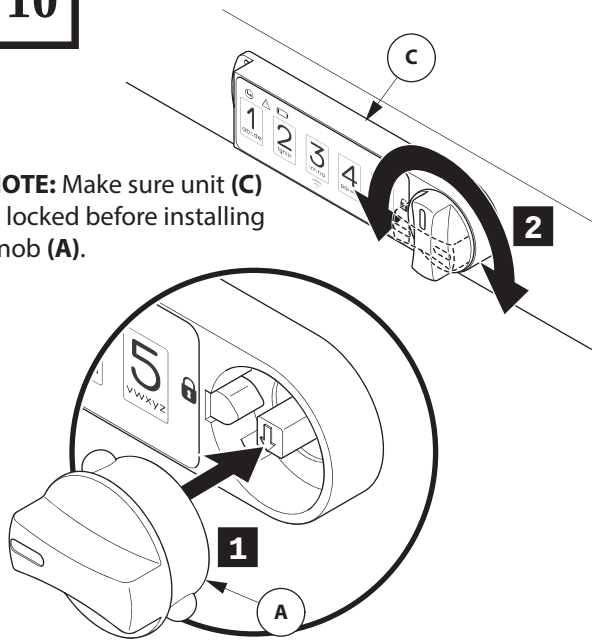

FASTEN KNOB


NOTE: If necessary program lock to rotate knob (see page 4).

11a

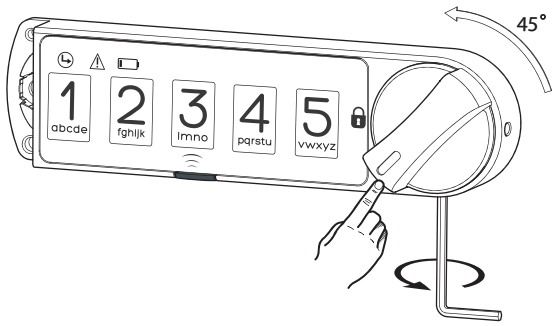


OR

11b

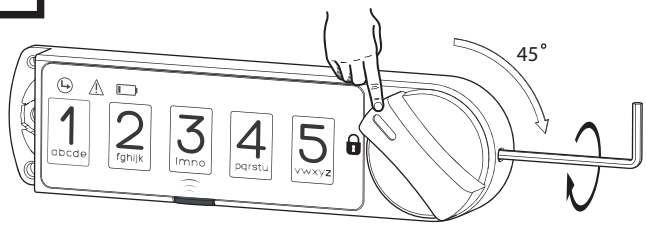


BATTERY INSTALLATION


1

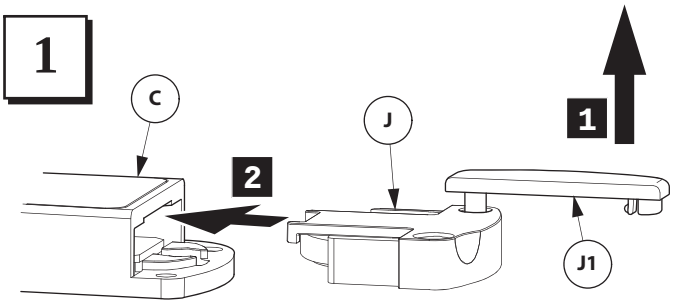

2

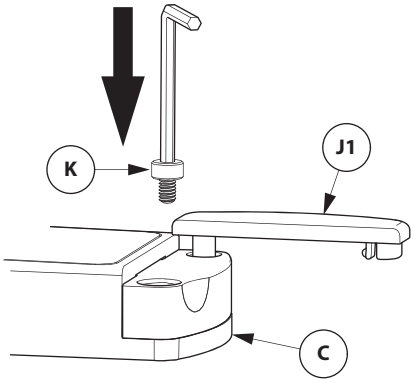


3

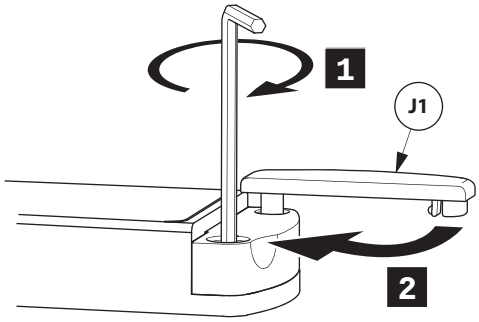


4


NOTE: If necessary use factory programed Supervisor code **(1-2-3)** to unlock unit after battery installation.

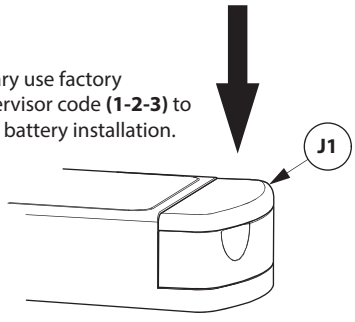

CUSTOMER SERVICE PHONE: 1-800-426-8562

PROGRAMING LOCK (STATION MODE)

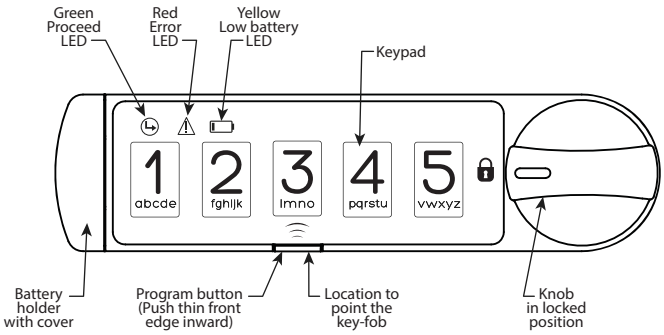

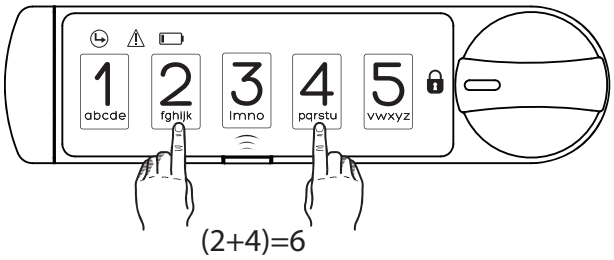


NOTE: The numbers 6,7,8, and 9 can be entered by pressing two keys simultaneously in order to produce a sum.

NOTE: If the code was programmed using 2+4 as the 6 digit, the 2+4 must be used when accessing the lock, because other combinations that equal six such as 1+5 are distinguished from 2+4.

OVERIDE MASTER CODE (STATION MODE)

1 Press Program button (A1) 5x

NOTE: Green LED will light up and stay on.

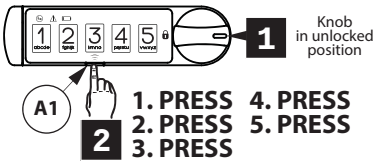


2 Enter Factory Master Code (C1)

NOTE:

A) If the code is entered correctly the Green and Red LED will stay lit.


B) If the code is enter incorrectly, the Red LED's will flash 3 times.

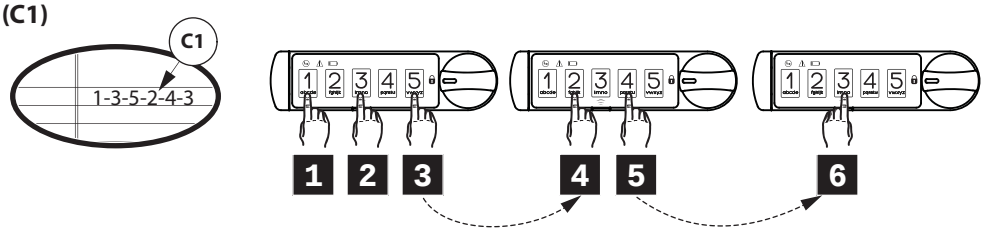

3 Re-Enter Factory Master Code (C1)

NOTE:


A) The Green, Red and Yellow LED's will stay lit.

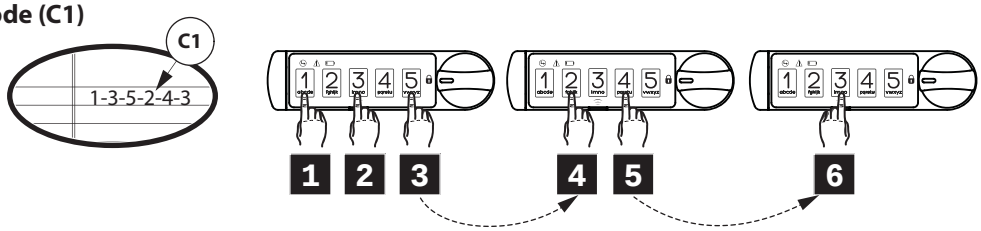

4 Enter New 6 digit Master Code (C1)

NOTE:


A) The Green, Red and Yellow LED's will turn off briefly then back on.

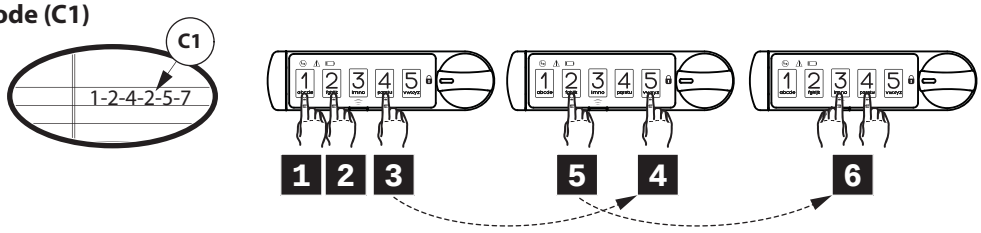

5 Re-Enter New 6 digit Master Code (C1)


NOTE:


A) If correctly done the Green, Red and Yellow LED's will flash 6x.

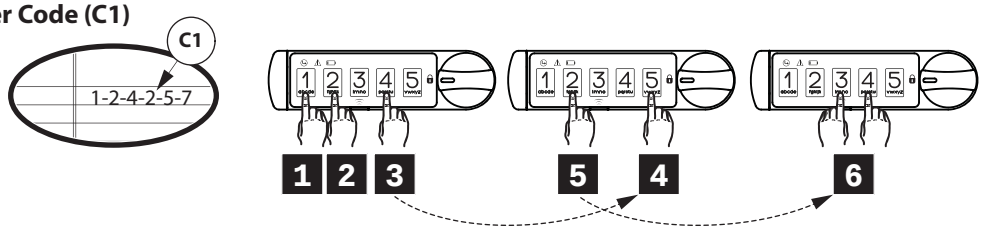

CUSTOMER SERVICE PHONE: 1-800-426-8562

PROGRAMING LOCK (STATION MODE)

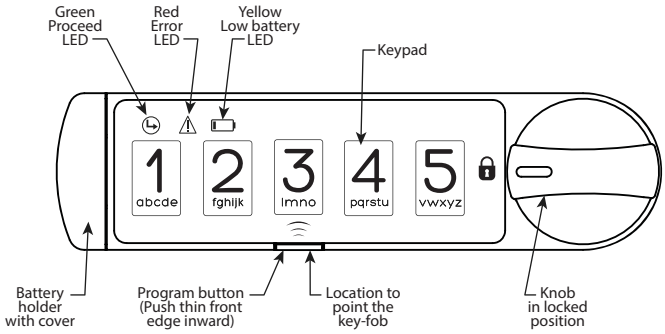

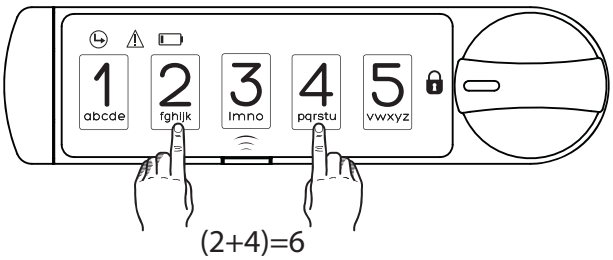


NOTE: The numbers 6,7,8, and 9 can be entered by pressing two keys simultaneously in order to produce a sum.

NOTE: If the code was programmed using 2+4 as the 6 digit, the 2+4 must be used when accessing the lock, because other combinations that equal six such as 1+5 are distinguished from 2+4.


PROGRAM A SUPERVISOR CODE (STATION MODE)


1 **Press Program button (A1)**

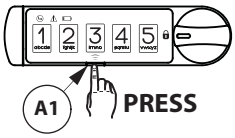

2 **Enter Master Code (C1)**

NOTE: If Master Code **(C1)** has been overwritten refer to the New Master code.

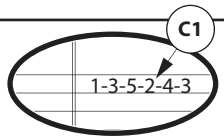

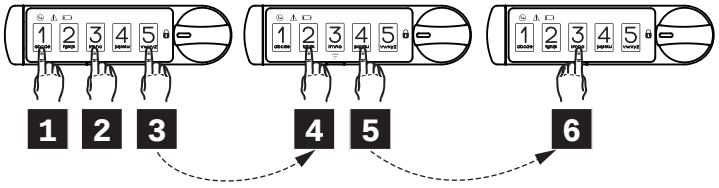

NOTE:


A) By not entering a Code within 6 seconds, will cause the red light to flash 2 or 3 times and exit programming.


B) If you enter the Master Code incorrectly the red light will flash 3 times and exit programming.

C) If you enter the Master code correctly, the red light will light up for 6 seconds.

3 **Enter Supervisor Code (X) (3-6 digits)**


NOTE: Supervisor Code **(X)** is an example.

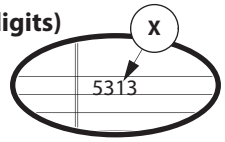

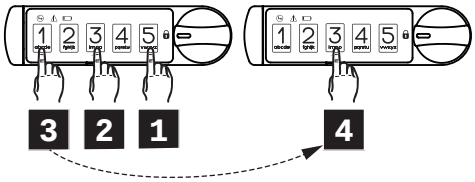

NOTE: You must enter the user code **(X)** within the 6 second window after the master code is entered.

4 **Press Program button (A1)**

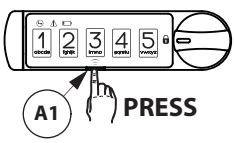

NOTE:

A) A successful code storing is indicated by 6 green light flashes.

CUSTOMER SERVICE PHONE: 1-800-426-8562


PROGRAM A USER CODE (STATION MODE)


1 **Press Program button (A1) two times**



2 **Enter Supervisor Code (X)**

NOTE: User Code **(X)** is an example.

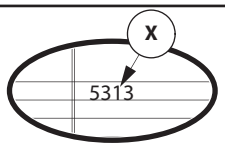

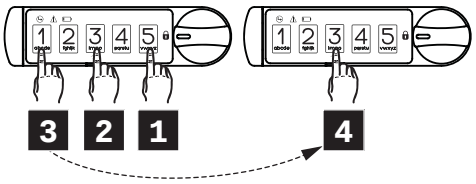


NOTE:


A) By not entering a Code within 6 seconds, will cause the red light to flash 3 times and exit programming.

B) If you enter the Supervisor Code incorrectly the red light will flash 3 times and exit programming.

C) If you enter the Supervisor code correctly, the red light will light up for 6 seconds.


3 **Enter User Code (Z) (3-6 digits)**

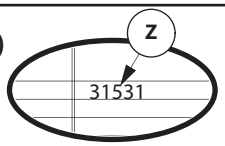

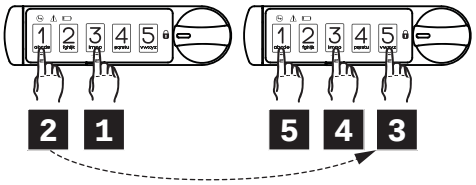

NOTE: You must enter the user code **(Z)** within the 6 second window after the master code is entered.

4 **Press Program button (A1)**

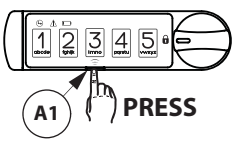


NOTE:

A) A successful code storing is indicated by 6 green light flashes.


LOCKER MODE - OPERATION


1 **Turn knob to unlocked position**

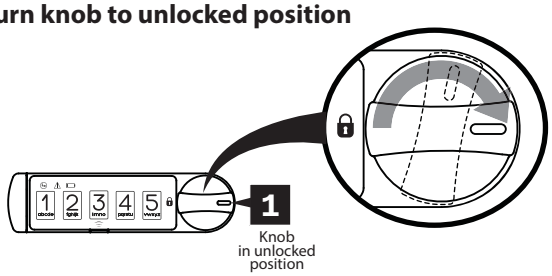

2 **Enter 4 digit User Code (X)**

NOTE: User Code **(X)** is an example.

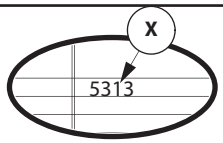

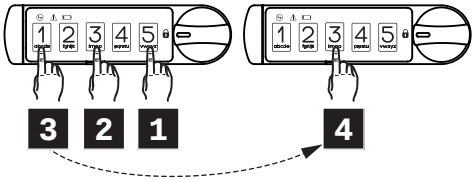


NOTE:

A) The green LED will light up.

B) If the lock is currently locked with a one-time User code, the red light will blink every 3 seconds.

3 **Turn knob to lock poistion**

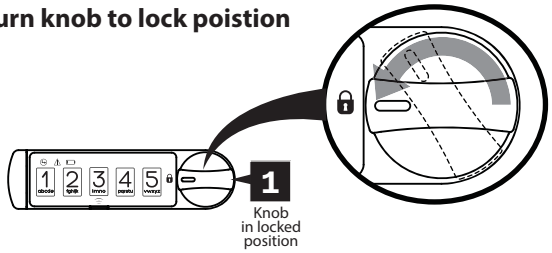


NOTE:

A) If you turn the knob to the locked position without entering a code or after 6 seconds, the red LED will blink 3 times and not lock.

B) The green LED will blink twice after the lock is locked.

4 **Enter code and turn knob to open**

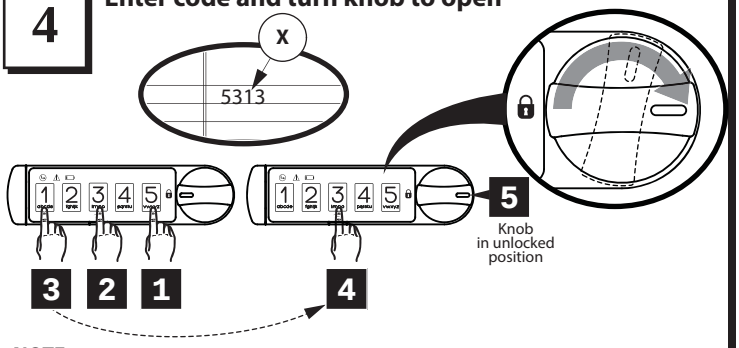

NOTE:


A) If the code is incorrect the red LED will blink 3 times. If an incorrect code is entered 5 consecutive times, the lock will not accept new codes for approximately 2 minutes and will blink the red error light 3 times if codes are attempted to be entered during the 2 minute period.

B) If the code is correct the lock will unlock and the one-time User code will be erased.

CUSTOMER SERVICE PHONE: 1-800-426-8562


UNLOCK USING MASTER CODE (LOCKER MODE)


1 **Press Program button (A1)**

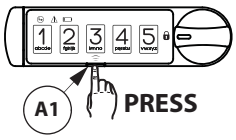

2 **Enter Master Code (C1)**

NOTE: If Master Code **(C1)** has been overwritten refer to the New Master code.

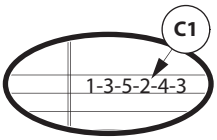

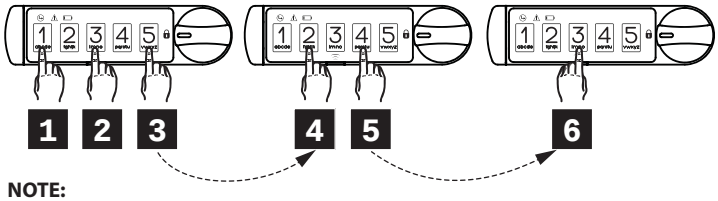


NOTE:

A) If the Master code is entered correctly the Green LED will light.

B) If the Master code is not entered within 10 seconds, the red LED will blink 3 times.

C) If the Master code is entered incorrectly, the red LED will blink 3 times.

4 **Enter code and turn knob to open**

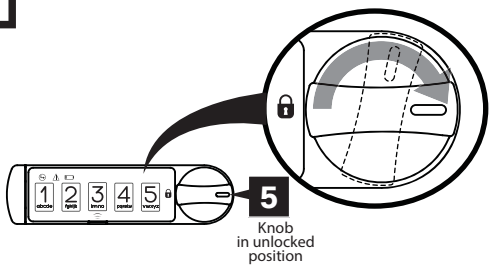


NOTE:

A) If the knob is left in the unlocked position for more than 20 seconds, the one-time User code will be erased (if currently programmed in).


B) If the knob is returned to the locked position in less than 20 seconds, the unit will re-lock and the one-time User code will be maintained.

OVERIDE MASTER CODE (LOCKER MODE)


1 **Turn knob to unlocked position**

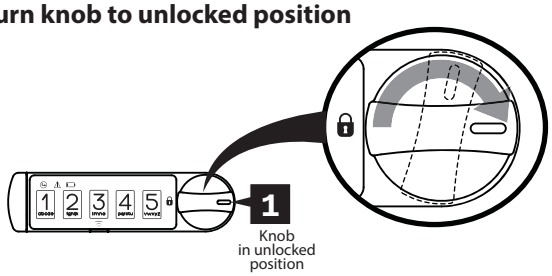


2 **Press Program button (A1)**

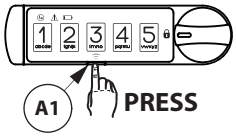

3 **Enter Master Code (C1)**

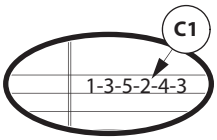

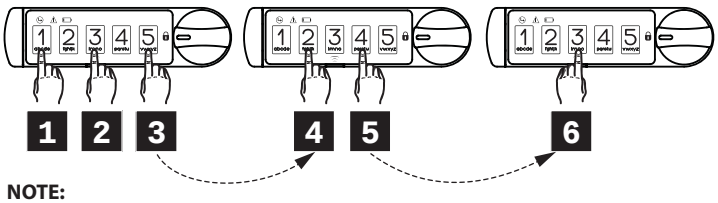

NOTE:

A) If the code is entered correctly the Green LED will light up for 6 seconds.

B) If the code is entered incorrectly, the red LED will blink 3 times and exit programming.

C) If the code is not entered within 6 seconds, the red LED will blink 3 times and exit programming.

4 **Enter the new 6-digit Master Code**

NOTE:

A) If the code is valid the Green LED will blink 7 times. The factory code is erased.

B) If the code is invalid (not 6 digits) the red LED will blink 3 times and exit programming.

CUSTOMER SERVICE PHONE: 1-800-426-8562