ZODY II / Zody LX


Base Assembly Replacement

Installation Instructions

0 1/2 1
1/4 1/4


Scale 1 : 1

Tools Required

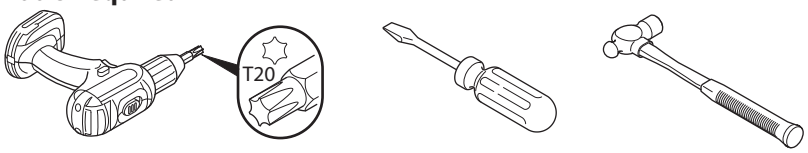


BASE REPLACEMENT

1

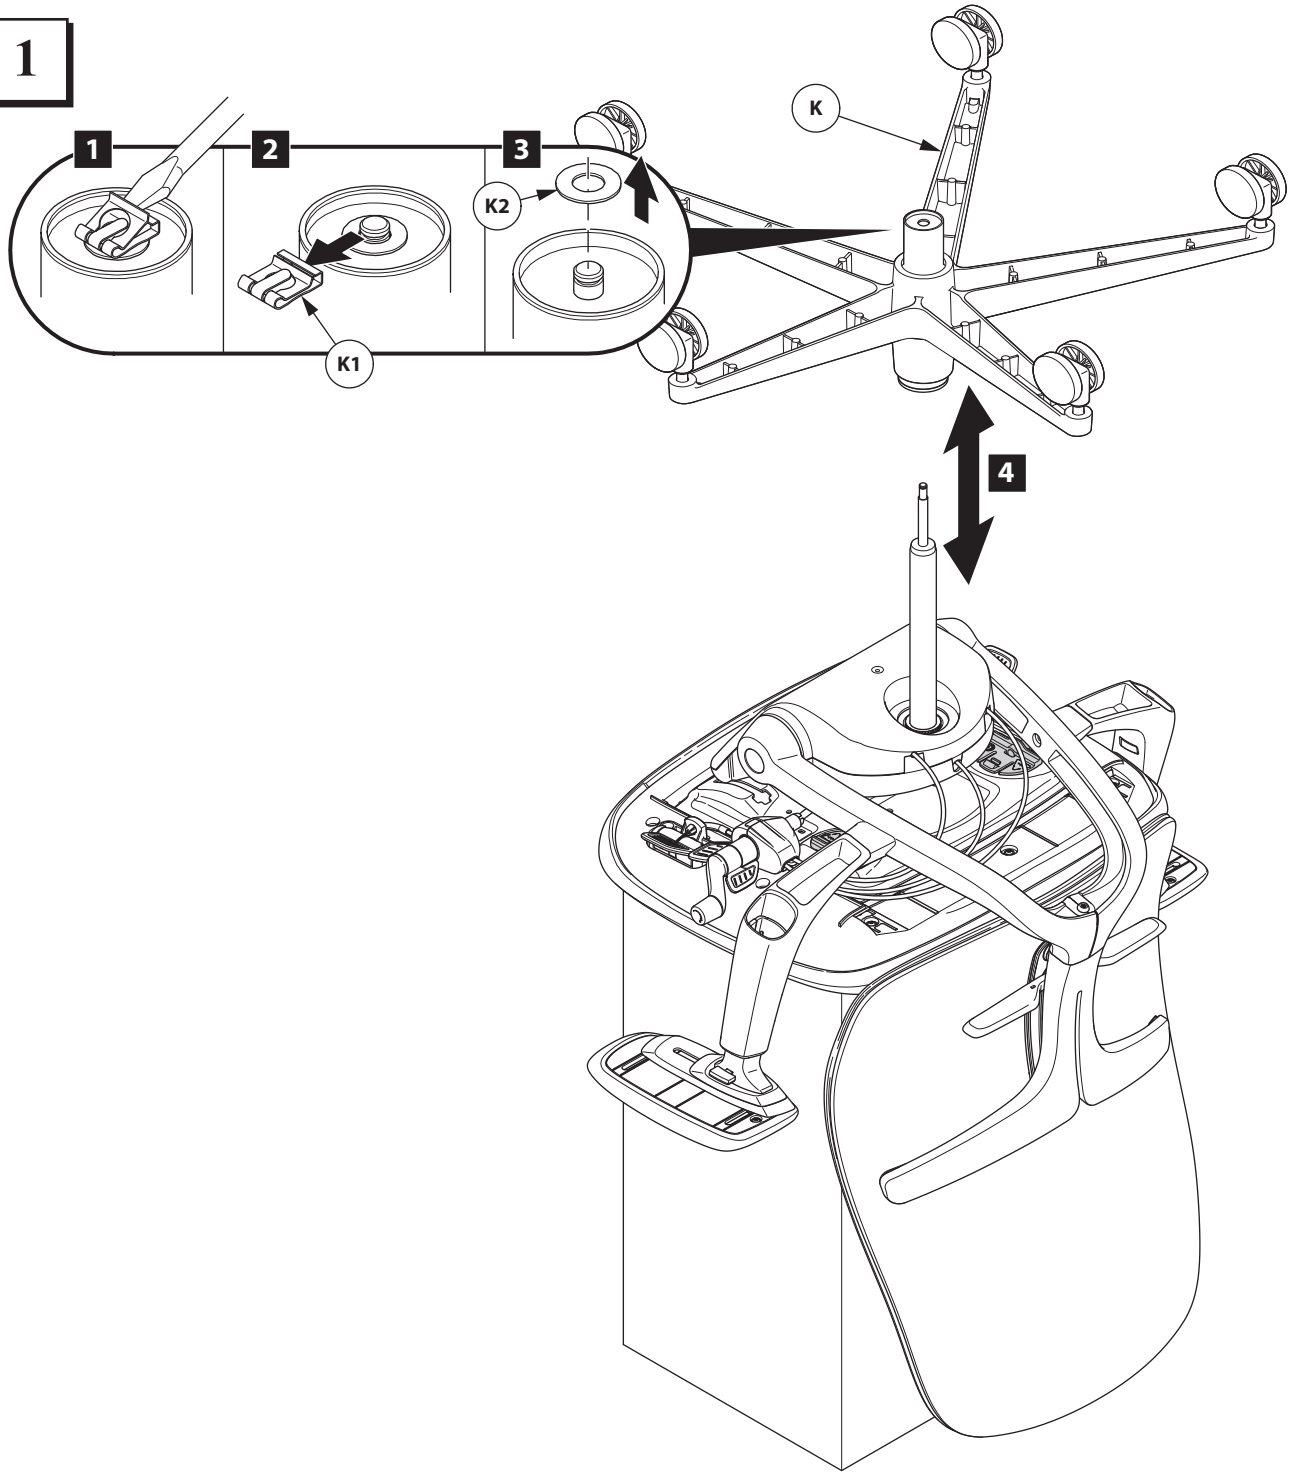

2

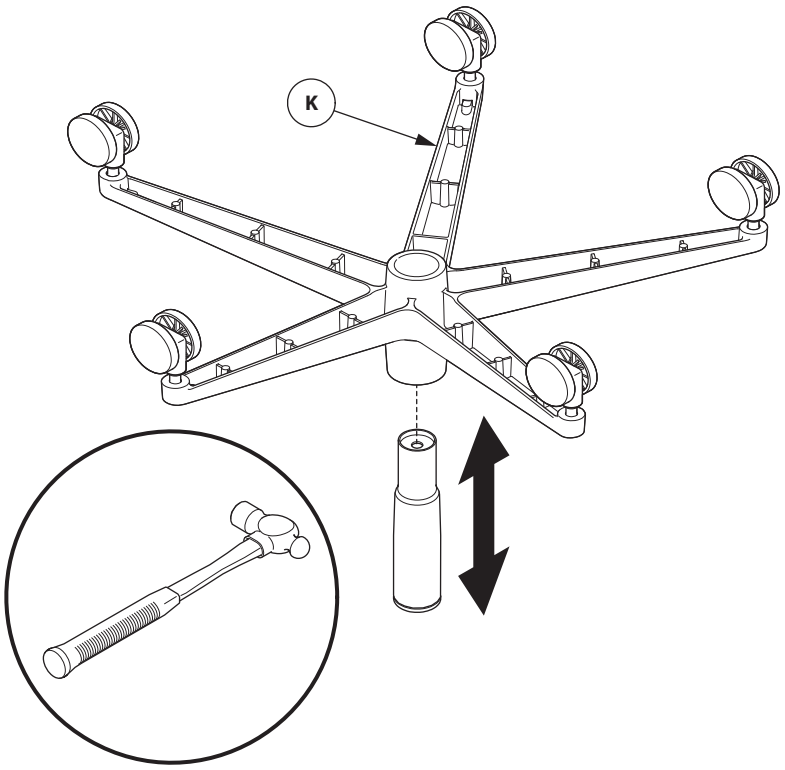

CASTER REPLACEMENT

3

