IMPORTANT SAFETY INSTRUCTIONS
For use with ECHO Electric Height Adjustable Tables, 2 Leg
For Commercial or Household Use Only
This product conforms to UL962 and is certified to CAN/CSA C22.2 No. 68.

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:
1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:
1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**
10. **WARNING: RISK OF ELECTRIC SHOCK, FIRE, AND INJURY. REVIEW THE ASSEMBLY INSTRUCTIONS TO CONFIRM THAT THE APPROPRIATE CRITICAL COMPONENTS AND ACCESSORIES ARE BEING USED WITH THE FURNISHING.**

SAVE THESE INSTRUCTIONS


This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Maximum Load rating including surface: 250 lbs

Electrical Rating:
120V, 60Hz, 5.2A for Echo 2 leg tables

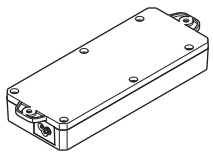

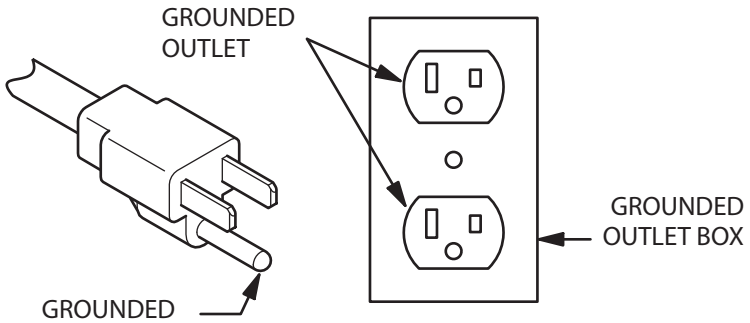


FIGURE 1

ECHO®


Desk

Installation Instructions

0 1/4 1/2 1/4 1

Scale 1 : 1

Tools Required

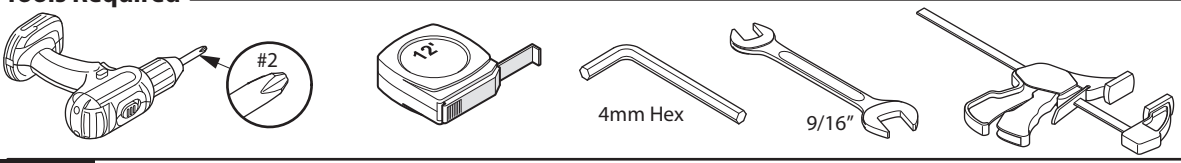

PARTS





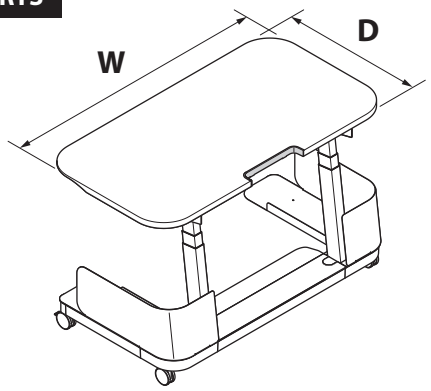



TABLE SIZE(S)	
(D) Depth	(W) Width
29" (28.68")	46" (45.68")
	54" (53.68")
	58" (57.68")
	64" (63.68")
	70" (69.68")

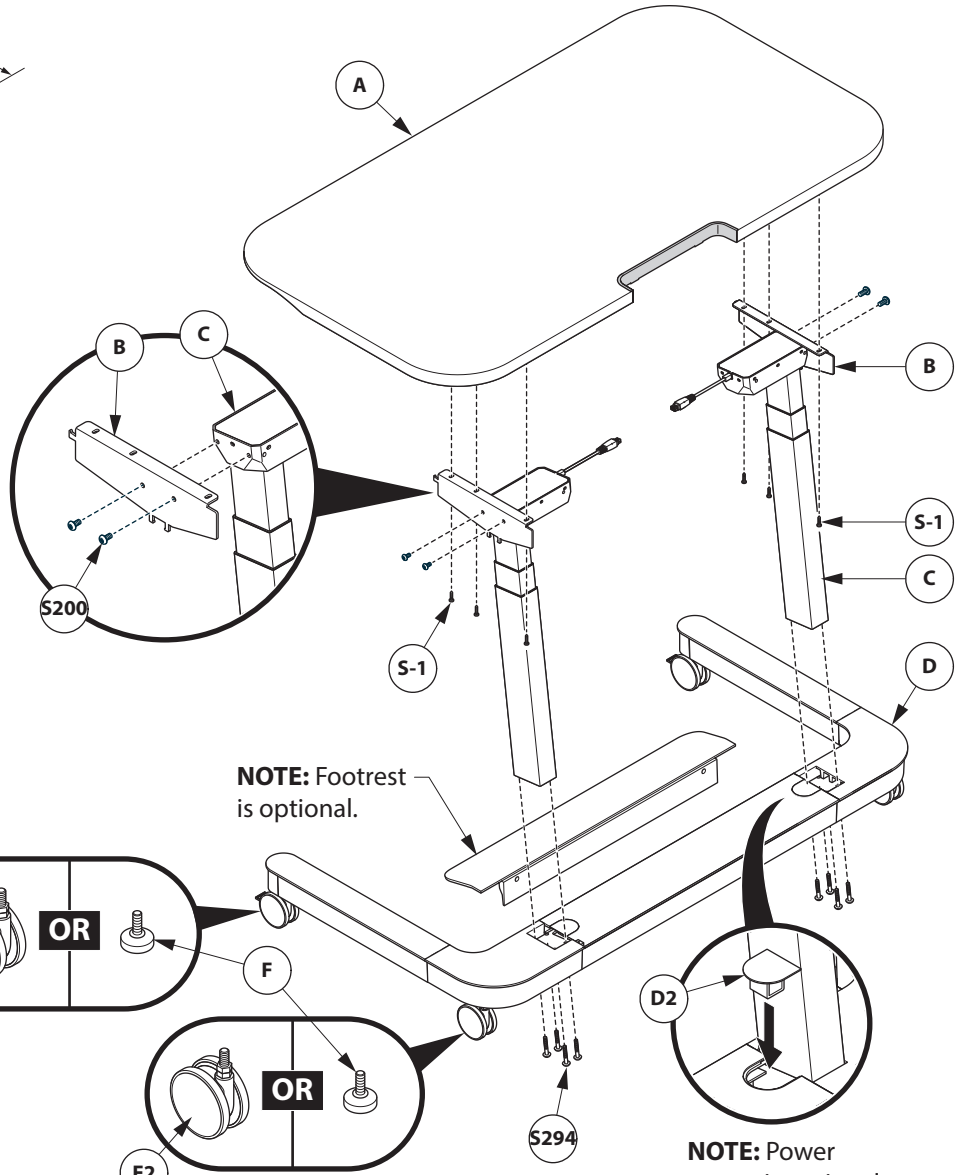

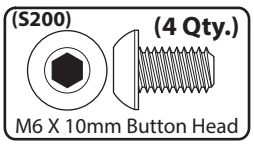


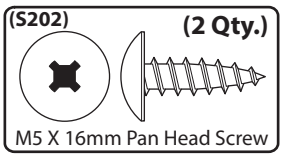

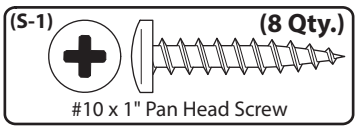

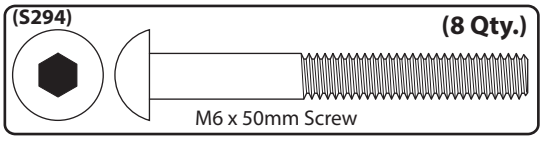



ELECTRICAL MODULE & ACCESSORIES

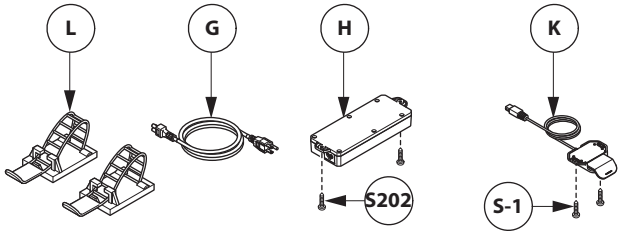


CUSTOMER SERVICE PHONE: 1-800-426-8562

1

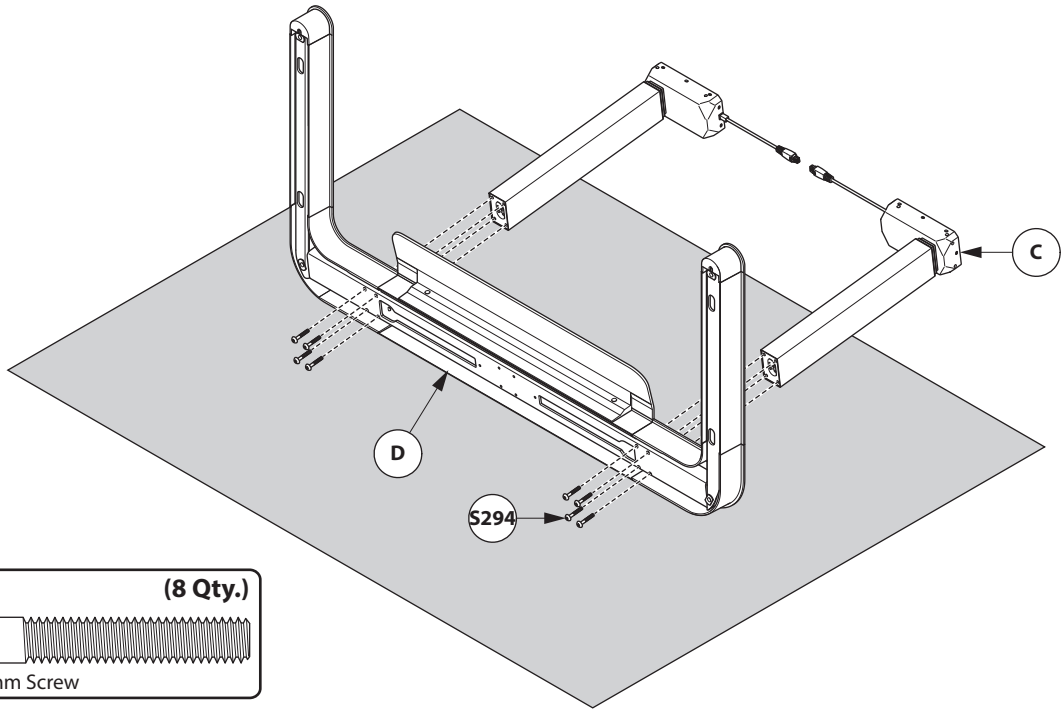

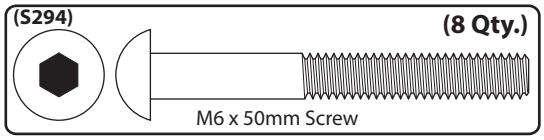

2

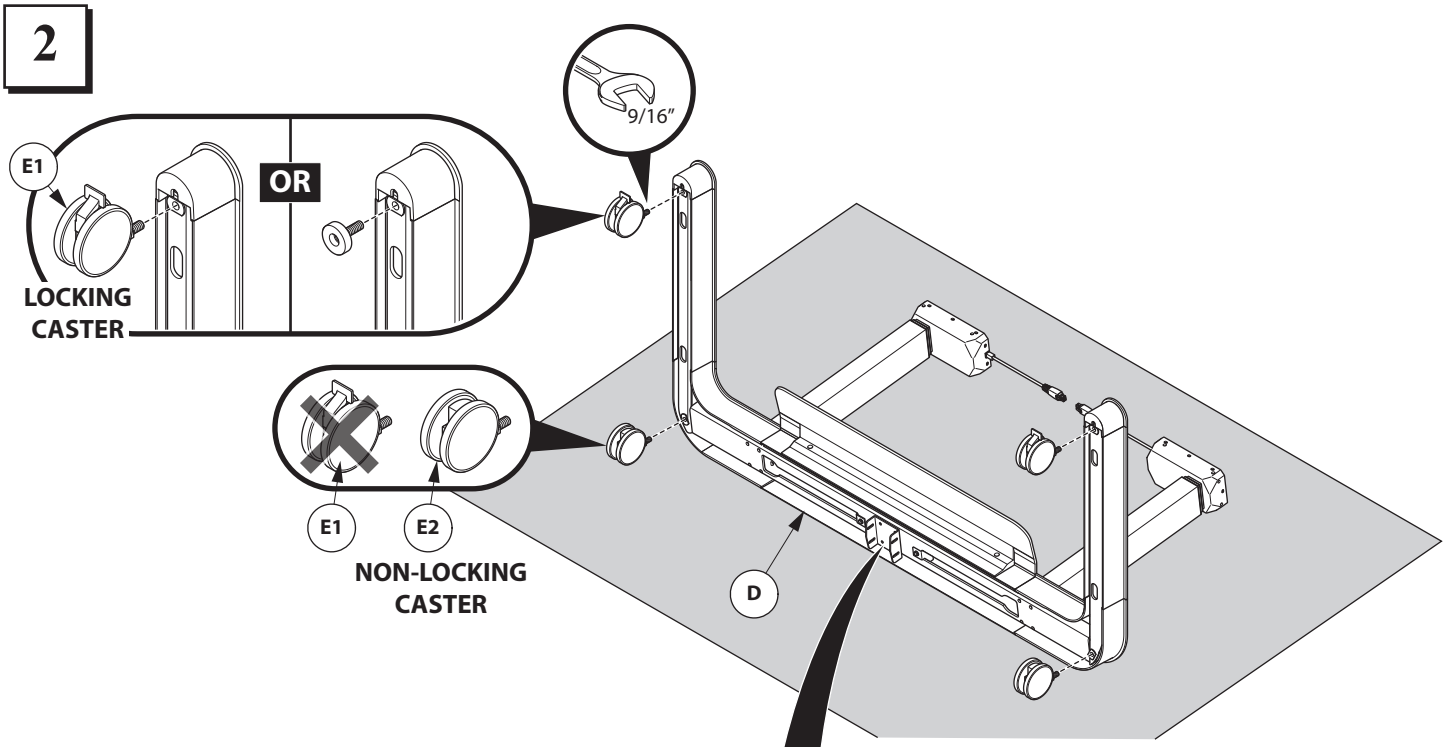



TUBE DIVIDER AND TETHER HITCH BRACKET INSTALLATION

3

NOTE: Refer to instructions (61000228) to learn more about tether installation.

NOTE: The hitch is only used with casters.

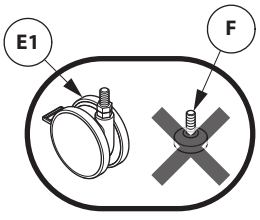

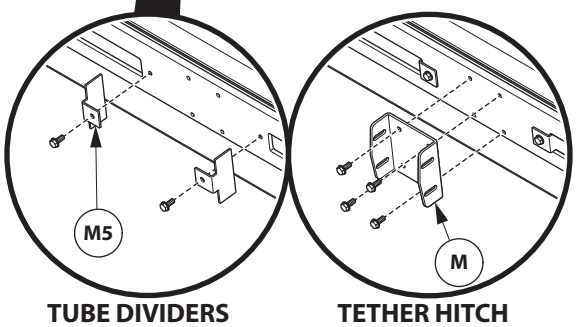

TUBE DIVIDERS

TETHER HITCH


4

(S-1) (6 Qty.)

#10 x 1" Pan Head Screw

(S200) (4 Qty.)


M6 X 10mm Button Head

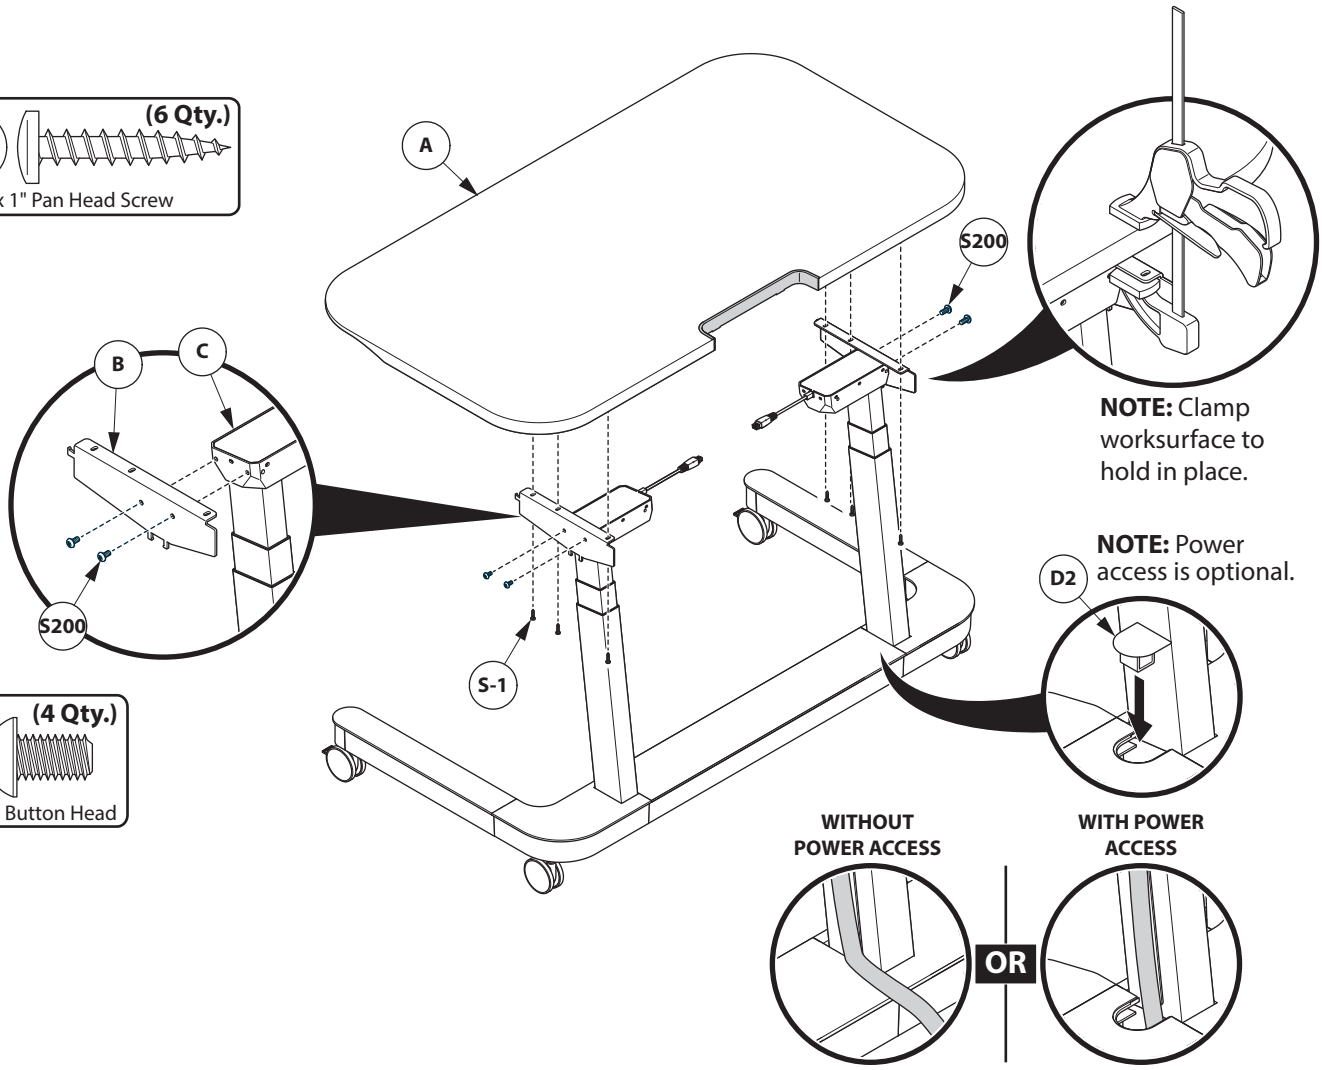

NOTE: Clamp worksurface to hold in place.

NOTE: Power access is optional.


5

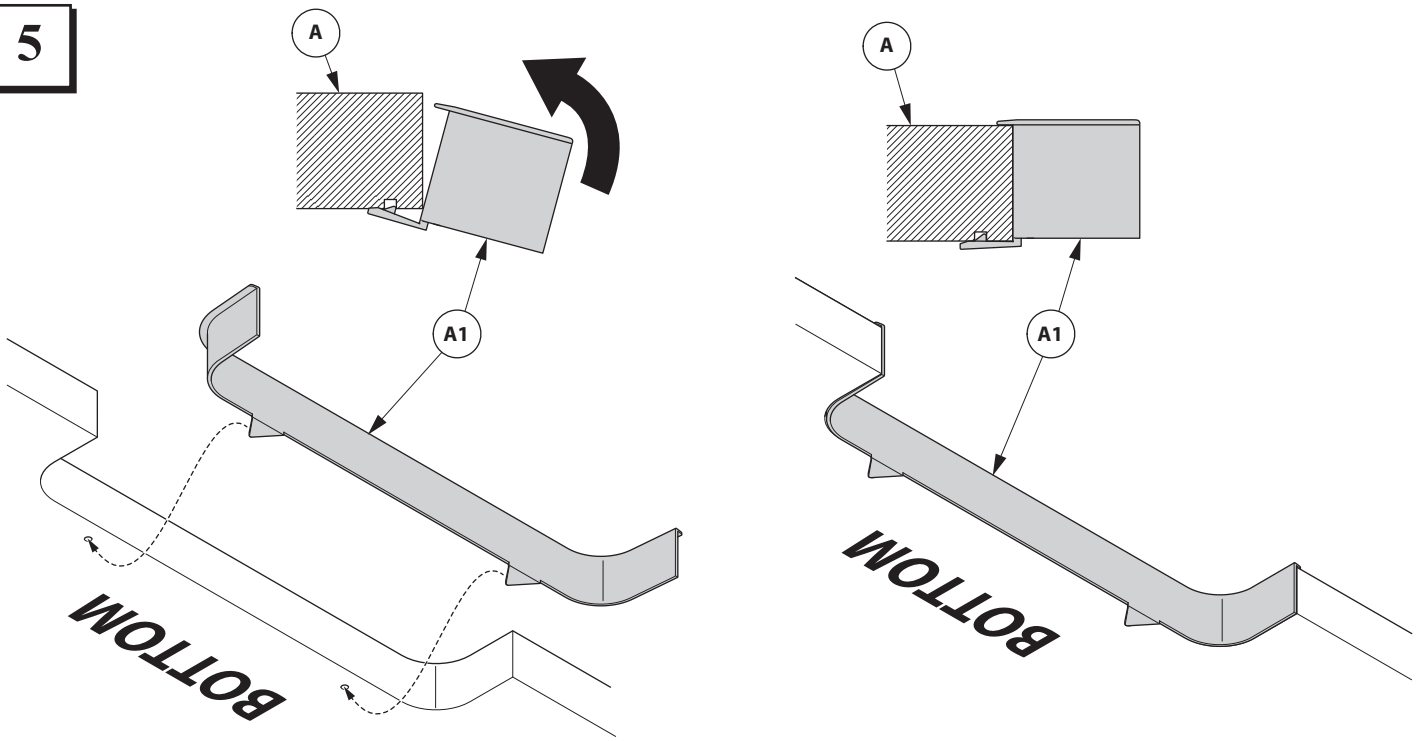


6

⚠ IMPORTANT!

MAKE SURE CONTROL BOX (F) IS FIRMLY ATTACHED TO THE WORKSURFACE!

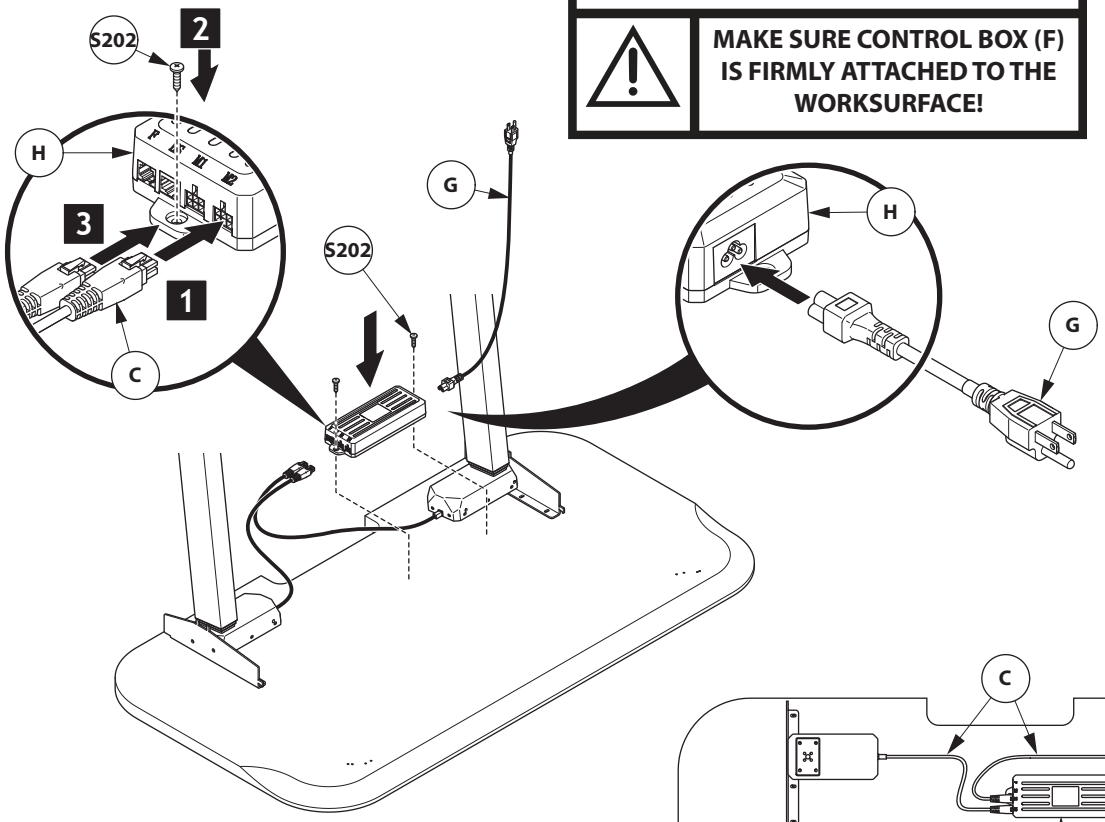


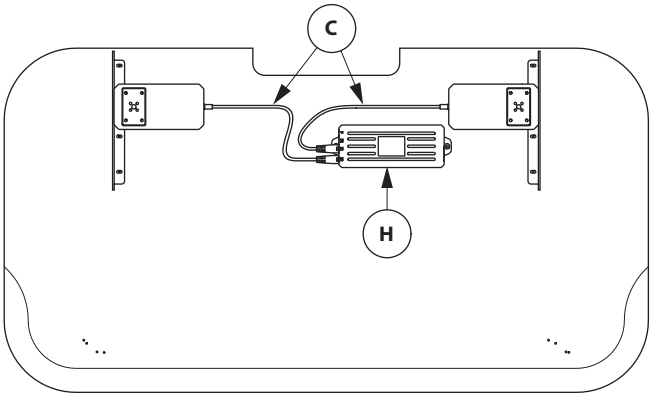

(S202) (2 Qty.)

M5 X 16mm Pan Head Screw


7

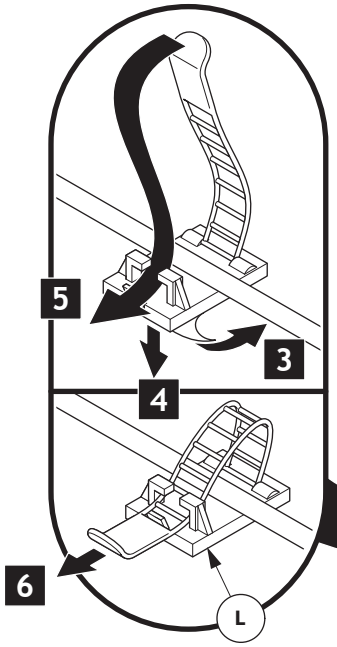


NOTE: Refer to instructions (61000190, 61000191 and 61000192) to learn more about cable tray installation.

(S-1) (2 Qty.)


#10 x 1" Pan Head Screw

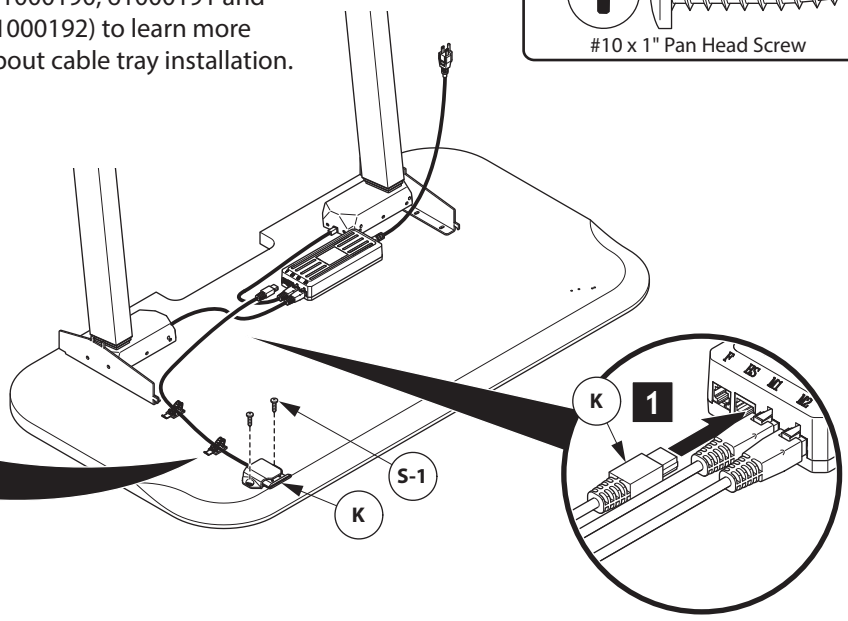

WAKE UP

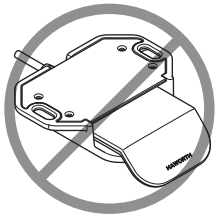

STANDARD PADDLE

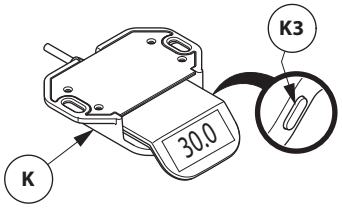


PROGRAMMABLE PADDLE

NOTE: For Programmable Paddles **(K)** only. Paddle **(K)** enters a power save mode after 10 seconds of inactivity. Prior to each use, user must **"TAP AND RELEASE"** paddle **(K)** or **"TAP AND RELEASE"** the menu button **(K3)** to activate paddle **(K)**.


Power save Mode: Paddle **(K)** display not visible.

1 PADDLE SLEEPING

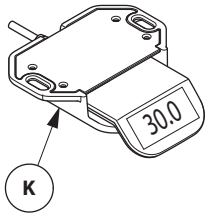


Tap and release to activate paddle (K) prior to each use.

2 TAP TO WAKE UP PADDLE

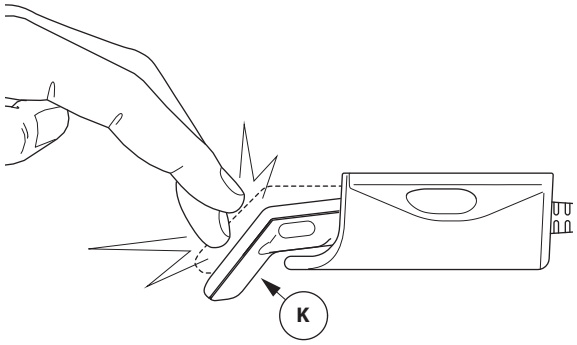

3 TABLE HEIGHT IS SHOWN

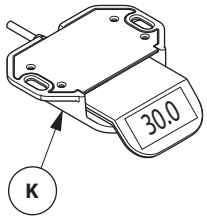


DEFAULT RESET

Synchronizes motors by returning the table to lowest position. Resetting resolves most mechanism issues. **This procedure can be done with either a standard or programmable paddle.**


Default Reset must be performed prior to first use and once per month to ensure proper function. Default Reset should also be performed if table is not operating properly.

1 **IMPORTANT! Remove all contents from under table!**


COLLISION = REMOVE OBSTRUCTION

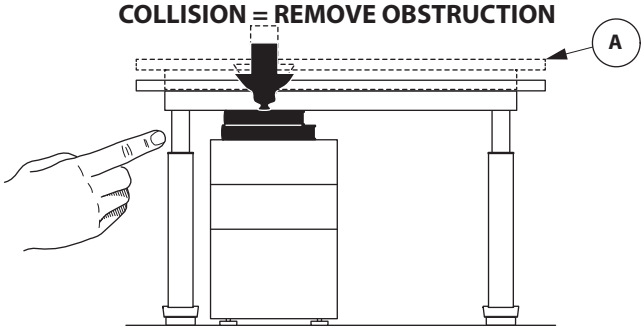


STANDARD PADDLE

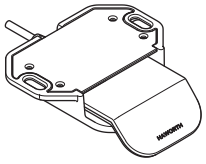


PROGRAMMABLE PADDLE

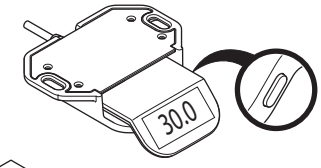

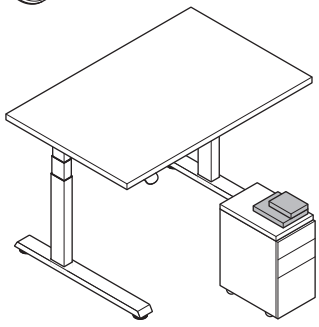



2 Lower table all the way down

Press paddle (C) down

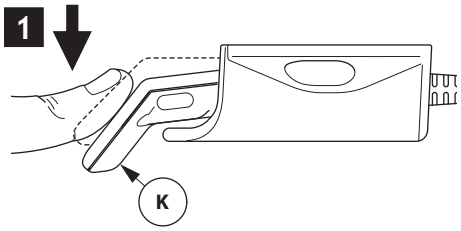


Lower table all the way down

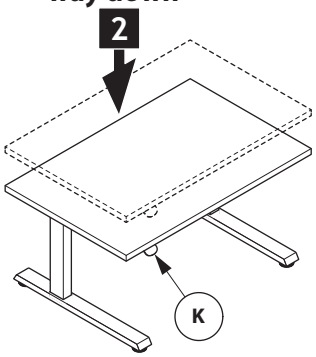

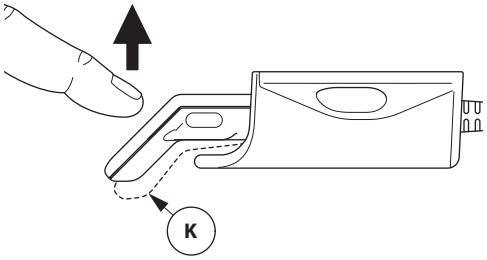


3 Hold down paddle (C) for 15 seconds and release

"HOLD FOR 15 SECONDS"

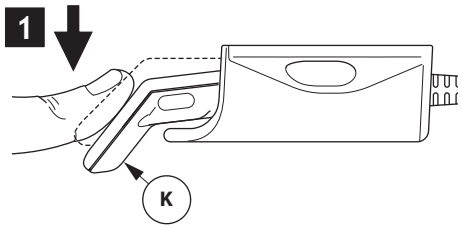

2

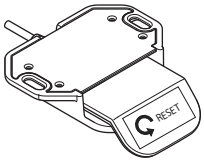





NOTE: This step only applies to programmable paddle.

4 Press and hold down paddle (C) until table moves down and continue to hold until table stops moving up

MOVES DOWN SLIGHTLY

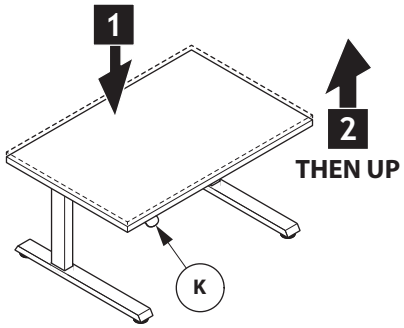

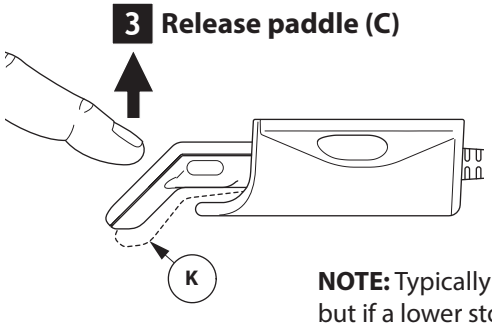

NOTE: Typically the table will move up slightly but if a lower storage stop is set, it will raise up all the way to the lower storage stop.