
ECHO®

Desk Screens


Installation Instructions


0 1/2 1
1/4 1/4
Scale 1 : 1

Tools Required

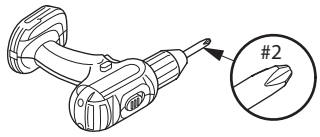


SCREEN OPTIONS

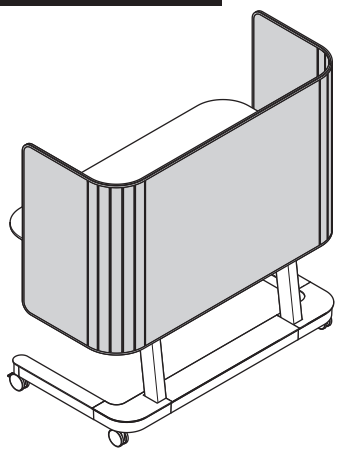




FLAT SCREENS

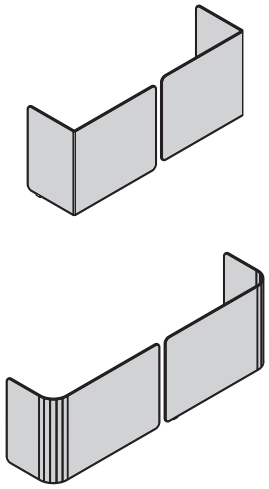


CORNER SCREENS

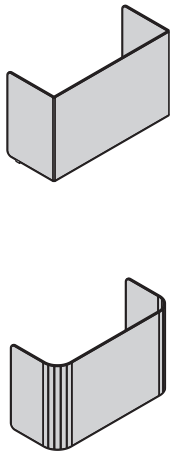

FULL WRAP SCREENS

1 IMPORTANT! Pre-bend the screens (P) before installing

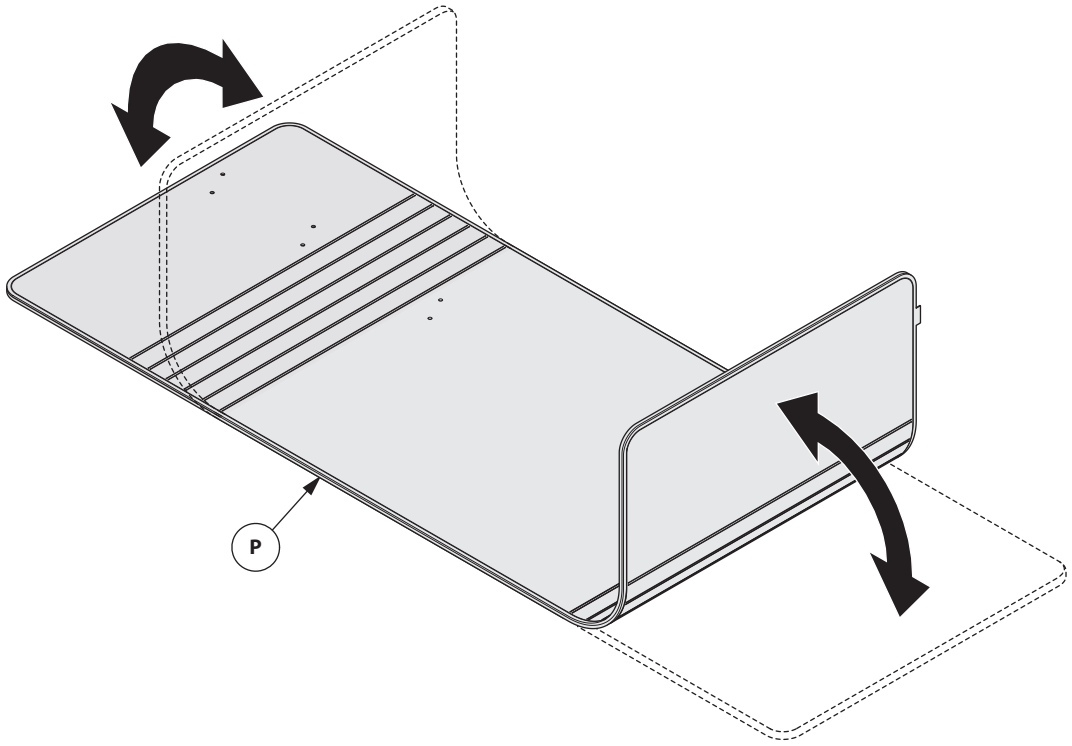


FOR FULL WRAP SCREENS

2 Install brackets (Q) as shown

(S302)


1/4-20 x 3/8" Flat Head Screw

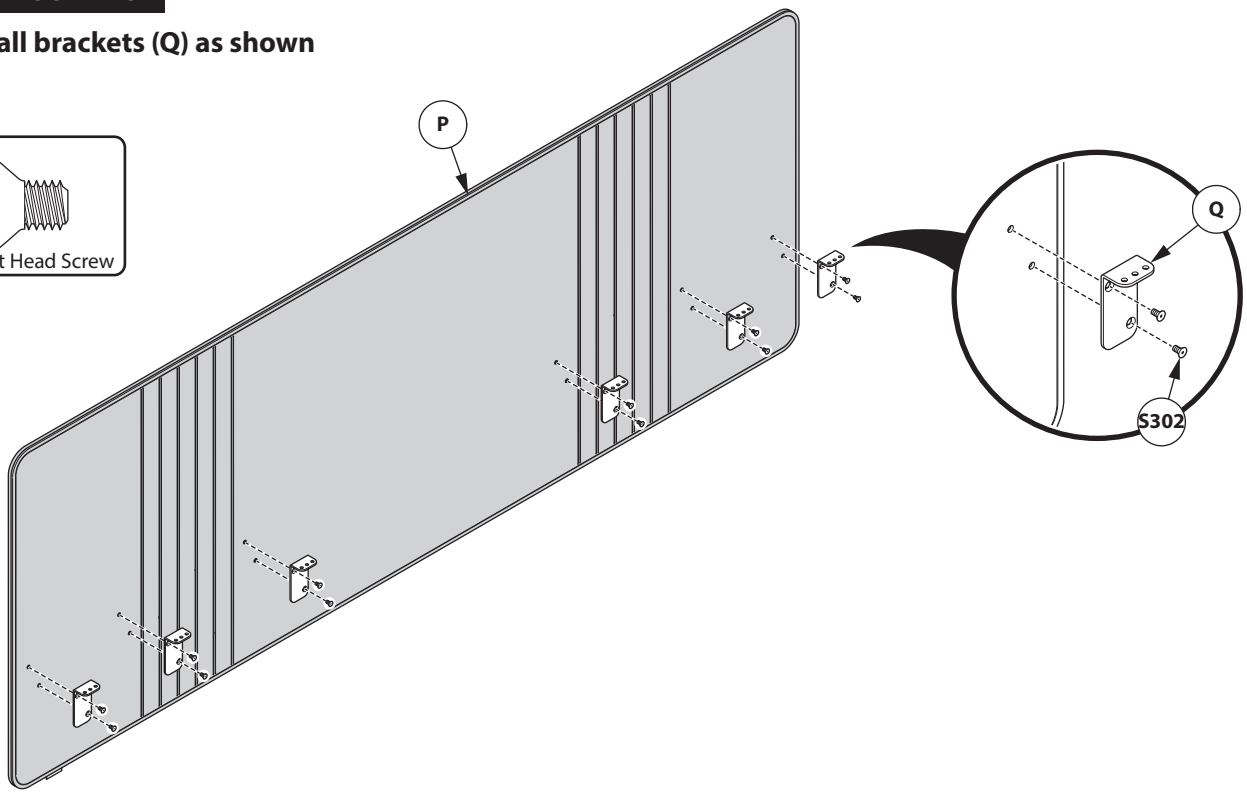


3 Install screen (P)

(S-1)

#10 x 1" Pan Head Screw

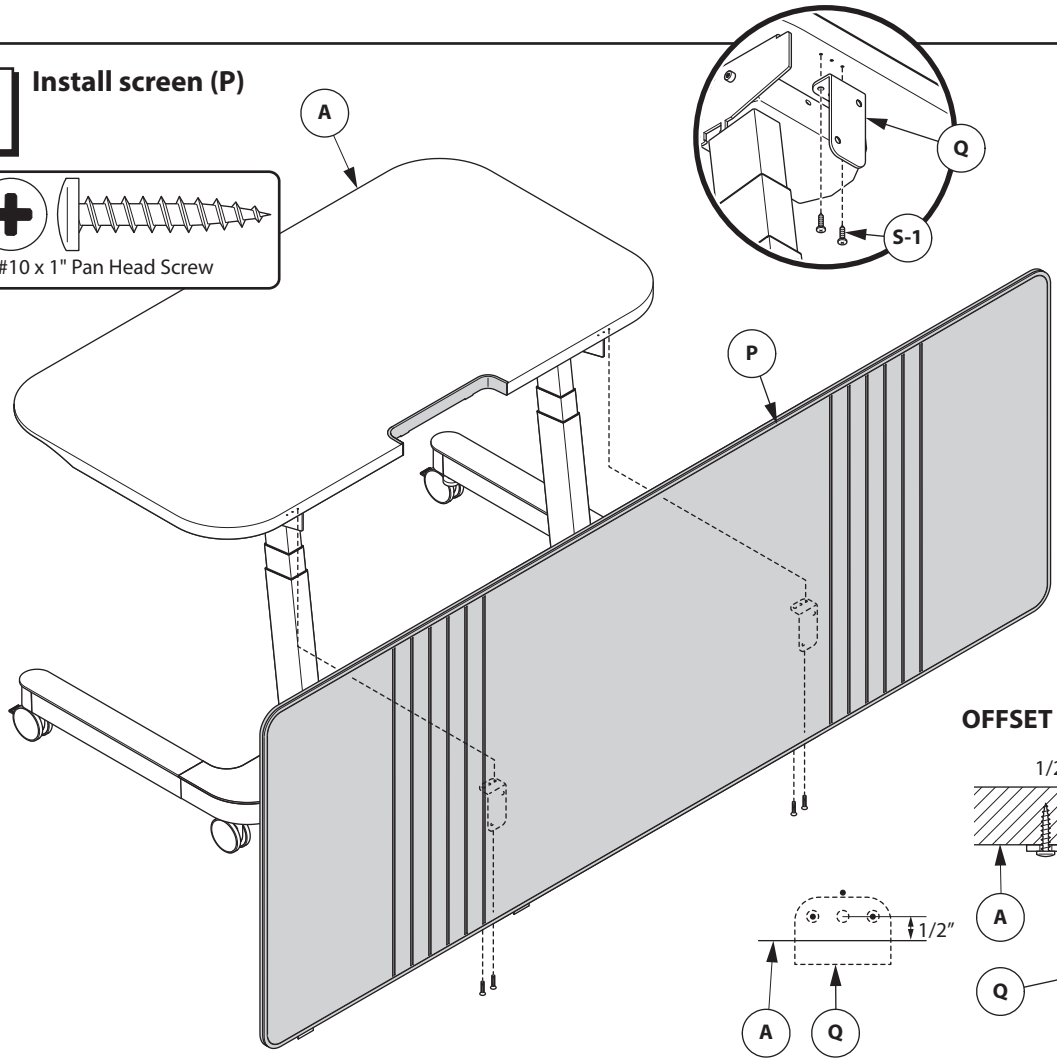


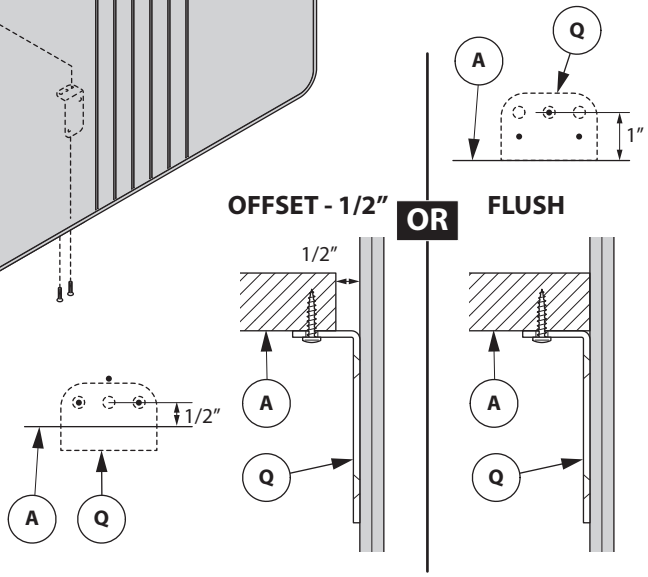

CUSTOMER SERVICE PHONE: 1-800-426-8562

4


(S-1)




#10 x 1" Pan Head Screw

NOTE: Sides of screens are always mounted flush.

FLUSH

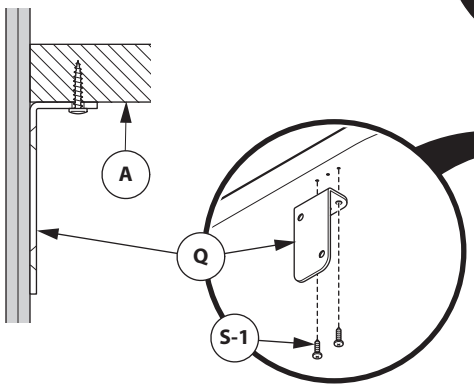


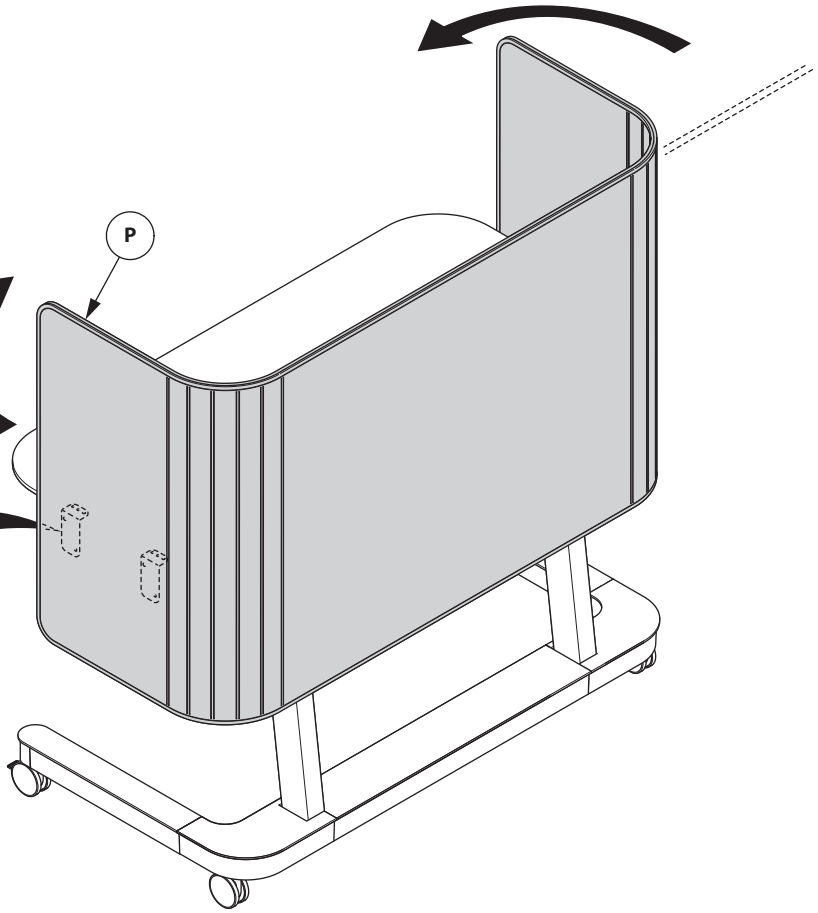


FOR FLAT SCREENS

1 Install screen (P)


(S-1)




#10 x 1" Pan Head Screw

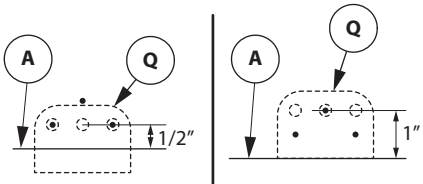

OFFSET - 1/2" **OR** **FLUSH**

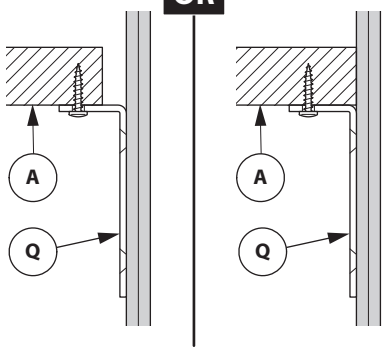

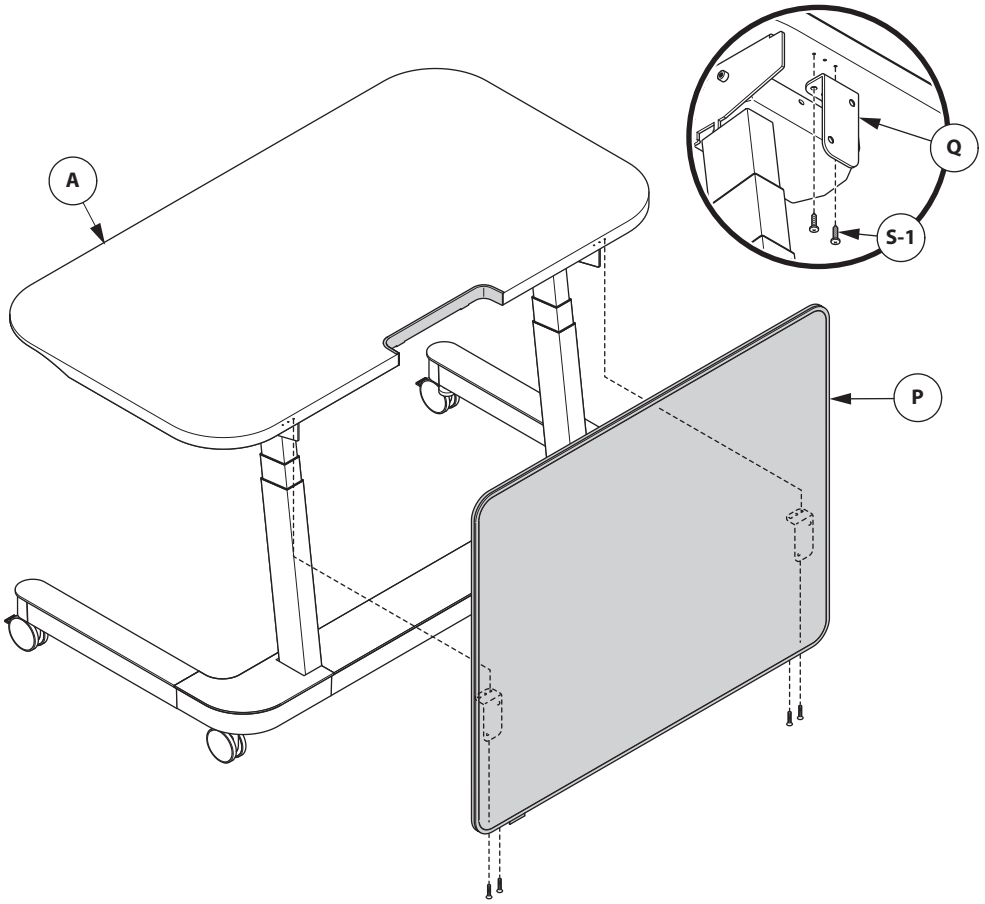



FOR CORNER SCREENS

1 Install screen (P)

(S-1)

#10 x 1" Pan Head Screw

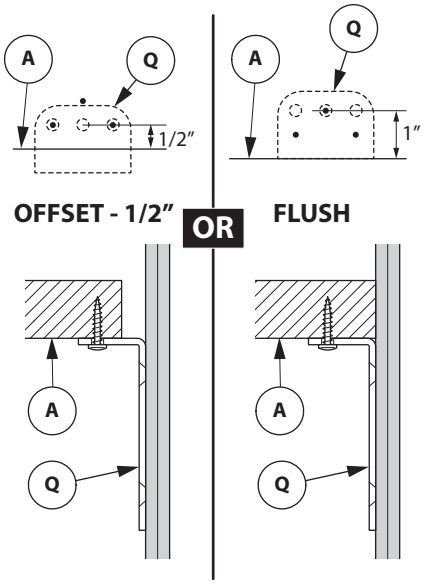

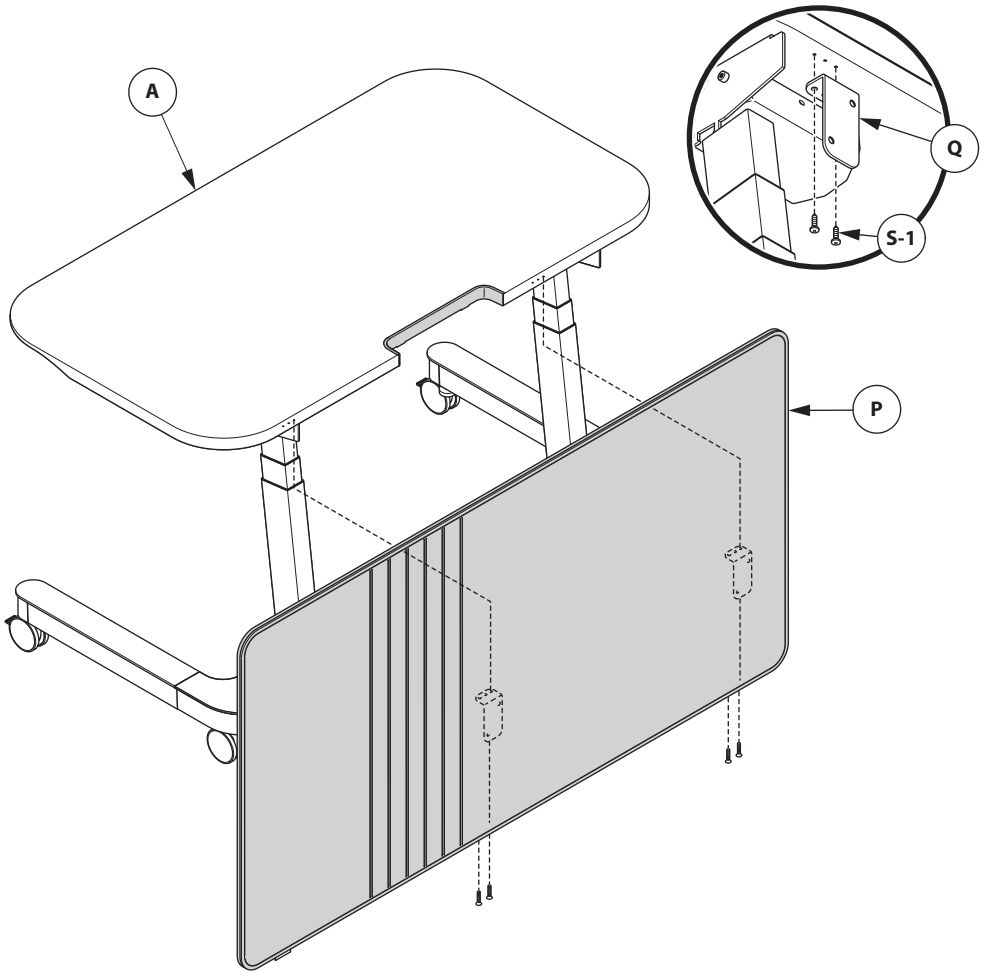



2

(S-1)

#10 x 1" Pan Head Screw

FLUSH

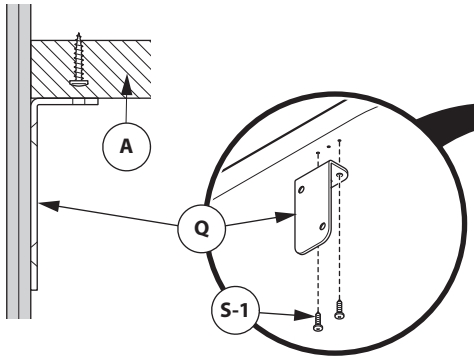

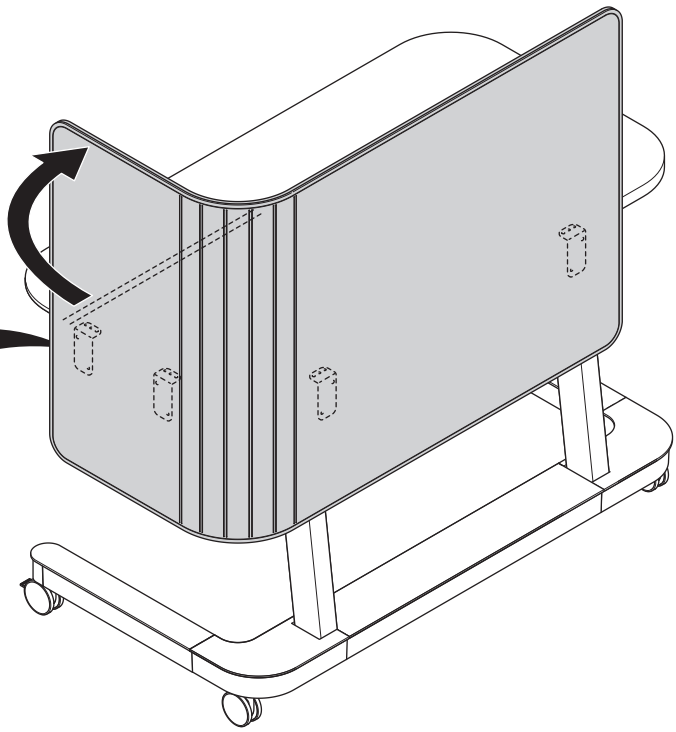

NOTE: Sides of screens are always mounted flush.