POWER BASE AI®
Internal Base Feed
Installation Instructions

No Tools Required


WARNING: Do not electrically interconnect modular power distribution systems powered from two different power feed units. This poses a SHOCK HAZARD to service personnel and will cause RISK OF FIRE due to excessive circulating currents.

WARNING: Power to all branch circuits MUST REMAIN DISCONNECTED during installation or removal of electrical components and raceway covers to avoid SHOCK HAZARDS.


NOTE: Connections of this modular power distribution component MUST be done by a licensed electrician, who must control the size and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all applicable building and electrical code requirements.

NOTE: Connectors are color coded and keyed to assure polarity.


NOTE: Connection of the Haworth power base modular power panel system and the Power Base AI power system does not allow alternating connections between both systems within one base feed run.

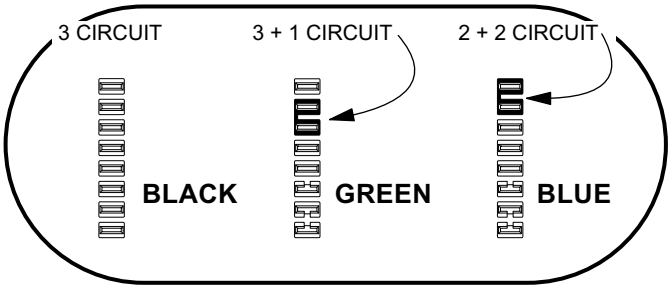

PREMISE & COMPOSE

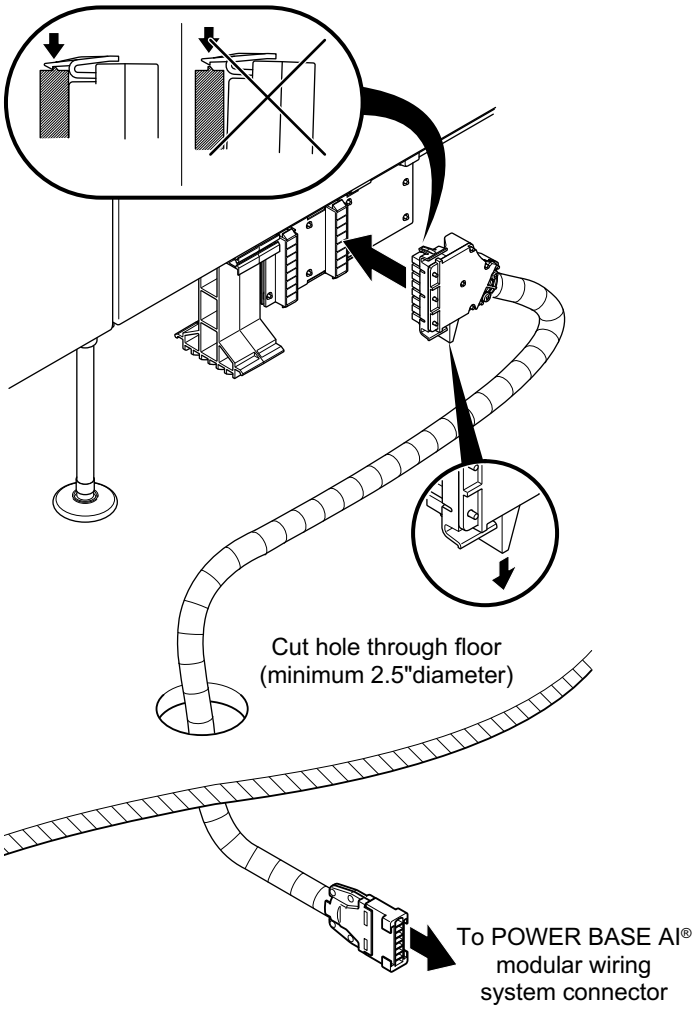

UNIGROUP TOO

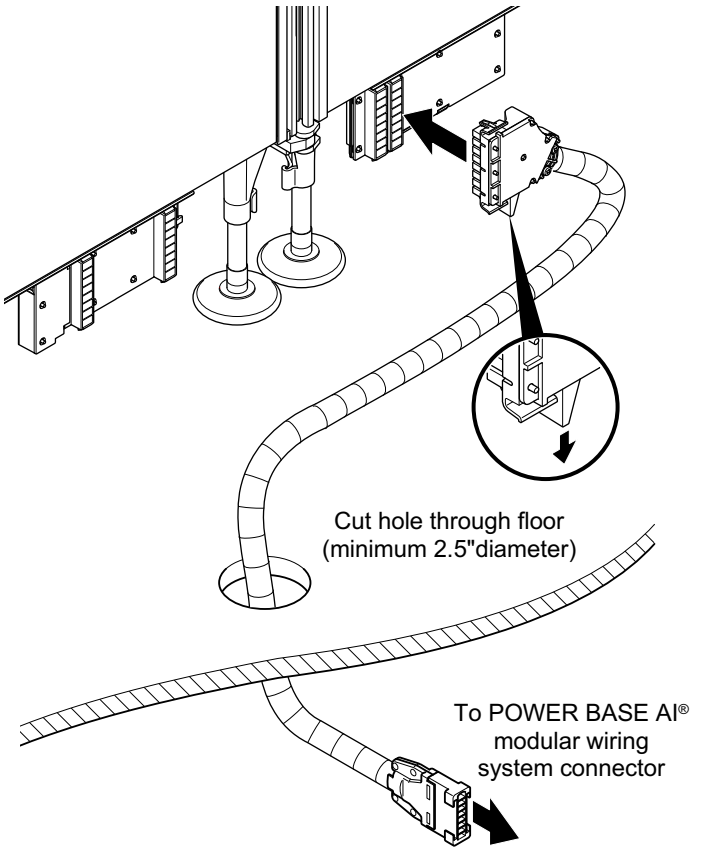

CUSTOMER SERVICE PHONE: 1-800-426-8562