

COMPOSE®/PREMISE®/UNIGROUP TOO®


Sliding Door


Installation Instructions


Tools Required

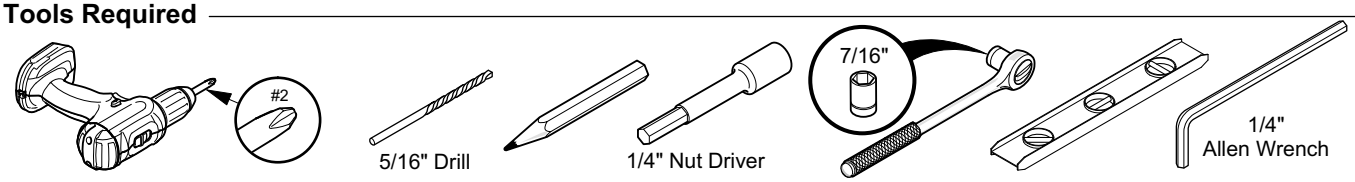

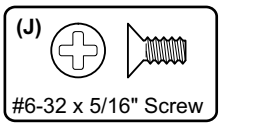


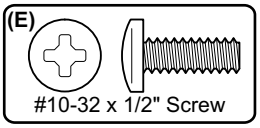

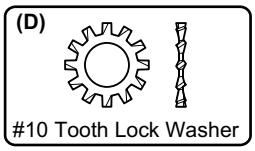


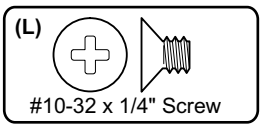


COMPOSE HANGER

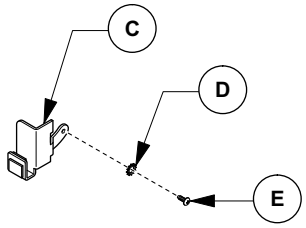


UNIGROUP TOO

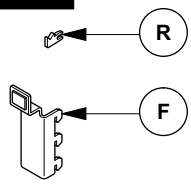

PREMISE HANGER

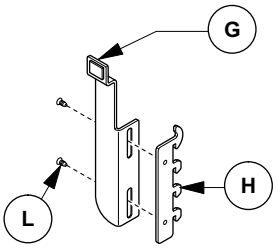


ANTI-DISLODEGMENT INSERT

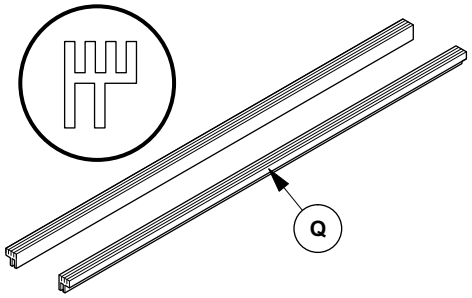

CUSTOMER SERVICE PHONE: 1-800-426-8562

COMPOSE APPLICATIONS


IN-LINE

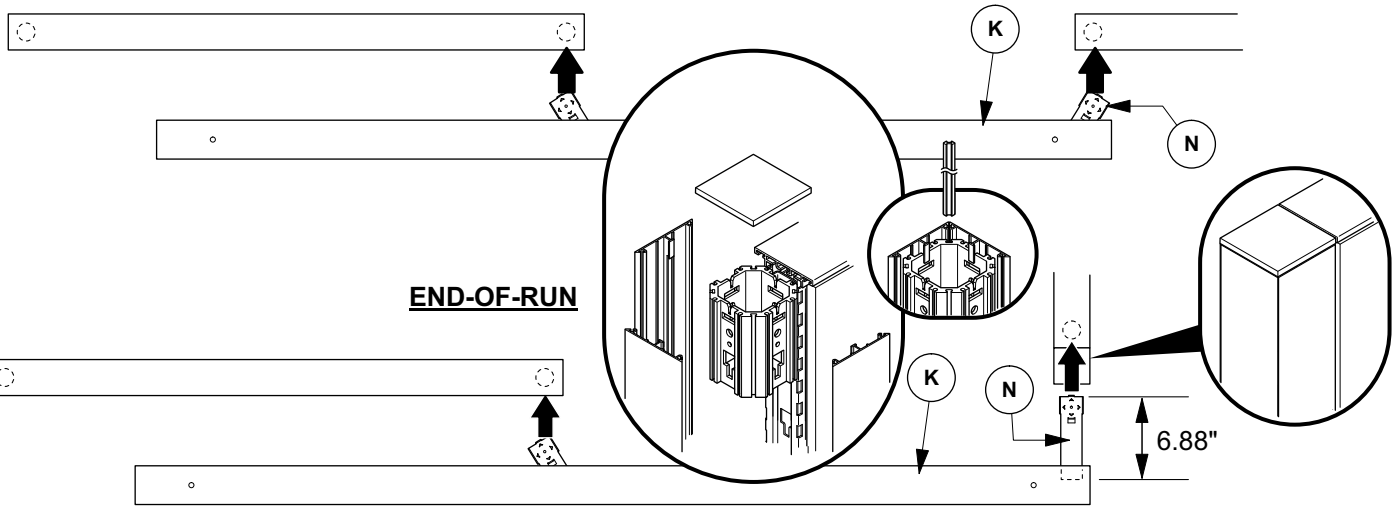


END-OF-RUN

PREMISE APPLICATIONS

IN-LINE

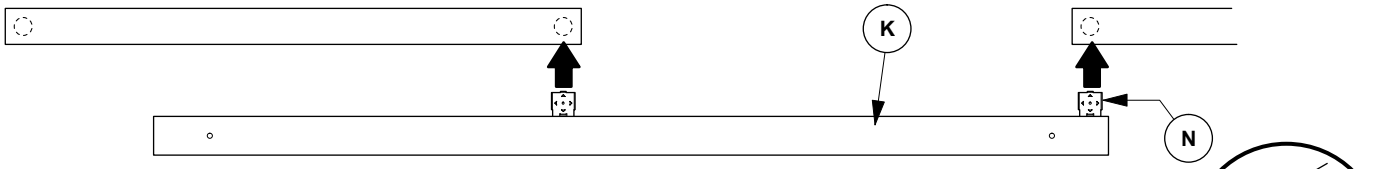


END-OF-RUN

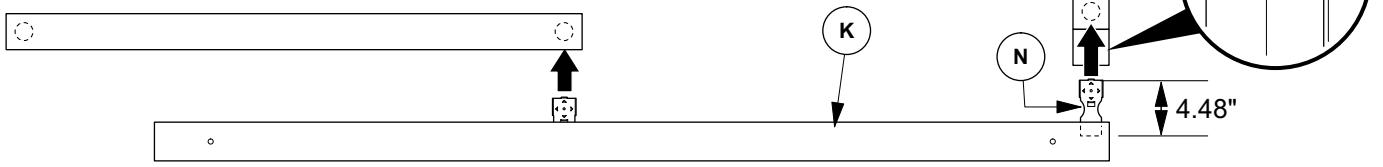


UNIGROUP TOO APPLICATIONS

IN-LINE

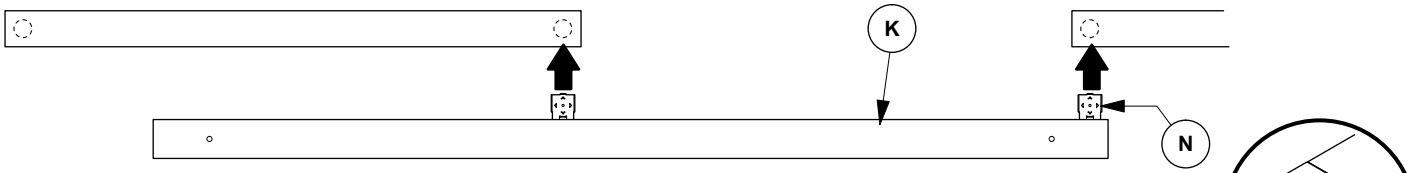


END-OF-RUN

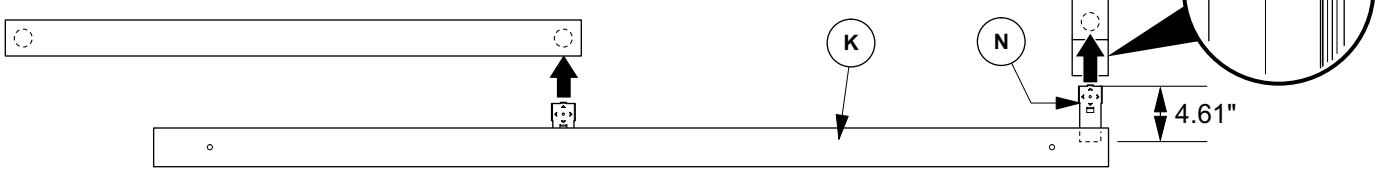


OPTIONAL: FOR HARD SURFACES ONLY


1 Hammer spikes (P) flat

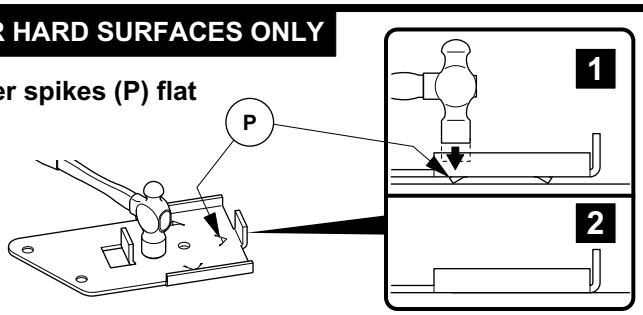


2 Install rubber pads (Q)

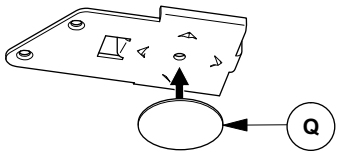


3 Install brackets (N) to track (K)

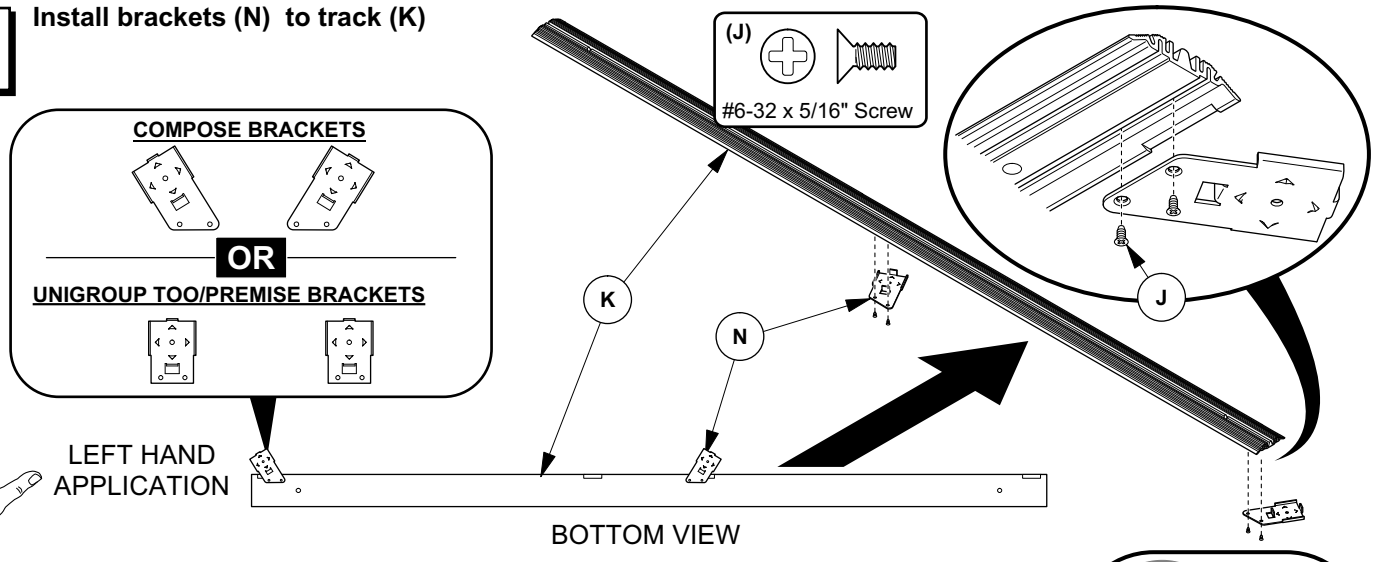

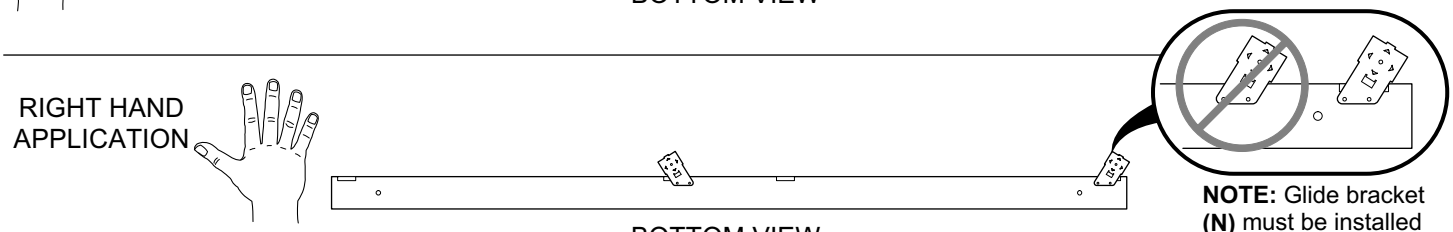

NOTE: Glide bracket **(N)** must be installed in track **(K)** cutouts.


4 Install track (N)

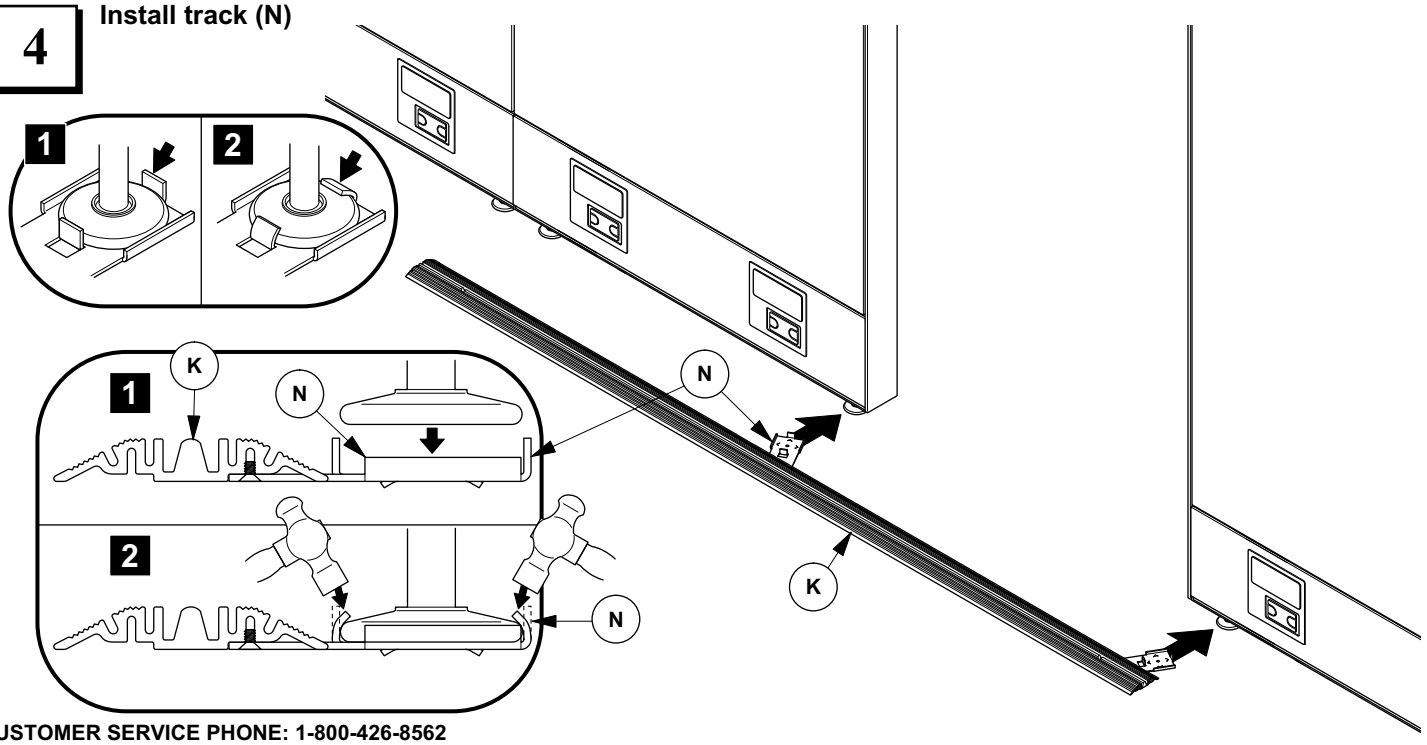

CUSTOMER SERVICE PHONE: 1-800-426-8562


FOR COMPOSE PANELS ONLY

5a **Install hanger bracket (C)**

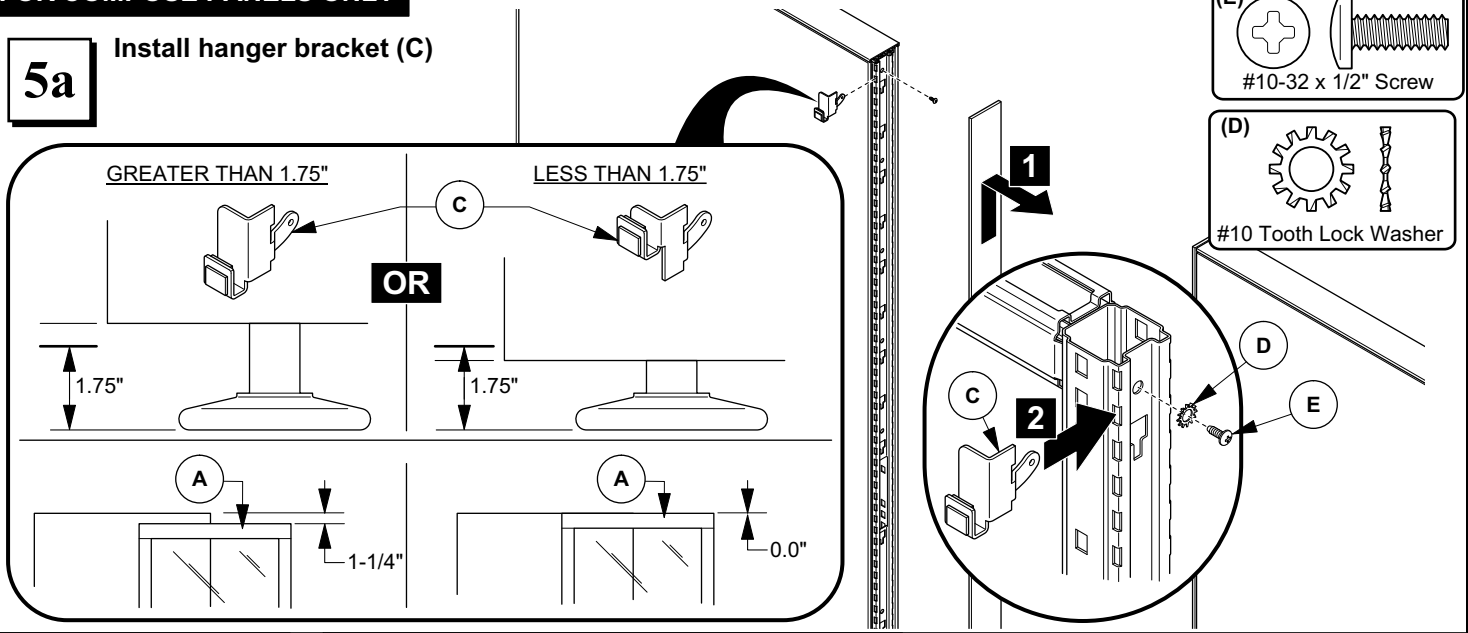


FOR GLASS STACKS

NOTE: If necessary widen slot in "M" rail to attached bracket to glass stacks.

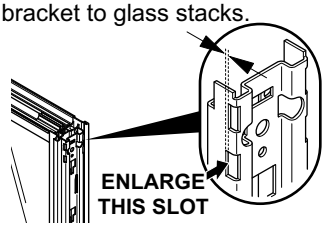


IF NECESSARY LOCATE AND DRILL HOLE

IMPORTANT: DO NOT DRILL HANGER BRACKET (C)!

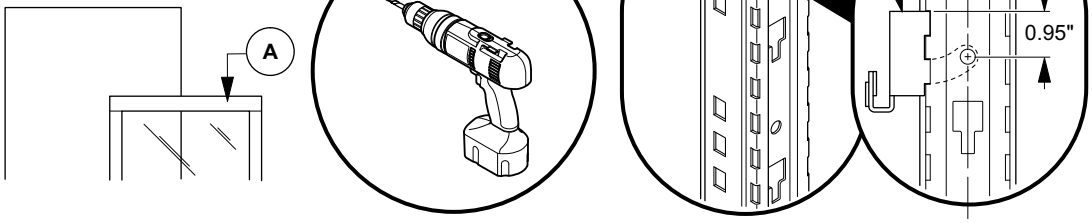


FOR UNIGROUP TOO PANELS ONLY

5b **Install hanger bracket (F)**

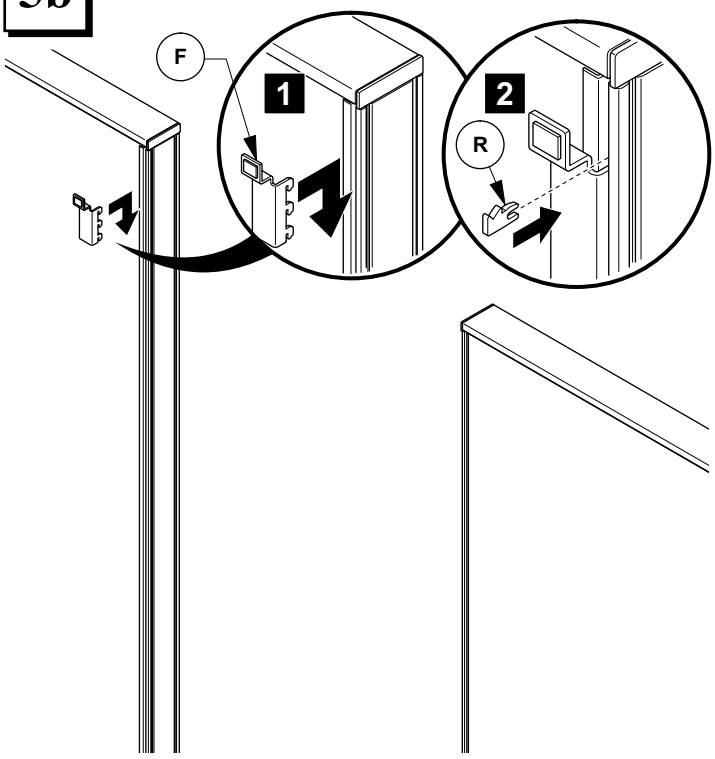

FOR PREMISE PANELS ONLY

5c **Install hanger bracket (F)**

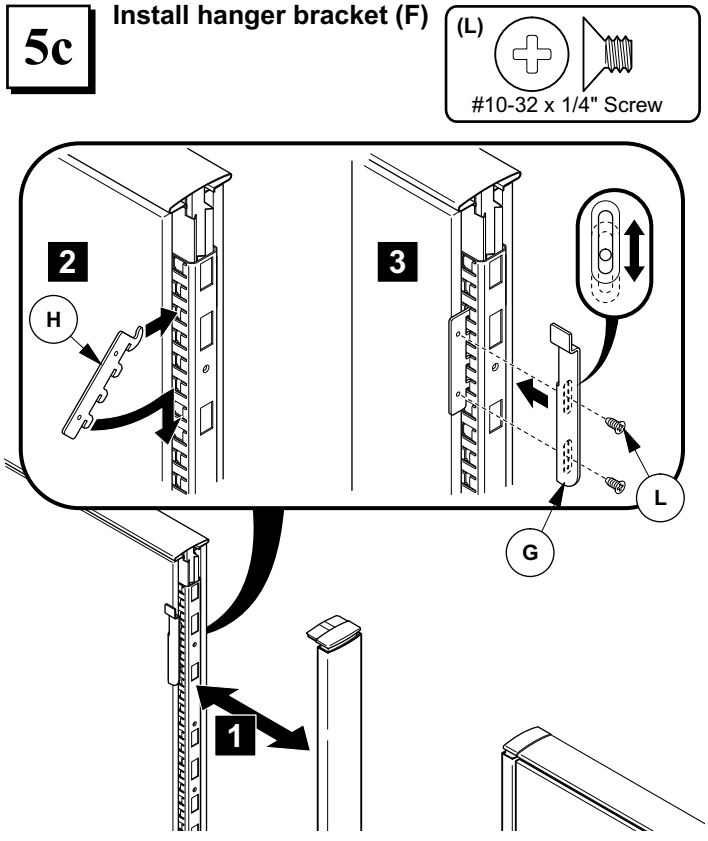


CUSTOMER SERVICE PHONE: 1-800-426-8562

REPLACE STEP 6 WITH STEPS 6a & 6b

6a

Install 1/2 the anti-dislodgment (Q) towards back of door

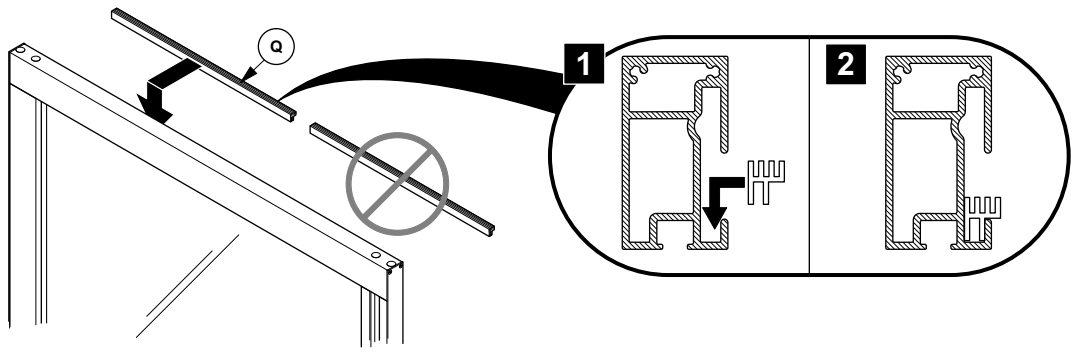


6b

Install stop bumpers (B)

NOTE: When required install stop bumpers **(B)** to back of door as shown. (see chart)

7a

Install door (A)

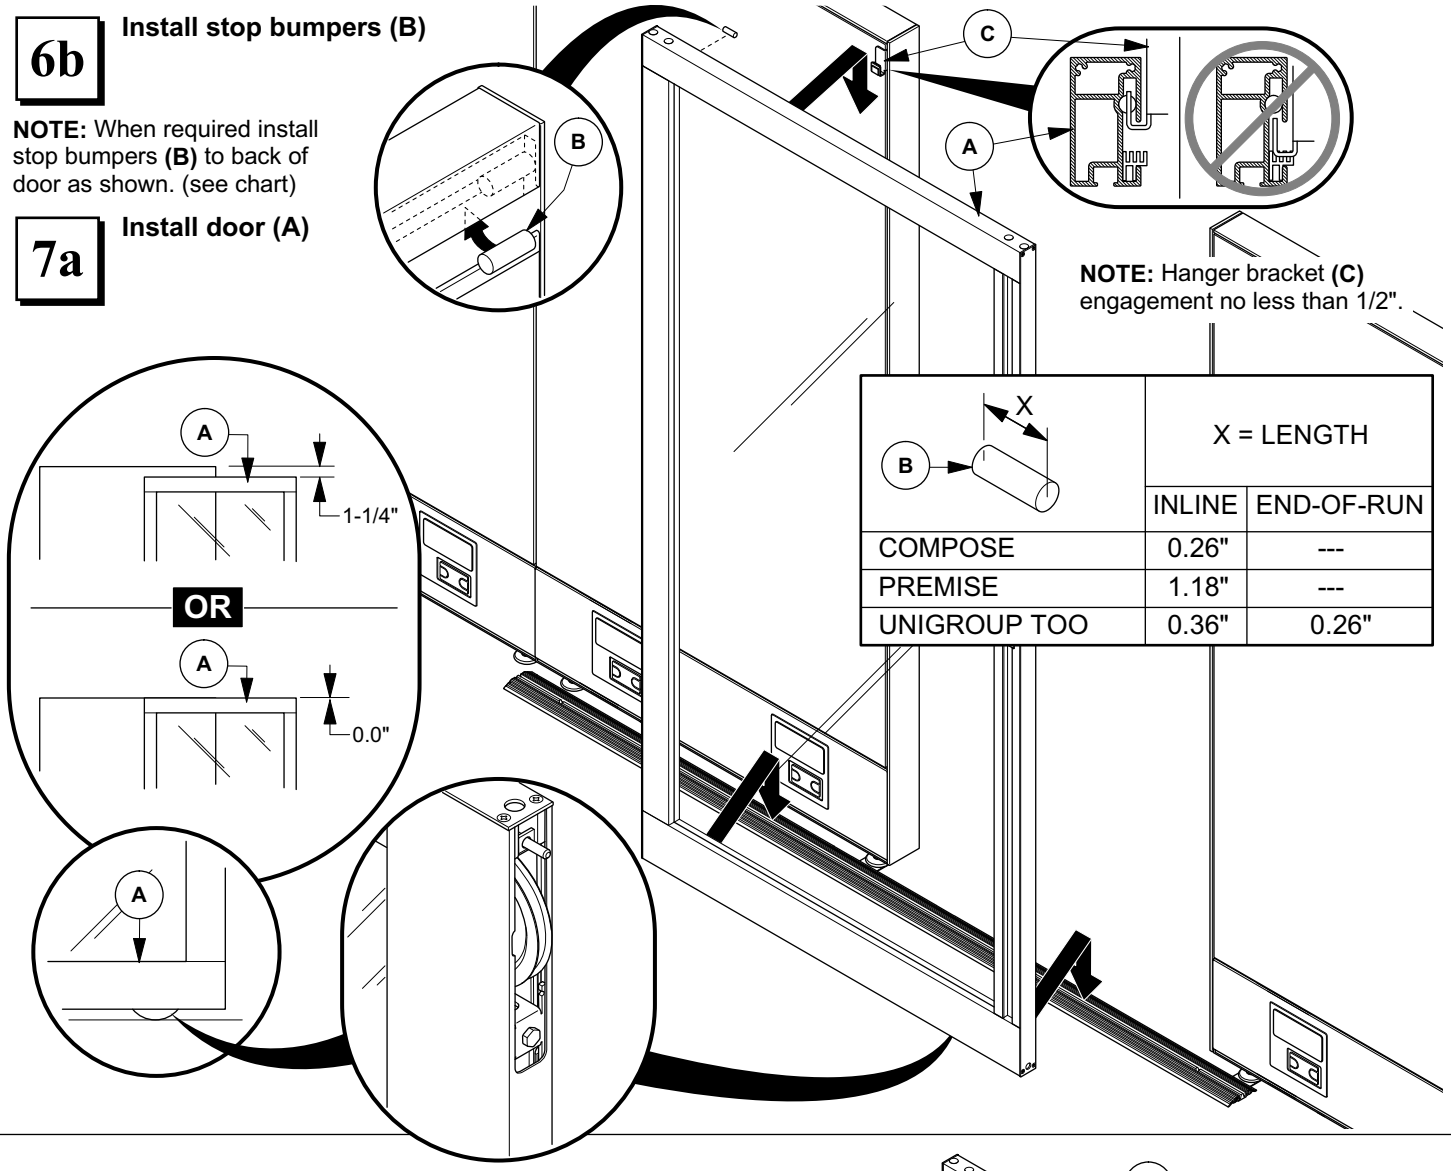



NOTE: Hanger bracket **(C)** engagement no less than 1/2".

	X = LENGTH	
	INLINE	END-OF-RUN
COMPOSE	0.26"	---
PREMISE	1.18"	---
UNIGROUP TOO	0.36"	0.26"

7b


Close door (A) & install the 2nd 1/2 of anti-dislodgment (Q)

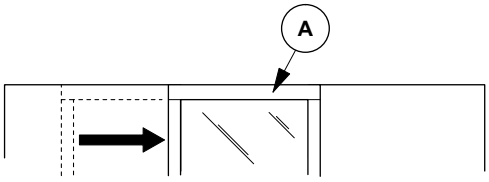

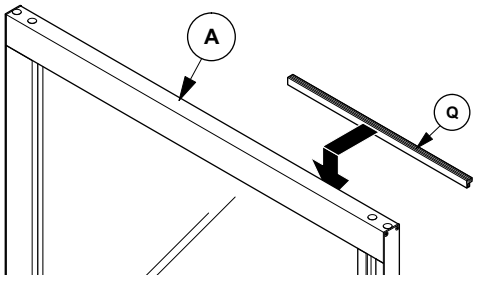


FOR LOCKING DOOR

8 **Install locking bracket (M)**

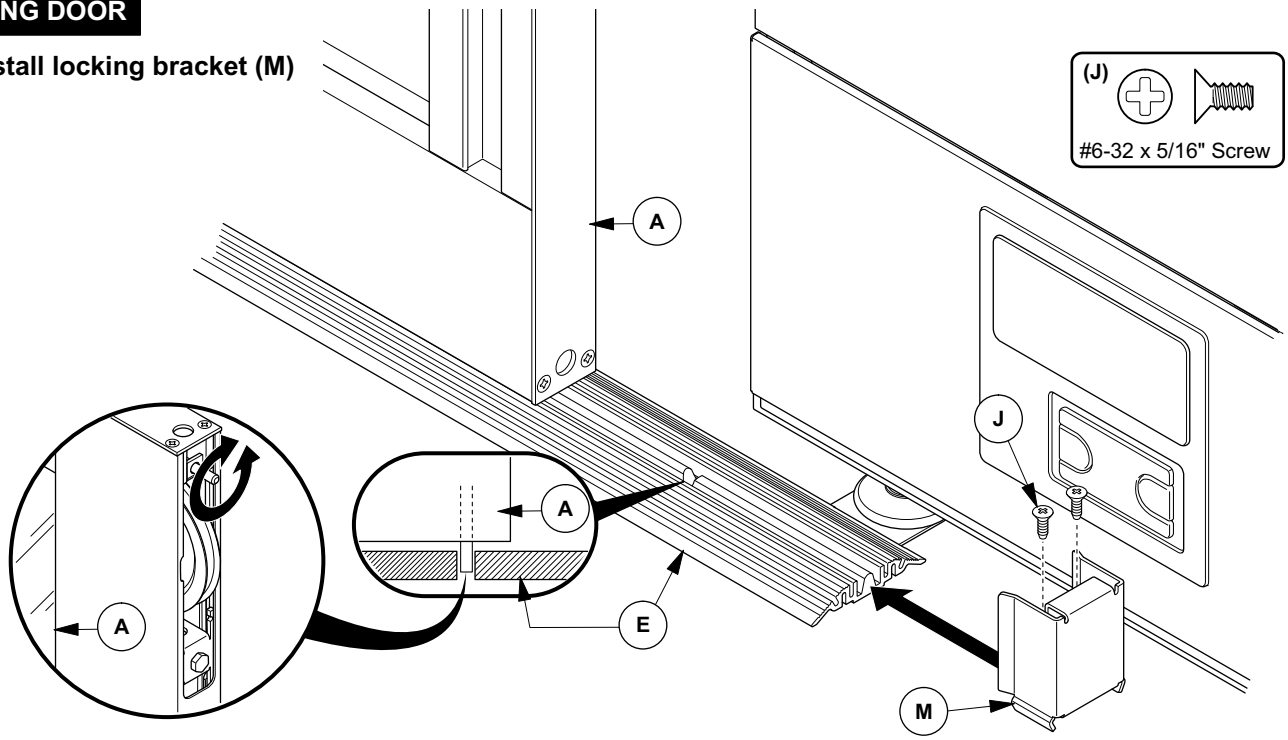


9 **Adjust lock (P) if necessary**

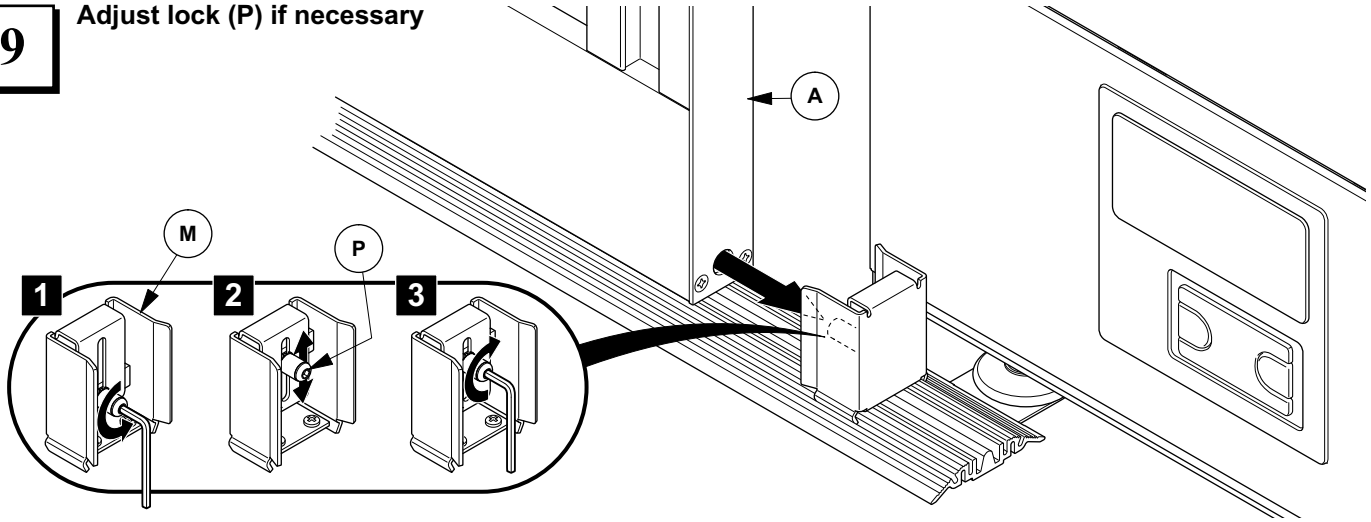

OPTIONAL: LOCK PLUG INSTALLATION


1 **Replace square key (R1) with round key (R2)**

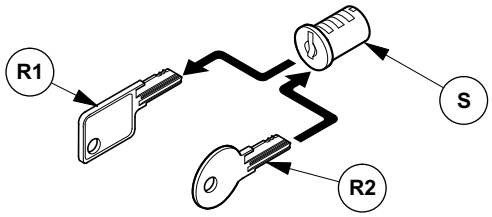

2 **Install lock plug (S)**


Note: Position cam to unlocked (9:00 o'clock) position.

Note: It may be necessary to rotate cam until lock plug engages.

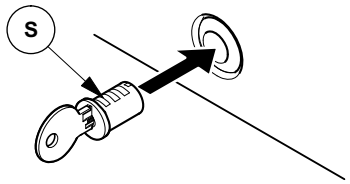

3 **Remove round key (R2) and insert square key (R1)**

Note: Hold the lock plug (S) in place with thumb while removing the control key (R2).

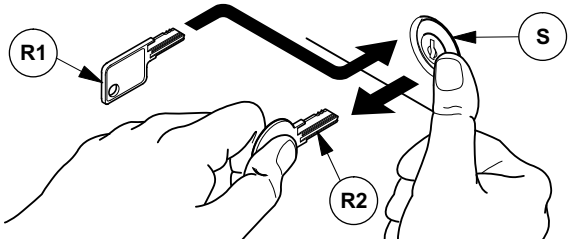

CUSTOMER SERVICE PHONE: 1-800-426-8562