
RACE® POWER BASE®

Power Distribution Assembly Retrofit Kit

Installation Instructions

Tools Required

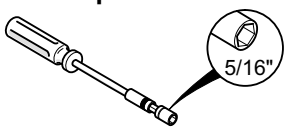


NOTE: Connection of panels to the permanent wiring of the building MUST be done by a licensed electrician, who must control the size, voltage drop and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all NEC and local code requirements.

WARNING: Power MUST BE DISCONNECTED before installation.


WARNING: Do not electrically interconnect circuits powered from two different feed modules. This poses a SHOCK HAZARD to service personnel and will cause a RISK OF FIRE due to excessive circulating currents.

NOTE: Raceways that are electrically interconnected must also be mechanically interconnected.

NOTE: Connectors keyed to assure polarity.

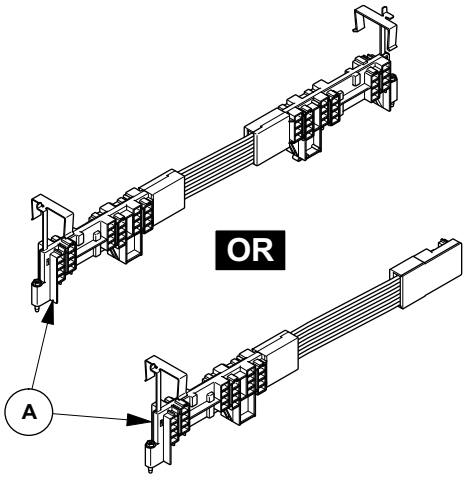



POWER DISTRIBUTION ASSEMBLY APPLICATIONS

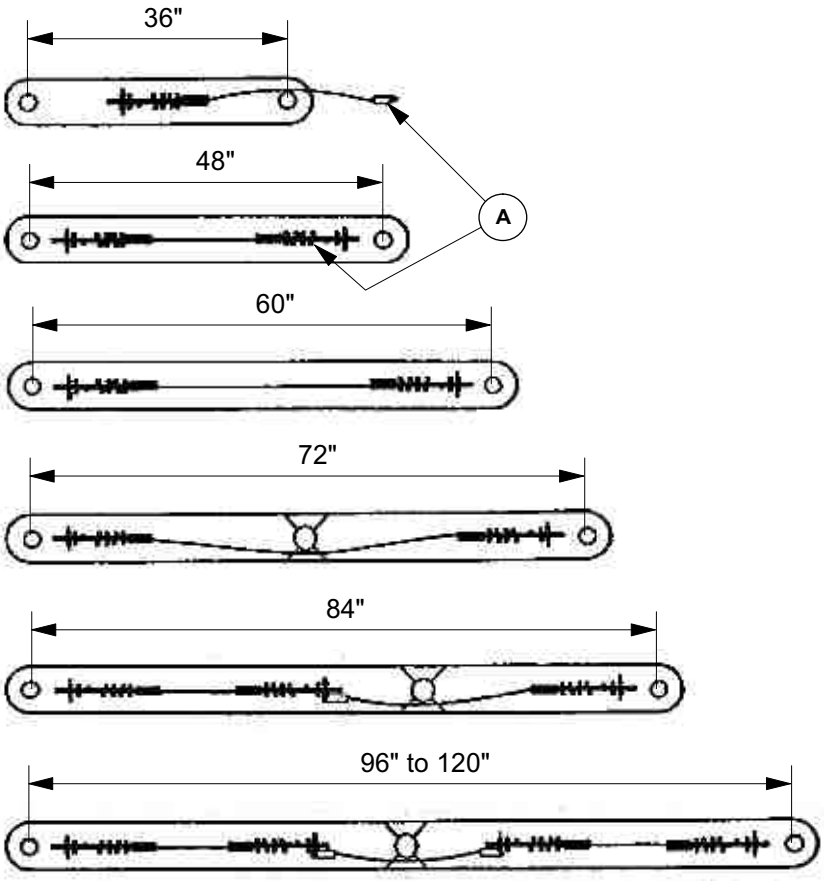

ACCESS TO POWER RACEWAY


1 **Remove parts (C)**

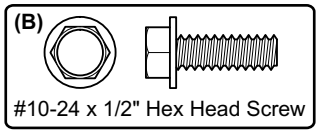

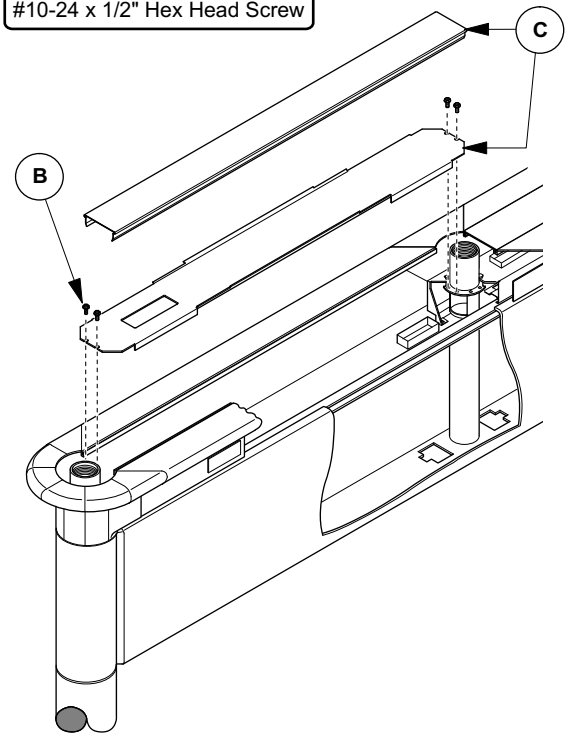


CUSTOMER SERVICE PHONE: 1-800-426-8562

2 Install power distribution assembly (A)

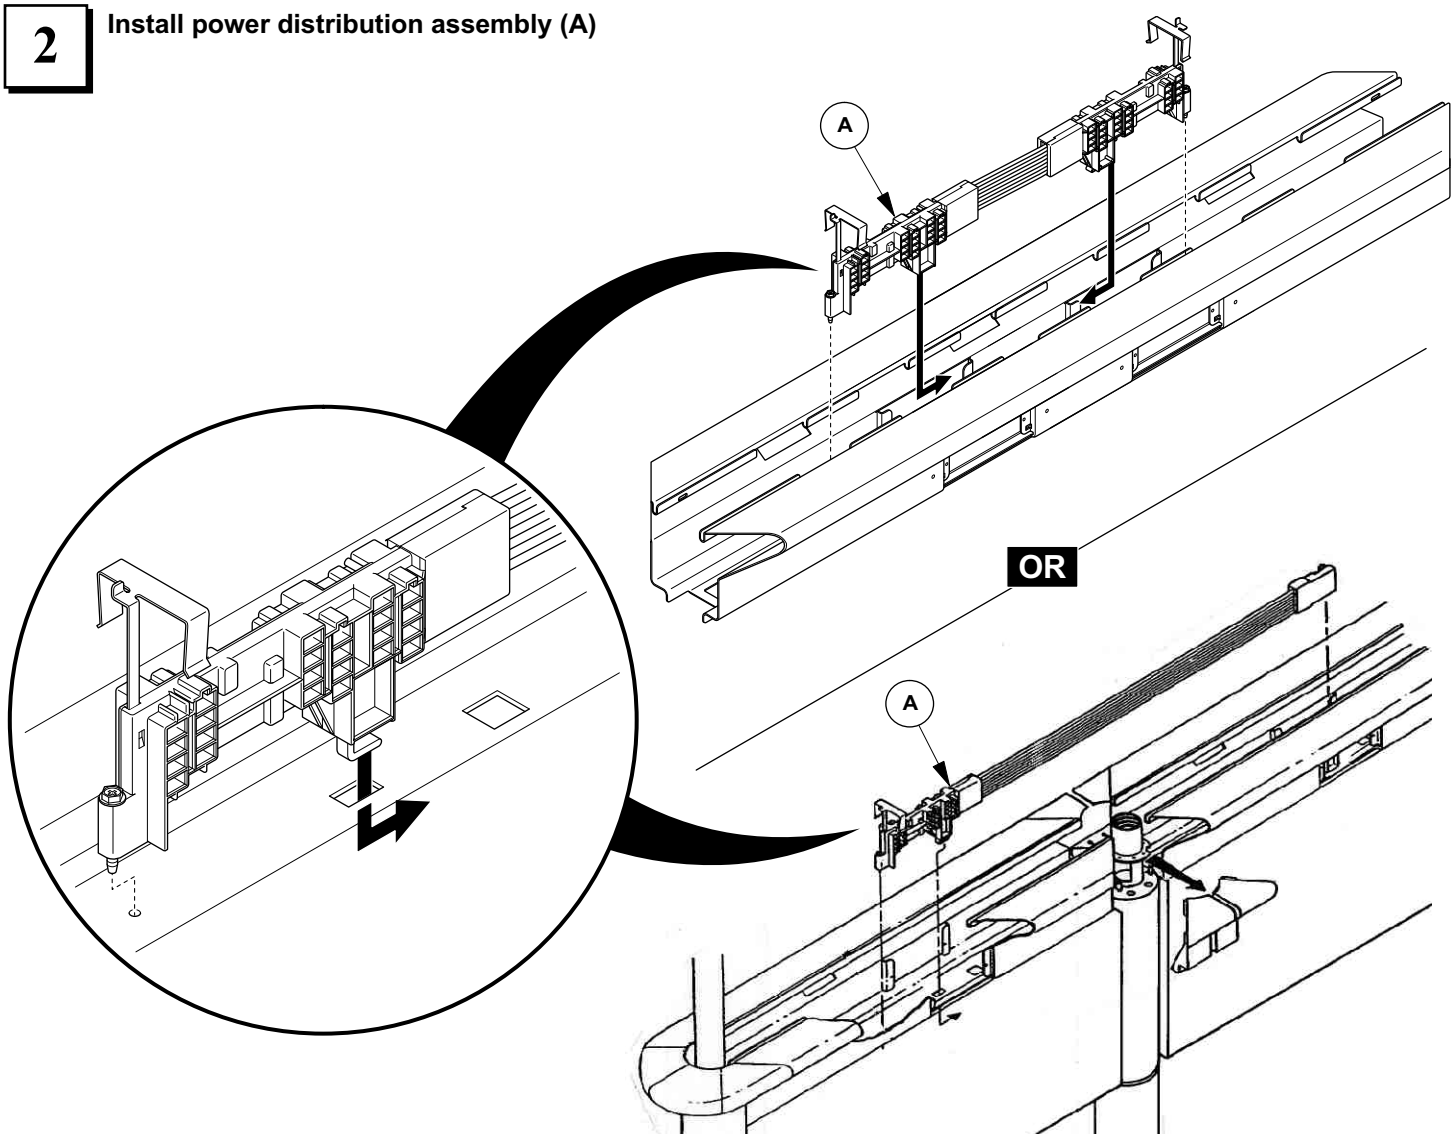


3 Install infeed (A)

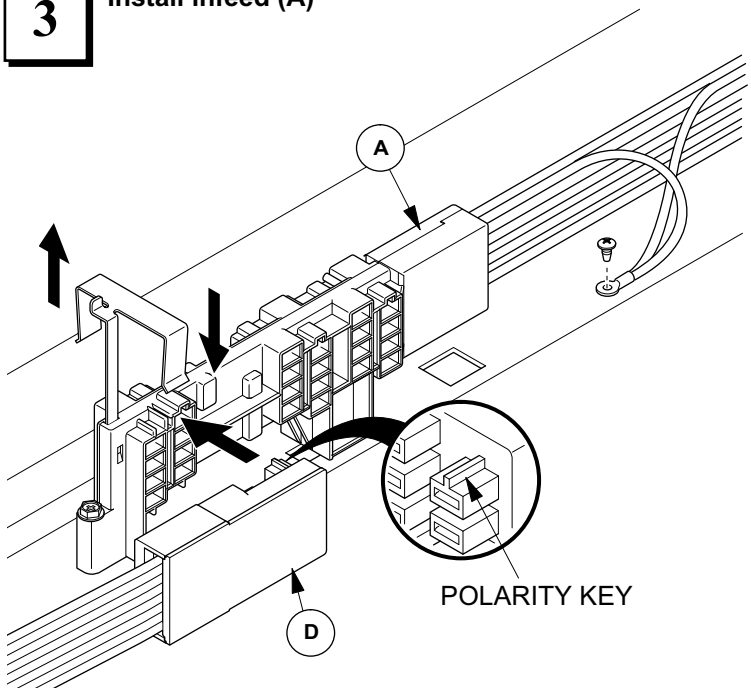

4 Remove receptacle (A)

NOTE: Receptacle **(E)** supplied by local electrician.

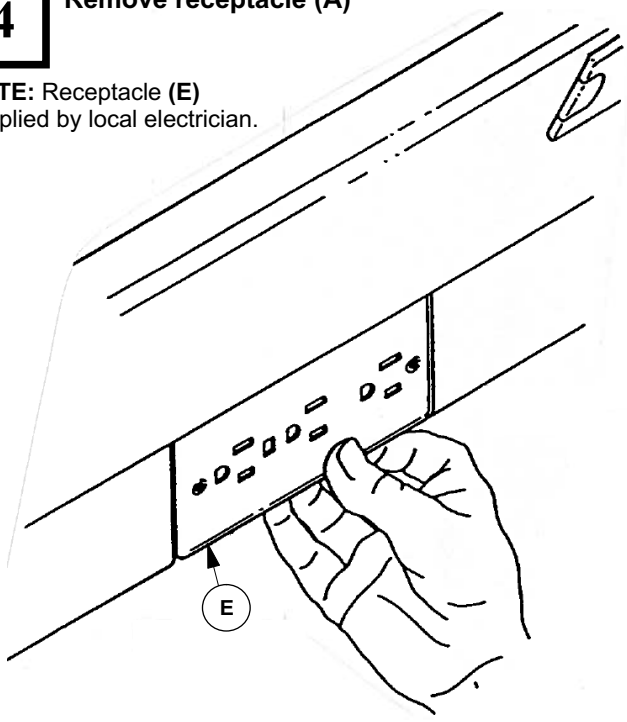

CUSTOMER SERVICE PHONE: 1-800-426-8562