
RACE® POWER BASE®

Flexible Power Connectors/Pass Through Connectors

Installation Instructions


Tools Required

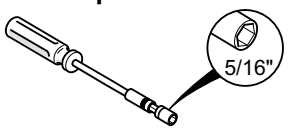

NOTE: Connection of panels to the permanent wiring of the building MUST be done by a licensed electrician, who must control the size, voltage drop and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all NEC and local code requirements.

WARNING: Power MUST BE DISCONNECTED before installation.


WARNING: Do not electrically interconnect circuits powered from two different feed modules. This poses a SHOCK HAZARD to service personnel and will cause a RISK OF FIRE due to excessive circulating currents.

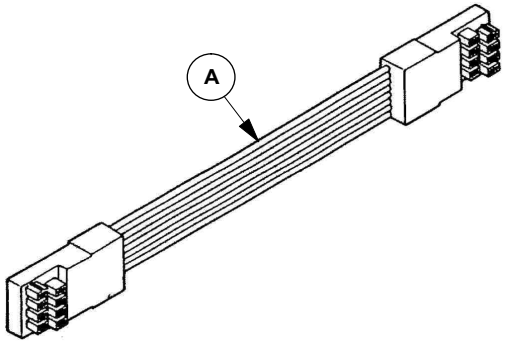


NOTE: Raceways that are electrically interconnected must also be mechanically interconnected.

NOTE: Connectors keyed to assure polarity.


180° BEAM CONNECTON




135° BEAM CONNECTON

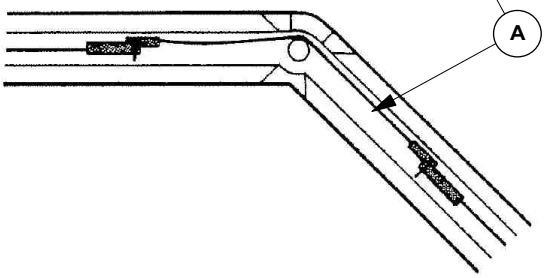


4-WAY CONNECTON

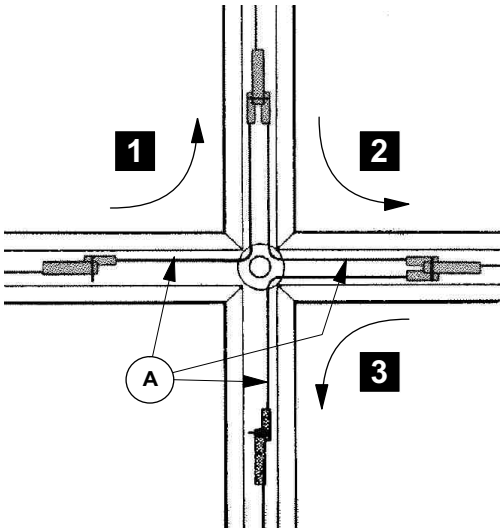


3-WAY CONNECTON

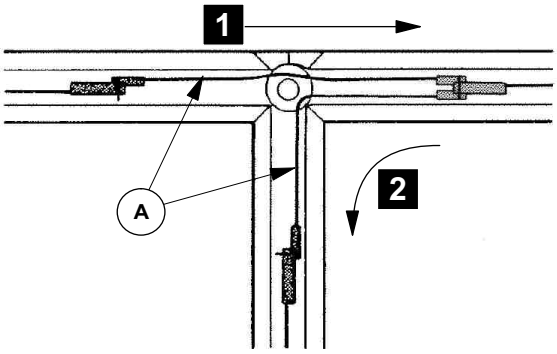

90° BEAM CONNECTON

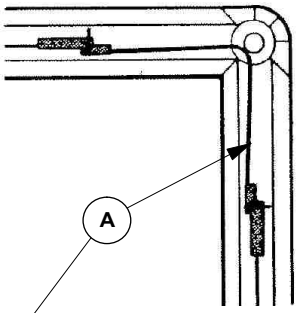



PASS-THROUGH CONNECTION




CUSTOMER SERVICE PHONE: 1-800-426-8562

ACCESS TO POWER RACEWAY

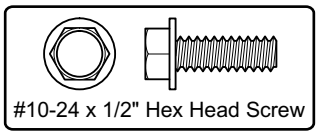

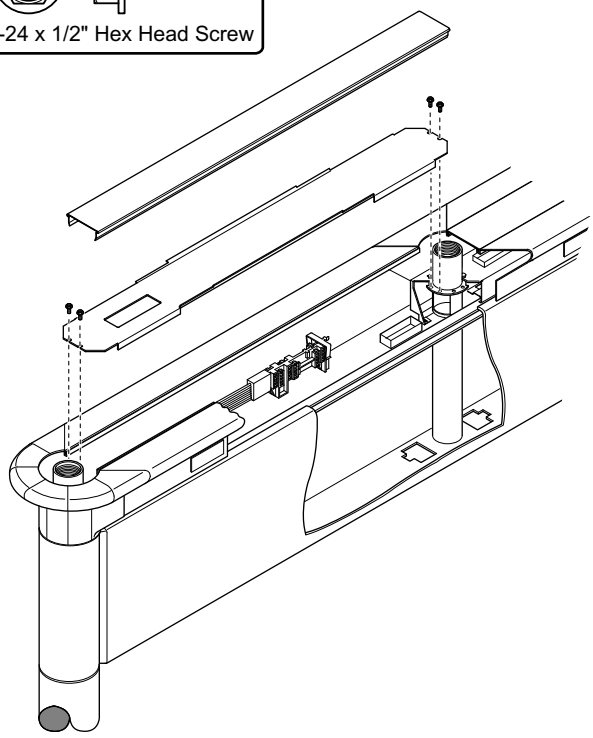

INSTALLATION/REMOVAL

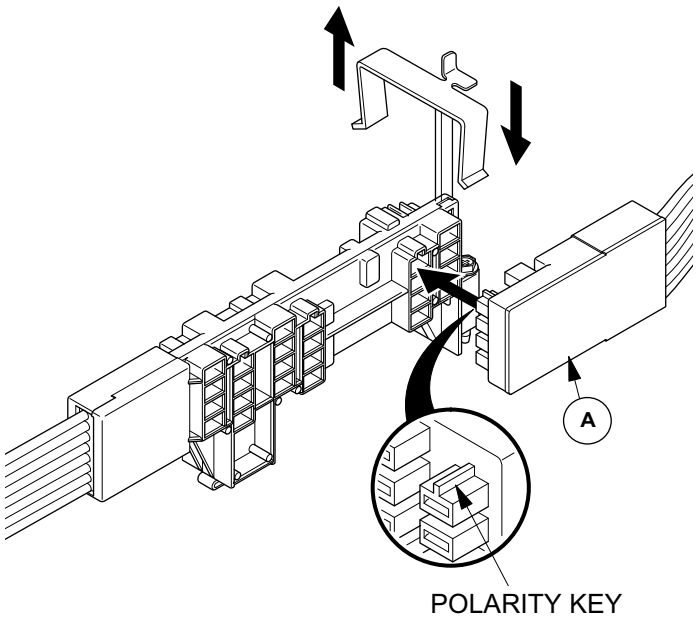

SIX FOOT BEAM APPLICATION

