IMPORTANT SAFETY INSTRUCTIONS
For use with HOP Single Motor Electric Height Adjustable Tables
For Comercial Use Only
This product is conformed to UL962 certified to CAN/CSA C22.2 No. 68.

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**

SAVE THESE INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.


Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Max Static Load: 175 lbs

Electrical Rating: 120V, 60Hz, 5A for 2 leg tables

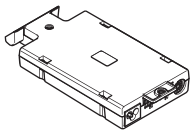

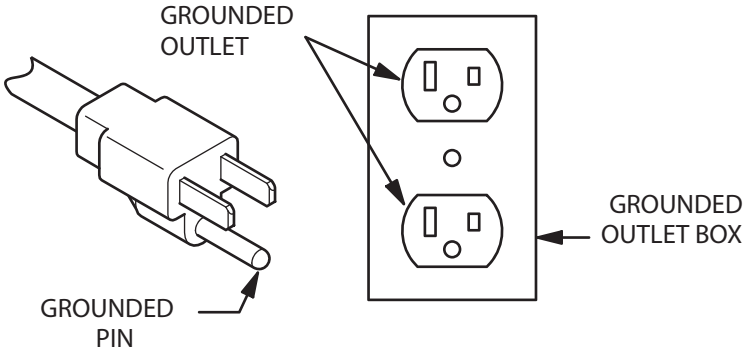

CUSTOMER SERVICE PHONE: 1-800-426-8562

HOP®


Height Adjustable Tables

Installation Instructions


0 1/2 1
1/4 1/4

Scale 1 : 1


Tools Required

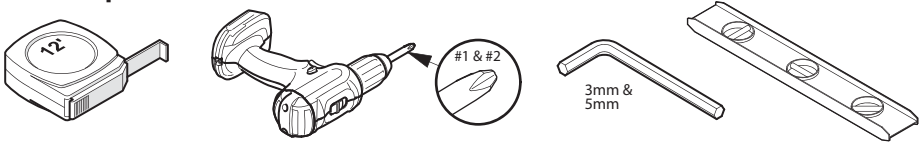



FOR 2 LEG TABLES

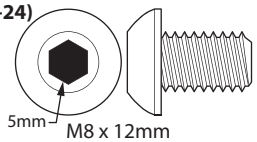
(S-24)


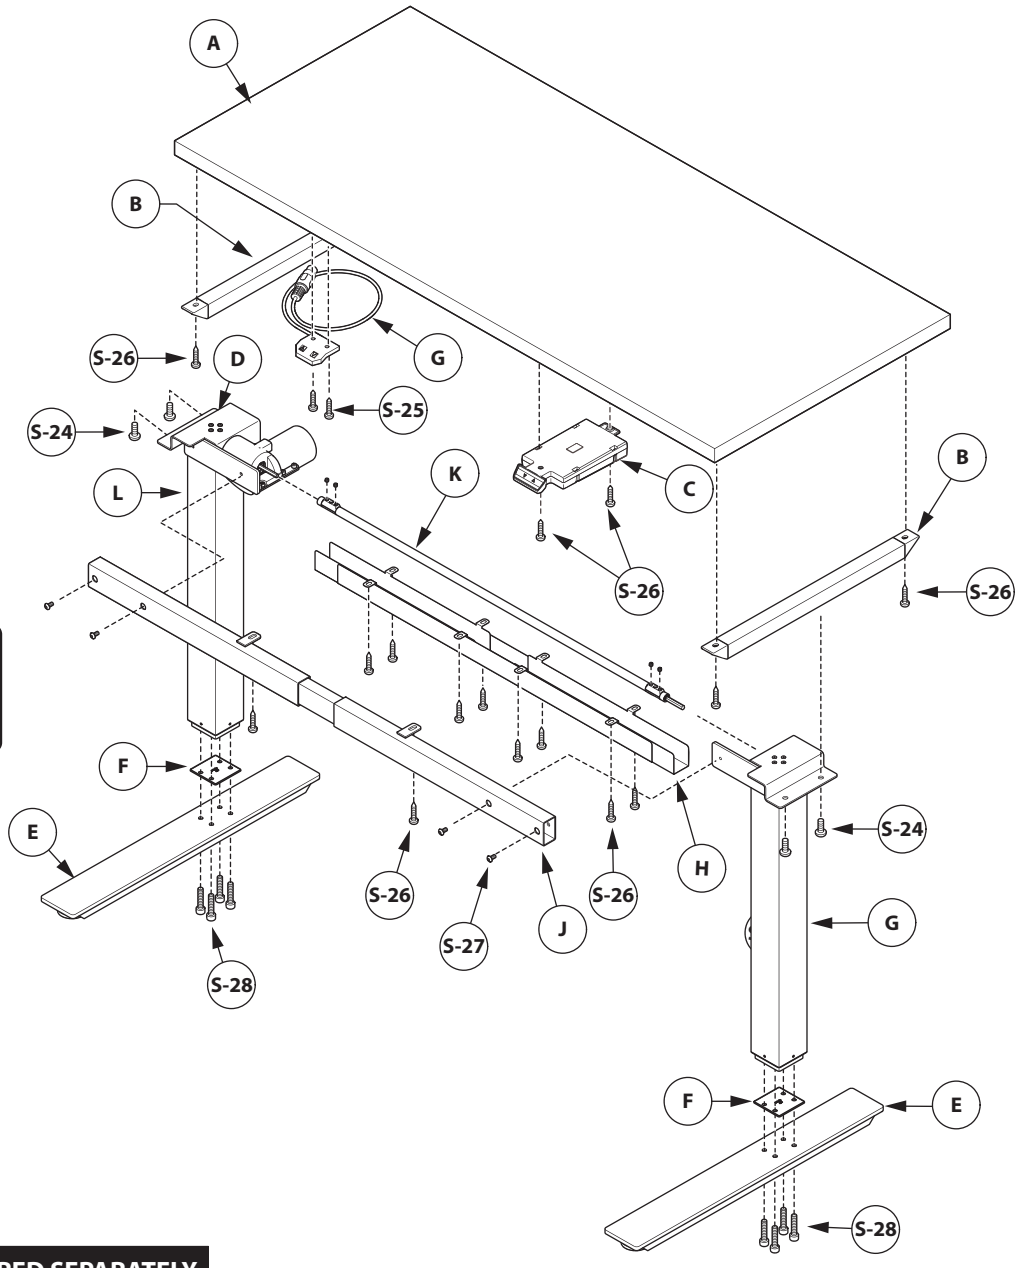
M8 x 12mm
Button Head Screw

(S-25)

M2.9 x 19mm
Pan Head Screw

(S-26)

M4.8 x 19 Pan Head Screw


(S-27)

M6 X 8mm Socket Cap

(S-28)

M6 x 35mm Socket Head Cap Screw

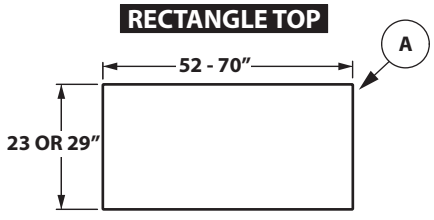


WORKSURFACES AVAILABLE - ORDERED SEPARATELY


RECTANGLE TOP




WEDGE TOP

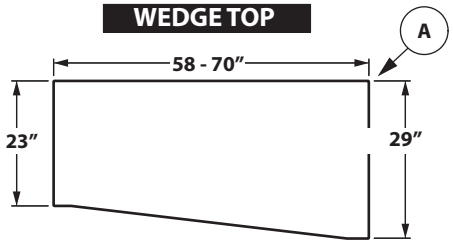


INVERSE SWELL TOP

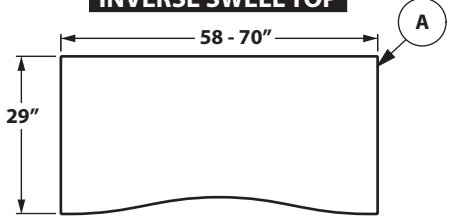


1 Stretch cross channel (J) to align with pilot holes (N). Tighten set screws (P).

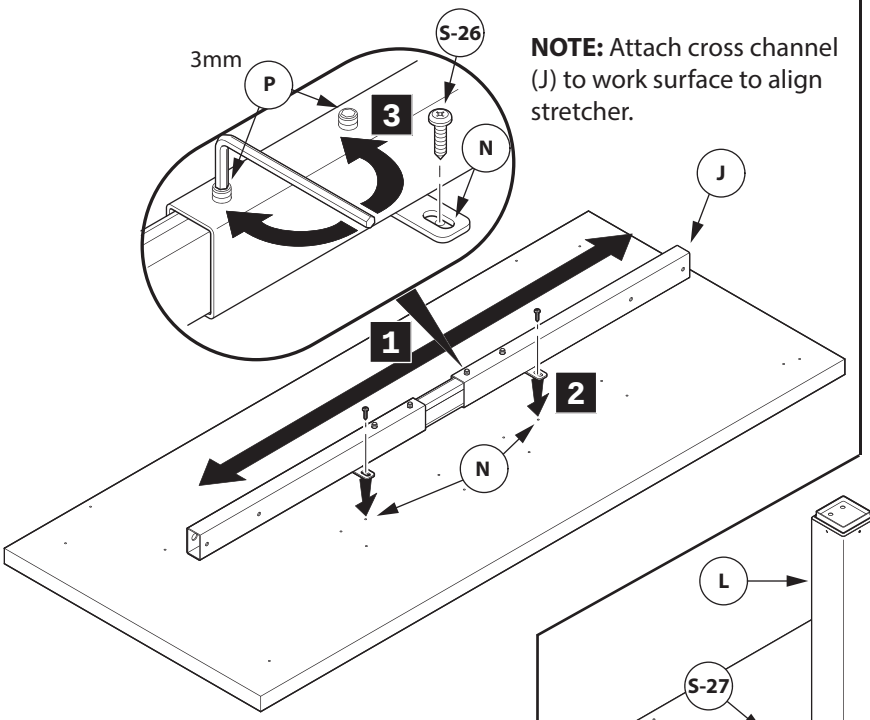


NOTE: Attach cross channel (J) to work surface to align stretcher.

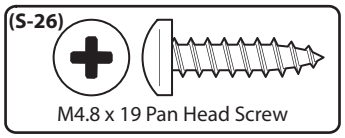



2 Attach cross channel (J) to legs (G) & (L).

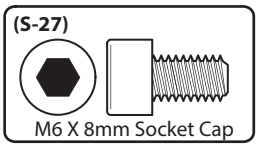

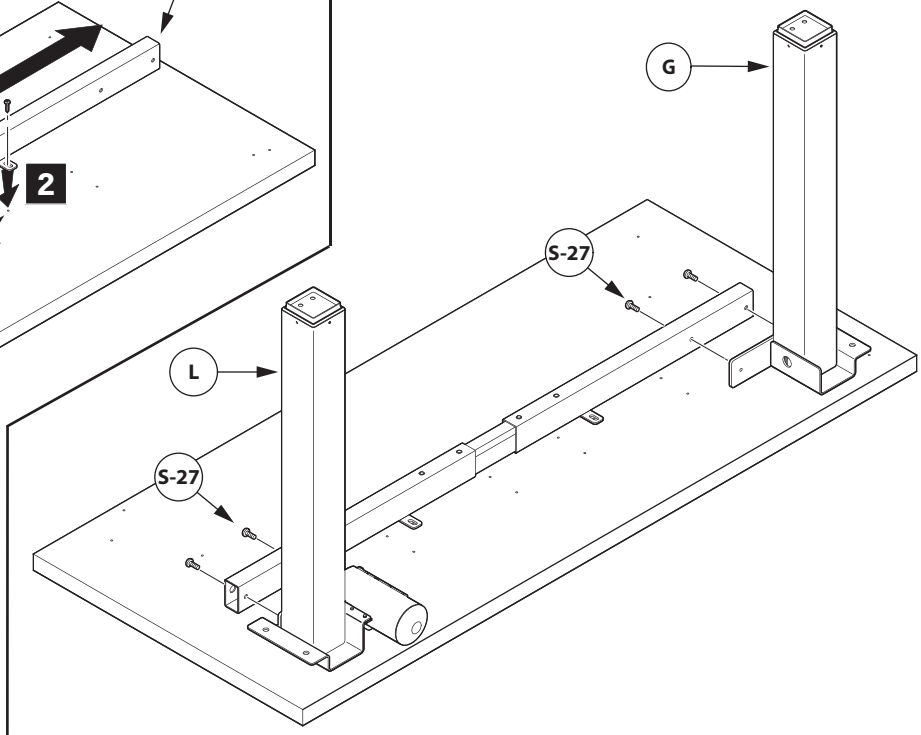


3 Install top supports (B) to legs (G) & (L).

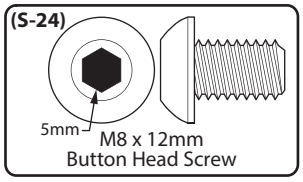


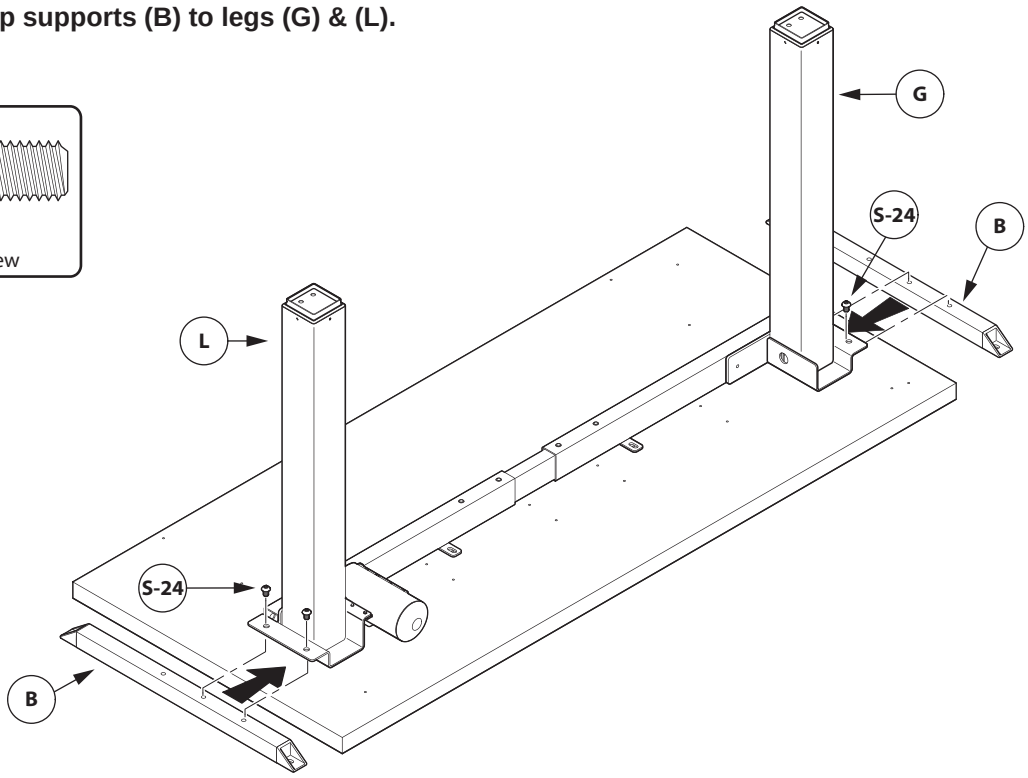

4 Attach feet (E).

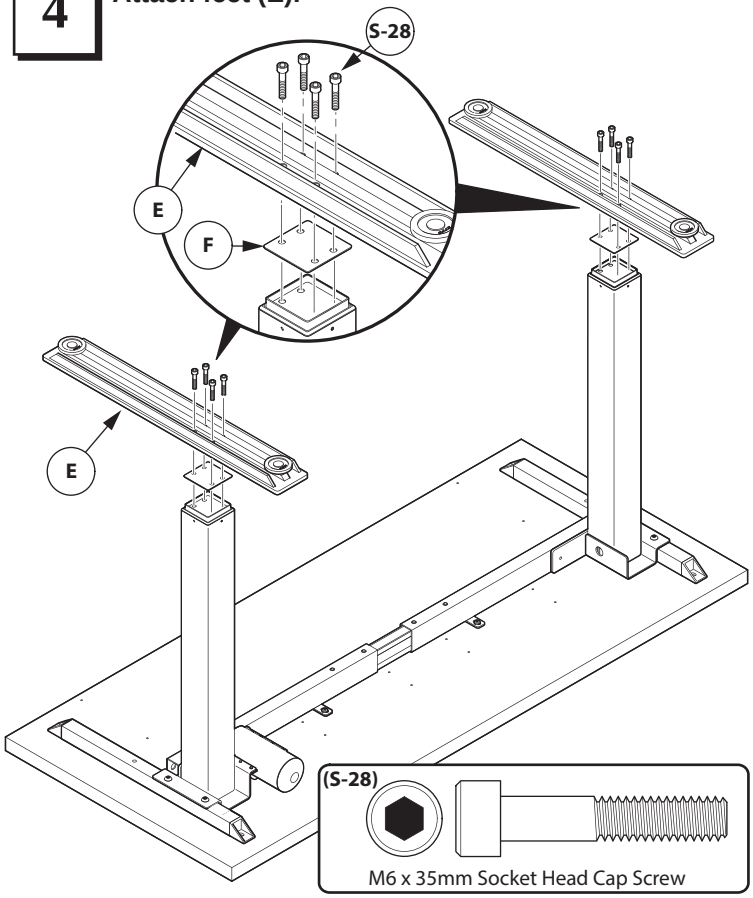


5 Un-attach cross channel (J). Turn cross channel/leg assembly upright.

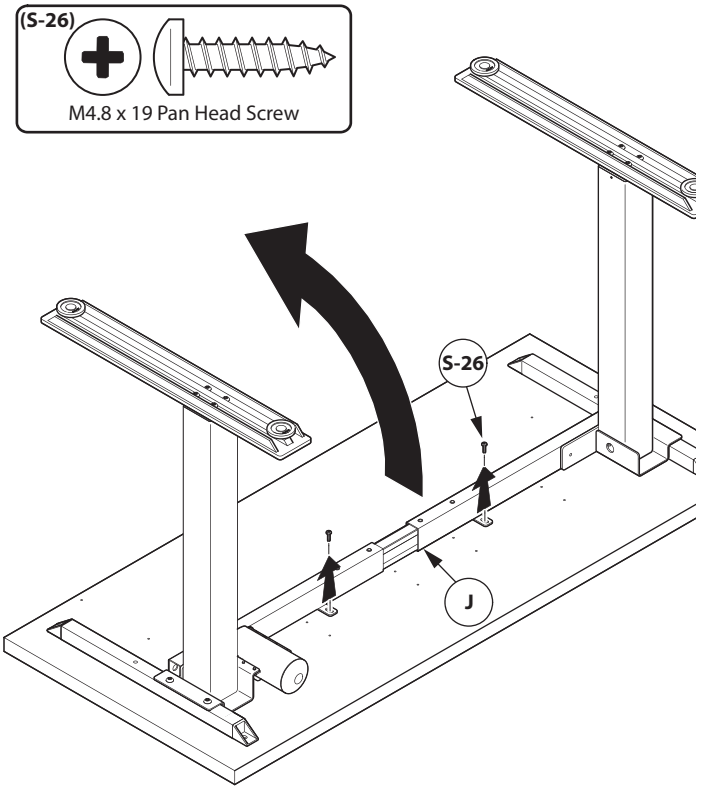

6 Attach gear connector rod (K) to legs (C) and (L).

NOTE: Make sure both columns are at the same height or at lowest position before installing gear connector rod.

NOTE: If there is back and fourth movement once gear connector rod is installed, double check to make sure both ends are fully inserted and set screws tighened.

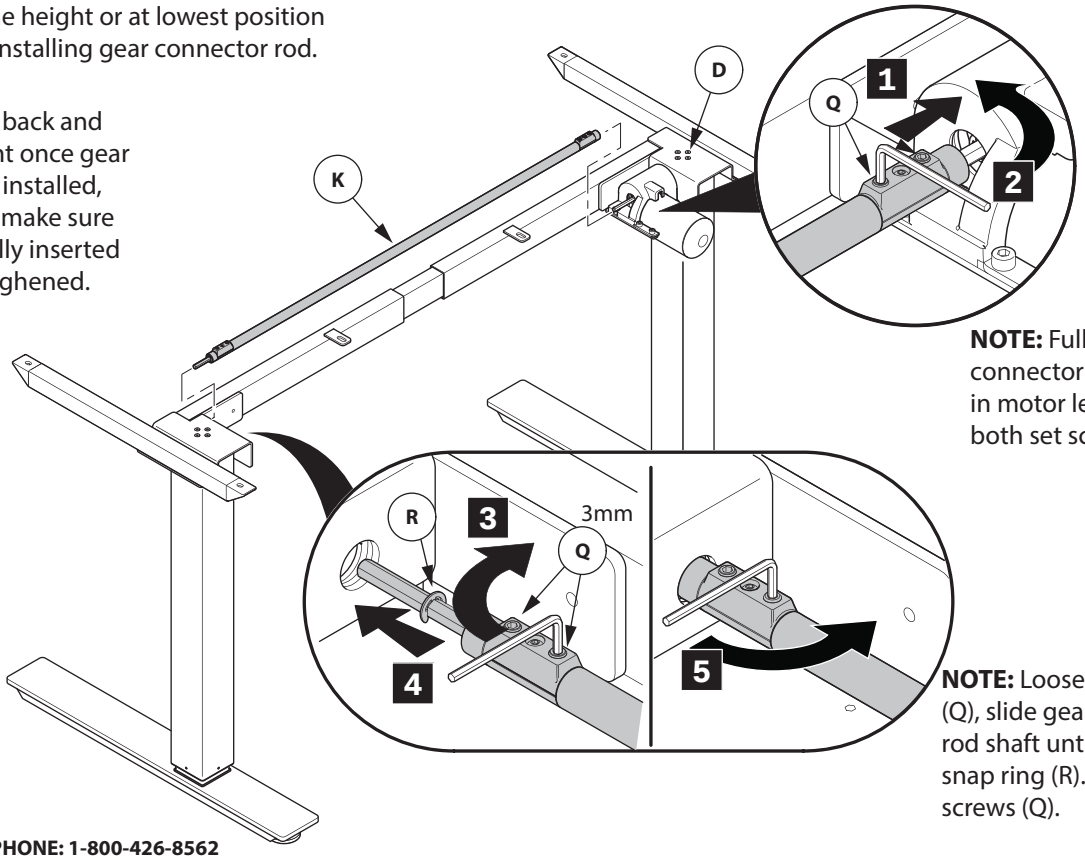


NOTE: Fully seat gear connector rod over shaft in motor leg, tighten both set screws (Q).

NOTE: Loosen set screws (Q), slide gear connector rod shaft until stopped by snap ring (R). Tighen set screws (Q).


CUSTOMER SERVICE PHONE: 1-800-426-8562

7 Attach work surface.

(S-26)




M4.8 x 19 Pan Head Screw

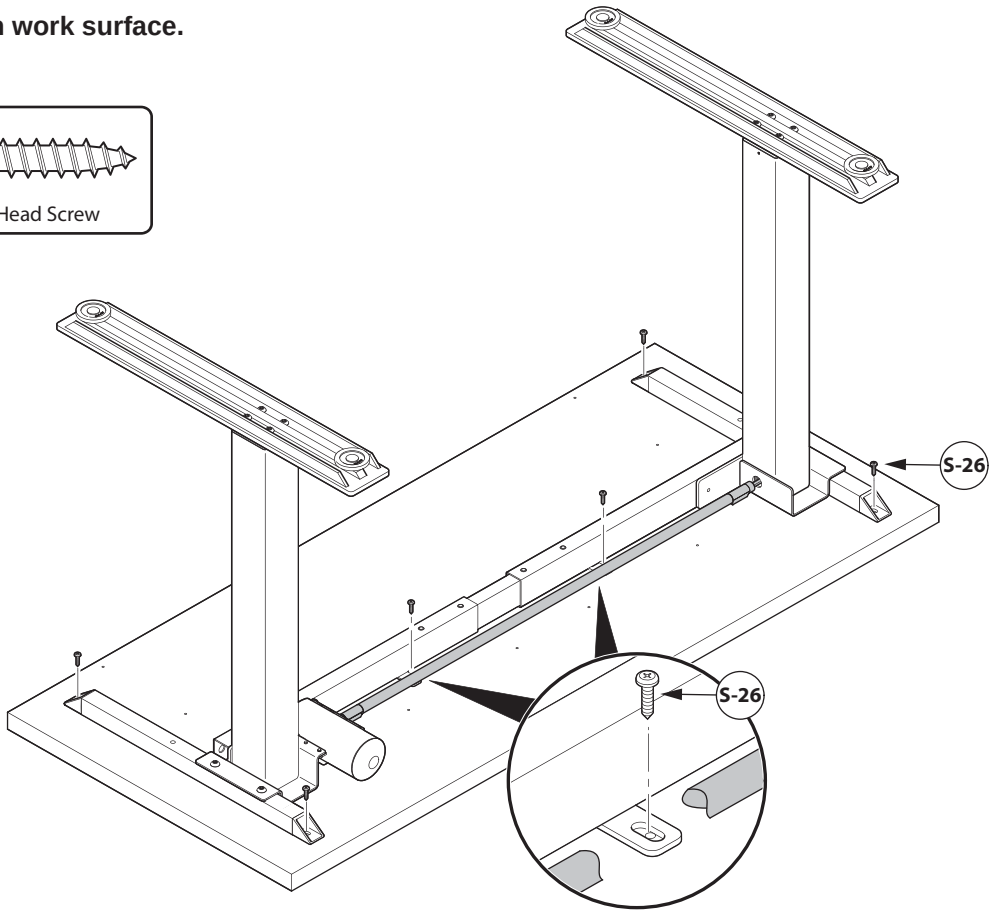


8 Attach gear connector cover (H)

(S-26)




M4.8 x 19 Pan Head Screw

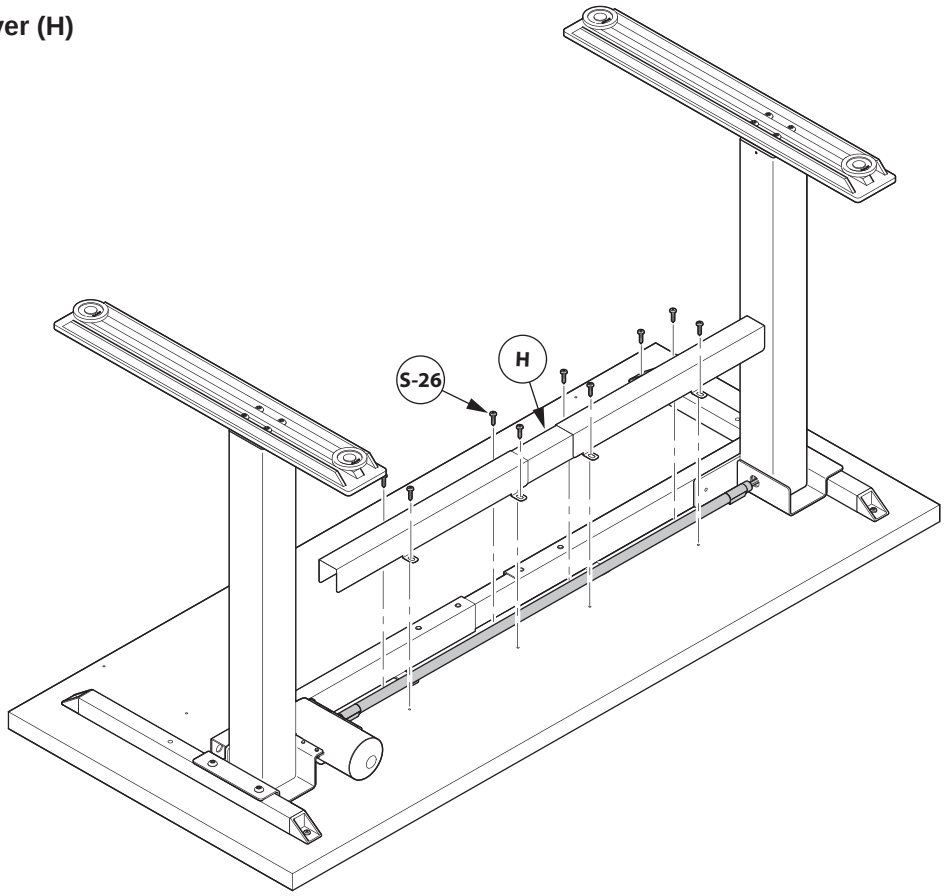

9


Attach control box (C) and up/down handset (G). Reset table to lowest position.

(S-25)




M2.9 x 19mm
Pan Head Screw

(S-26)



M4.8 x 19 Pan Head Screw

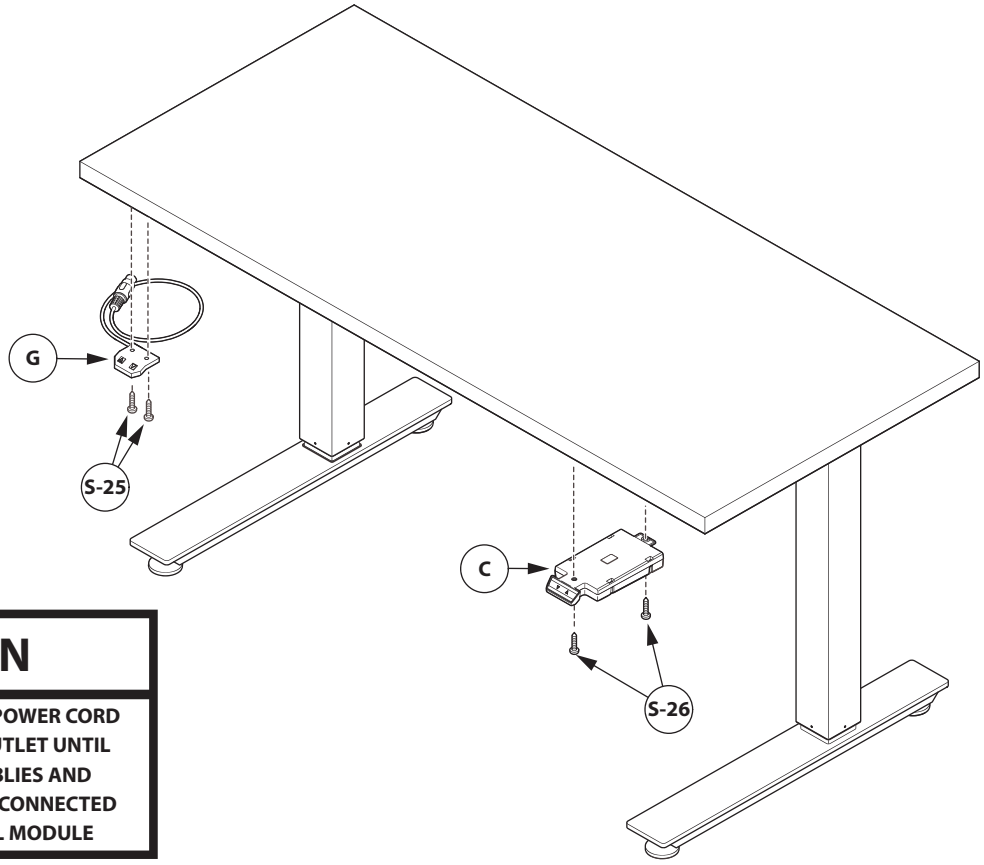

⚠ CAUTION

DO NOT PLUG POWER CORD INTO WALL OUTLET UNTIL LEG ASSEMBLIES AND HANDSET ARE CONNECTED TO CONTROL MODULE


10

Handset reset and calibration.

Initial Reset

After assembly all electric tables must be calibrated to insure smooth and trouble free movement.

1. Lower the table to the lowest height by pressing the down arrow on the switch.
2. Press down again for 5 to 10 seconds after the table has reached the lowest position
   NOTE: The table will readajust itself if needed.



Follow-up Calibration

1. Inform the user that the table should be recalibrated once every month by following the instructions above.
2. The table should also be recalibrated if jerky or uneven movement is noted.

