IMPORTANT SAFETY INSTRUCTIONS
For use with HOP Electric Height Adjustable Back to Back Benches
For Commercial Use Only
This product conforms to UL Std. 962 & 1286 and is certified to CSA Std. C22.2 No. #68 & #203

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK, USE ONLY SJT TYPE 18 AWG CORD AT THE APPLIANCE INLET - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**

SAVE THESE INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.


Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Power Base Electrical Rating: 208Y/120V, 120/240V or 120V 60Hz, 20A

Maximum functional load: 150 lbs

Electrical Rating: 120V, 60Hz, 4A for 2 leg tops

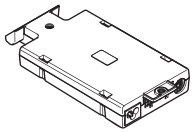

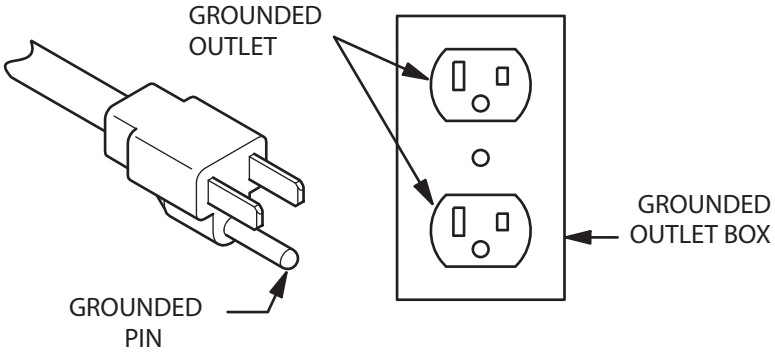

(A) FIGURE 1

HOP®


Back to Back Height Adjustable Bench


Installation Instructions


0 1/4 1/2 1/4 1

Scale 1 : 1


Tools Required

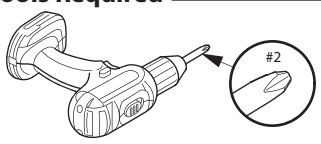




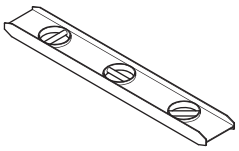


FOR ELECTRIC TABLES

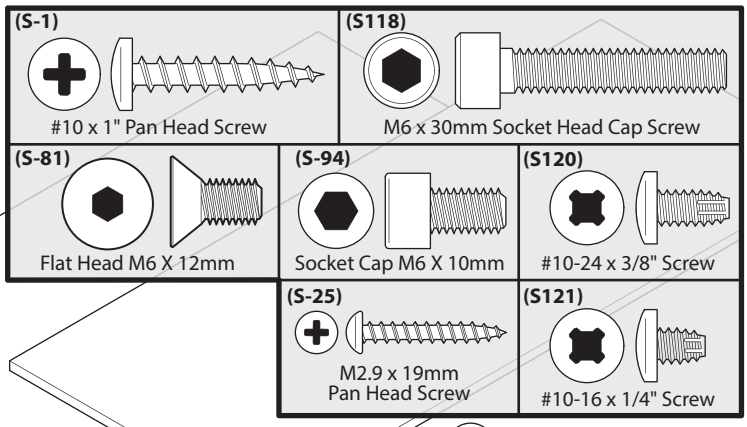


FOR ELECTRIC TABLES

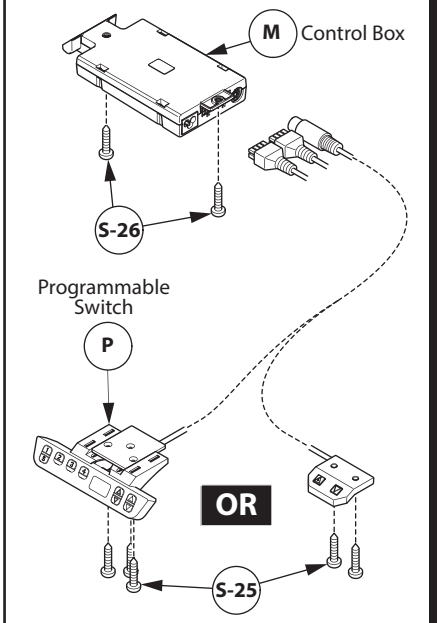

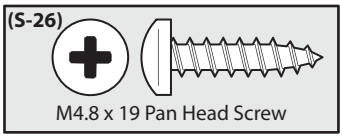


CUSTOMER SERVICE PHONE: 1-800-426-8562


1

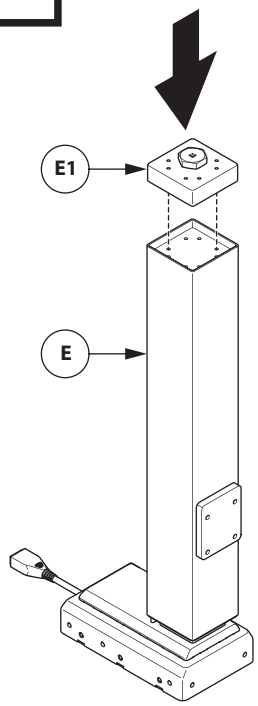
E1
E

2

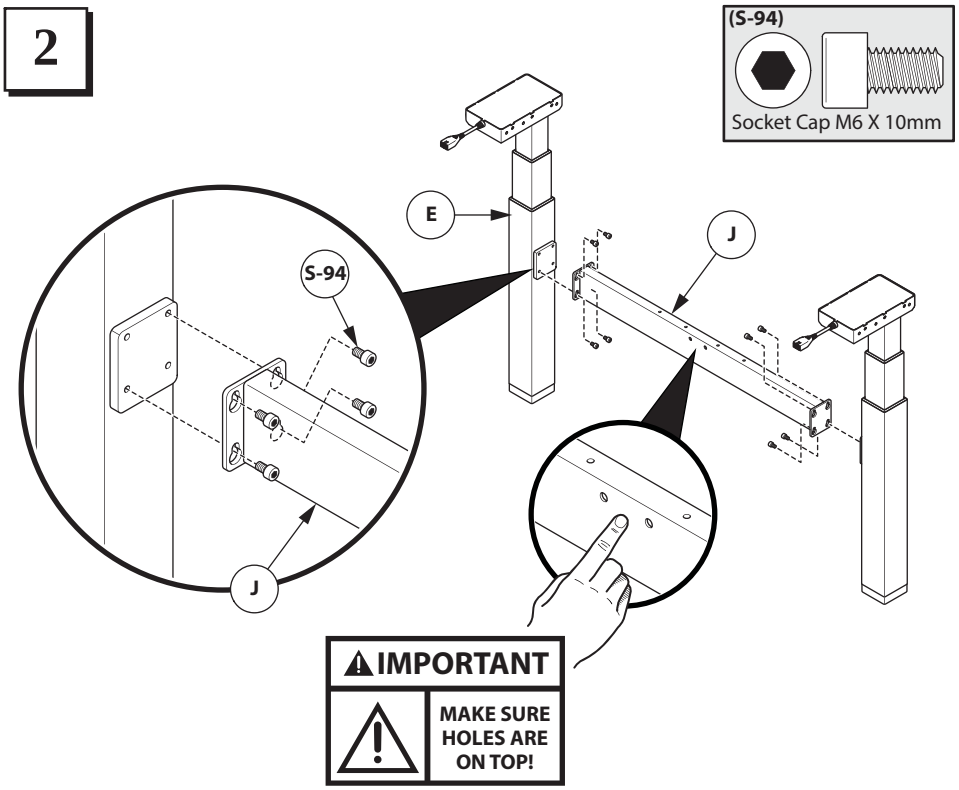
(S-94)
Socket Cap M6 X 10mm
E
J
S-94
J
IMPORTANT
MAKE SURE HOLES ARE ON TOP!

3

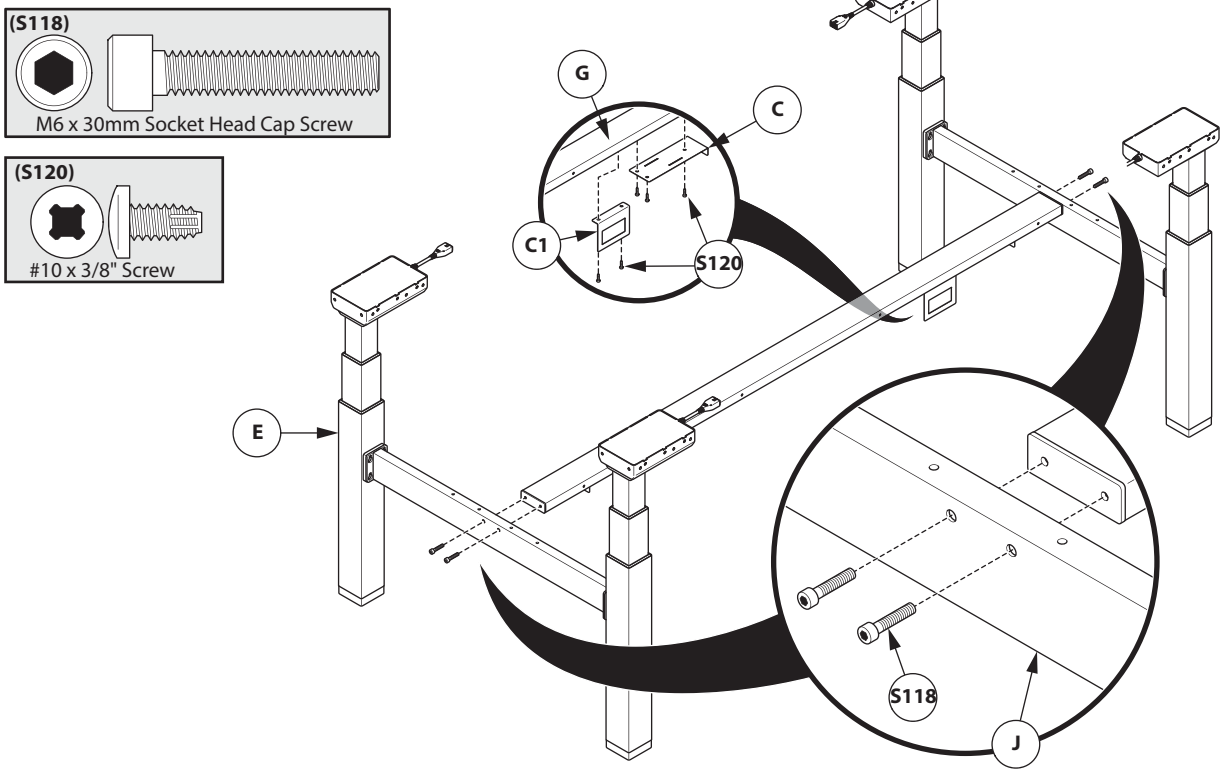
(S118)
M6 x 30mm Socket Head Cap Screw
(S120)
#10 x 3/8" Screw
G
C
C1
S120
E
S118
J


FOR POWER


4


A) All interconnected electrical systems shall terminate with an office furnishings electrical system.

B) All interconnected electrical systems shall not have an interconnection such that an office furnishings system is first and then followed by a manufacturing wiring system.

C) All interconnected electrical systems shall not alternate between office furnishing and manufacturing wiring systems.

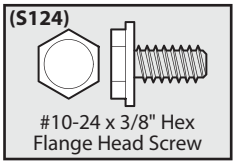


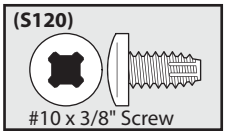

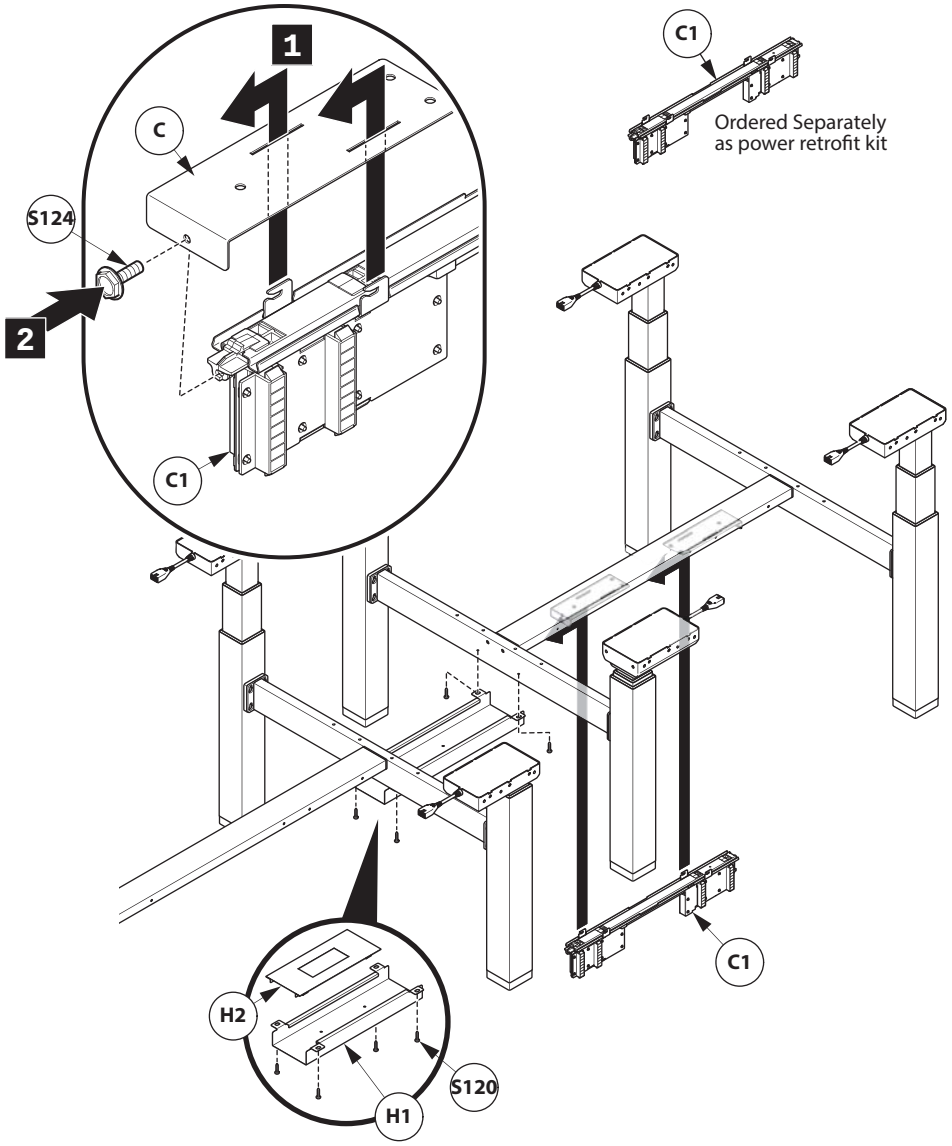


5

NOTE: Install all jumpers **(C3)**, basefeeds **(C4)**, and receptacle's **(C5)** before installing cable troughs **(E)**.

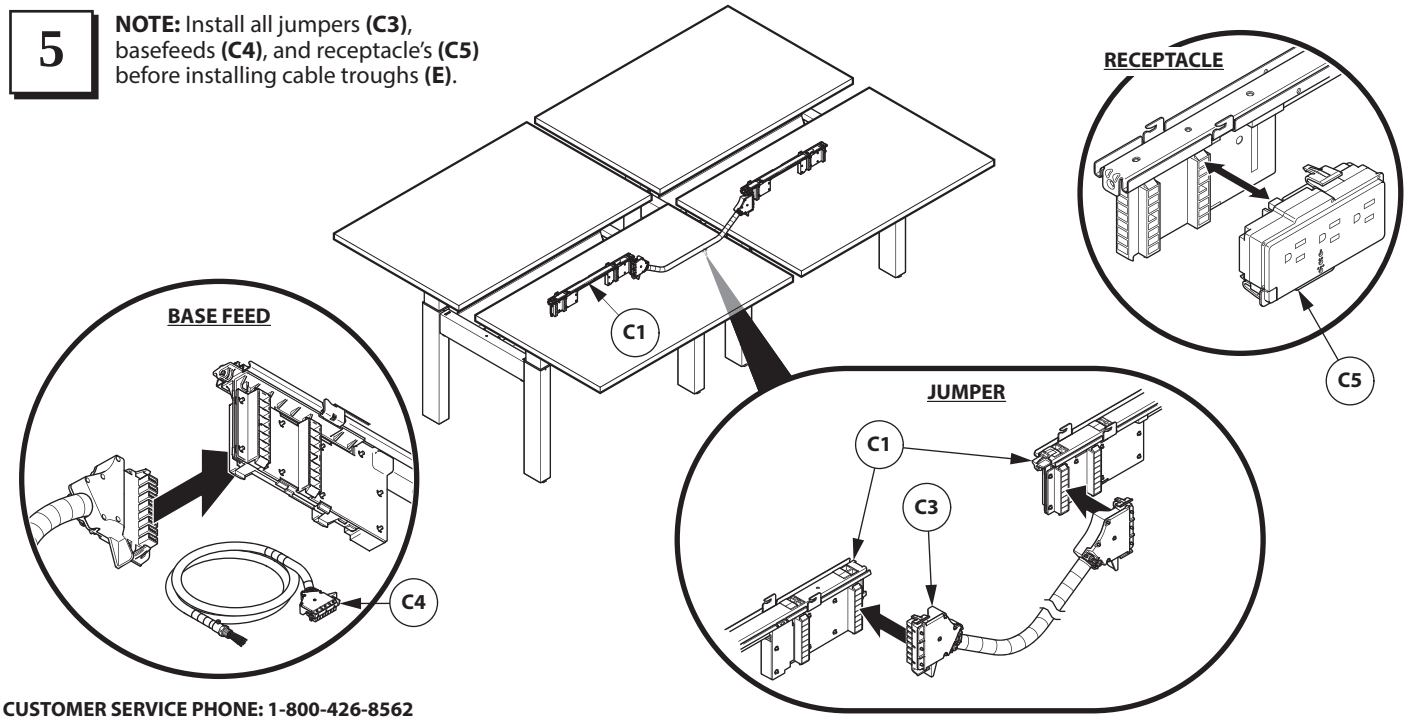


6


(S121)

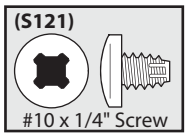

#10 x 1/4" Screw

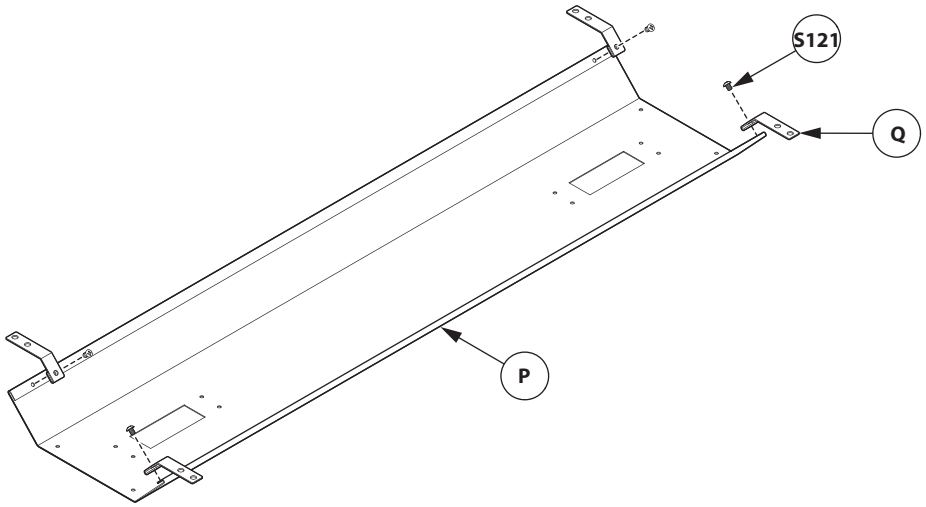


7

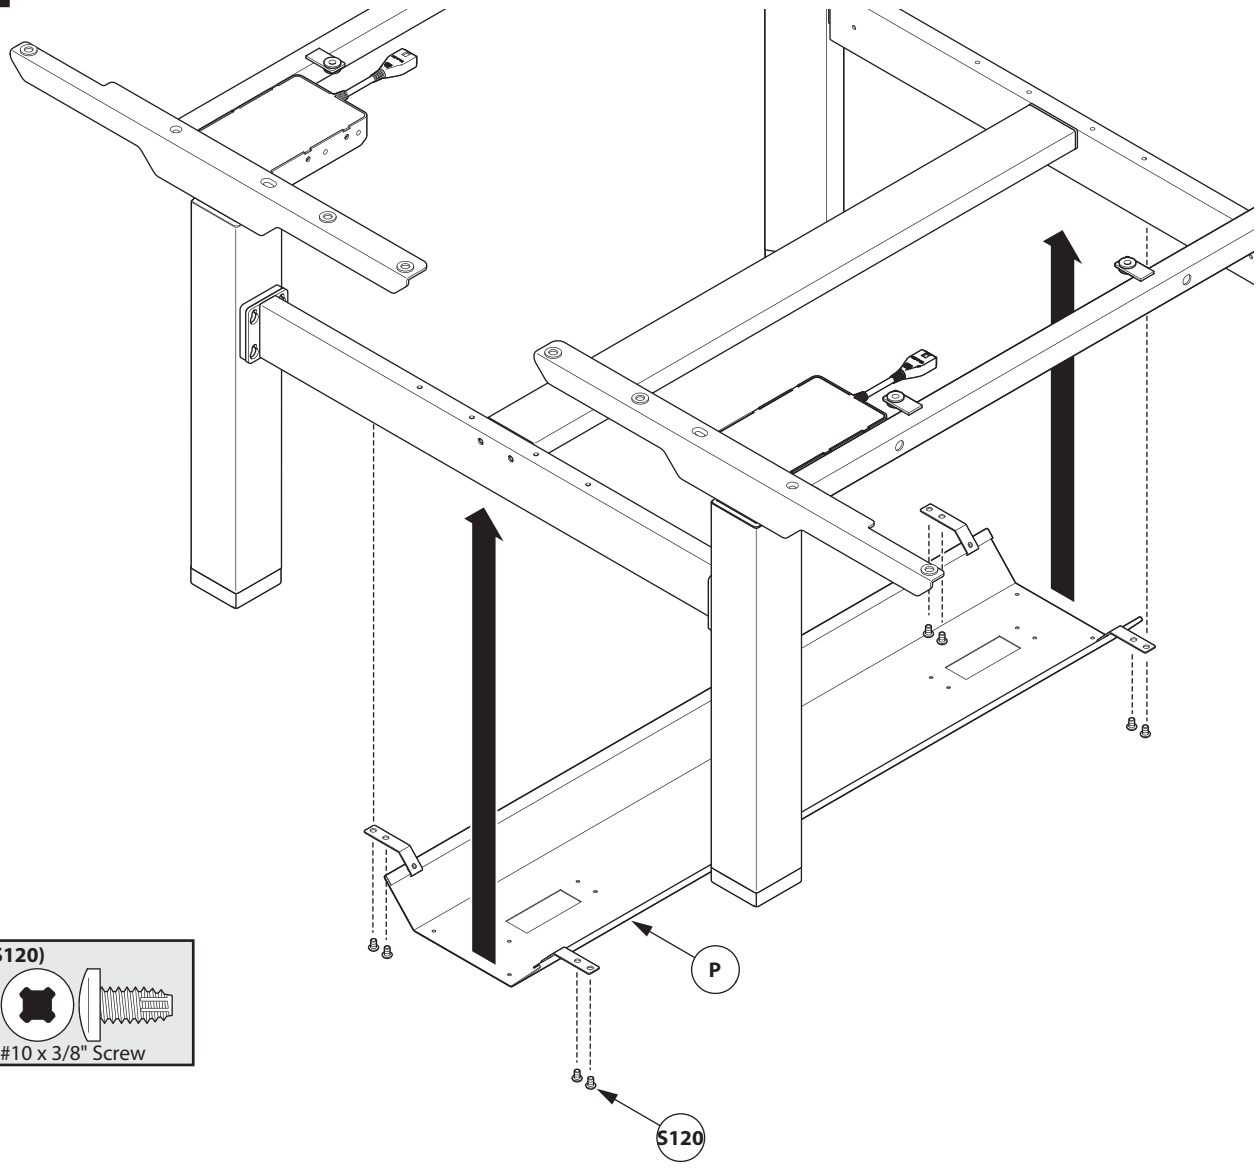


(S120)


#10 x 3/8" Screw

8

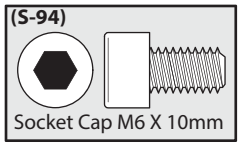


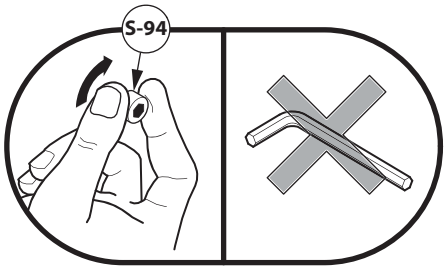

NOTE: Install screws **(S-94)** hand tight only.

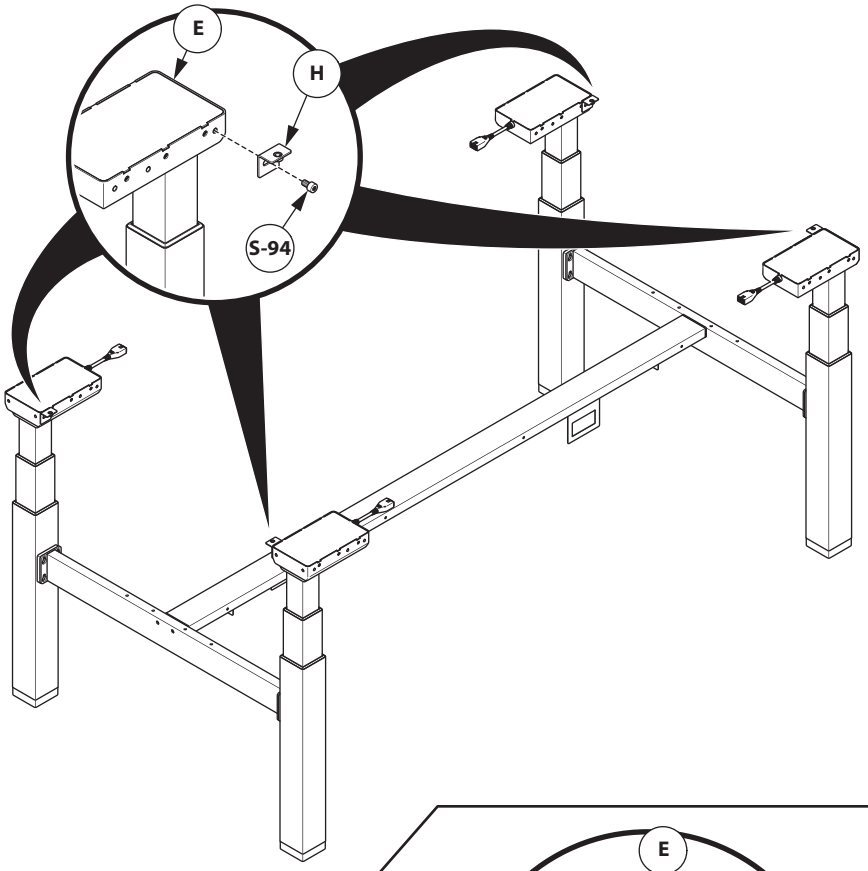


9

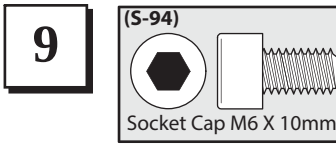



REFER TO SCREEN INSTRUCTIONS
Part Number: 6100-0062

10

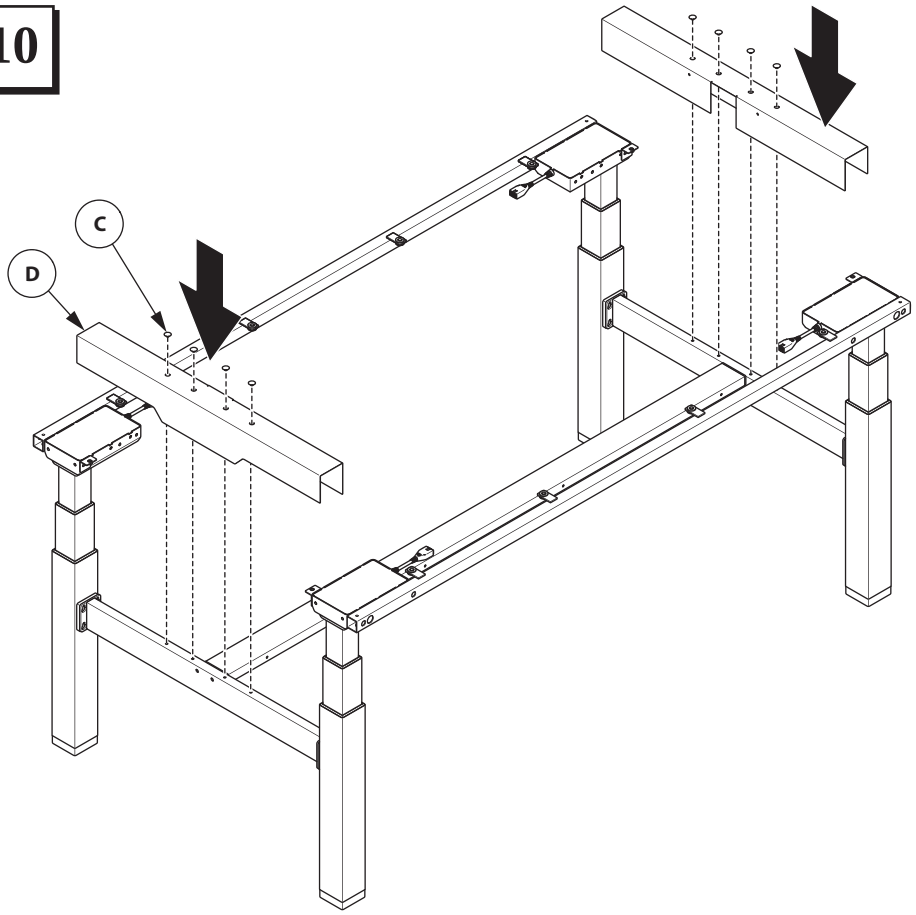



OR

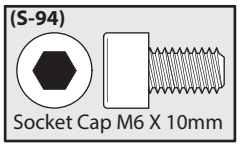

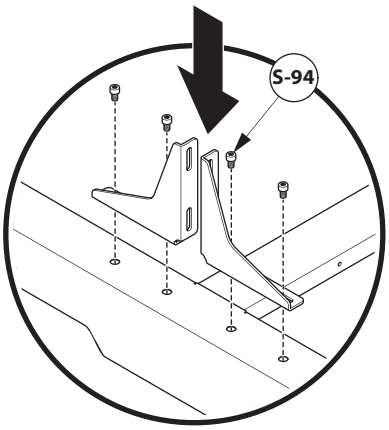



11

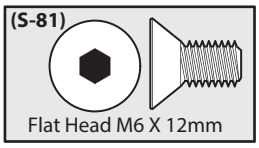


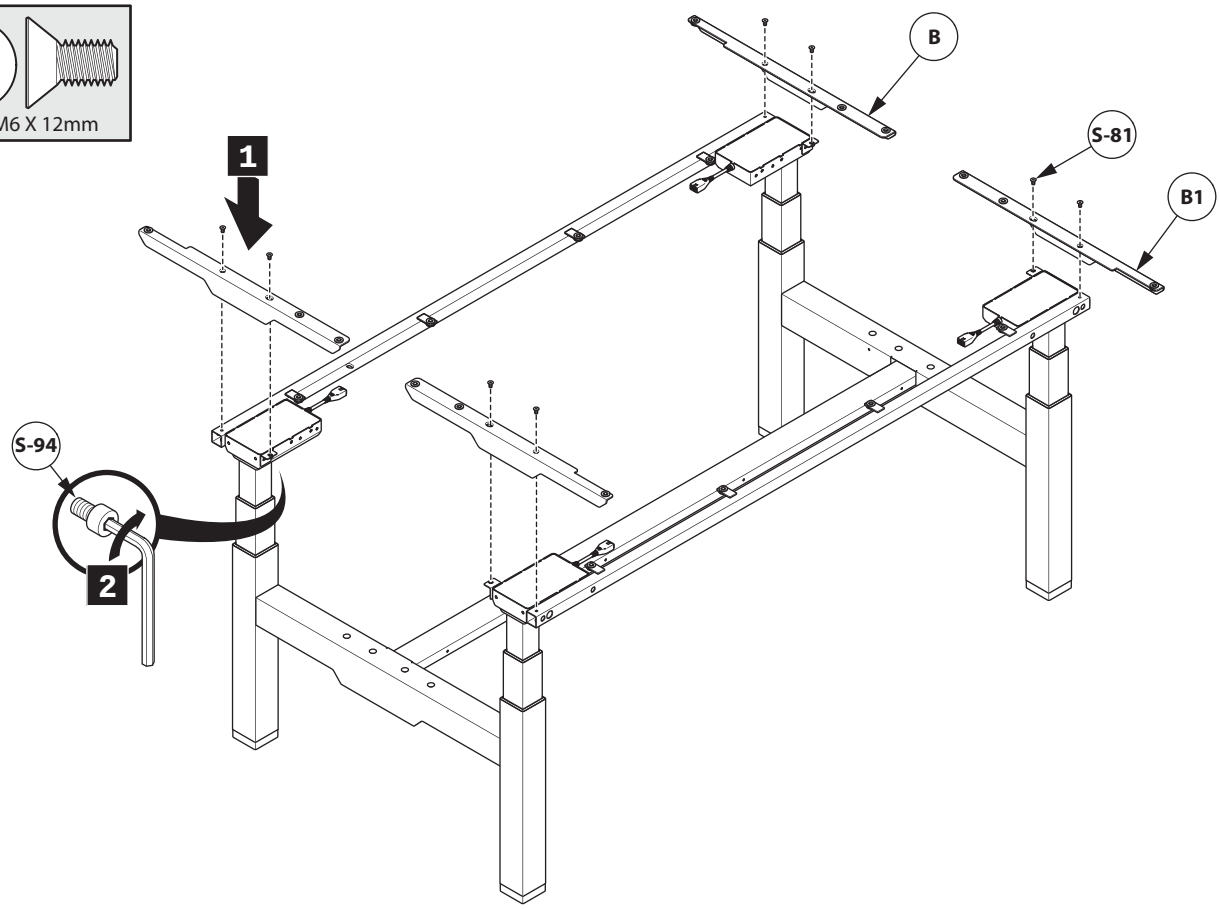

12

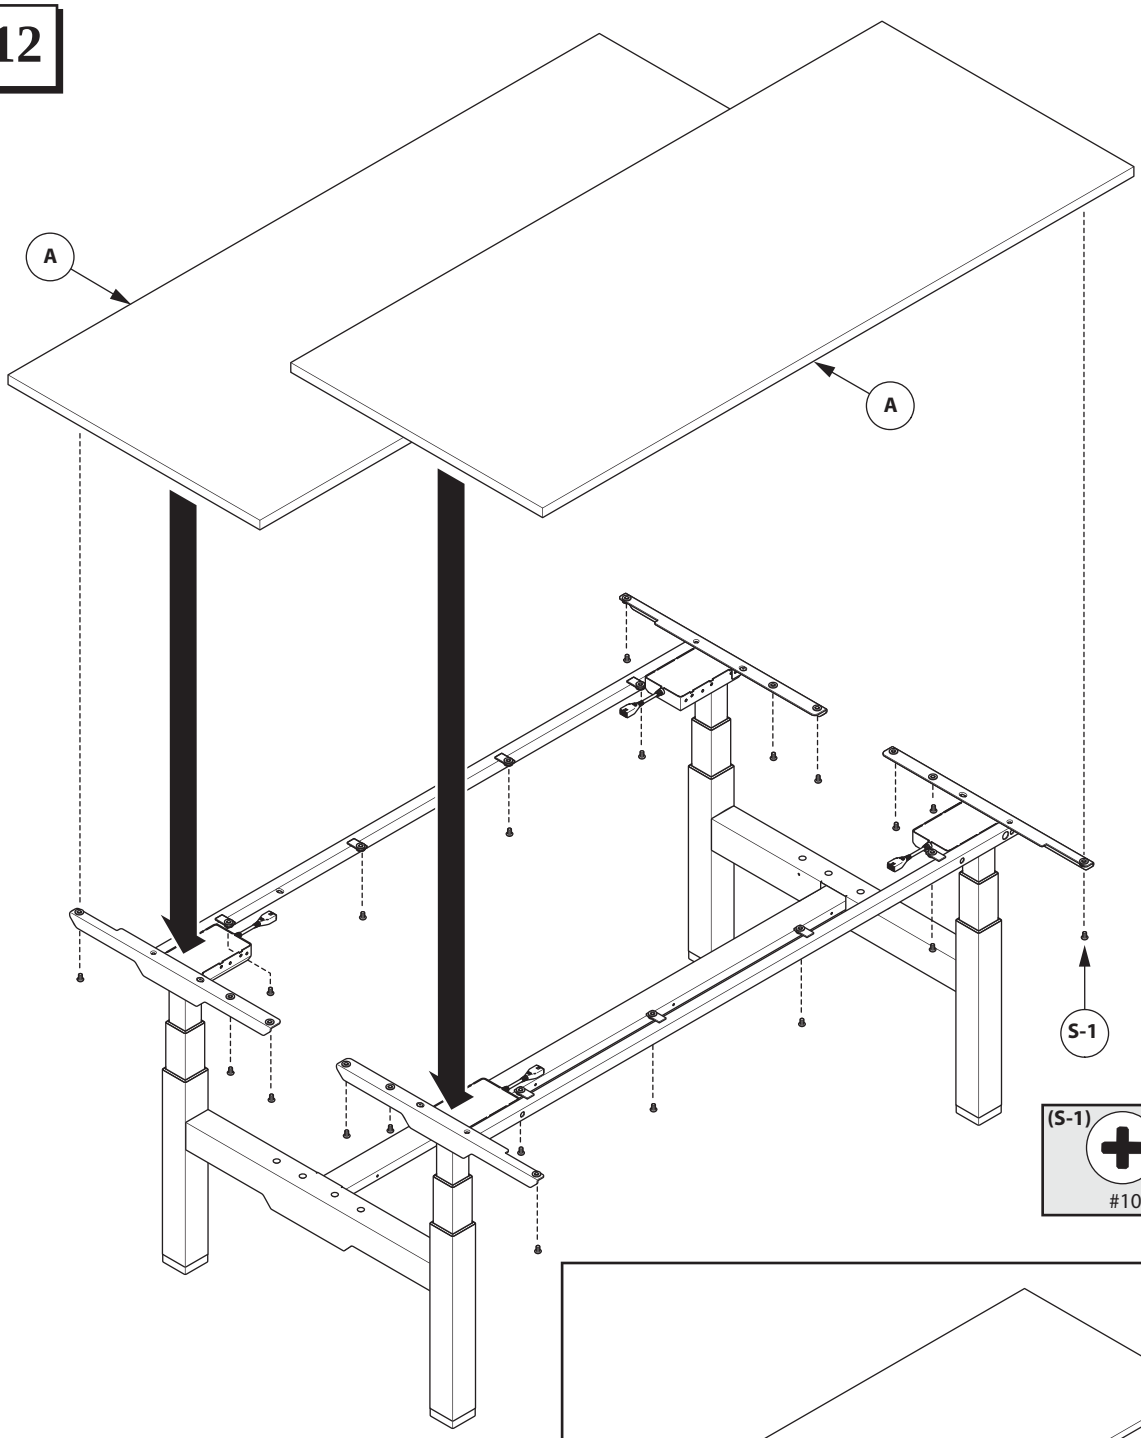


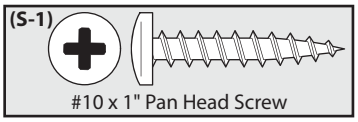


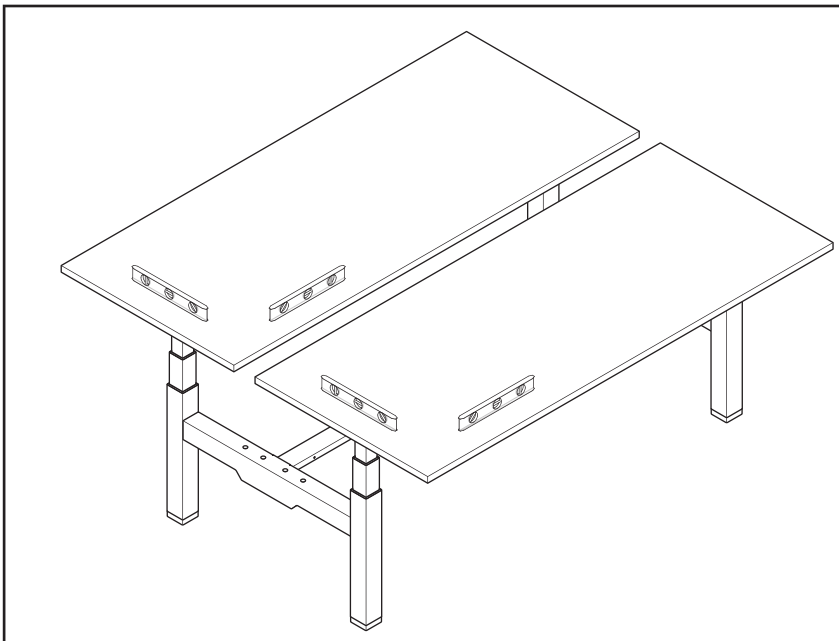


CUSTOMER SERVICE PHONE: 1-800-426-8562

13 Attach control box (C) and up/down handset (G). Reset table to lowest position.

(S-25)

M2.9 x 19mm
Pan Head Screw

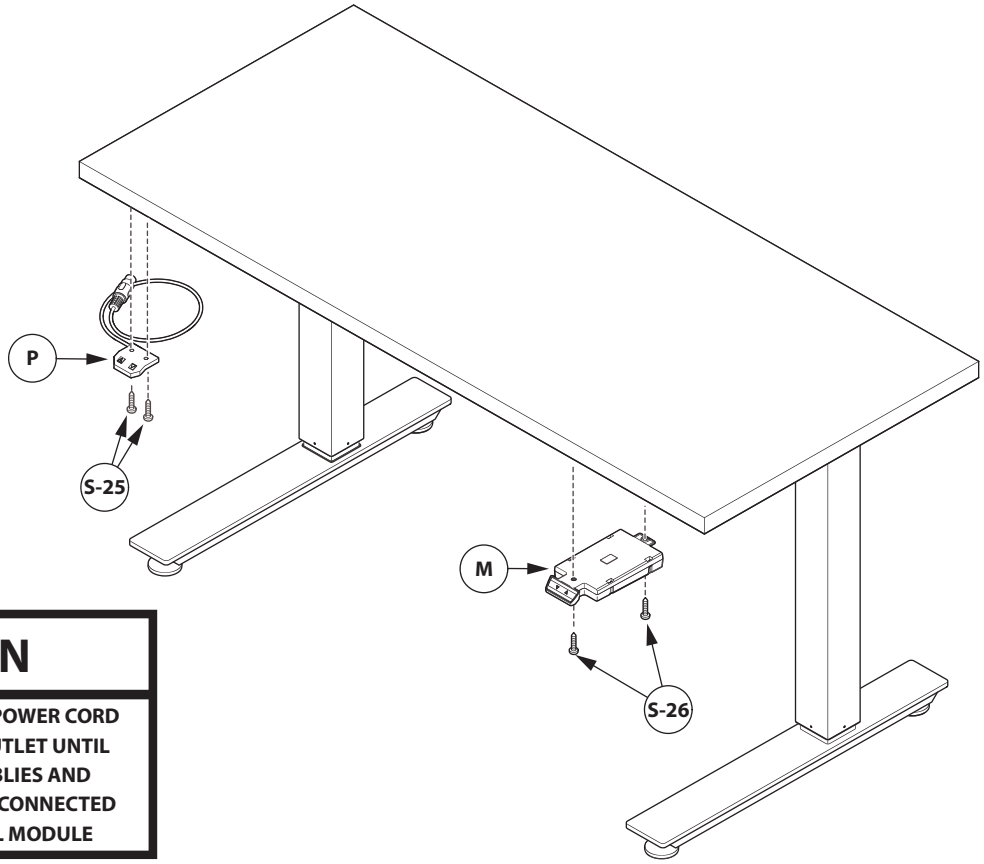(S-26)

M4.8 x 19 Pan Head Screw



⚠ CAUTION


DO NOT PLUG POWER CORD INTO WALL OUTLET UNTIL LEG ASSEMBLIES AND HANDSET ARE CONNECTED TO CONTROL MODULE

14 Handset reset and calibration.

Initial Reset

After assembly all electric tables must be calibrated to insure smooth and trouble free movement.

1. Lower the table to the lowest height by pressing the down arrow on the switch.
2. Press down again for 5 to 10 seconds after the table has reached the lowest position
   NOTE: The table will readjust itself if needed.



Follow-up Calibration

1. Inform the user that the table should be recalibrated once every month by following the instructions above.
2. The table should also be recalibrated if jerky or uneven movement is noted.

