
PLANES LT

Pages 2 Thru 15


AFTER 9/2020

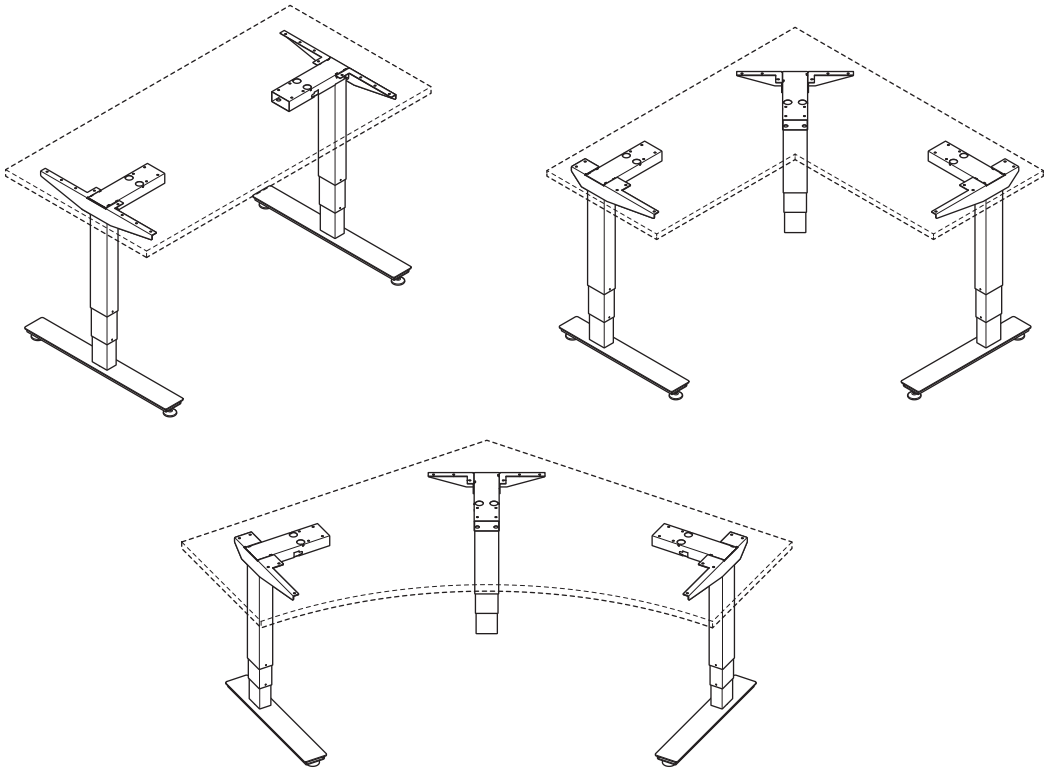

PLANES LT


Pages 16 Thru 22


BEFORE 9/2020

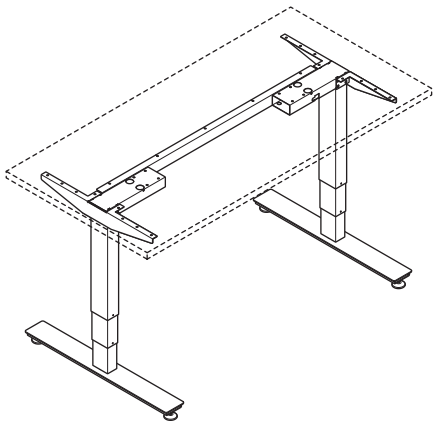


CUSTOMER SERVICE PHONE: 1-800-426-8562

IMPORTANT SAFETY INSTRUCTIONS
For use with Planes LT Electric Height Adjustable Table
For Commercial Use Only
This product is conforms to UL962 and is certified to CAN/CSA C22.2 No. 68

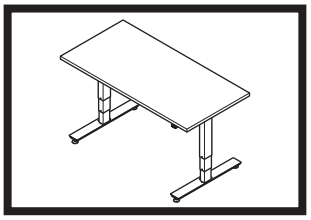

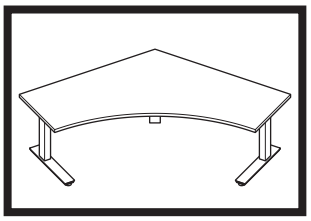

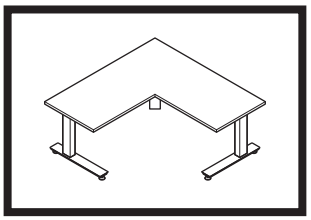

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:
1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**
10. **WARNING: RISK OF ELECTRIC SHOCK, FIRE, AND INJURY. REVIEW THE ASSEMBLY INSTRUCTIONS TO CONFIRM THAT THE APPROPRIATE CRITICAL COMPONENTS AND ACCESSORIES ARE BEING USED WITH THE FURNISHING.**

SAVE THESE INSTRUCTIONS


This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Maximum load including surface: 250 lbs

Electrical Rating: 120V, 60Hz, 6.5A

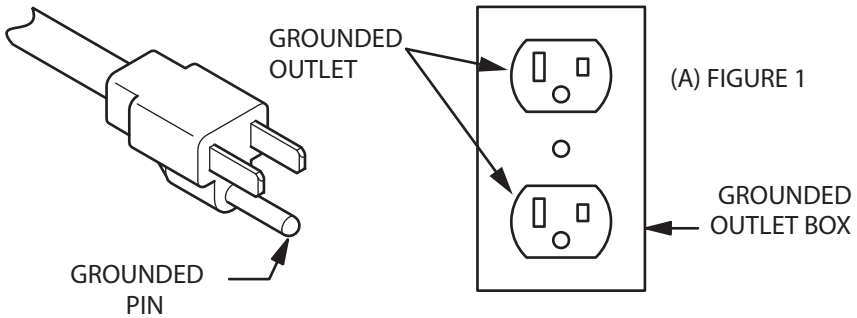

(A) FIGURE 1

PLANES® LT

Freestanding Tables


Installation Instructions

0 1/2 1


1/4 1/4

Scale 1 : 1


Tools Required

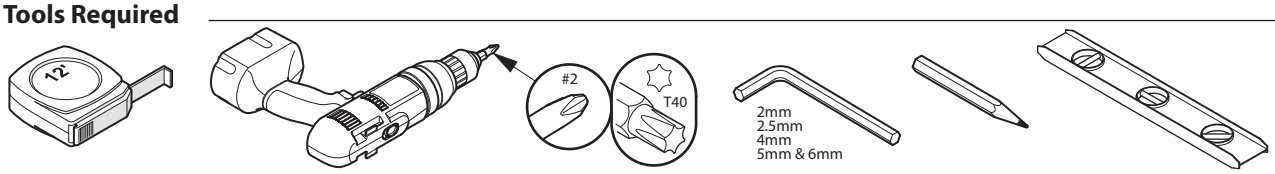



FREE STANDING TABLE - RECTANGLE

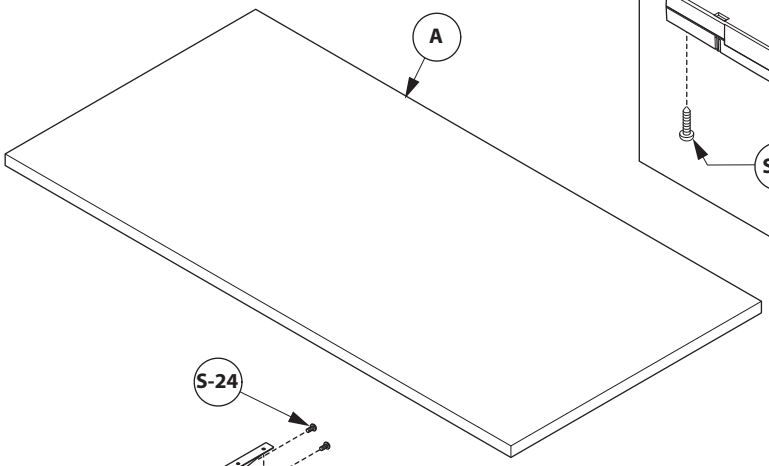



FOR ELECTRIC TABLES

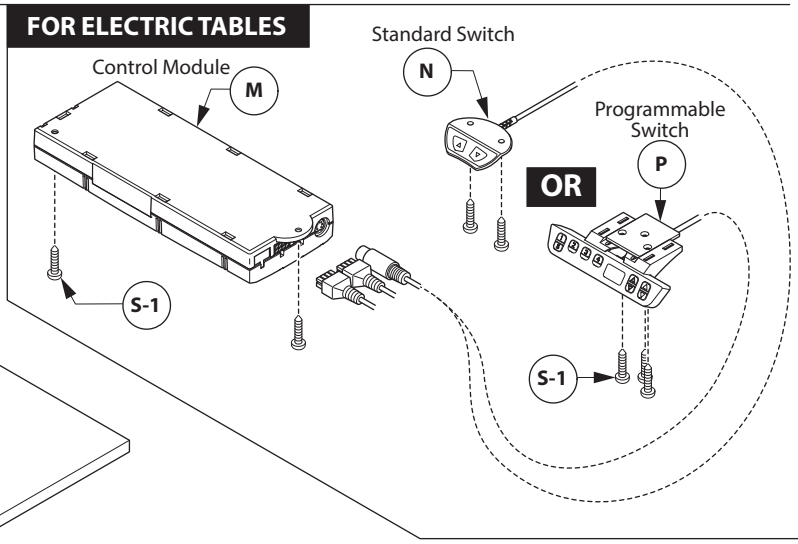

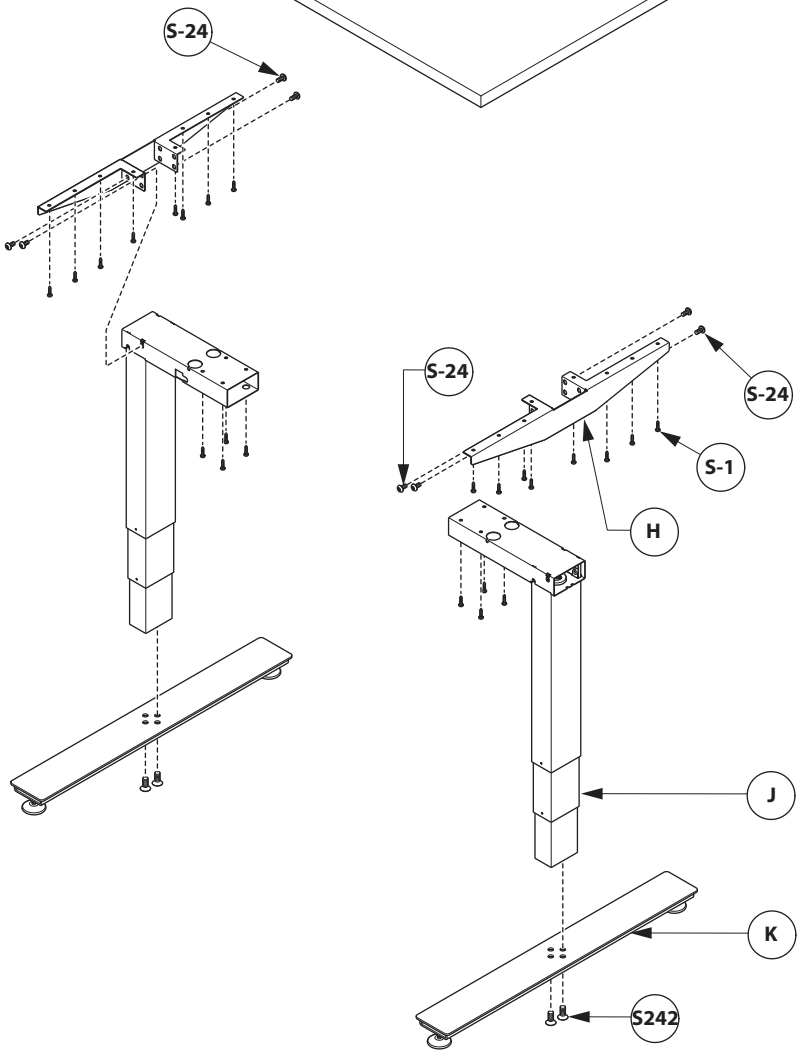

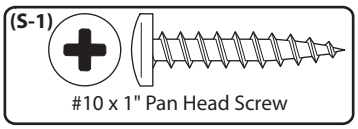

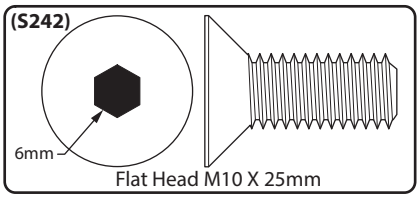

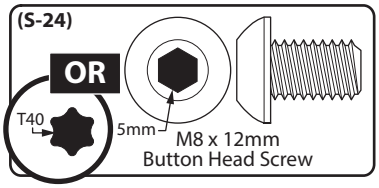


CUSTOMER SERVICE PHONE: 1-800-426-8562


STATE: PRODUCTION ECO/ECN: 245-789A EFF DATE: 01/16/2023

FREE STANDING TABLE - 90°


RECTANGLUAR (2 LEG) TABLE



90° (3 LEG) TABLE

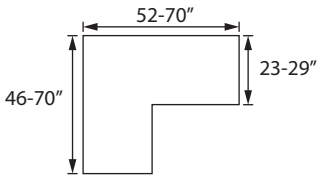



120° (3 LEG) TABLE

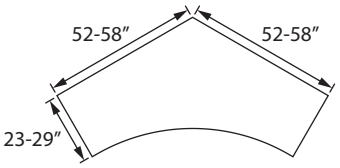



⚠IMPORTANT!

USE TEMPLATE WHEN INSTALLING CORNER LEG!

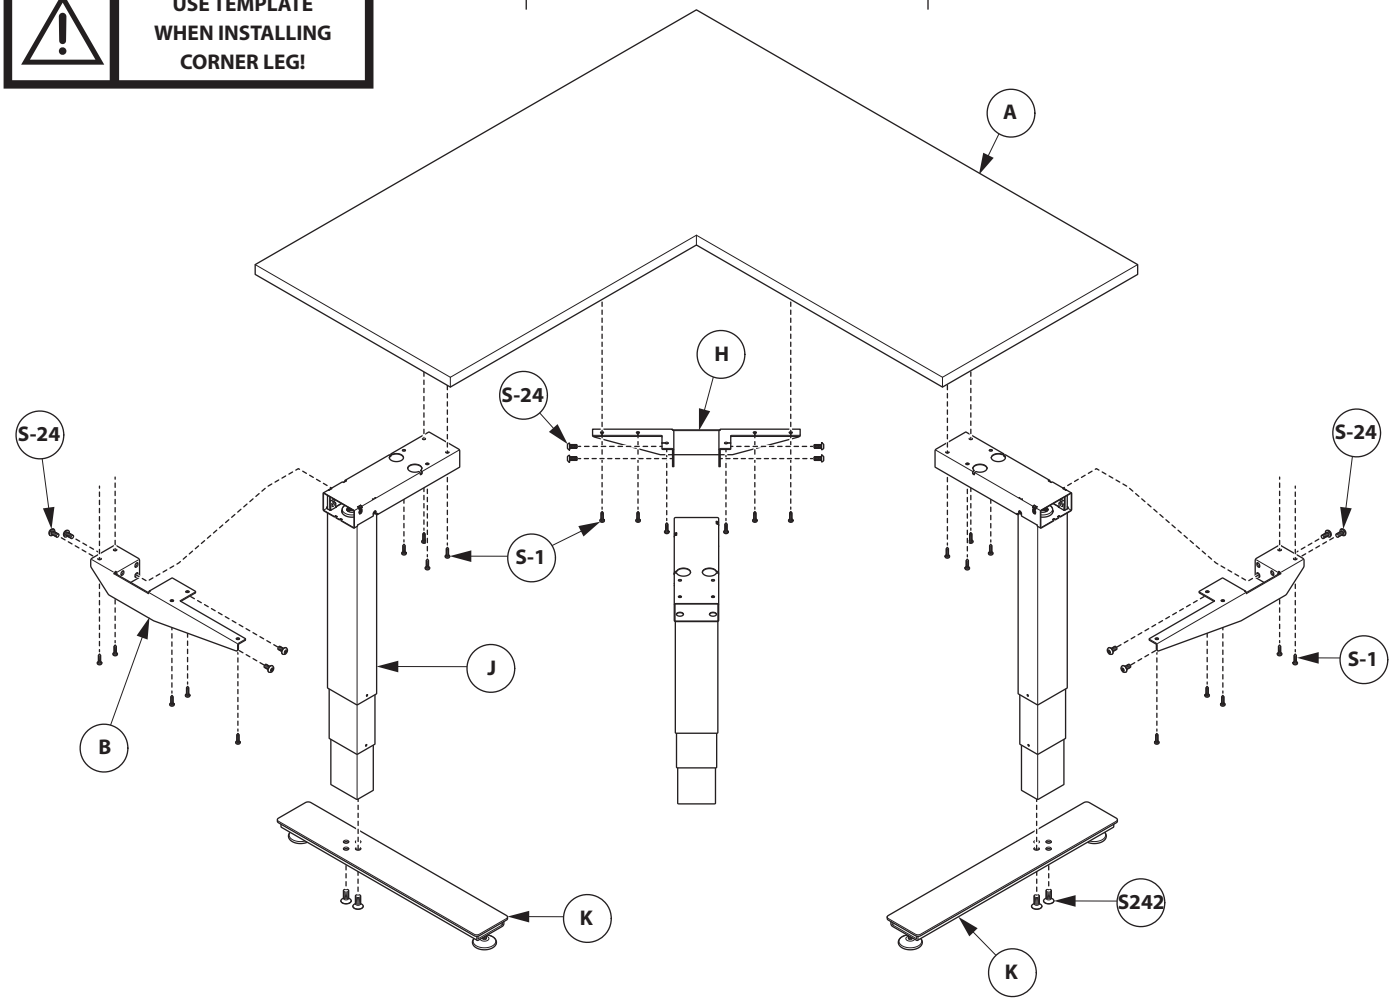

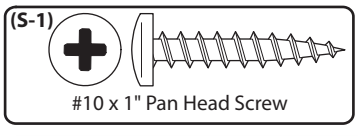


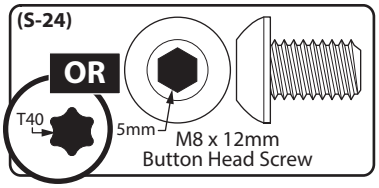

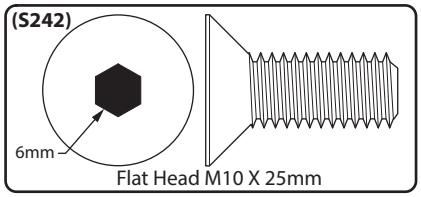


CUSTOMER SERVICE PHONE: 1-800-426-8562

FOR EXTENDED TOPS

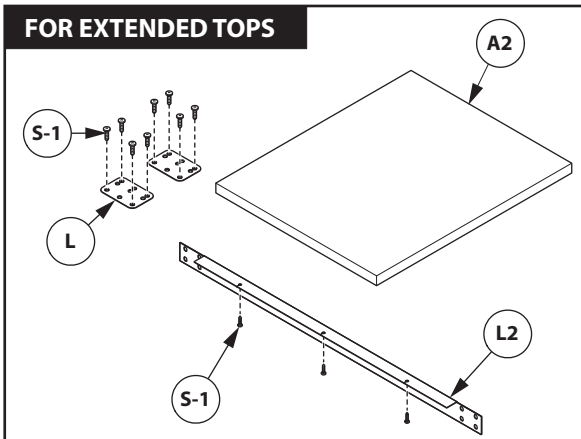


STATE: PRODUCTION ECO/ECN: 245-789A EFF DATE: 01/16/2023


RECTANGLUAR (2 LEG) TABLE



90° (3 LEG) TABLE

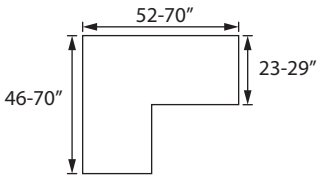



120° (3 LEG) TABLE

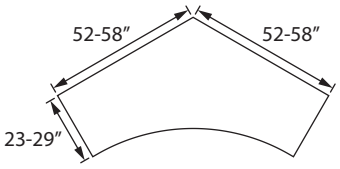



⚠IMPORTANT!

USE TEMPLATE WHEN INSTALLING CORNER LEG!

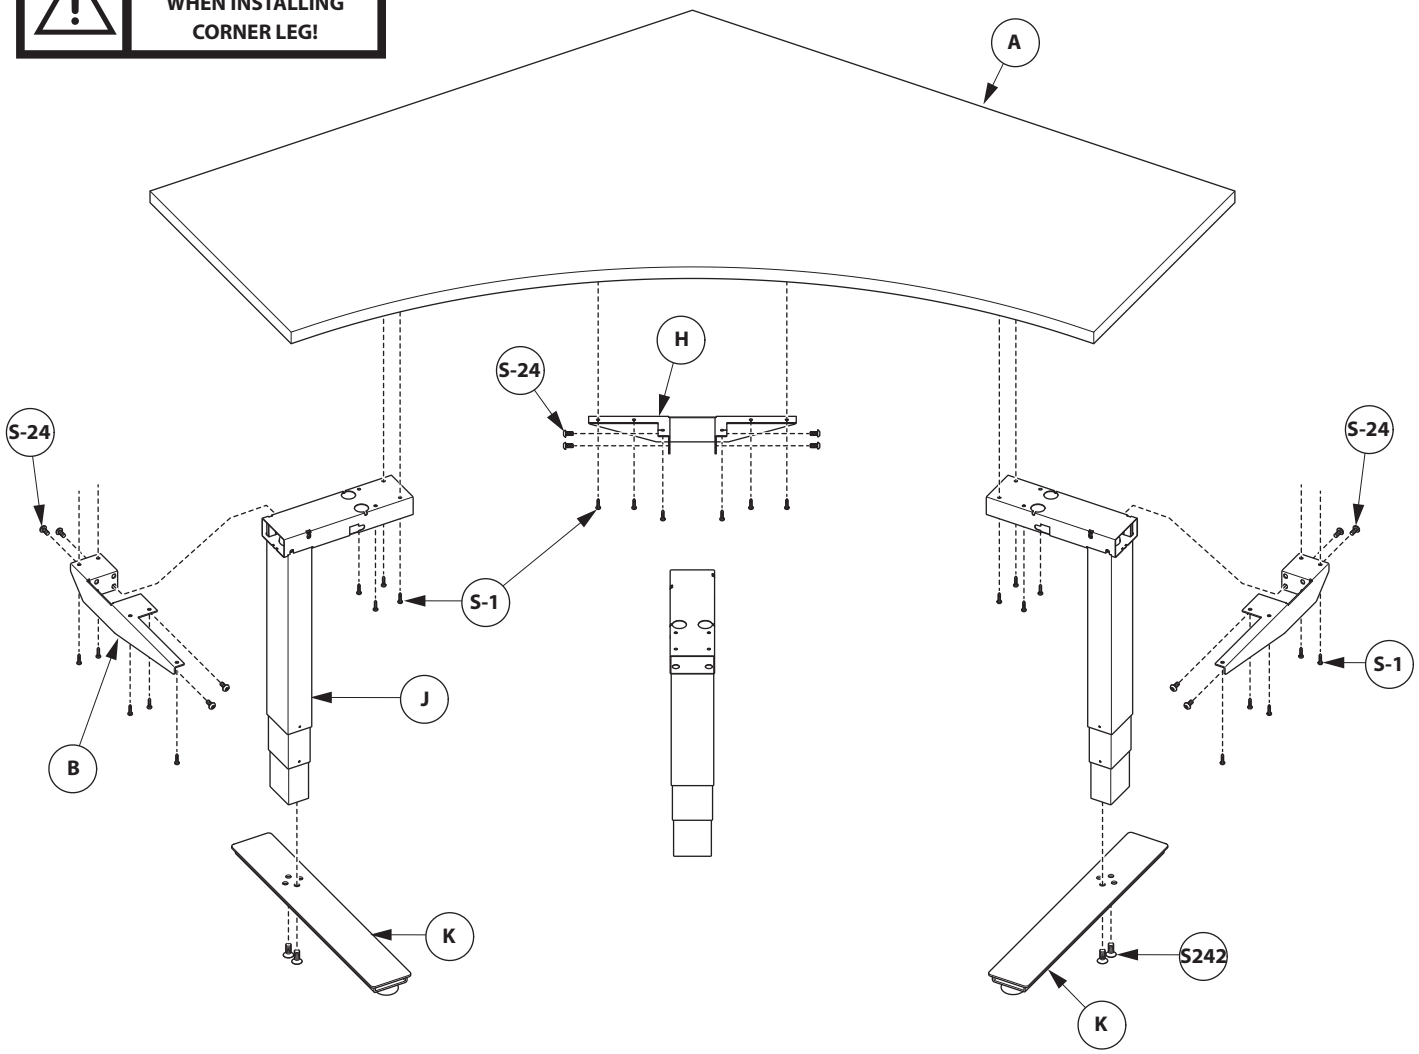

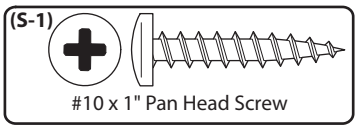

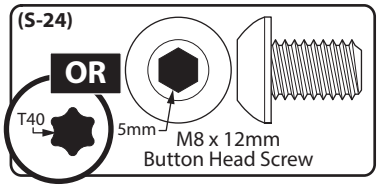

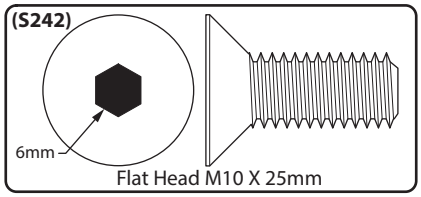


CUSTOMER SERVICE PHONE: 1-800-426-8562

STATE: PRODUCTION ECO/ECN: 245-789A EFF DATE: 01/16/2023

CHECK FOR PARTS TO MATCH


SSE
SINGLE STAGE






OR


DSL
DOUBLE STAGE







1 Install foot (K)

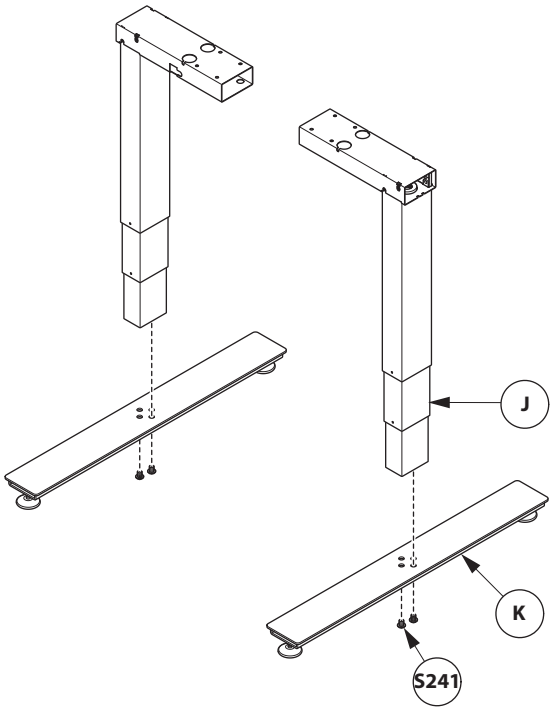

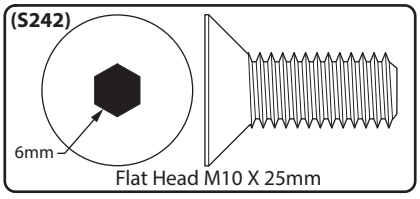

2 Install bracket (H)

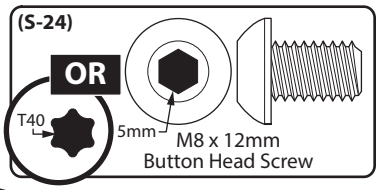


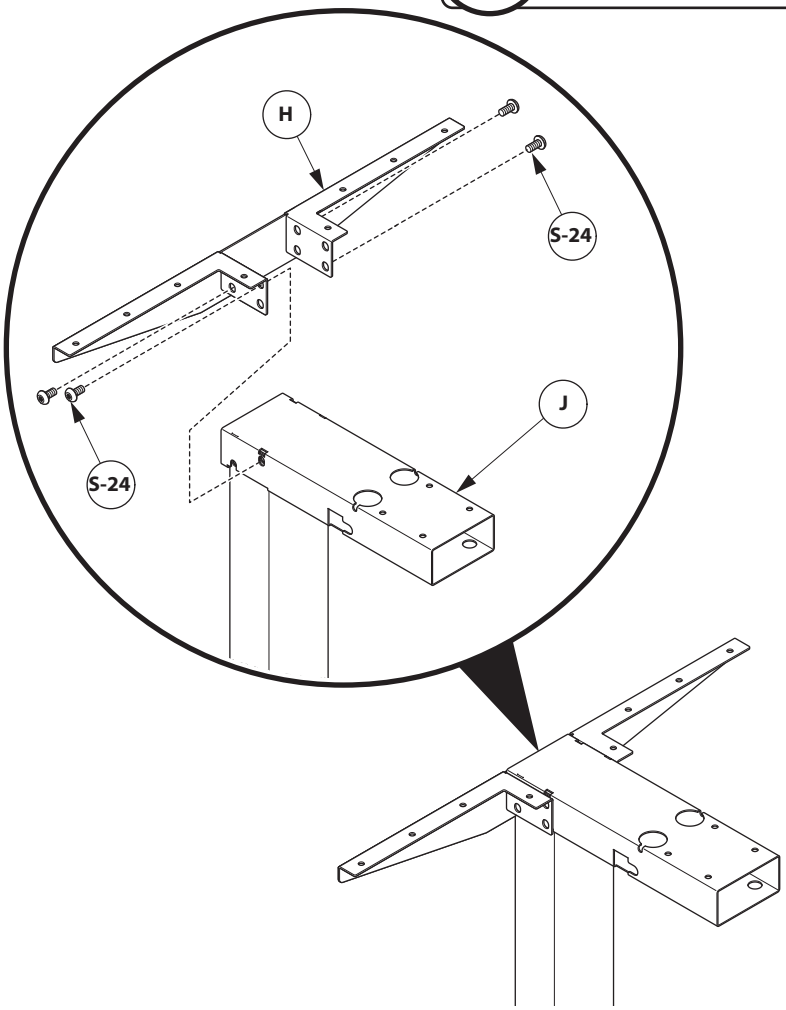


CUSTOMER SERVICE PHONE: 1-800-426-8562

3 **Locate column (J) and predrill if necessary**


RECTANGLUAR (2 LEG) TABLE



90° (3 LEG) TABLE

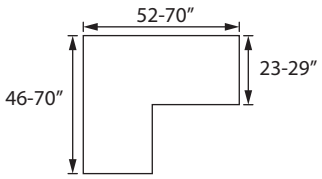



120° (3 LEG) TABLE

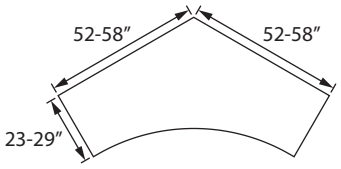


OR


C-LEG

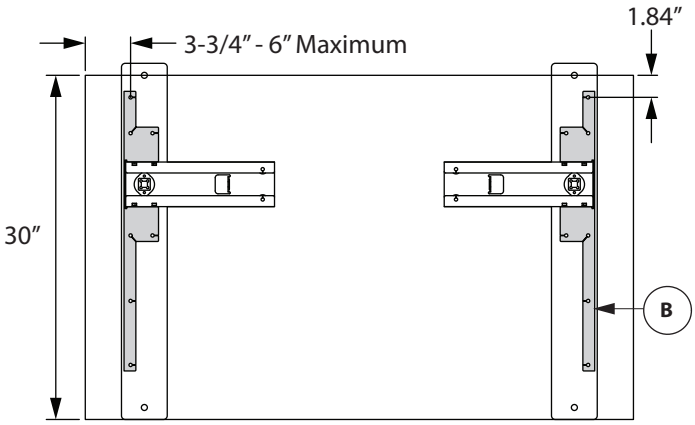

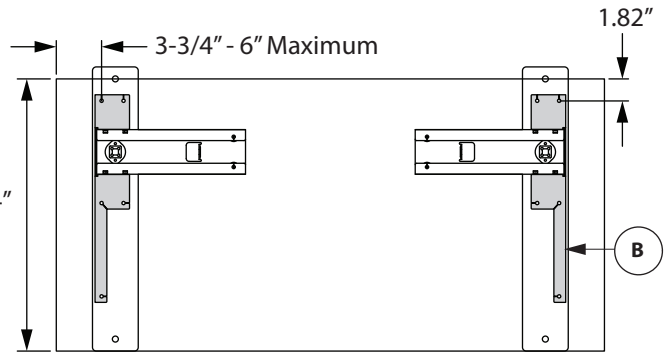


T-LEG

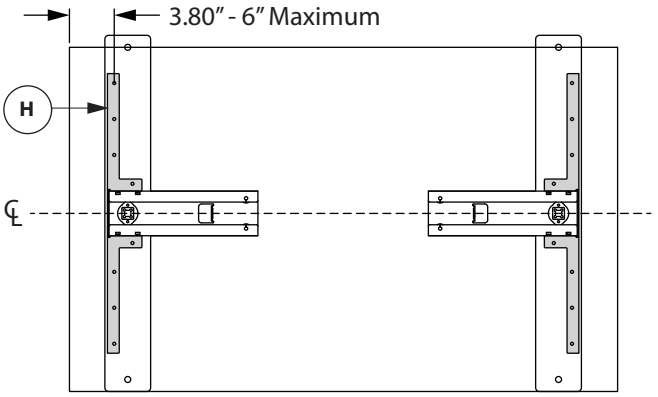

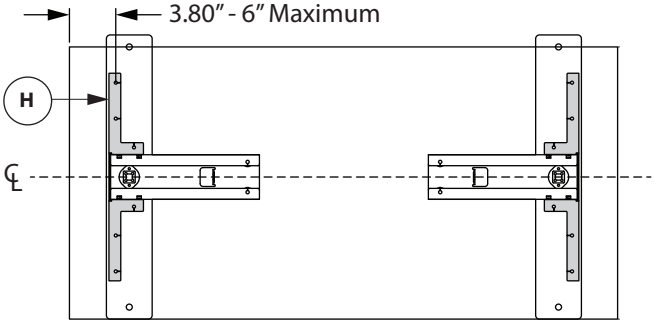


NOTE: Only predrill if necessary and use bracket **(H)** as template.

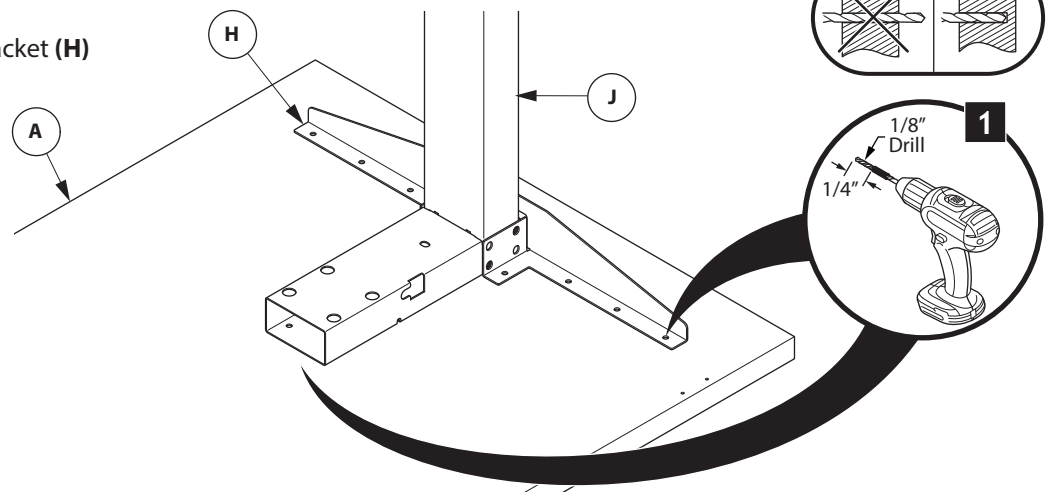


4 Install top (A)

(S-1)




#10 x 1" Pan Head Screw


RECTANGLE TOPS

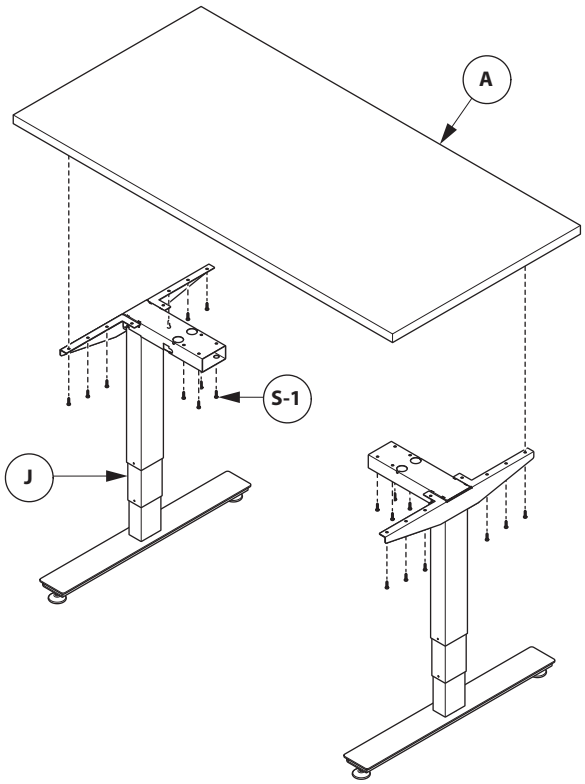


90° TOPS

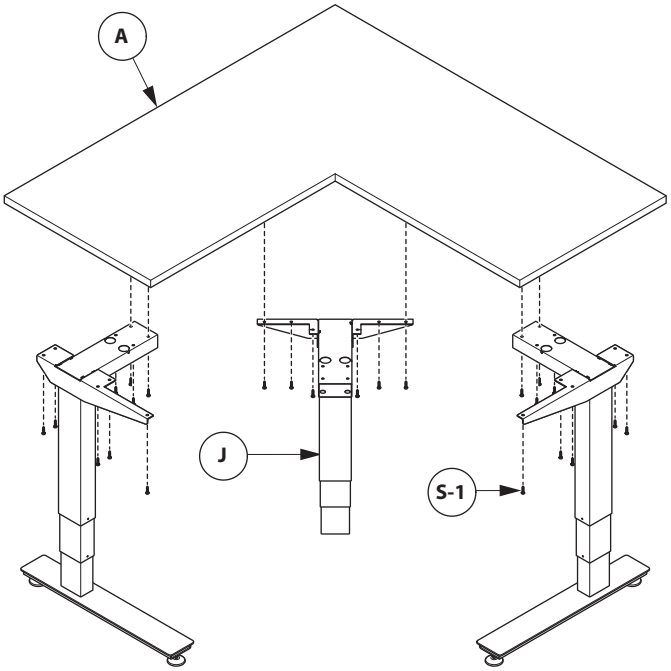

120° TOPS

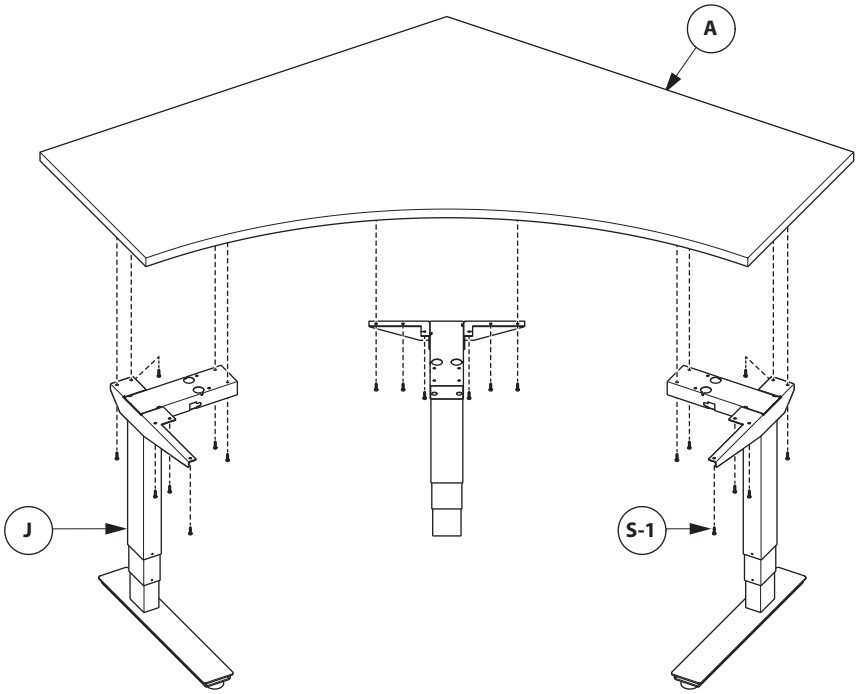

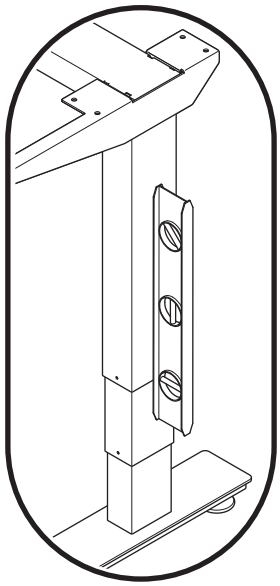


IMPORTANT!


CHECK ALL LEGS (J) ARE LEVEL!


CUSTOMER SERVICE PHONE: 1-800-426-8562

FOR EXTENDED TOPS ONLY


5 Install extend top (A)

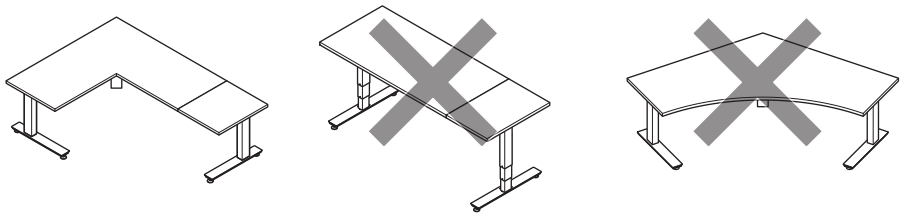

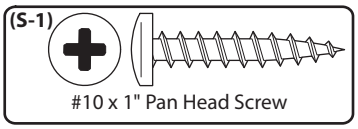

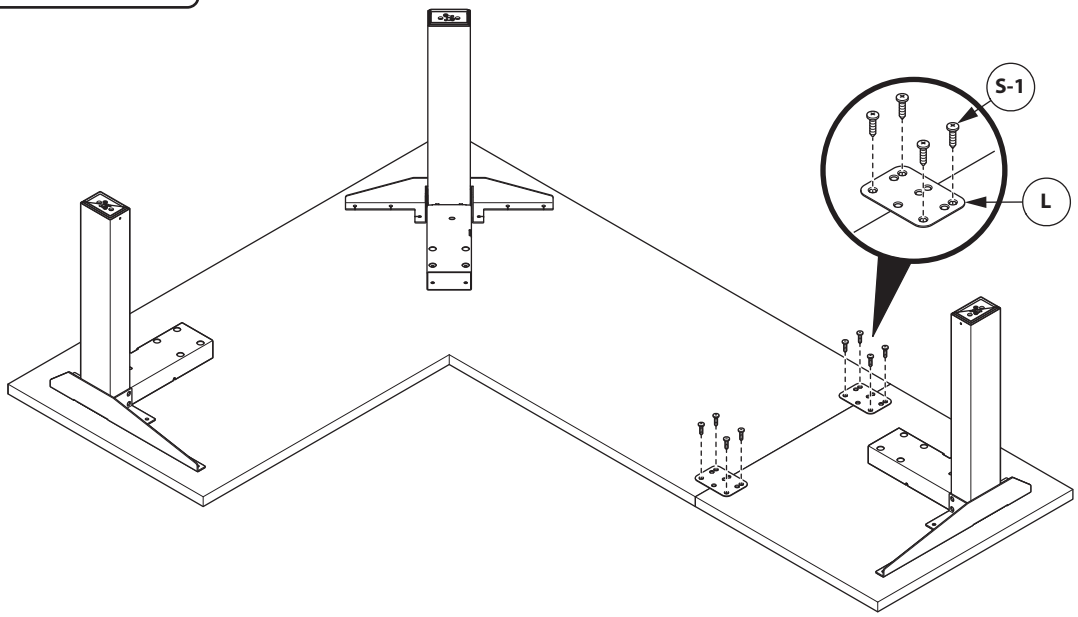


6 Install rail (L2)

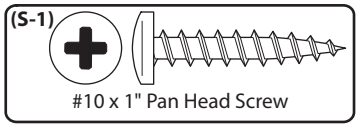


L-Channel Chart


Table Width/ Length	L-Channel Length
64″	51″
70″	57″

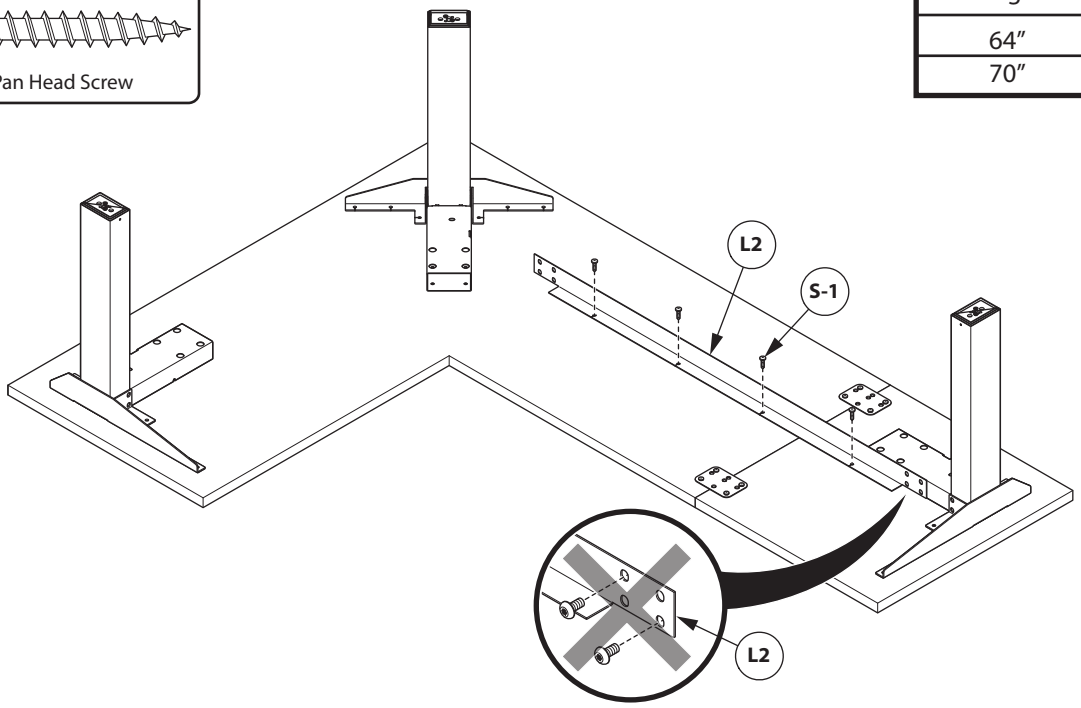


FOR ELECTRIC TABLES

7

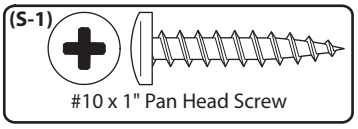

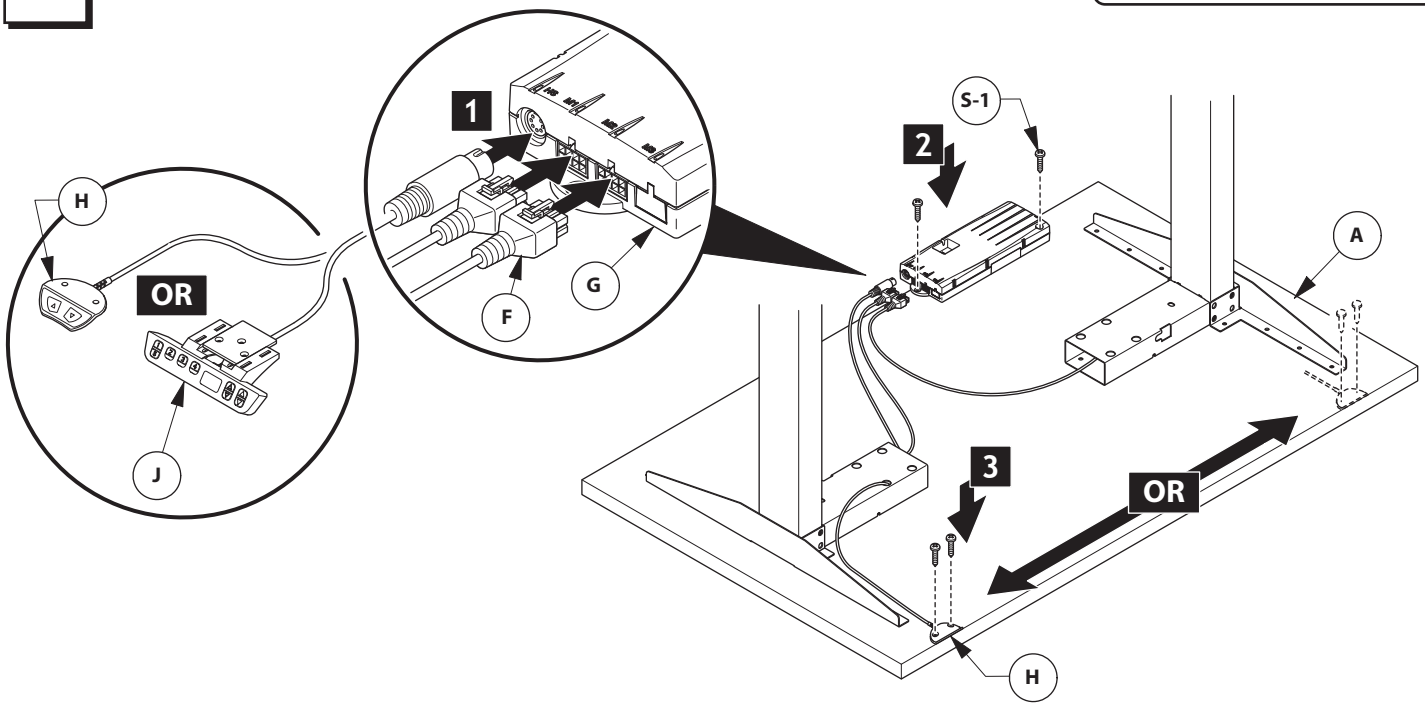

8

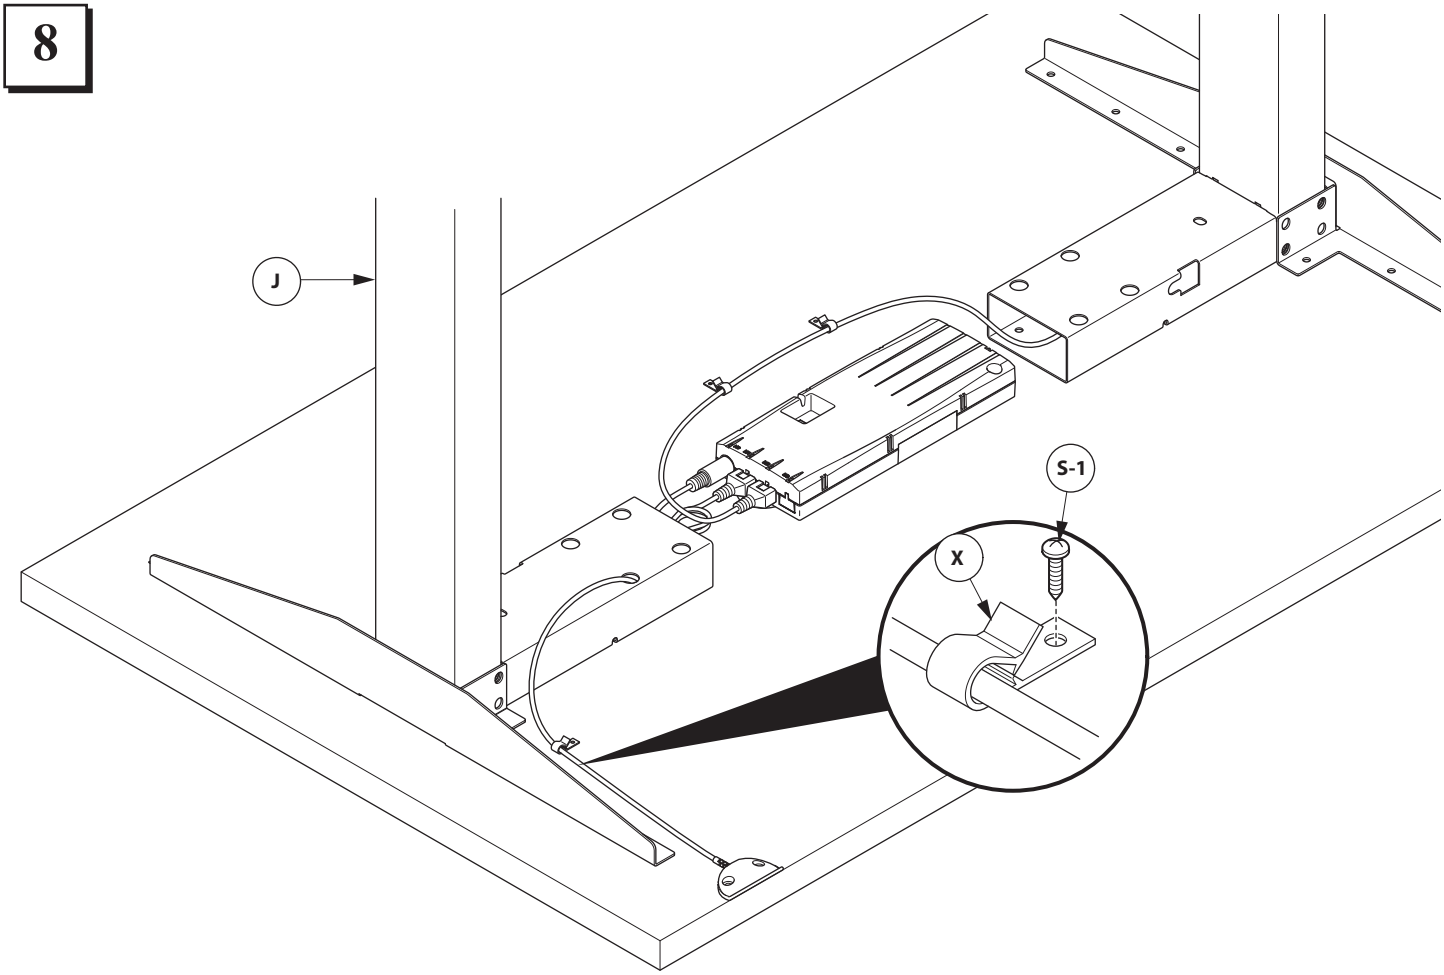


FOR ELECTRIC TABLES



Initial Calibration

After assembly all electric tables must be calibrated to insure smooth and trouble free movement.

1. Lower the table to the lowest height by pressing the down arrow on the switch.
2. Continue to press the down arrow for 5 to 10 seconds.
   NOTE: The table will readjust itself if needed.

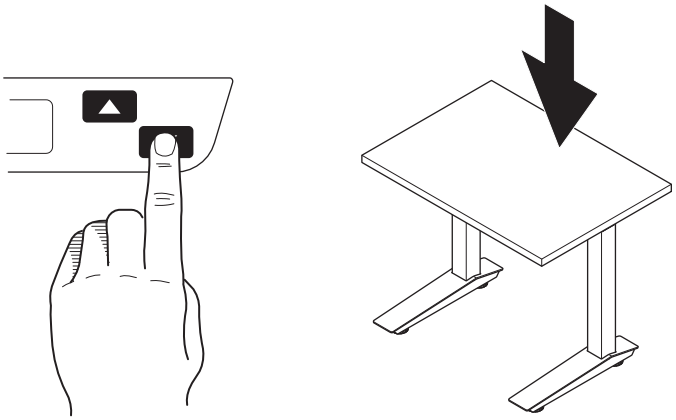

PRESET SWITCH INSTRUCTIONS



Saving a height position with the preset switch

1. Position the top to the desired height
2. Press the S button
3. Within 5 seconds press the desired number key (1-4) until a double click is heard.
   NOTE: The readout will show for example S(number) until the double click is heard and then the height readout will return


Moving to a preset height

Press the appropriate number button.
Continue to press the button until the saved position is reached.


Changing from inches to centimeters

The table ships set to read in inch increments but can be changed on site to read in centimeters.
Press the 1, 2 and up arrow buttons simultaneously
Use the up and down arrow keys until the readout shows S 5
Press the S button to complete
Use the same procedure to switch back to inches

1 **Position top to desired height**

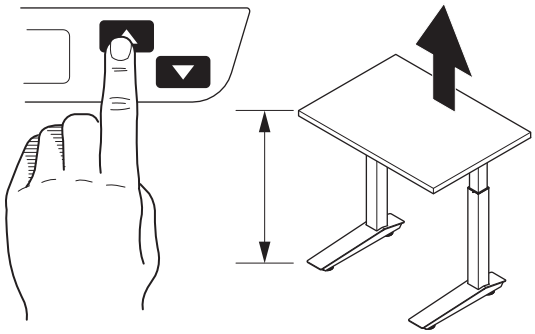


2 **Press "S" button**

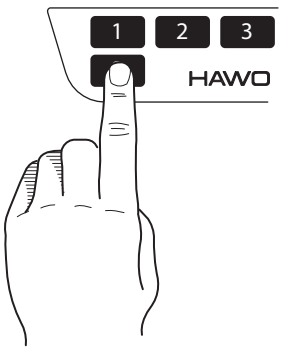

3 **Press & hold desired button**


4 **Repeat for each setting**

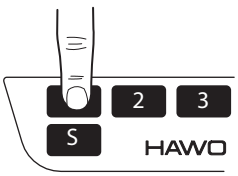

CUSTOMER SERVICE PHONE: 1-800-426-8562


TEMPLATE FOR 90° TABLES


0 1/2 1
1/4 1/4
Scale 1 : 1

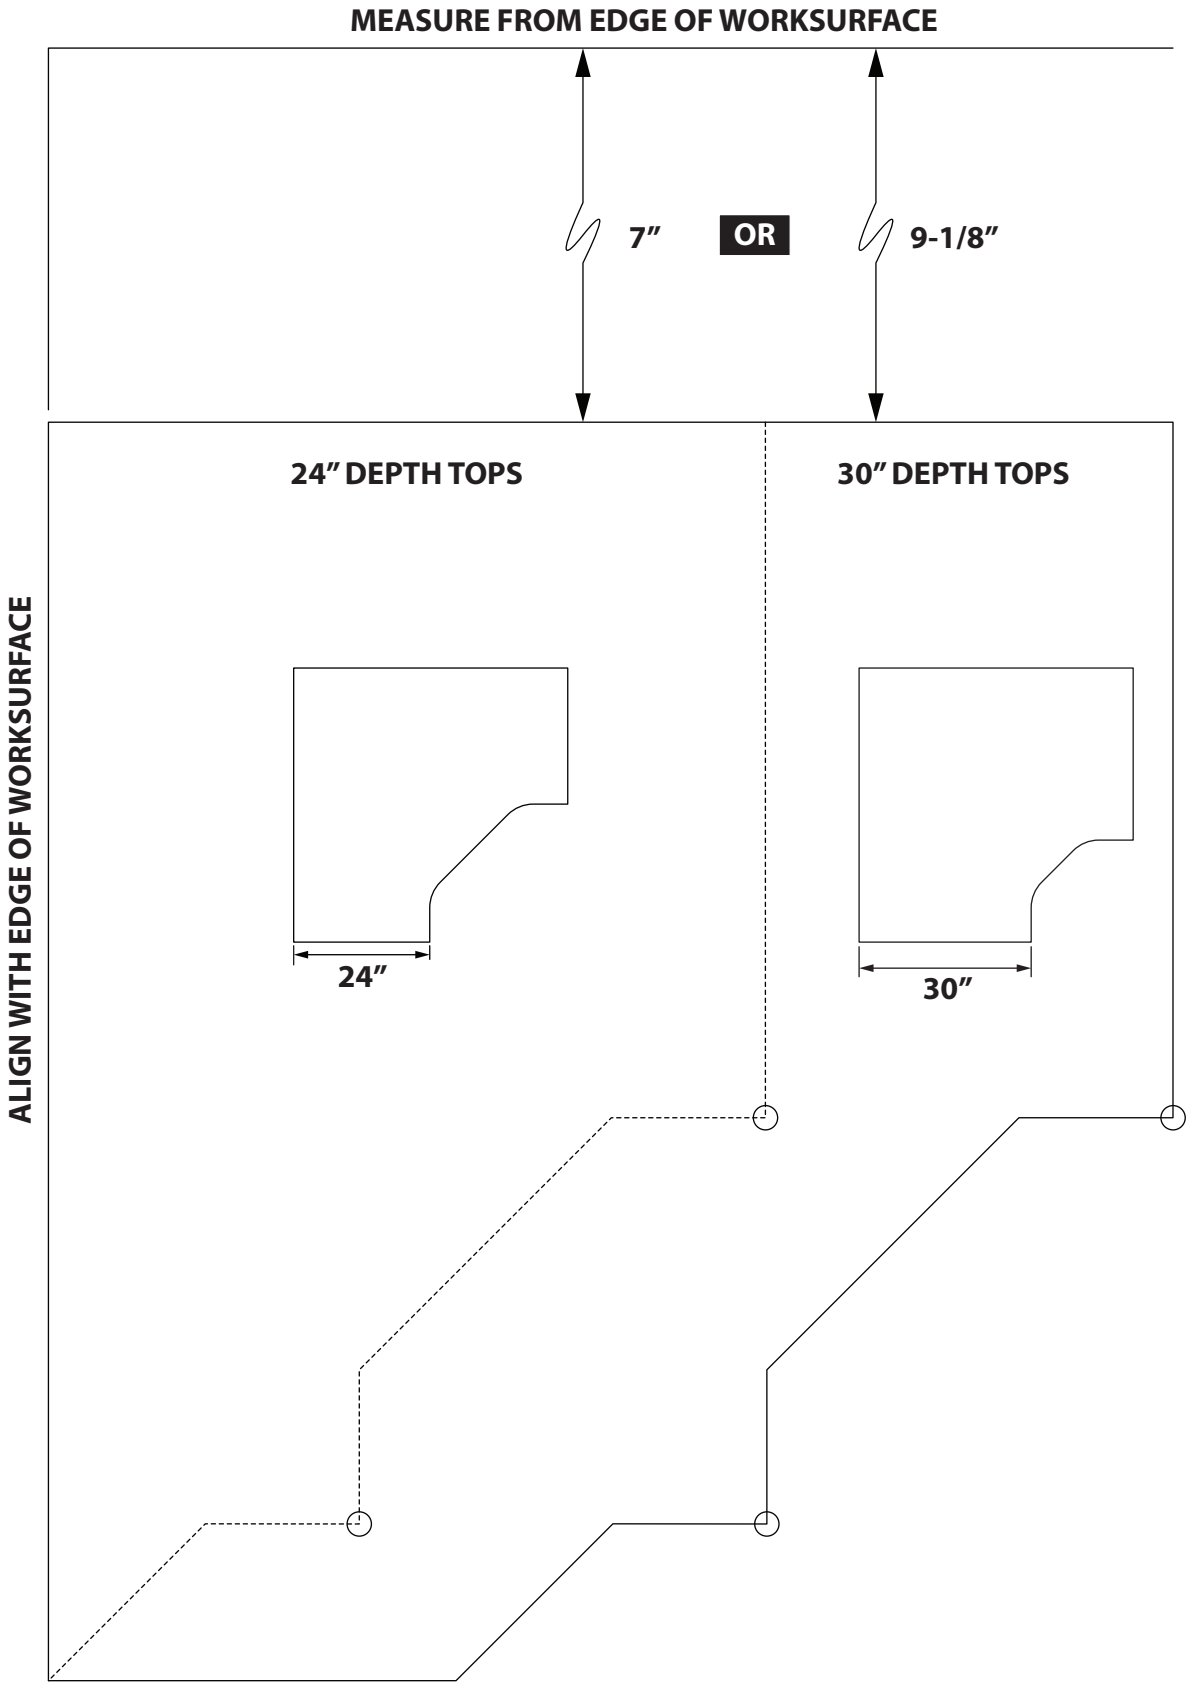

TEMPLATE FOR 90° TABLES

0 1/2 1
1/4 1/4
Scale 1 : 1

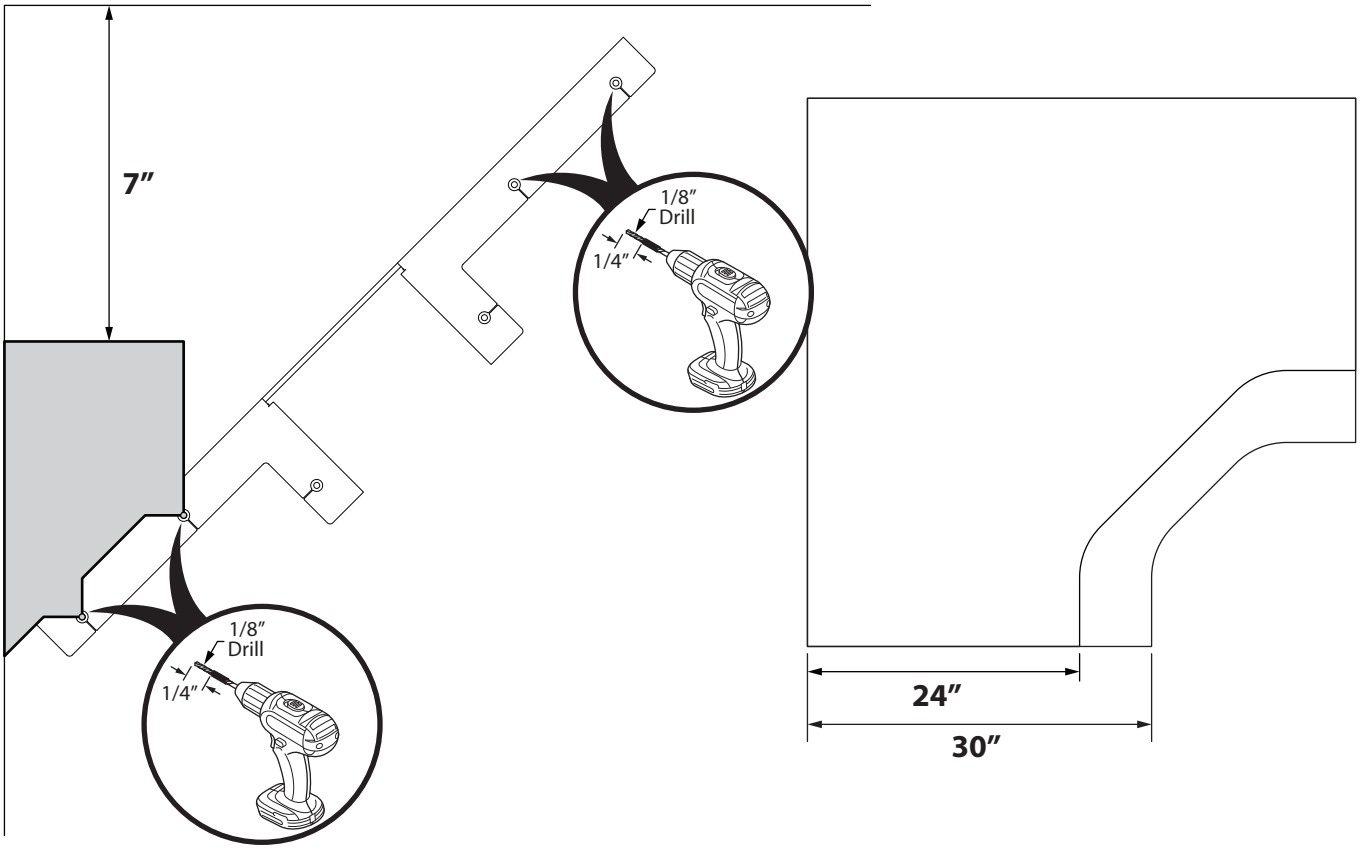


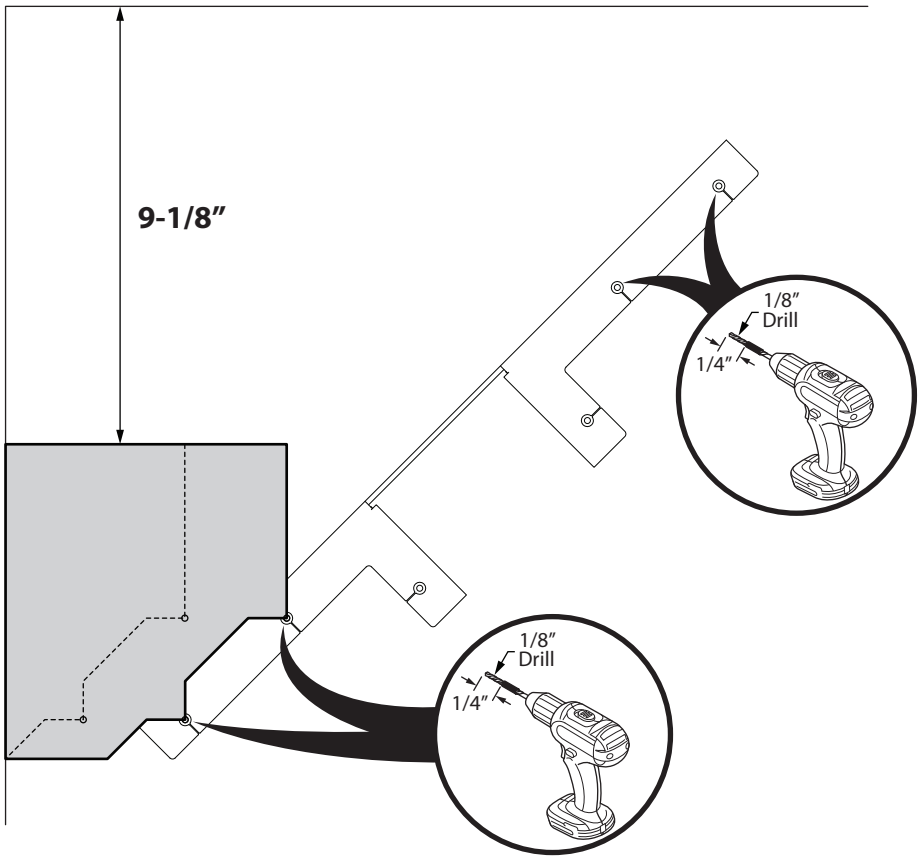

CUSTOMER SERVICE PHONE: 1-800-426-8562


TEMPLATE FOR 120° TABLES

0 1/2 1
1/4 1/4
Scale 1 : 1

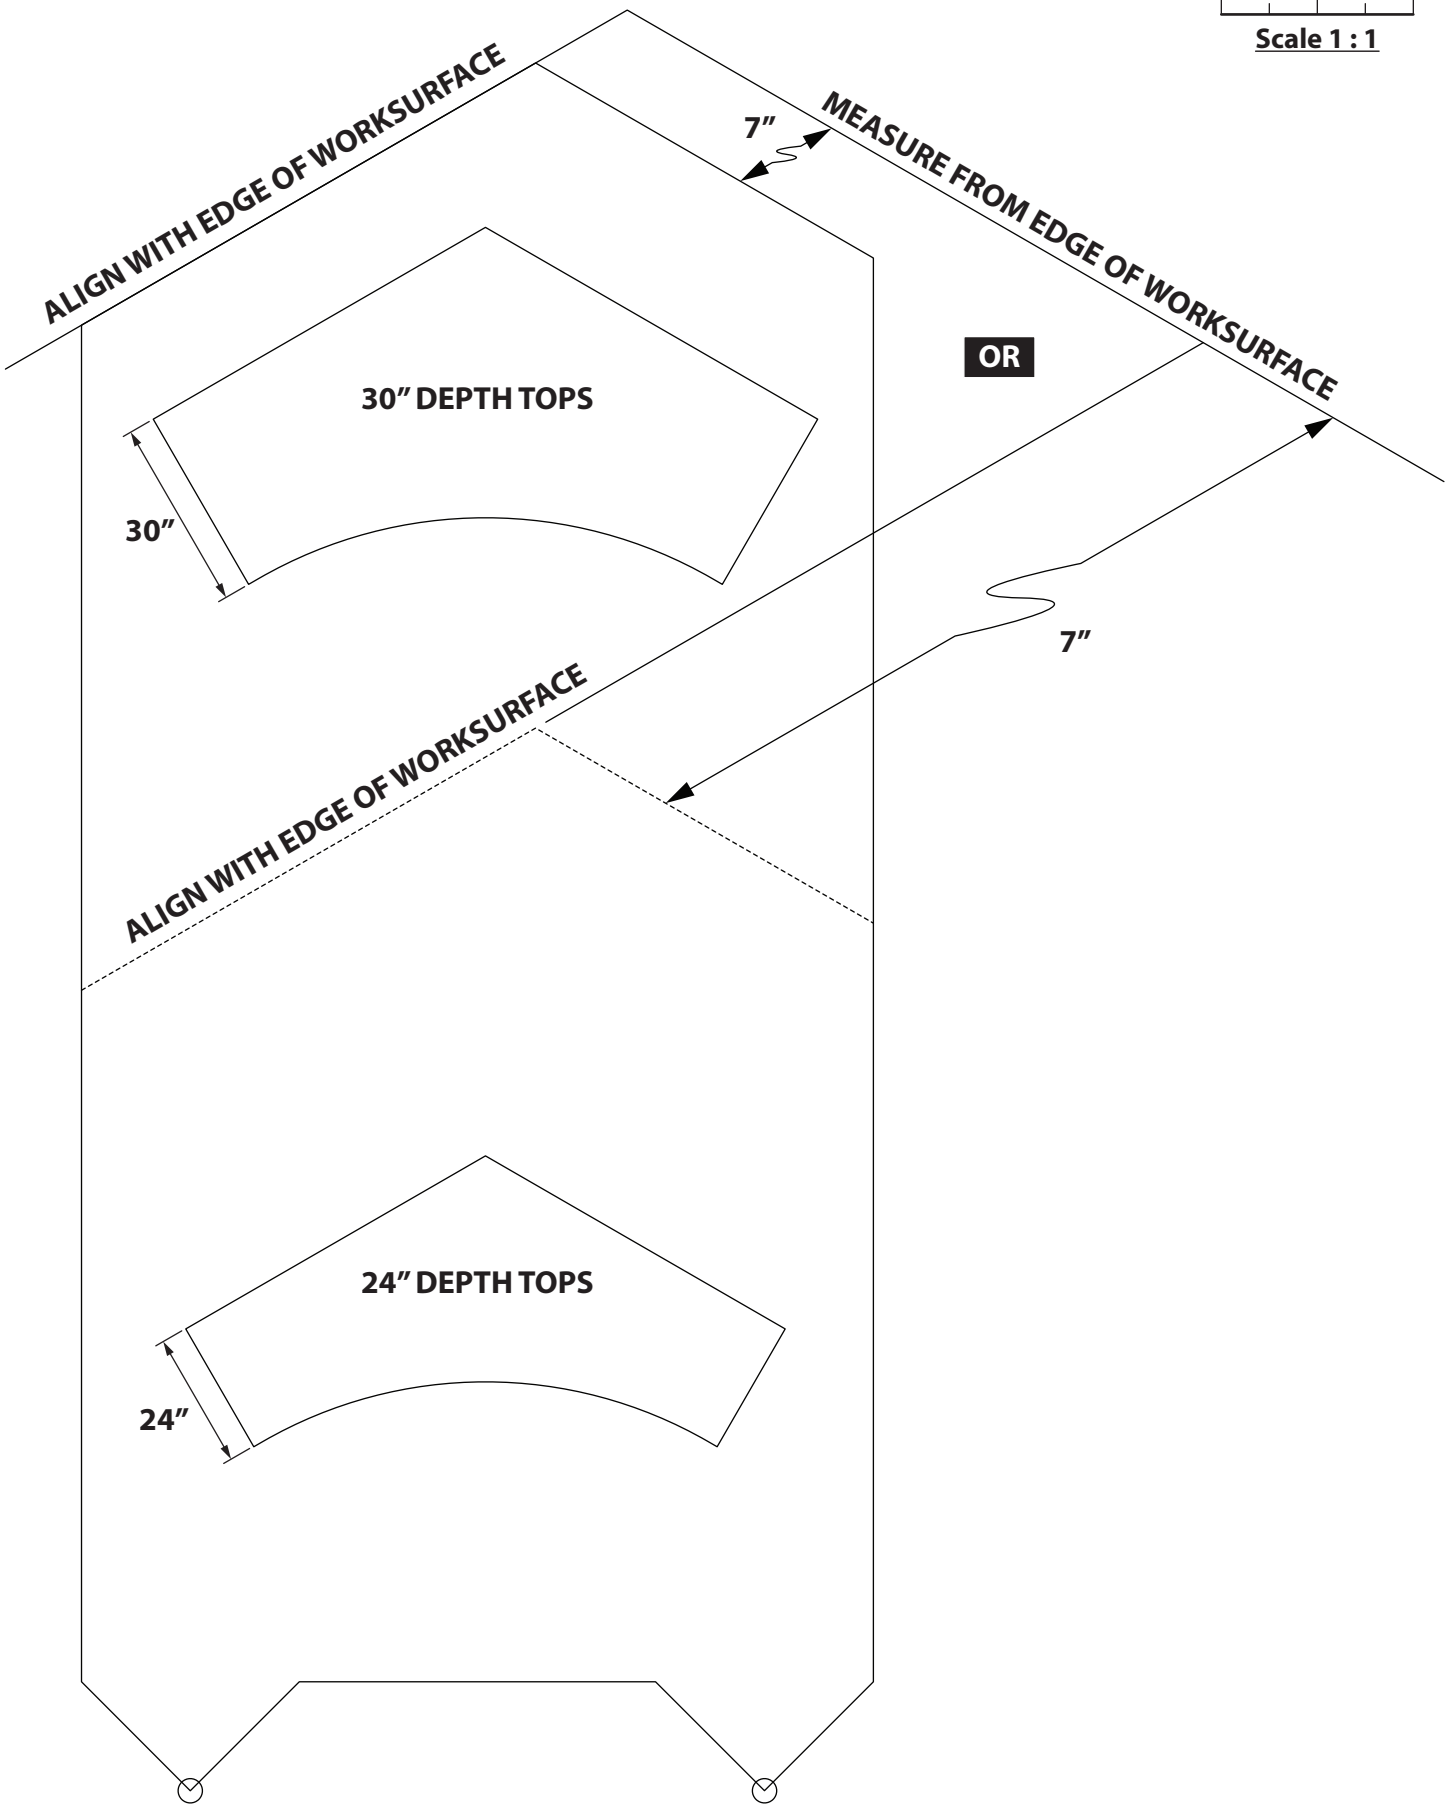


TEMPLATE FOR 120° TABLES

0 1/2 1
1/4 1/4
Scale 1 : 1

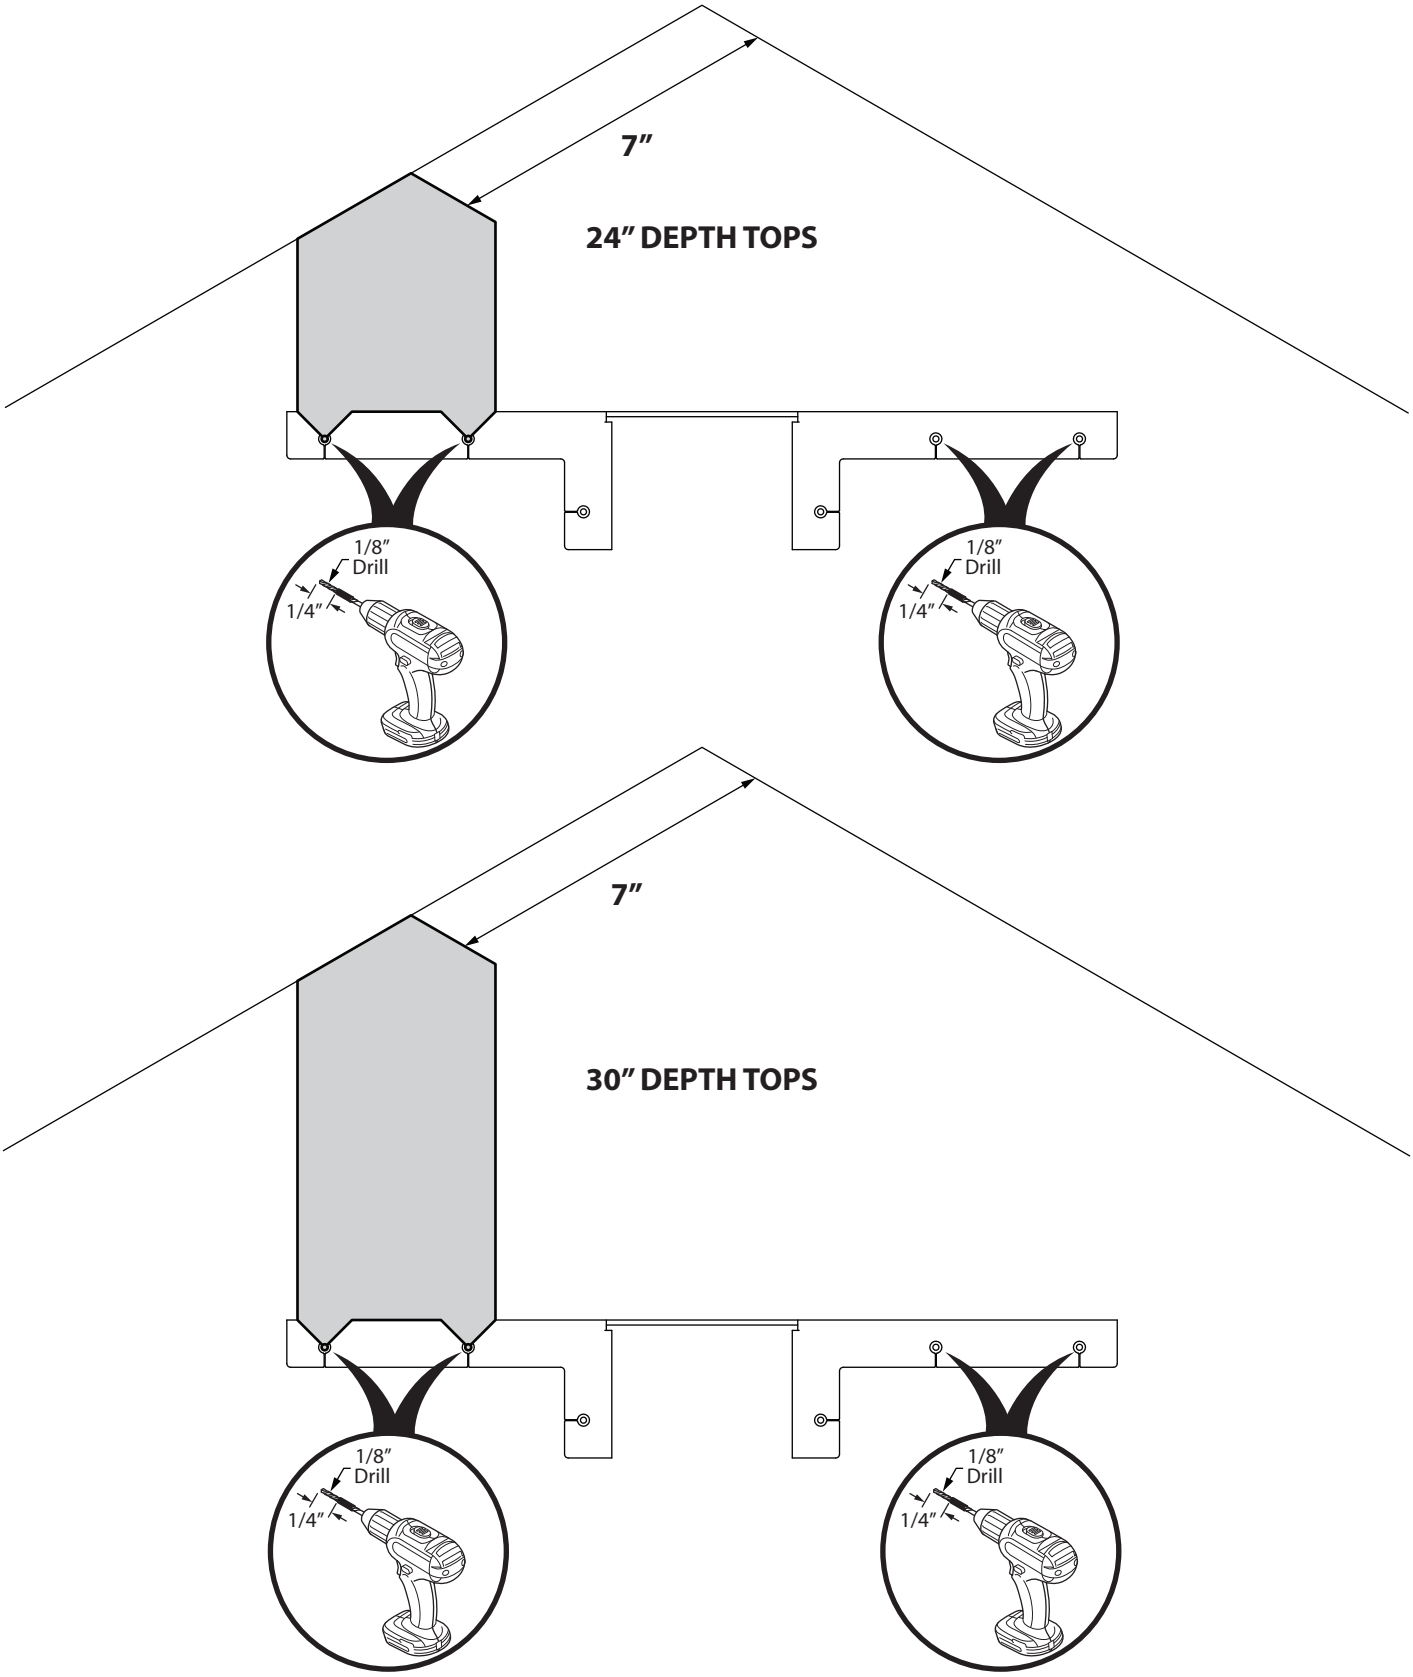

IMPORTANT SAFETY INSTRUCTIONS
For use with Planes LT Electric Height Adjustable Table
For Commercial Use Only
This product is conforms to UL962 and is certified to CAN/CSA C22.2 No. 68

0 1/2 1
1/4 1/4
Scale 1 : 1

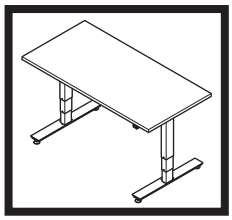

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**
10. **WARNING: RISK OF ELECTRIC SHOCK, FIRE, AND INJURY. REVIEW THE ASSEMBLY INSTRUCTIONS TO CONFIRM THAT THE APPROPRIATE CRITICAL COMPONENTS AND ACCESSORIES ARE BEING USED WITH THE FURNISHING.**

SAVE THESE INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Maximum load including surface: 250 lbs

Electrical Rating: 120V, 60Hz, 6.5A

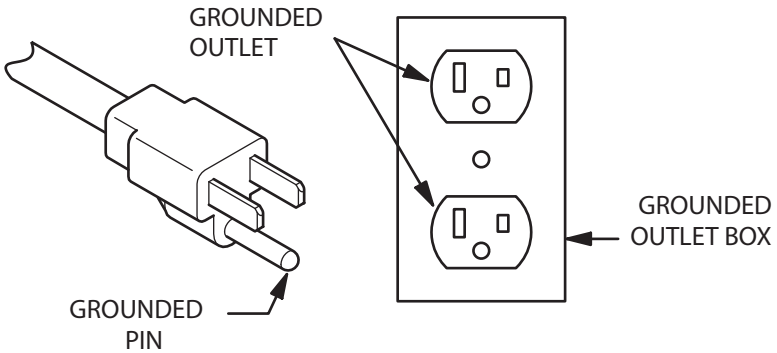

(A) FIGURE 1

PLANES® LT


Freestanding Tables

Installation Instructions

0 1/2 1
1/4 1/4

Scale 1 : 1


Tools Required

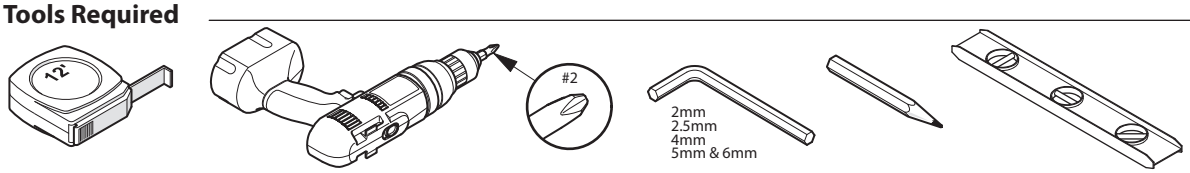


FREE STANDING TABLE - RECTANGLE


⚠IMPORTANT!


WHEN USING RAIL (E) MAKE SURE TO USE LONGER SCREWS (S240)

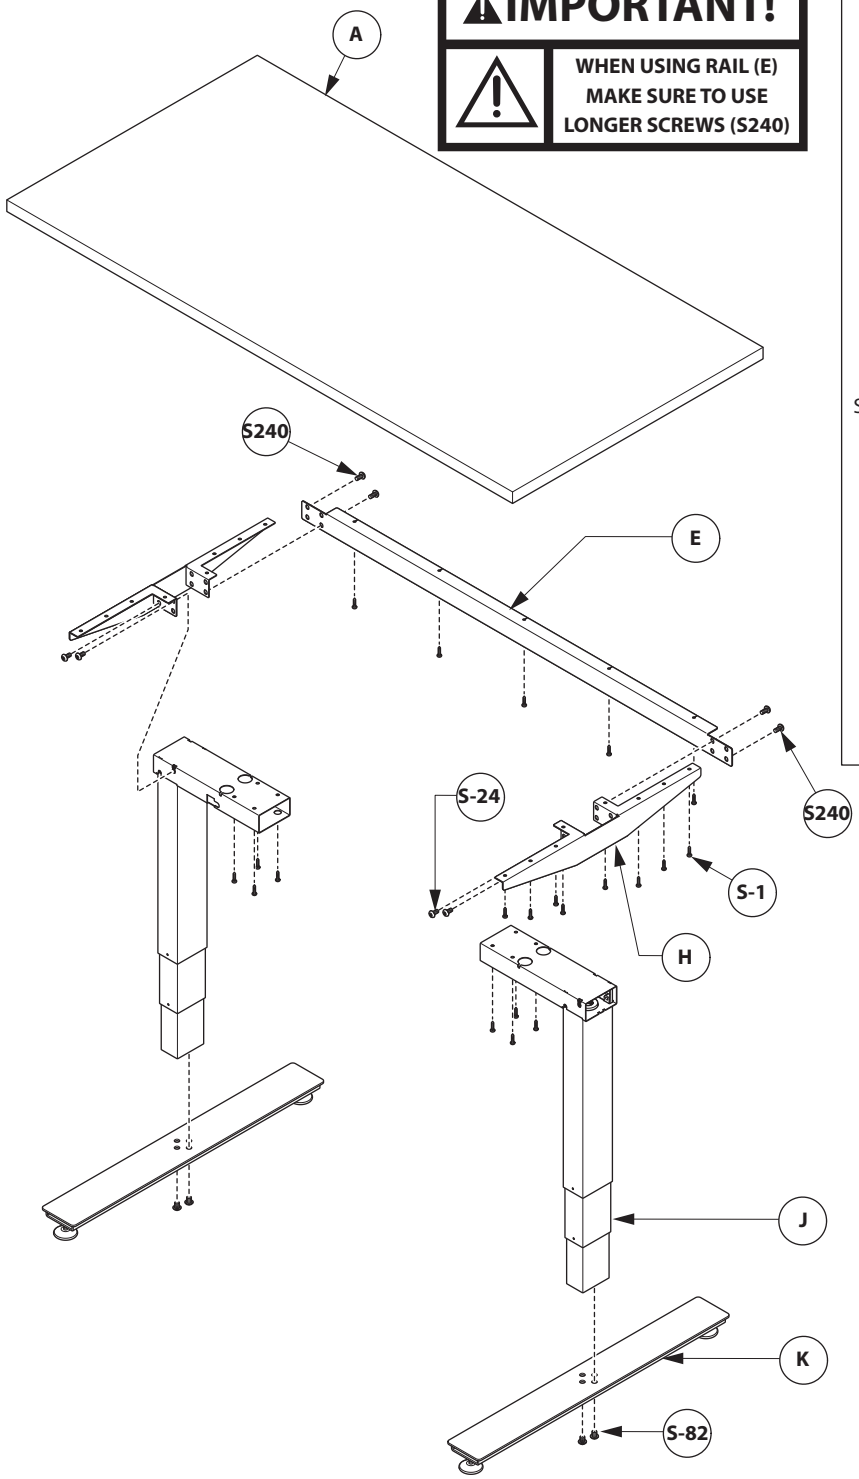



FOR ELECTRIC TABLES

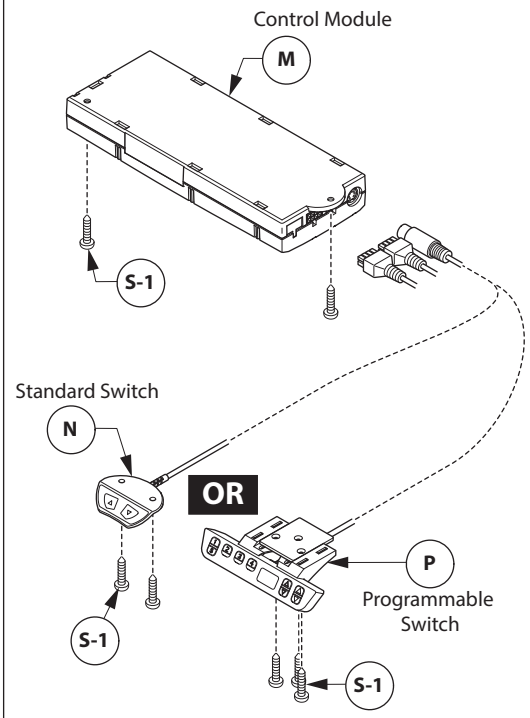

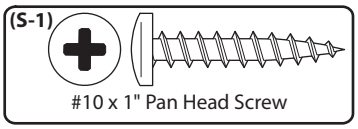


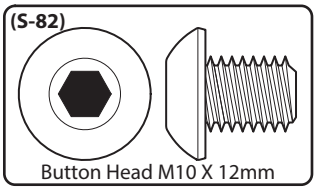


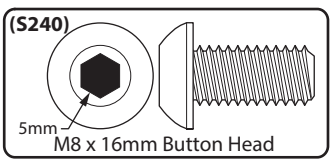

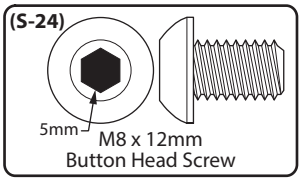


CUSTOMER SERVICE PHONE: 1-800-426-8562

COLOR CODED PARTS CHART

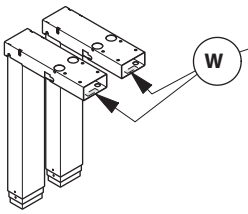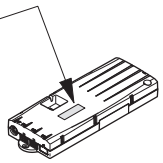	 Color Code Label	 Column	 Electric Control Module
Incremental Column	WHITE	●	
Electric Single Stage - Standard Touch Pad Actuator	BLACK	●	●
Electric Single Stage - Programmable Touch Pad Actuator	BLACK	●	●
Electric Dual Stage High - Programmable Touch Pad Actuator	VIOLET	●	●
Electric Dual Stage High - Standard Touch Pad Actuator	VIOLET	●	●
Electric Dual Stage Low - Standard Touch Pad Actuator	BROWN	●	●
Electric Dual Stage Low - Programmable Touch Pad Actuator	BROWN	●	●


CHART

ACTUAL TOP SIZE	RAILS
X / 23" or 29"	
34"	26.9"
40"	32.9"
46"	38.9"
52"	44.9"
58"	50.9"
64"	56.9"
70"	62.9"

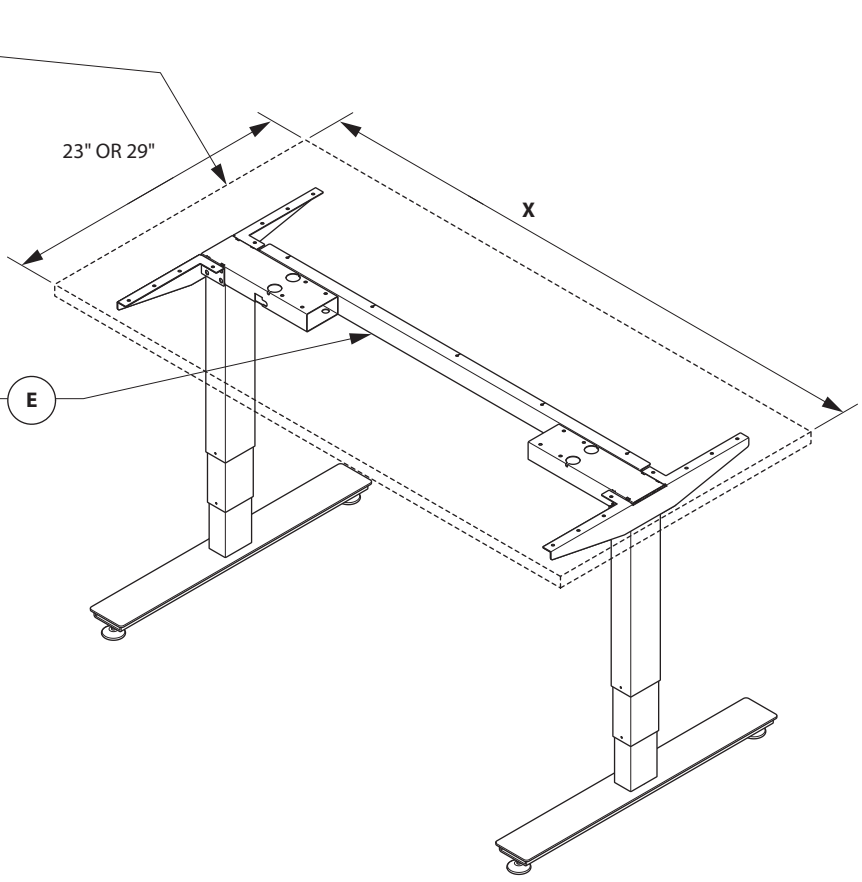


NOTE: When using L-rail (E)

1 Install foot (M)

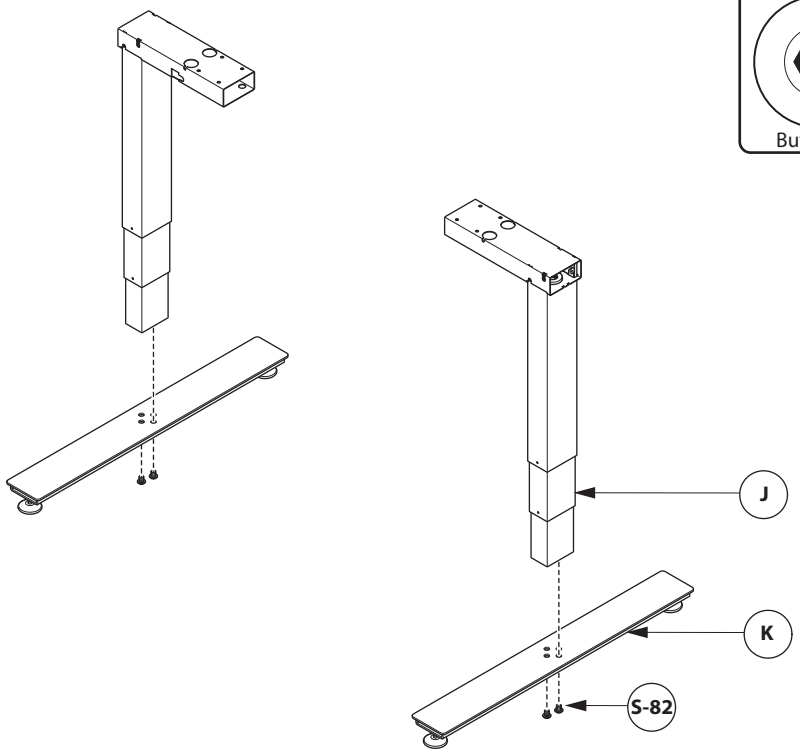


2 Install support rail (E)

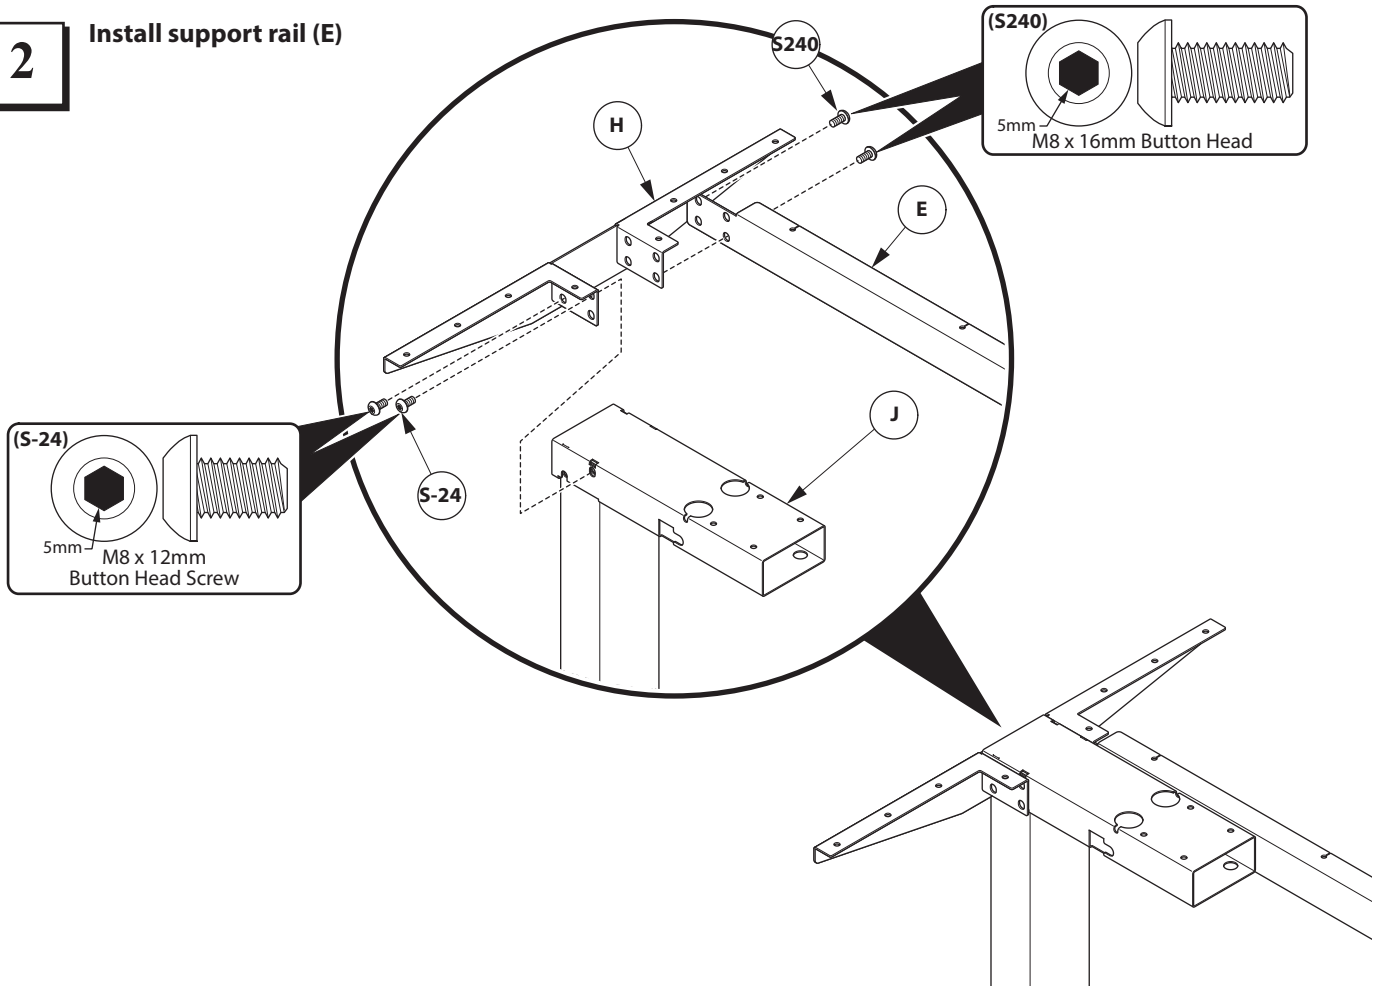


4 Install top (A)

(S-1)




#10 x 1" Pan Head Screw

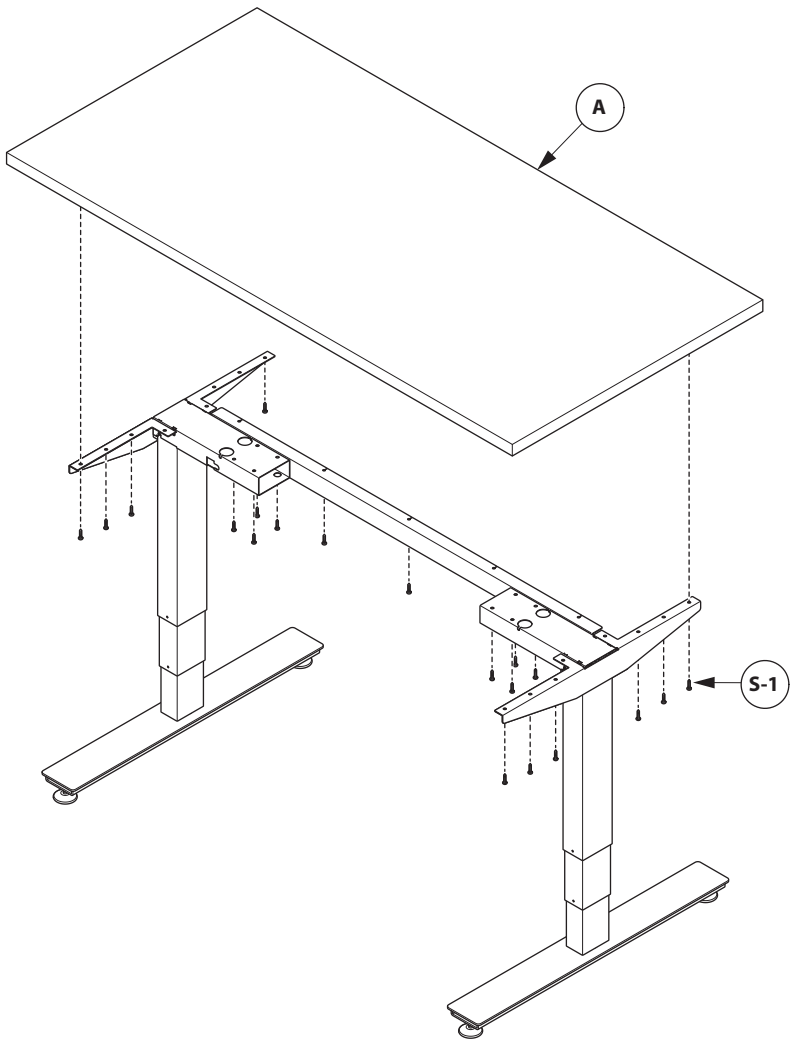


FOR ELECTRIC TABLES

5

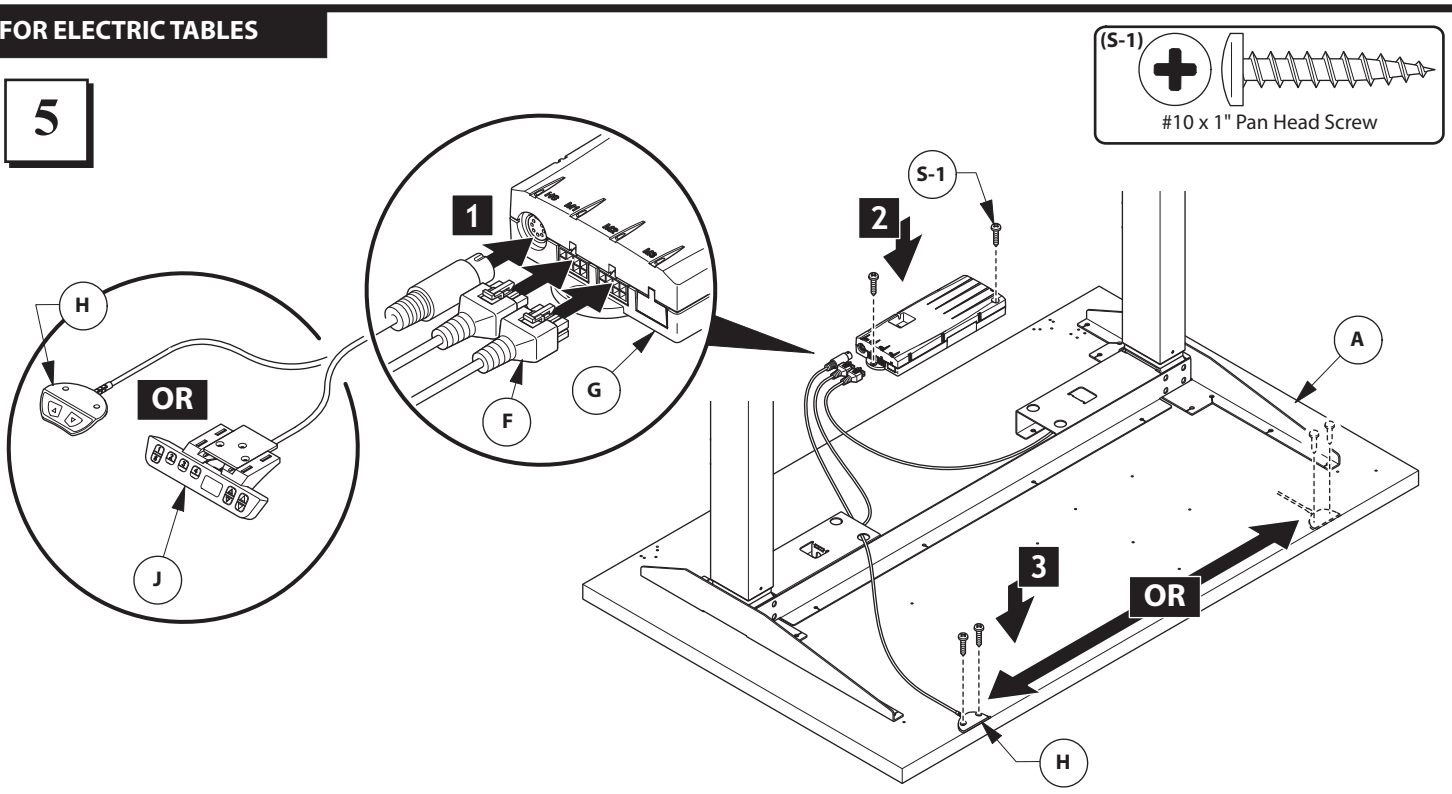

6

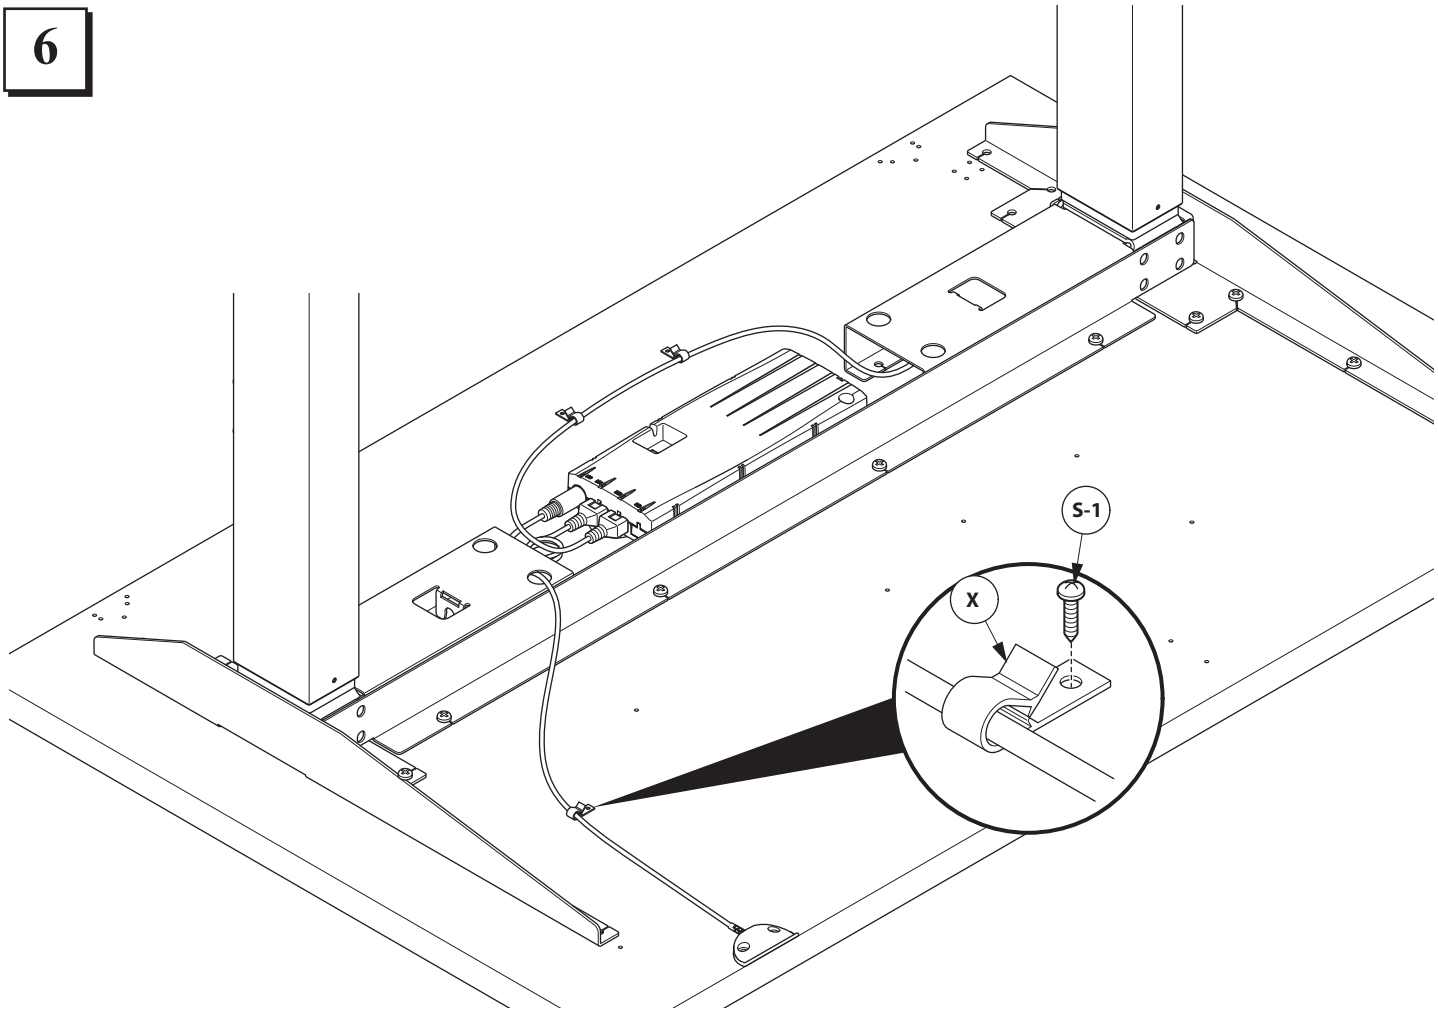


FOR ELECTRIC TABLES



Initial Calibration

After assembly all electric tables must be calibrated to insure smooth and trouble free movement.

1. Lower the table to the lowest height by pressing the down arrow on the switch.
2. Continue to press the down arrow for 5 to 10 seconds.
   NOTE: The table will readjust itself if needed.

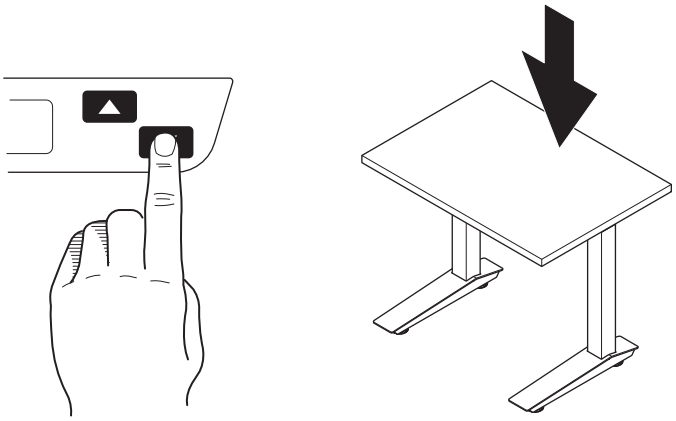

PRESET SWITCH INSTRUCTIONS



Saving a height position with the preset switch

1. Position the top to the desired height
2. Press the S button
3. Within 5 seconds press the desired number key (1-4) until a double click is heard.
   NOTE: The readout will show for example S(number) until the double click is heard and then the height readout will return

Moving to a preset height


Press the appropriate number button.
Continue to press the button until the saved position is reached.

Changing from inches to centimeters


The table ships set to read in inch increments but can be changed on site to read in centimeters.

Press the 1, 2 and up arrow buttons simultaneously
Use the up and down arrow keys until the readout shows S 5
Press the S button to complete
Use the same procedure to switch back to inches

1 **Position top to desired height**

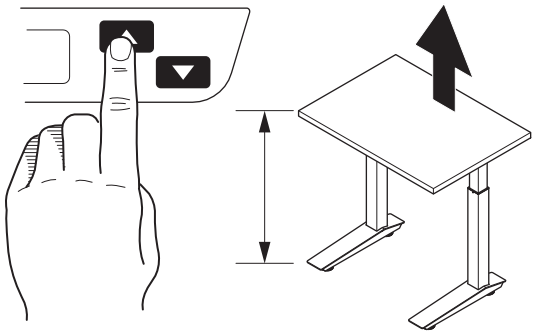


2 **Press "S" button**

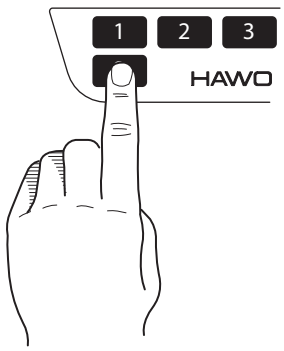

3 **Press & hold desired button**

4 **Repeat for each setting**

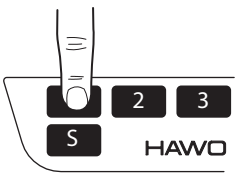

CUSTOMER SERVICE PHONE: 1-800-426-8562