
PLANES®


Power

Installation Instructions


No Tools Required

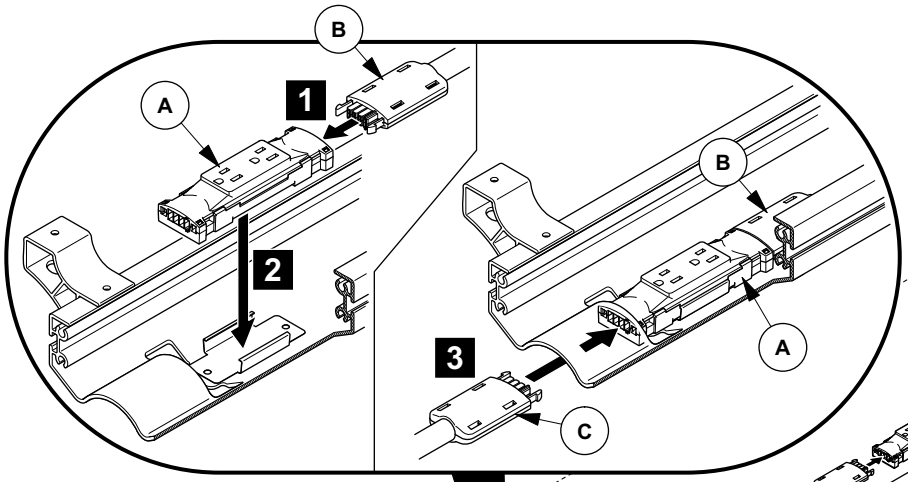

FOR 42"- 96" TABLES

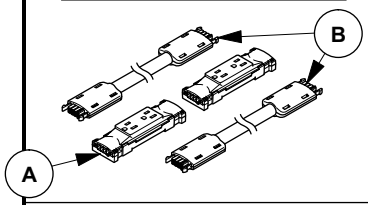


FOR 36" TABLES

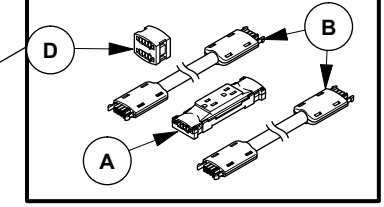


NOTE: Tables must be mechanically fastened.


FOR 42"- 96" TABLES

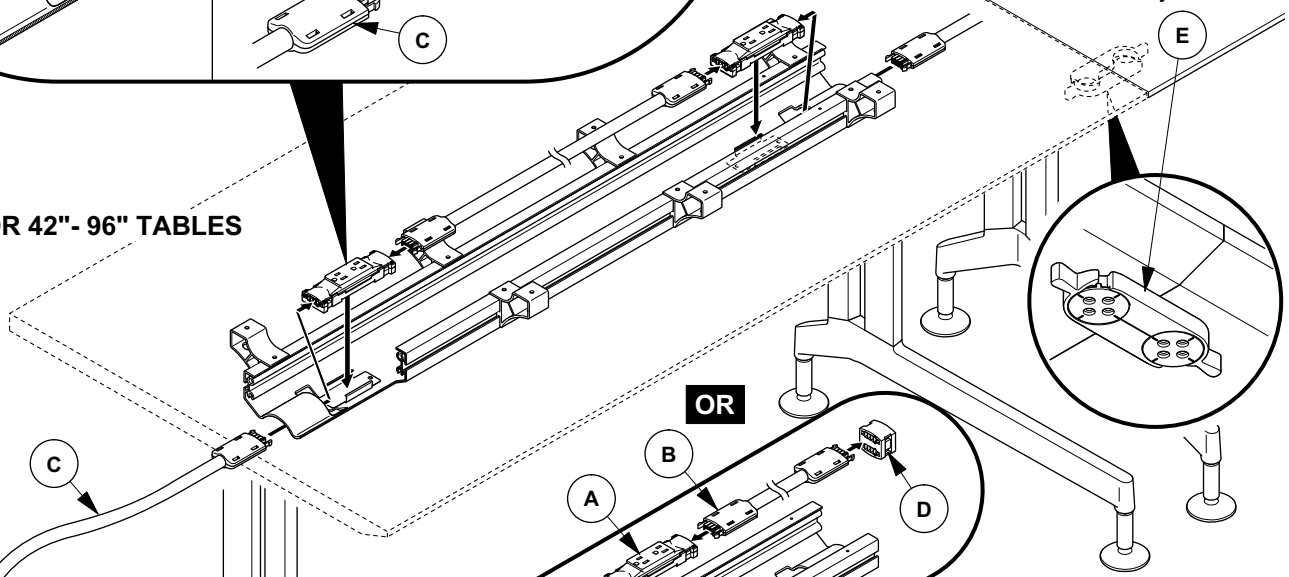

OR

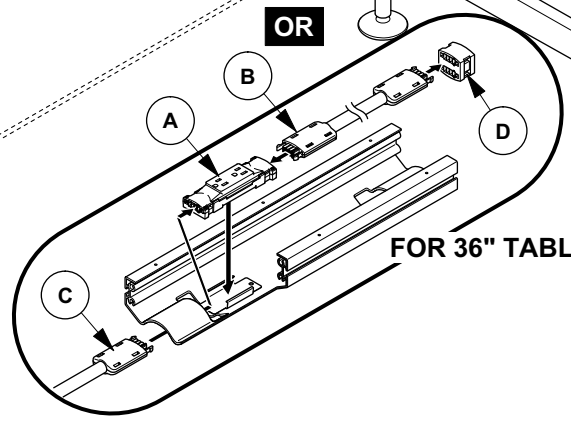

FOR 36" TABLES

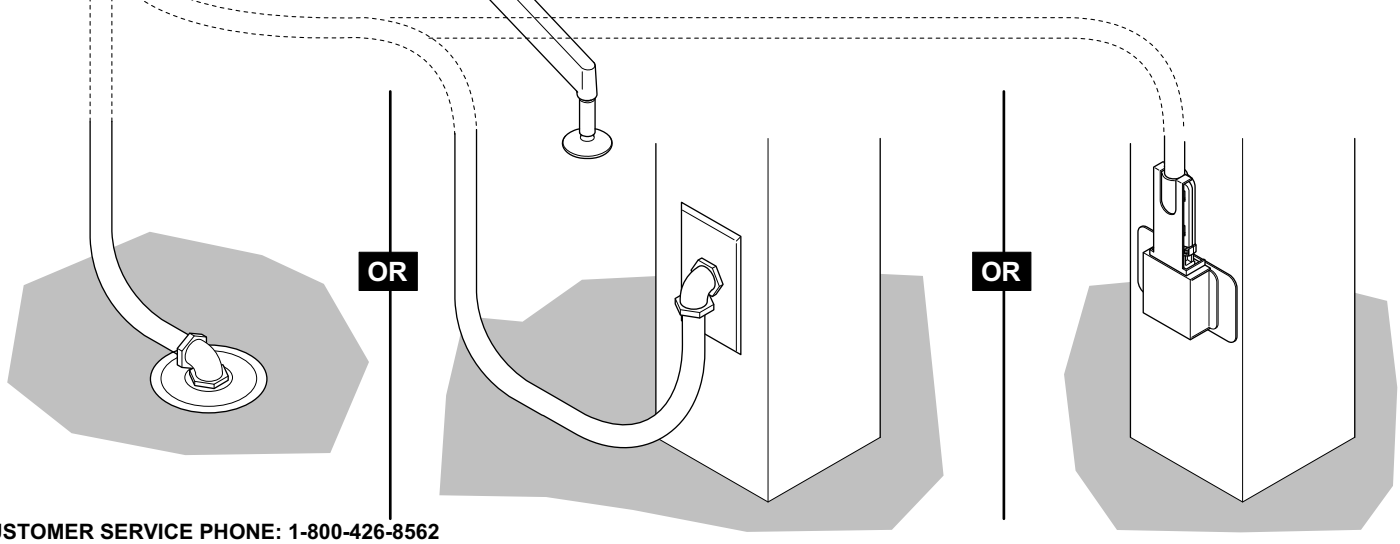


CUSTOMER SERVICE PHONE: 1-800-426-8562

WIRING DIAGRAM


In the two-circuit schematic, circuits 1 and 2 are distributed from two different phases and are supported with one shared neutral.

Three 208Y/120V Phase Circuit Panel

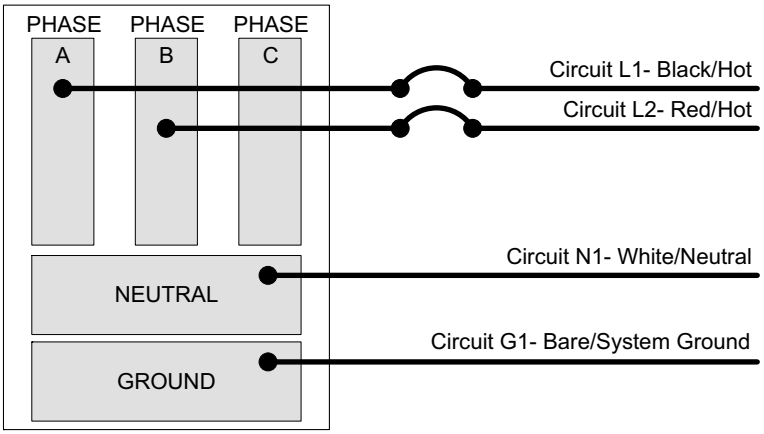

On a 3-phase circuit panel, circuits are distributed as shown.

Three Wire Single 120/240V Phase Circuit Panel

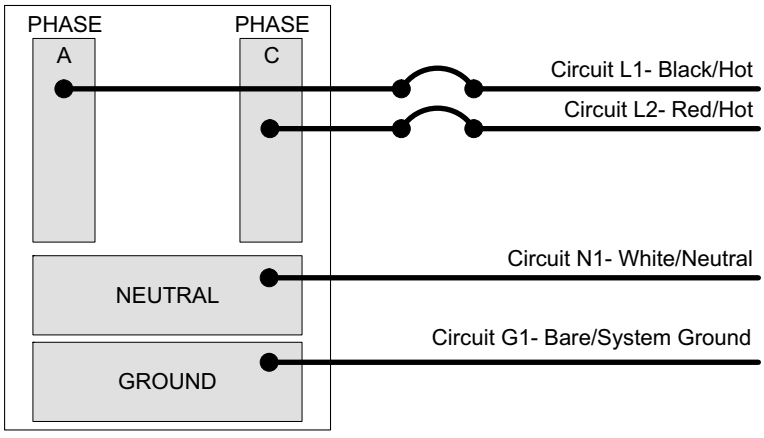

On a 3 wire single phase circuit panel, circuits are distributed as shown.