

PLANES®


Credenza


Installation Instructions

Tools Required

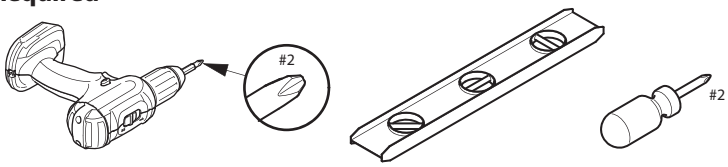

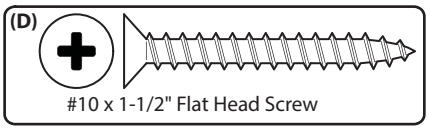

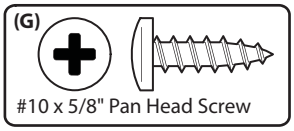


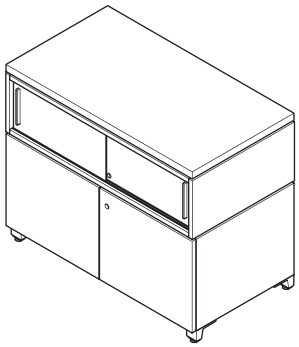


NOTE: Paraffin wax **MUST** be applied to bottom edge of door to improve sliding door.


FOR UNITS 36", 48" & 54"

1 **Install legs (E)**

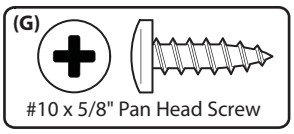


NOTE: Legs are flush with outside of end panel.

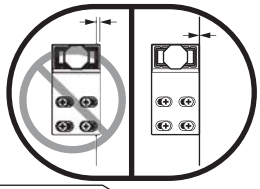

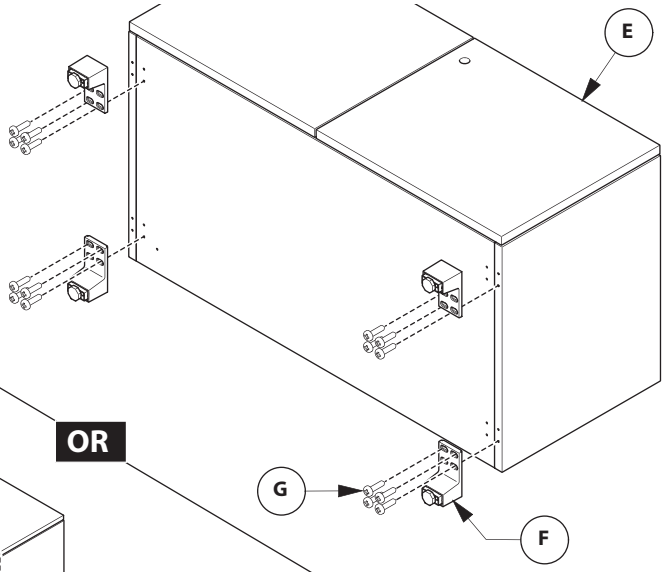


FOR UNITS 72"

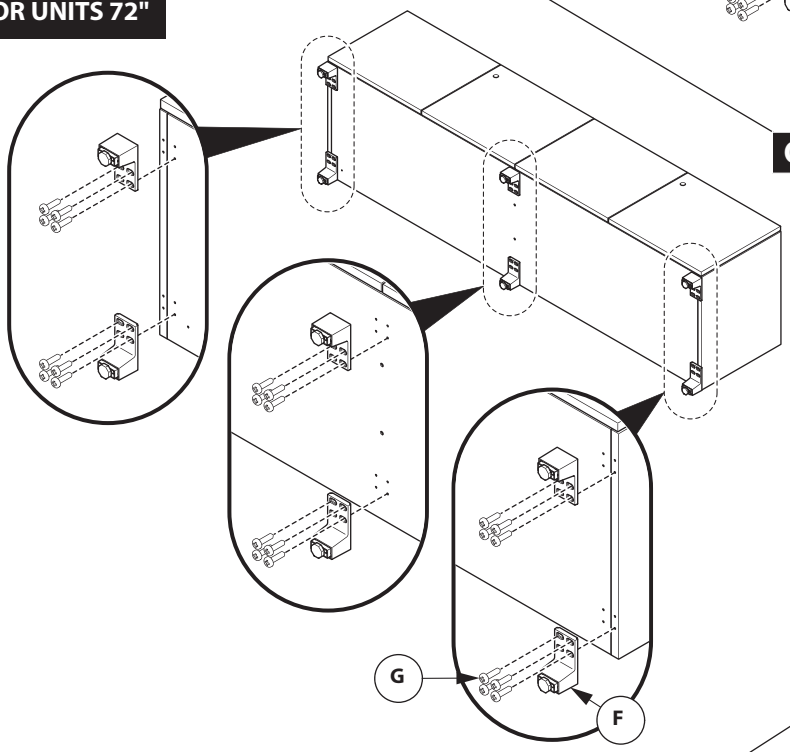


OR


NOTE: Legs are flush with outside of end panel.

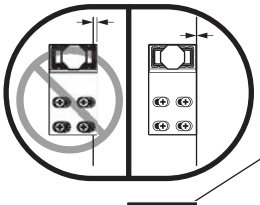


OR

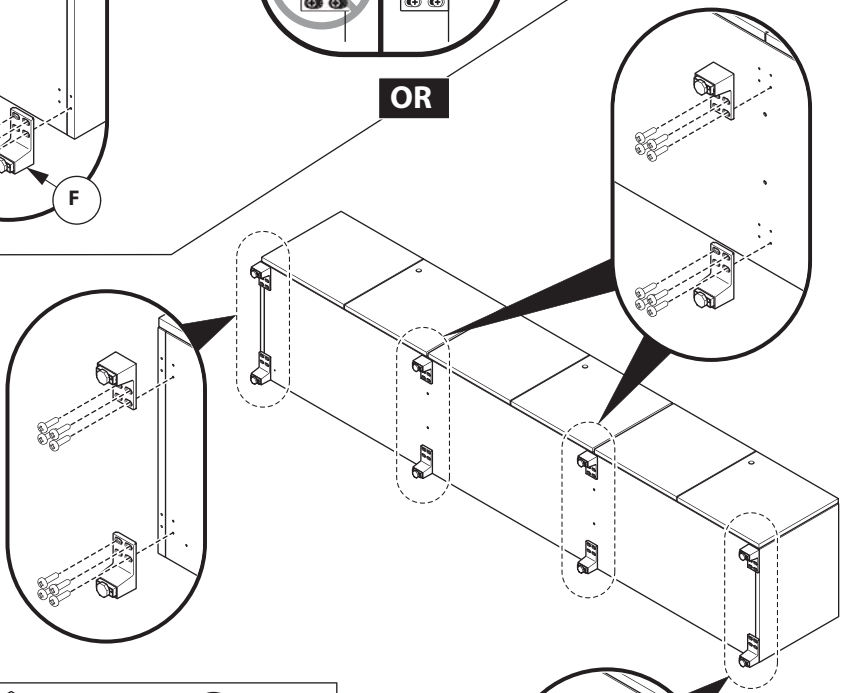


FOR UNITS 96" & 108"

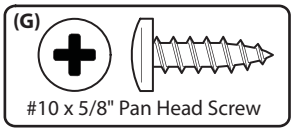


NOTE: Legs are flush with outside of end panel.

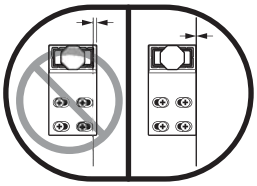

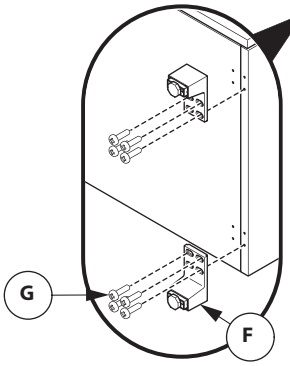


2 **Adjust foot glides (F)**

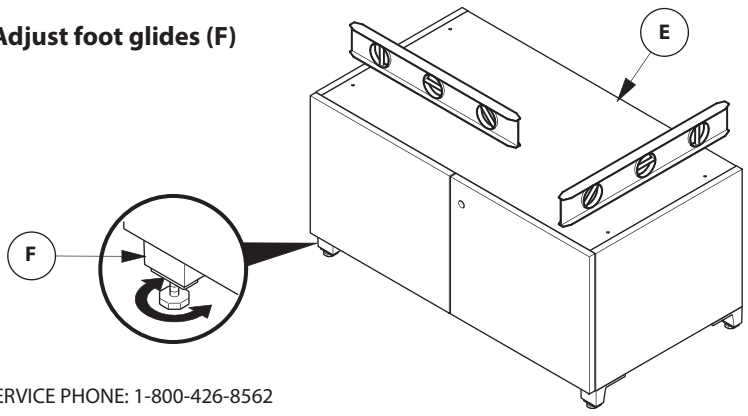



CUSTOMER SERVICE PHONE: 1-800-426-8562

3 Install upper storage (C) and worksurface (A)


NOTE: Drop shelf **(K)** to get access to screws **(D)**.

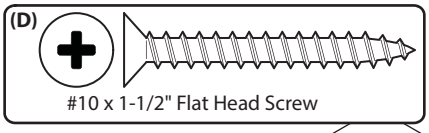

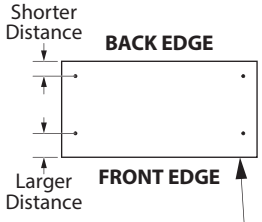


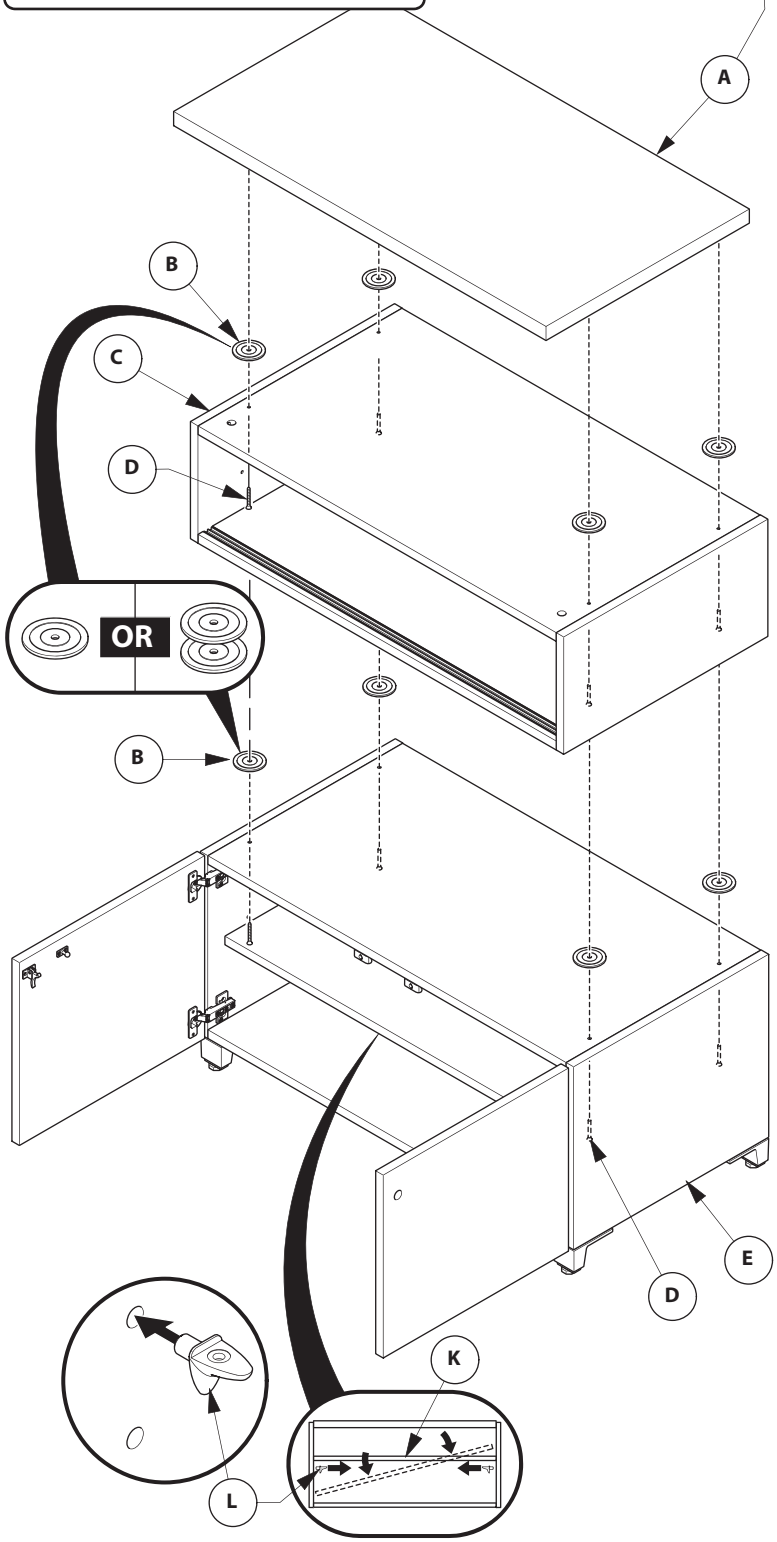


DOOR INSTALLATION/REMOVAL

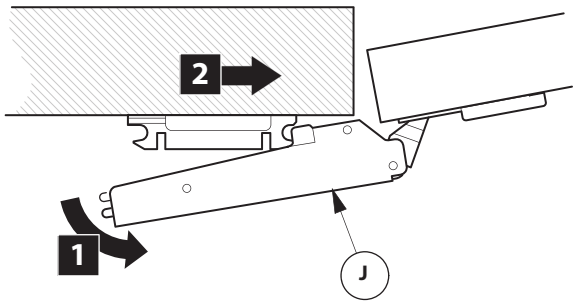


DOOR HINGE ADJUSTMENT

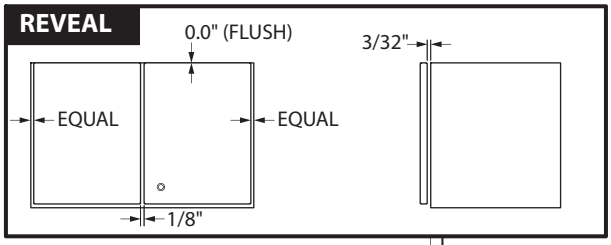


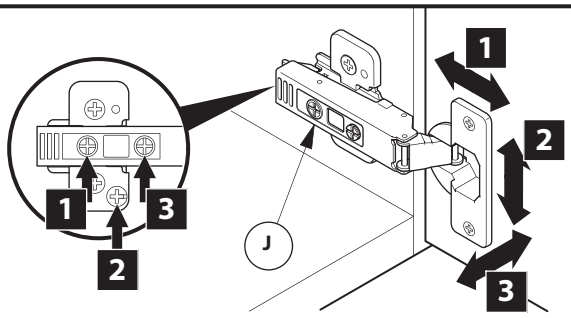

DOOR CATCH UP & DOWN ADJUSTMENT

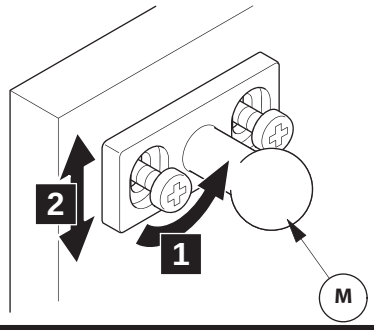


DOOR RECEIVER FRONT & BACK ADJUSTMENT

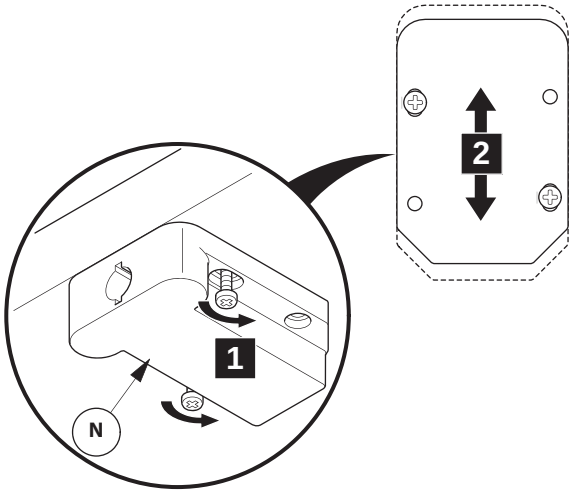

CUSTOMER SERVICE PHONE: 1-800-426-8562


FOR SLIDER UNIT

4 Install shelf (K)

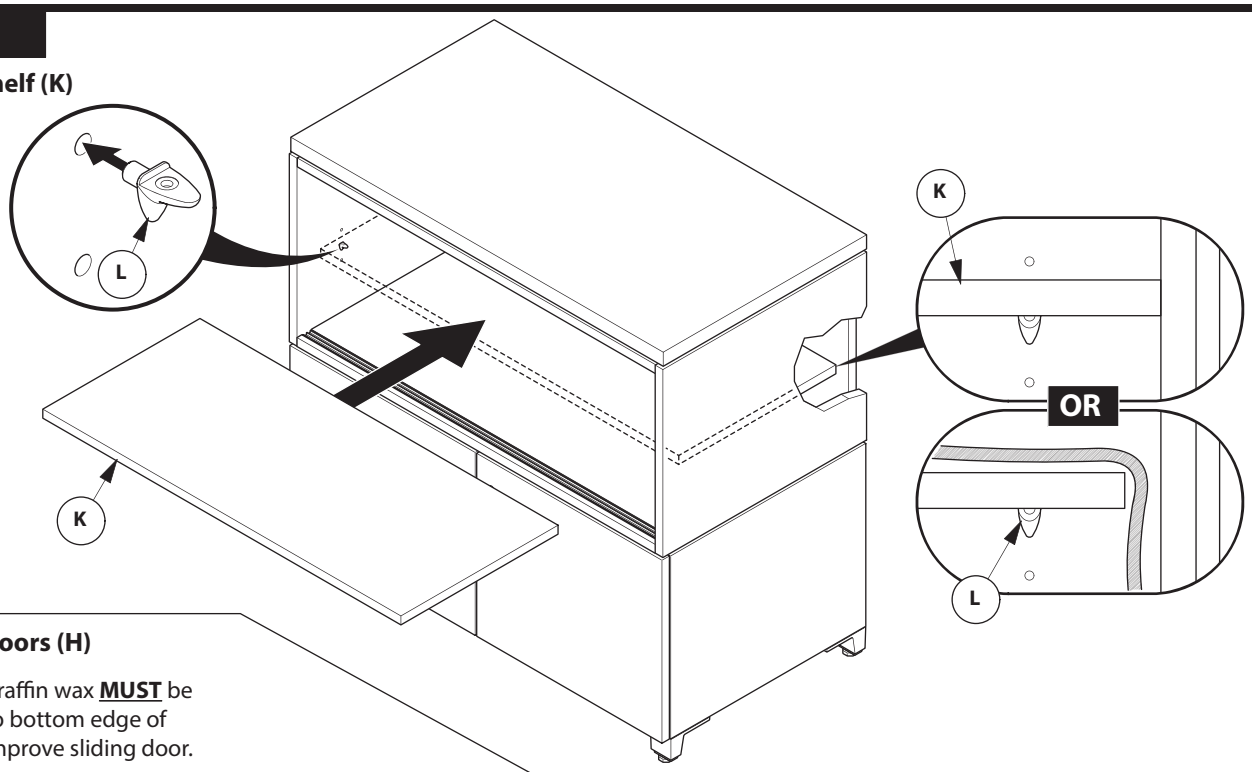


5 Install doors (H)

NOTE: Paraffin wax **MUST** be applied to bottom edge of door to improve sliding door.

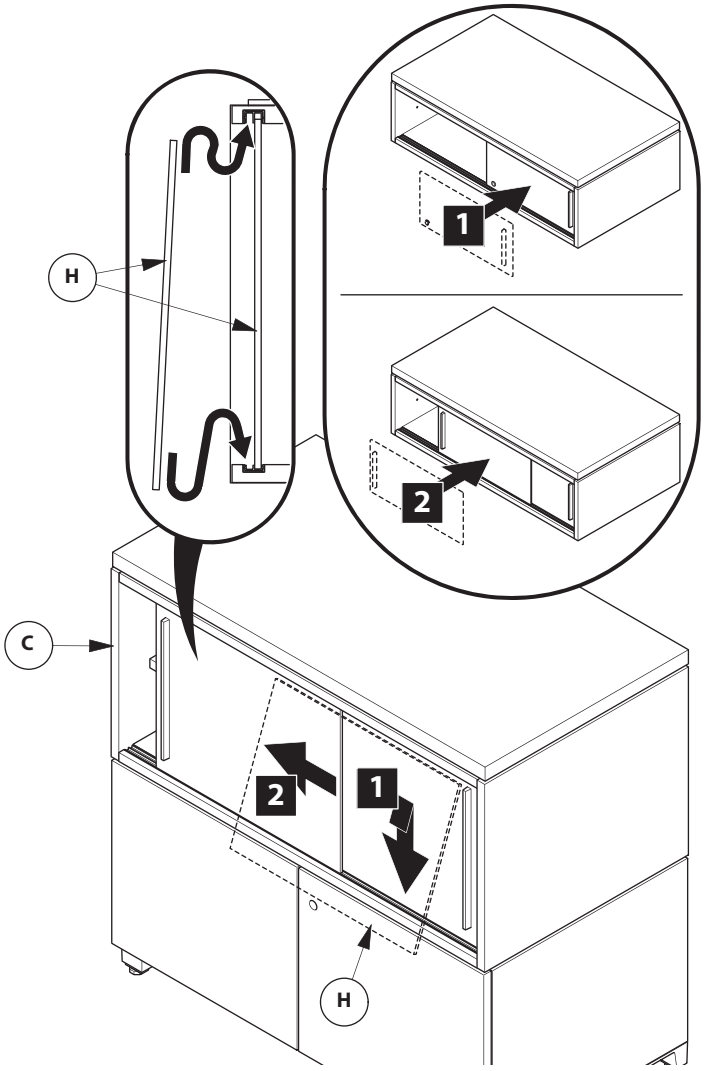

6 Install lock strips (J)


NOTE: Install lock strips **(J)** in the track at the center of each door as shown.

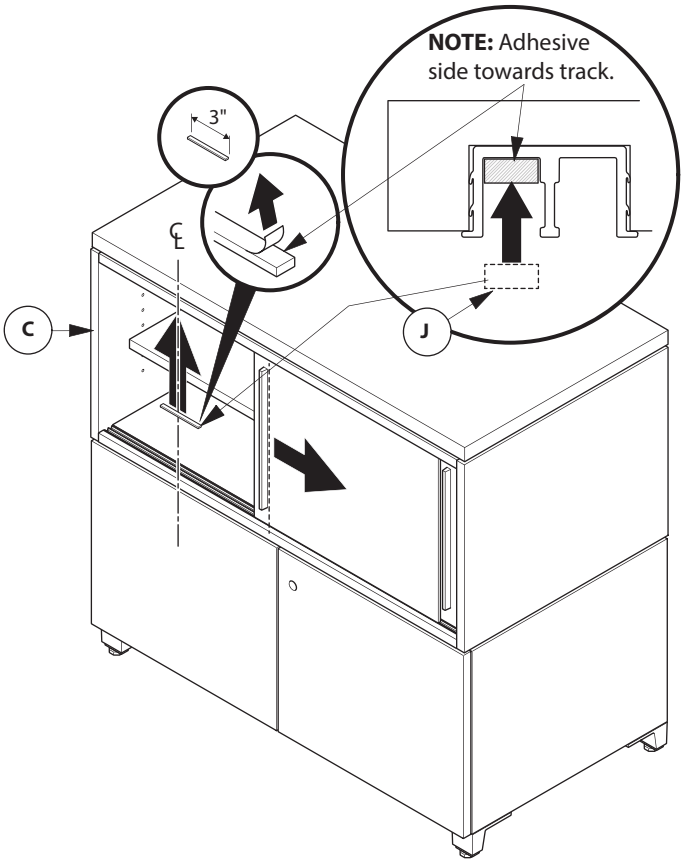

CUSTOMER SERVICE PHONE: 1-800-426-8562


7 Install lock strips (J)

NOTE: Install lock strips **(J)** in the track at the center of each door as shown.

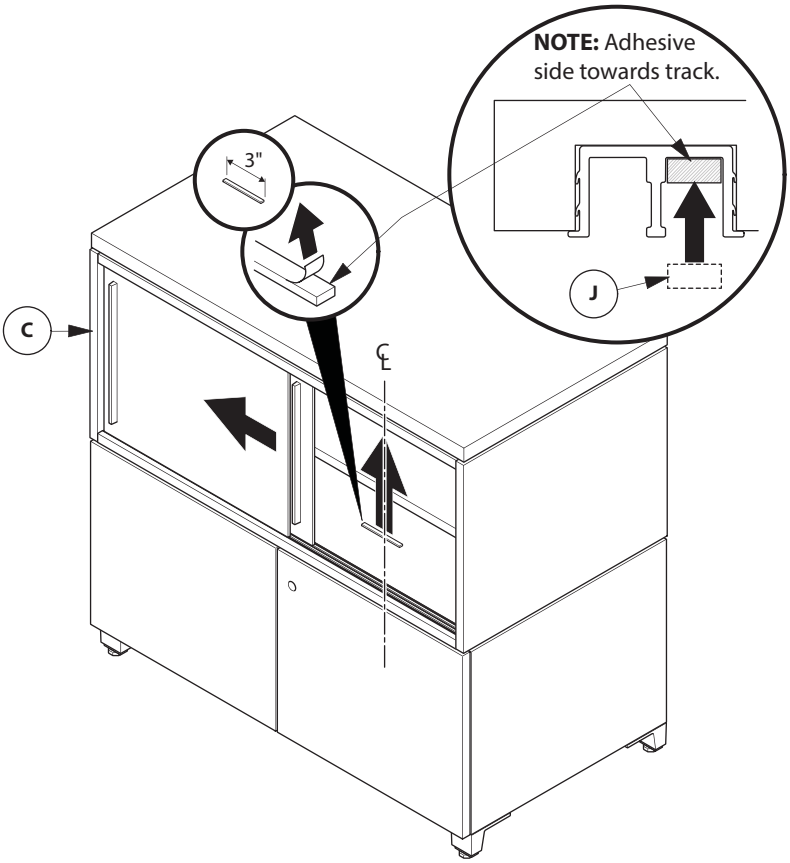

OPTIONAL LOCK PLUG INSTALLATION


1 Replace square key (X) with round key (CK-3)

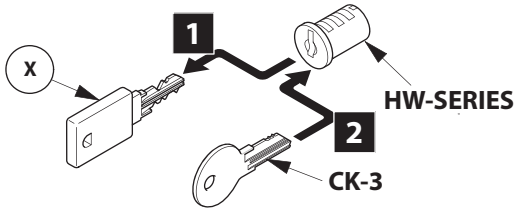

2 Install lock plug (HW-SERIES)


NOTE: Position cam to unlocked (12:00 o'clock position.

NOTE: It may be necessary to rotate cam until lock plug engages.

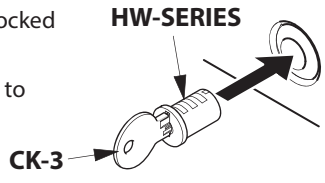

3 Remove round key (CK-3) and insert square key (X)

NOTE: Hold the lock plug **(HW-SERIES)** in place with thumb while removing the control key **(CK-3)**.

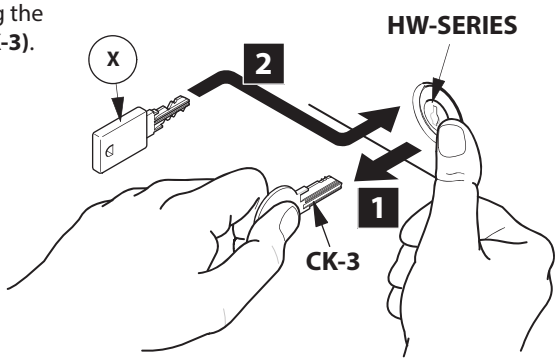

CUSTOMER SERVICE PHONE: 1-800-426-8562