
**PLANES®**

# Top Feed Module

Installation Instructions


**Tools Required**

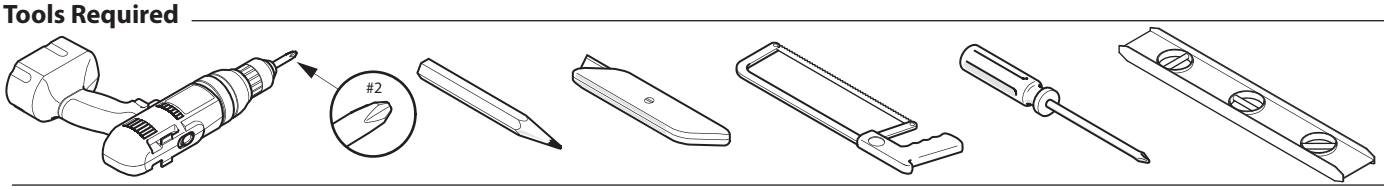



**WARNING: Do not electrically interconnect modular power distribution systems powered from two different power feed units. This poses a SHOCK HAZARD to service personnel and will cause RISK OF FIRE due to excessive circulating currents.**


**WARNING: Power to all branch circuits MUST REMAIN DISCONNECTED during installation or removal of electrical components and raceway covers to avoid SHOCK HAZARDS.**

NOTE: Connections of this modular power distribution component MUST be done by a licensed electrician, who must control the size and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all applicable building and electrical code requirements.

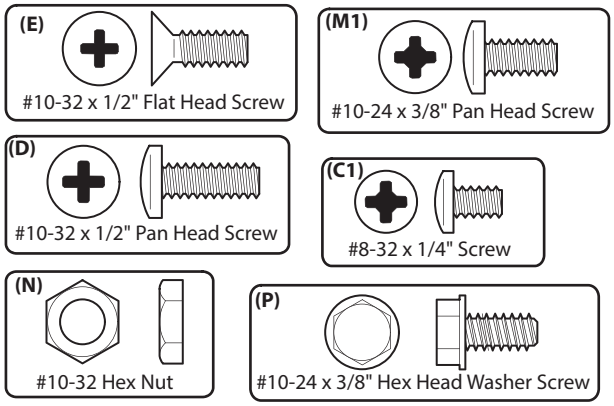

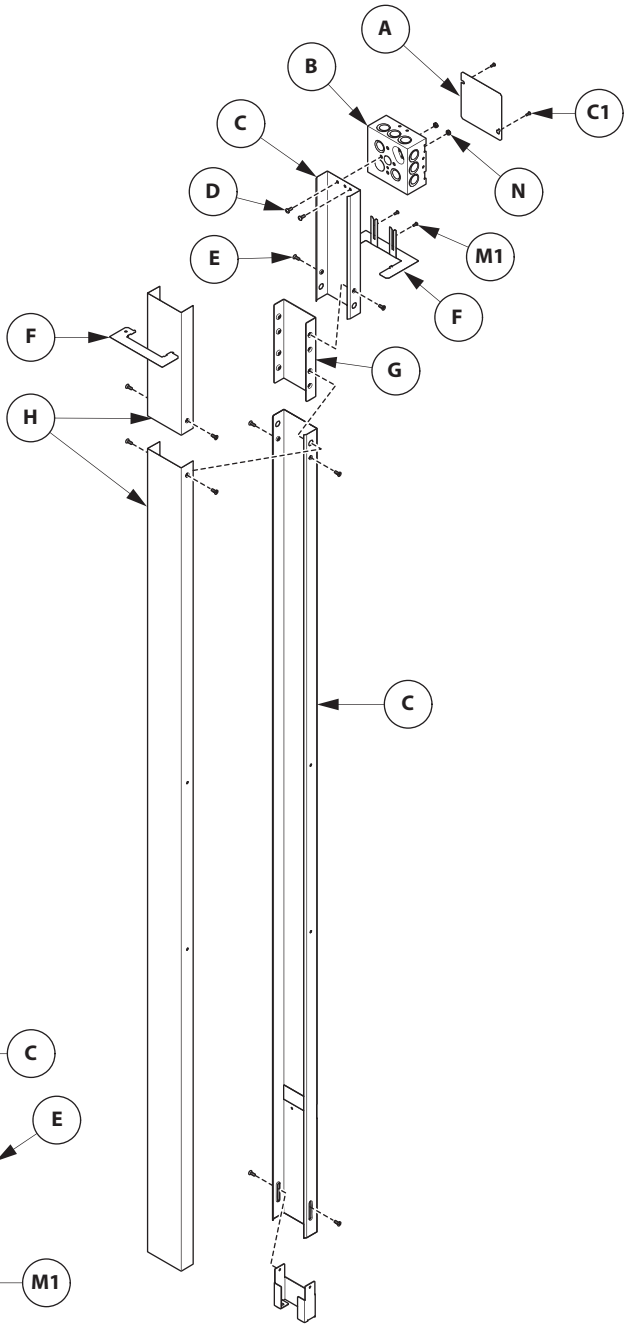
**END-OF-RUN** **CENTER-OF-RUN**

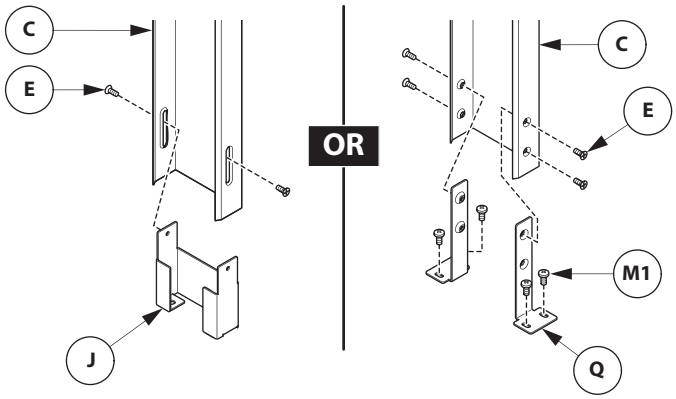



**CUSTOMER SERVICE PHONE: 1-800-426-8562**


## CENTER-OF-RUN OPTION

**1a** **Install brackets (Q)**

(M1)



#10-24 x 3/8" Pan Head Screw

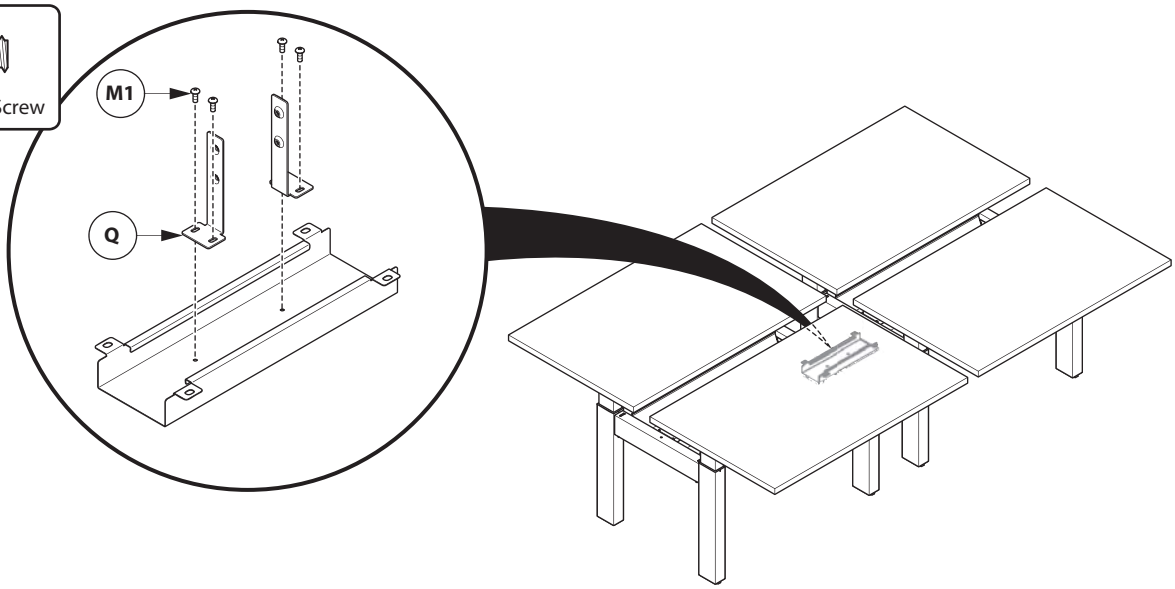



**OR**

## END-OF-RUN OPTION


**1b** **Locate and install bracket (J)**

**NOTE:** Due to varying floor construction fastener anchors are not included and must be field supplied.

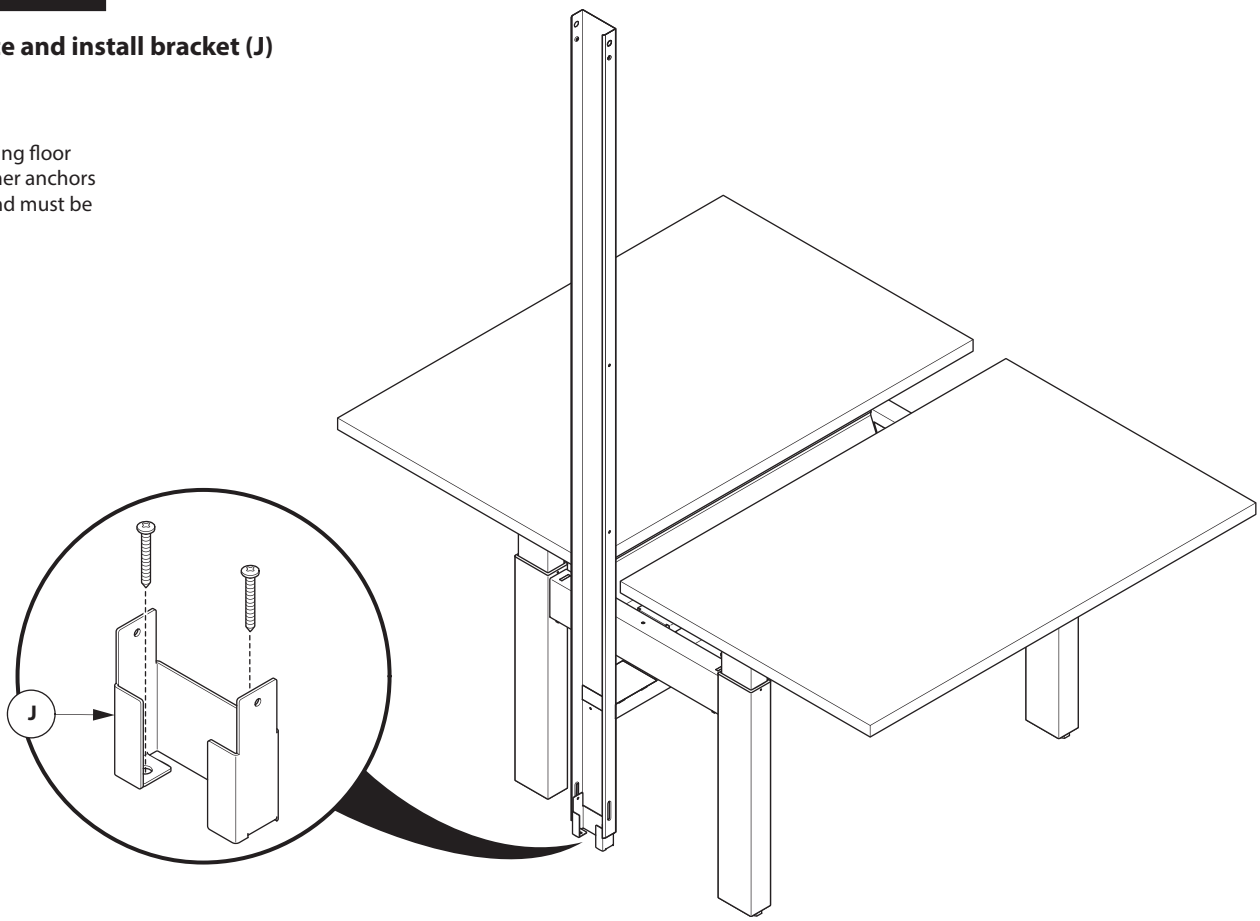


## 2


(E)



#10-32 x 1/2" Flat Head Screw

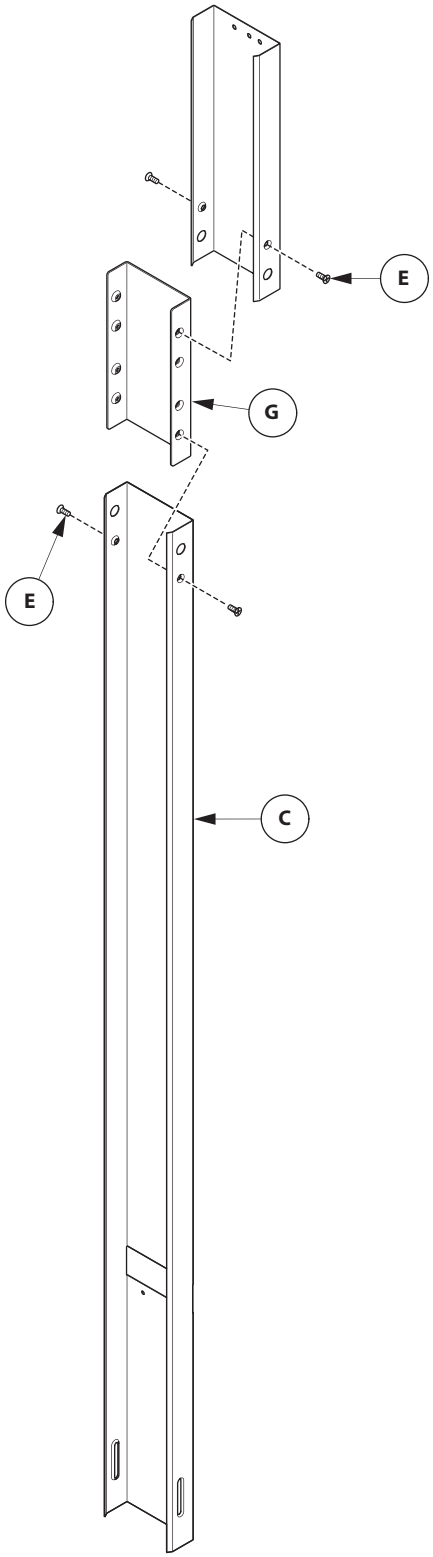



## 3

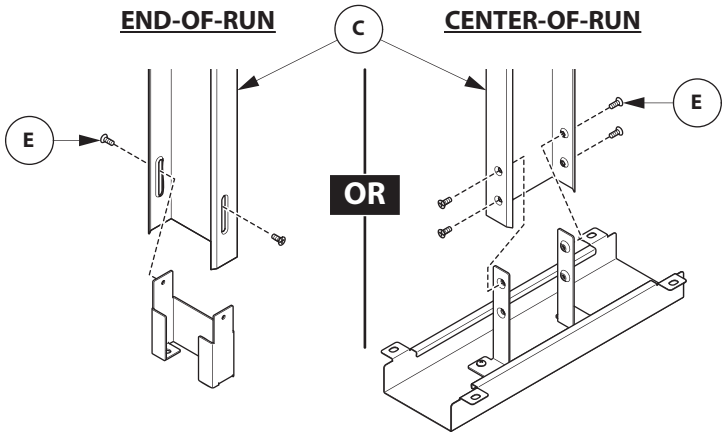



## 4

**Plumb cover (C) and locate and cut a hole in ceiling tile**

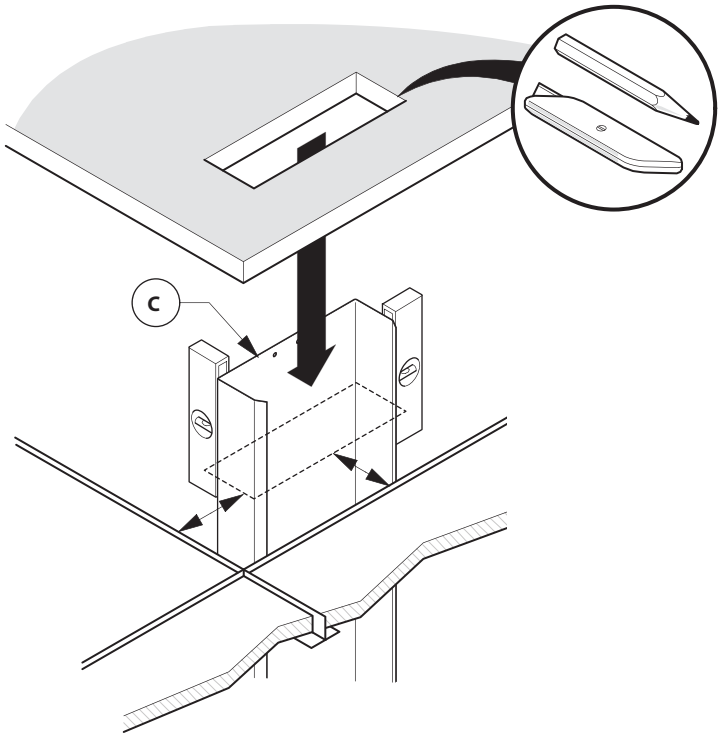


## 5

(M1)

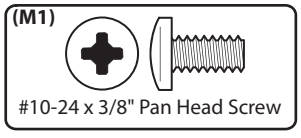

#10-24 x 3/8" Pan Head Screw





**CUSTOMER SERVICE PHONE: 1-800-426-8562**

## 6 Install outer cover (H)


(D) #10-32 x 1/2" Screw

(N) #10 Hex Nut

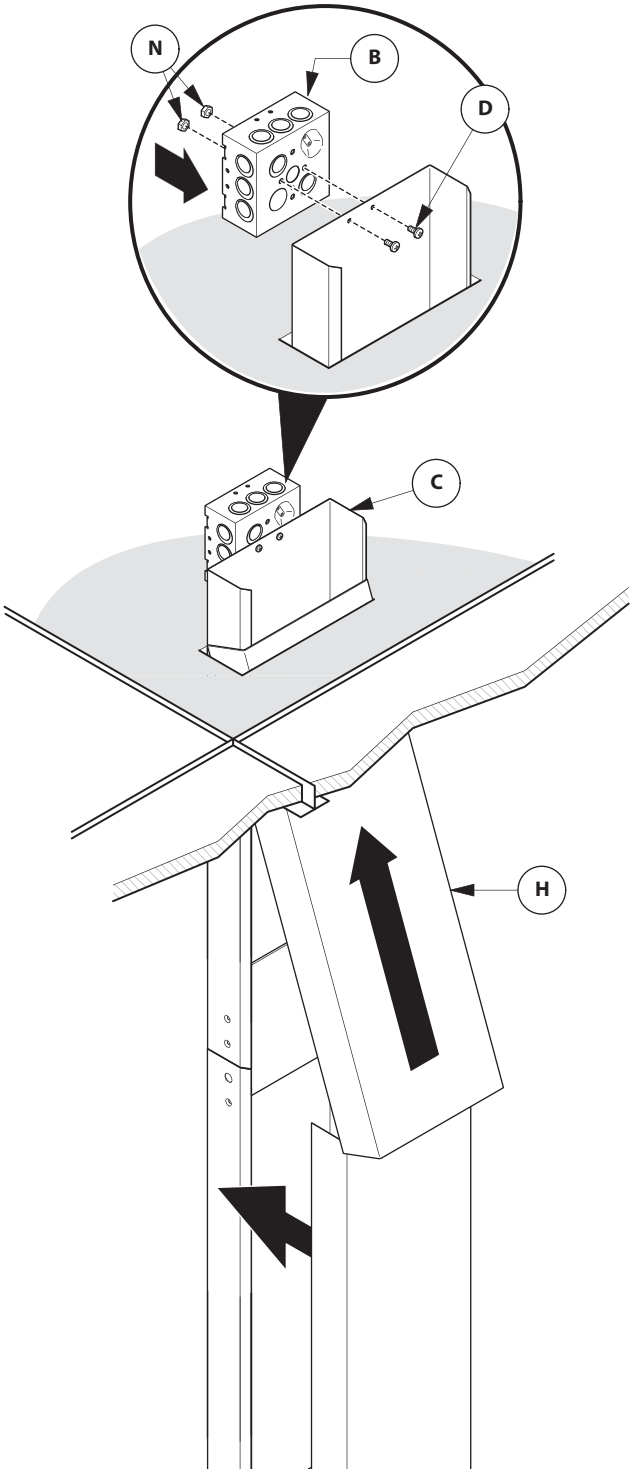



## 7 Install ceiling bezel (F)

(M1) #10-24 x 3/8" Pan Head Screw

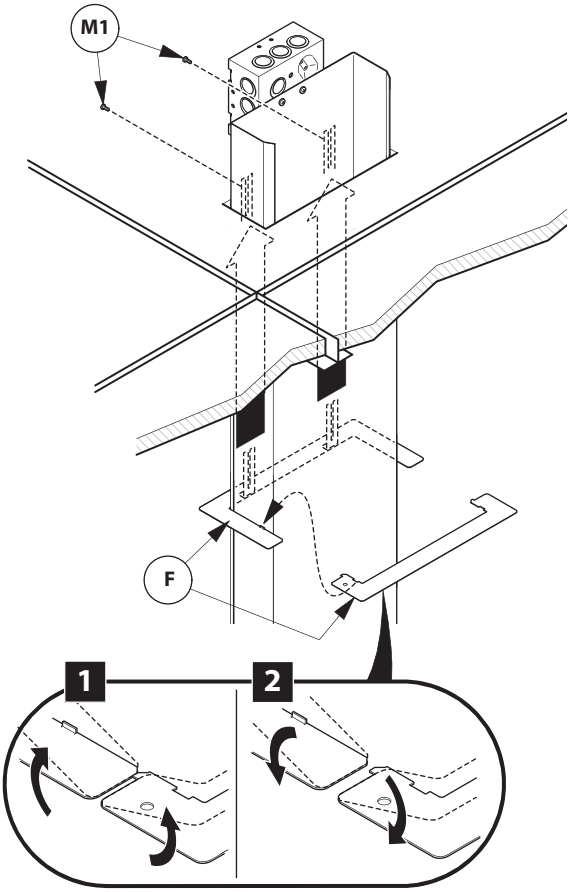



## 8 Install electrical box cover (A)

(C1) #8-32 x 1/4" Screw

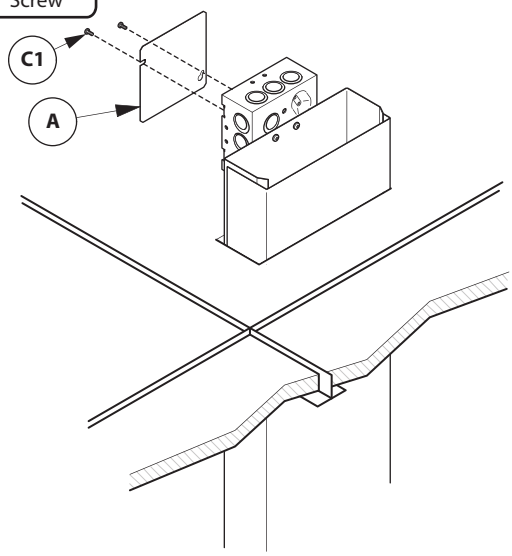



**CUSTOMER SERVICE PHONE: 1-800-426-8562**

**9** **Cut & install grommet (K)**

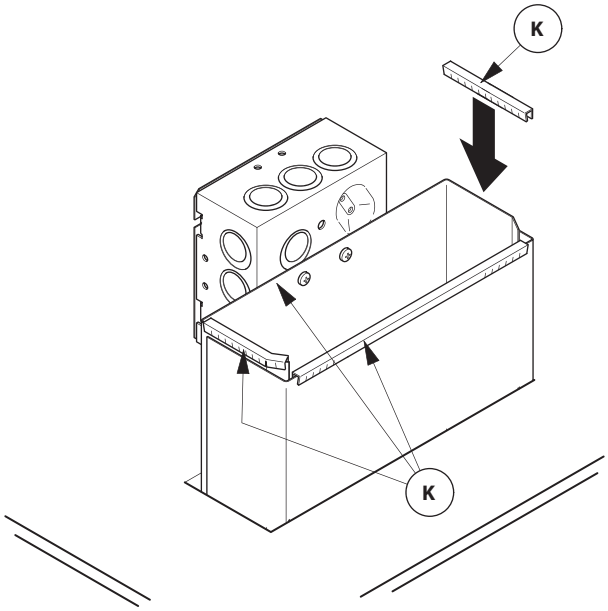


**10** **Tie top feed (H) to building**

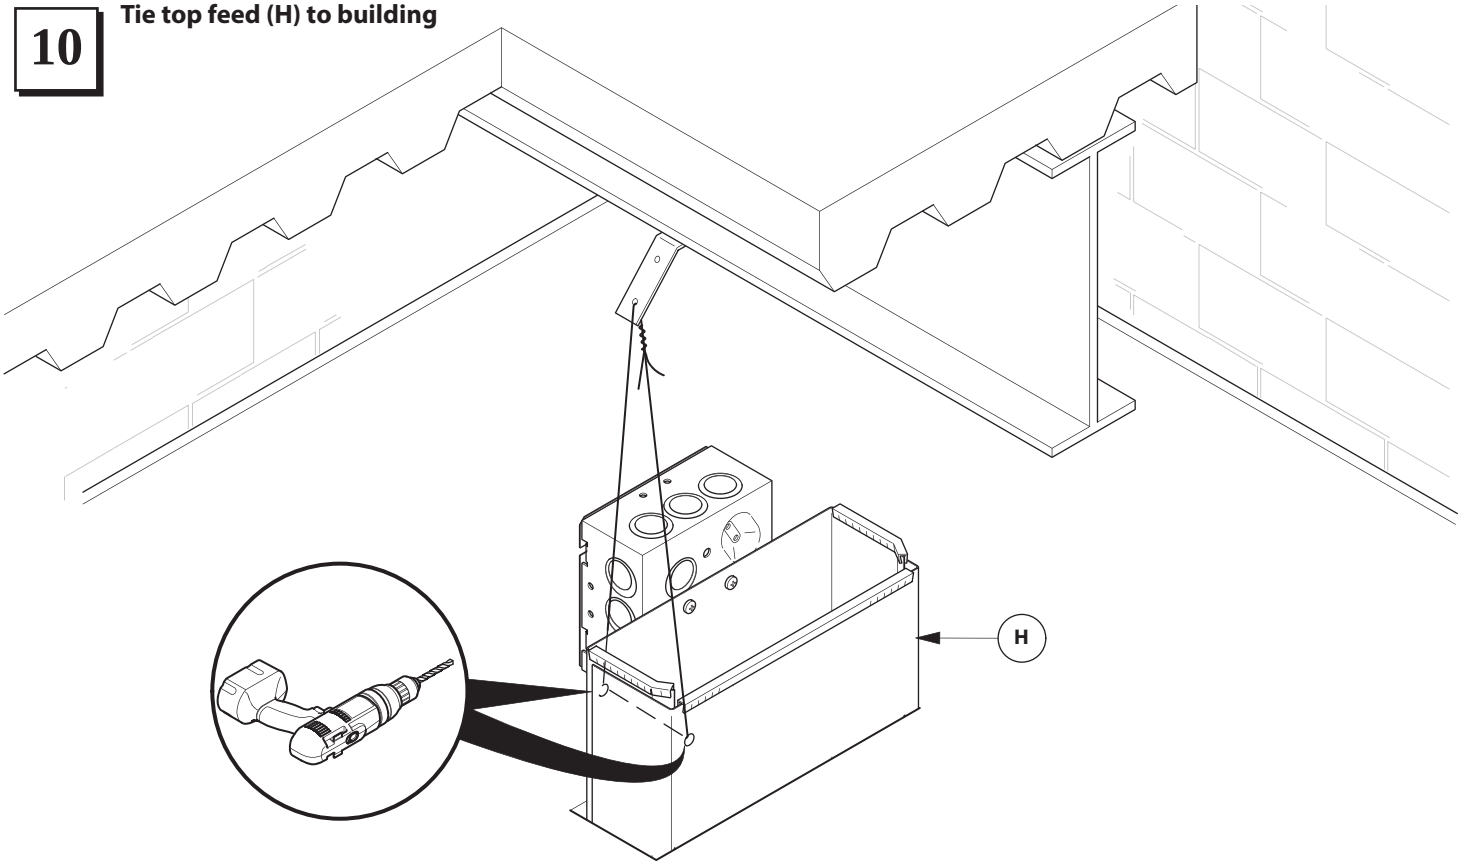


**CUSTOMER SERVICE PHONE: 1-800-426-8562**