

UPSIDE+ 3 LEG TABLES

90° TABLE

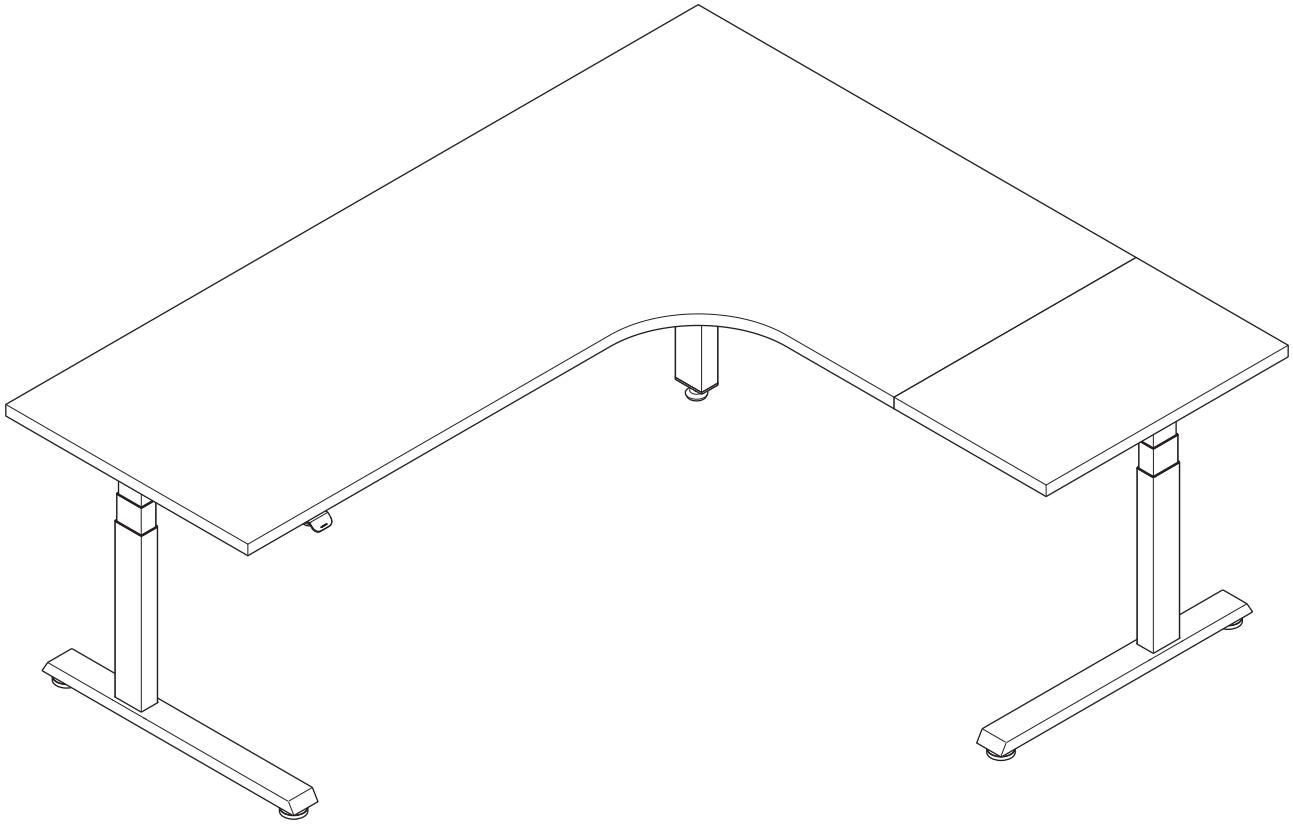

120° TABLE

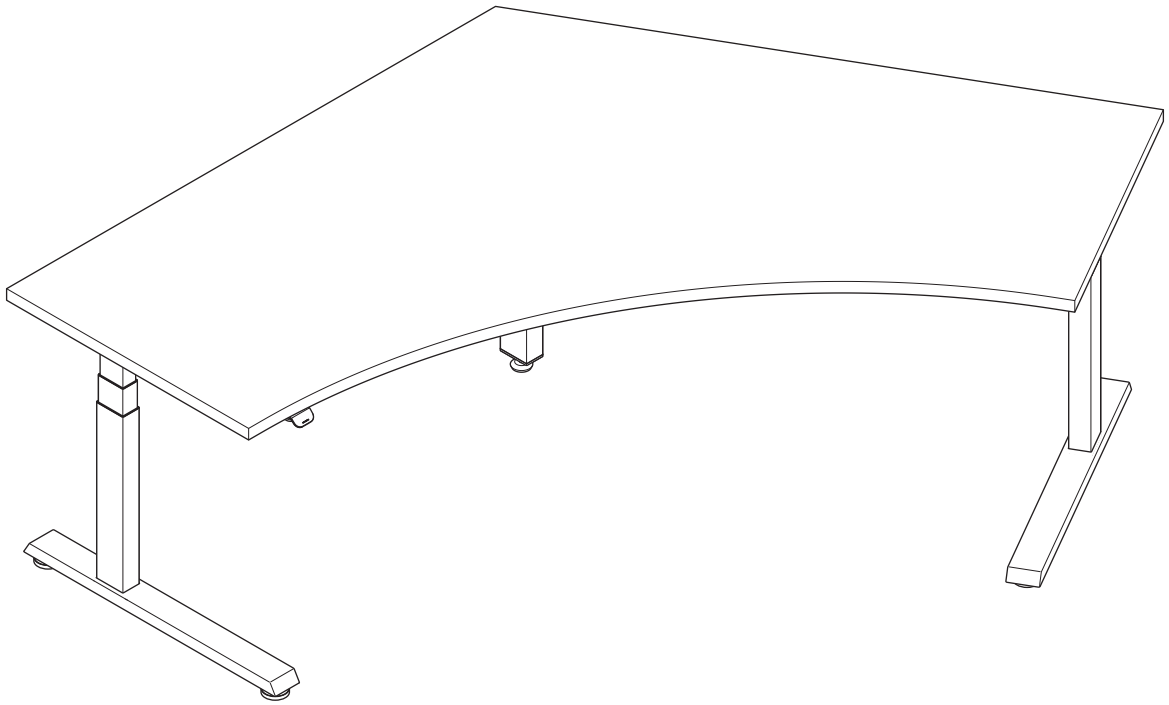

CUSTOMER SERVICE PHONE: 1-800-426-8562

IMPORTANT SAFETY INSTRUCTIONS
For use with UPSIDE+ Electric Height Adjustable Tables, 3 Leg
For Commercial or Household Use Only
This product conforms to UL962 and is certified to CAN/CSA C22.2 No. 68.

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this table.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.
9. **WARNING: RISK OF ELECTRIC SHOCK - CONNECT THIS FURNISHING TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.**
10. **WARNING: RISK OF ELECTRIC SHOCK, FIRE, AND INJURY. REVIEW THE ASSEMBLY INSTRUCTIONS TO CONFIRM THAT THE APPROPRIATE CRITICAL COMPONENTS AND ACCESSORIES ARE BEING USED WITH THE FURNISHING.**

SAVE THESE INSTRUCTIONS


This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see Figure 1). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Maximum Load rating including surface: 330 lbs

Electrical Rating:
120V, 60Hz, 6A for Upside+ 3 leg tables

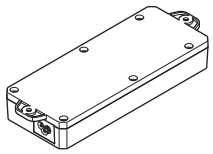

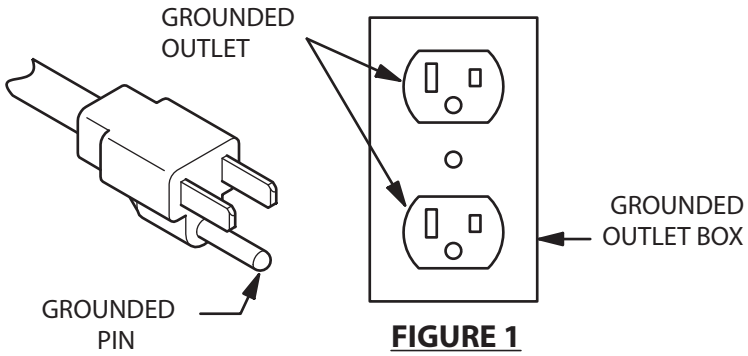



FIGURE 1

CUSTOMER SERVICE PHONE: 1-800-426-8562

UPSIDE®
Height Adjustable Tables, 3 Leg
Installation Instructions


0 1/2 1
1/4 1/4
Scale 1 : 1

Tools Required

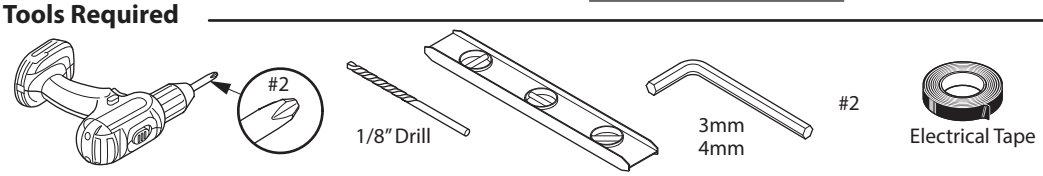


⚠ IMPORTANT!


PRIOR TO FIRST USE, PERFORM A DEFAULT RESET TO SYNCHRONIZE THE MOTORS IN THE COLUMNS (D). SEE DEFAULT RESET INSTRUCTIONS IN THE "OPERATING YOUR UPSIDE HEIGHT-ADJUSTABLE TABLE" SECTION.

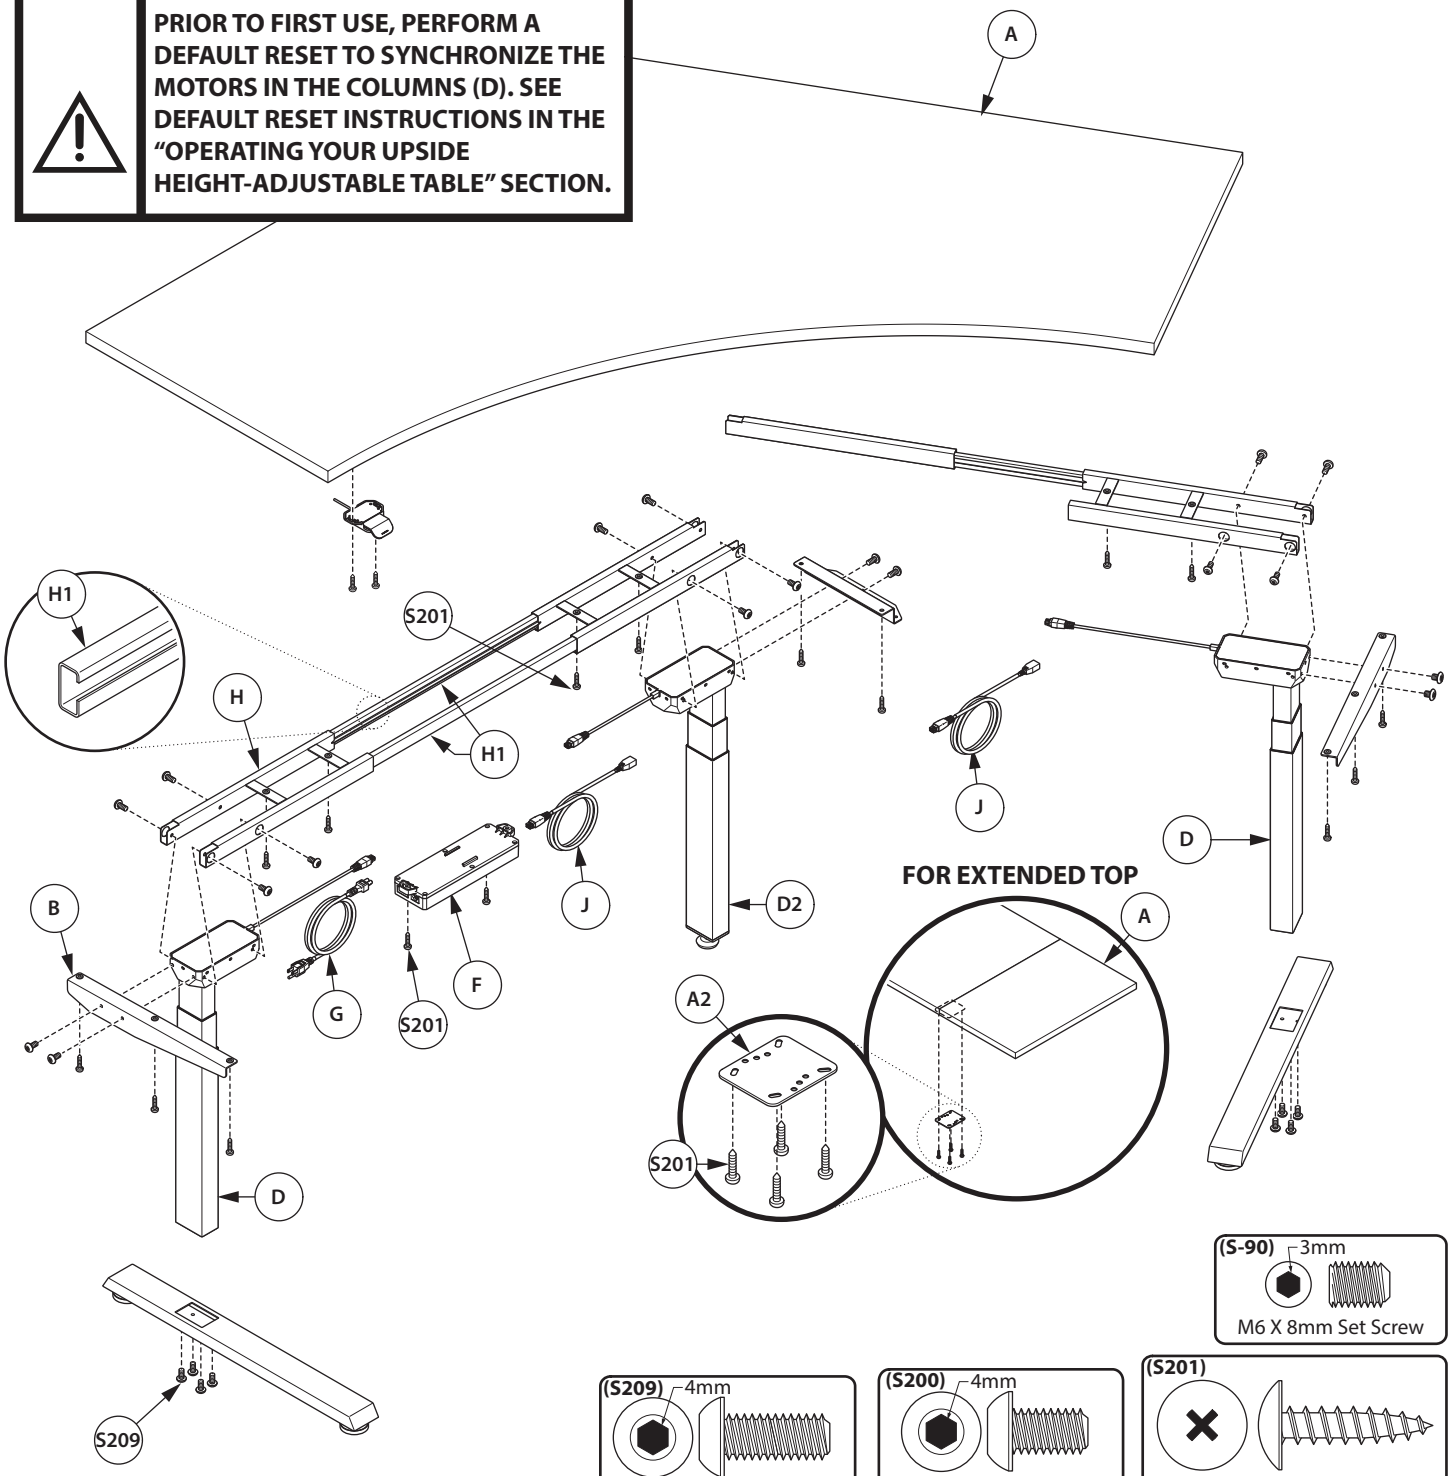



1 **Pull frame (H) off rails (H1) as shown**

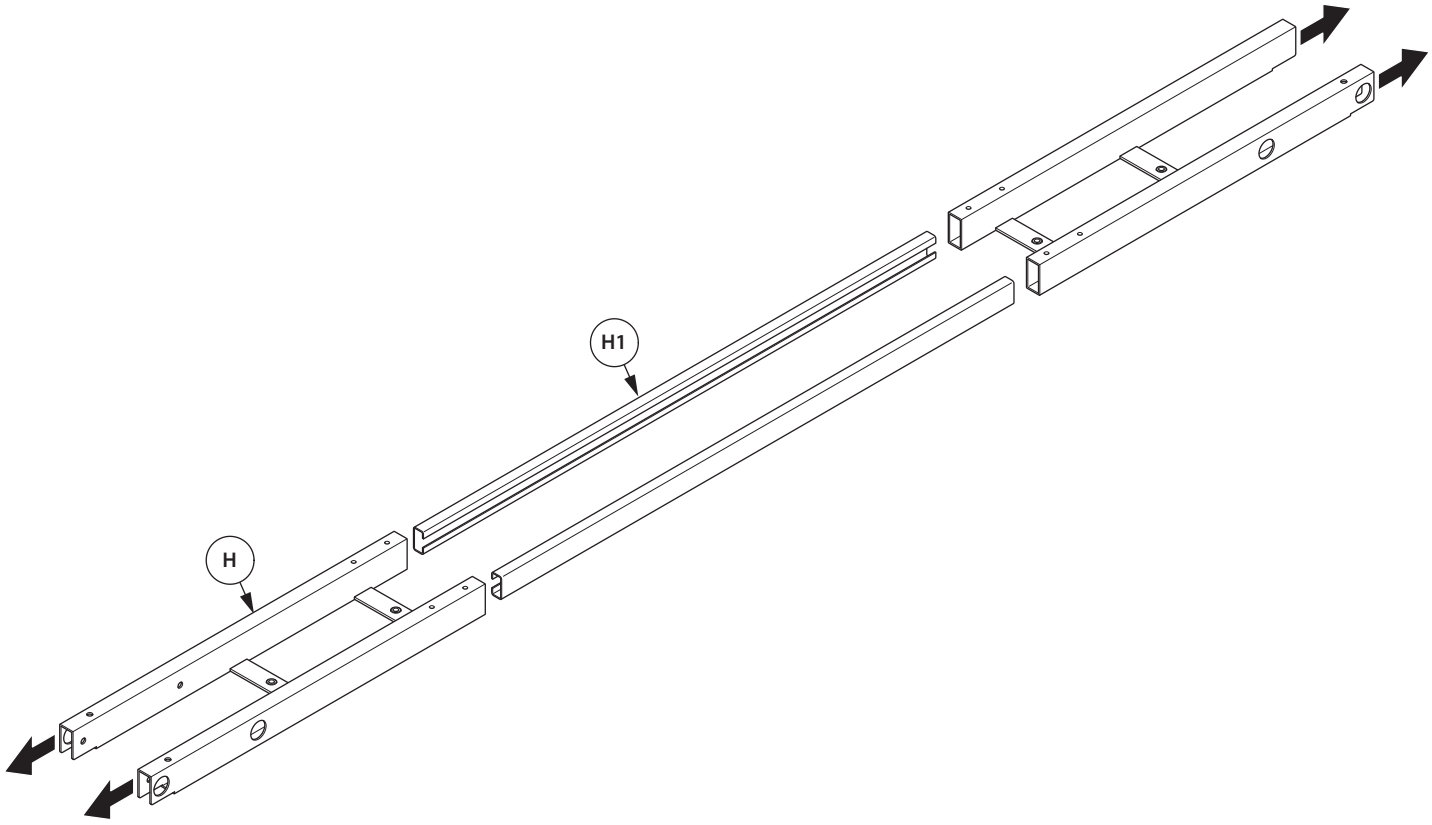

2 Attach column (D) to frame (H) - Slightly lift column to align holes

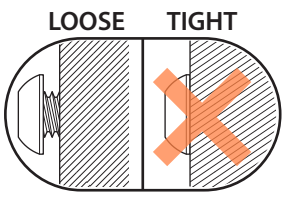


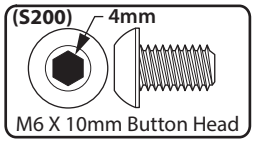

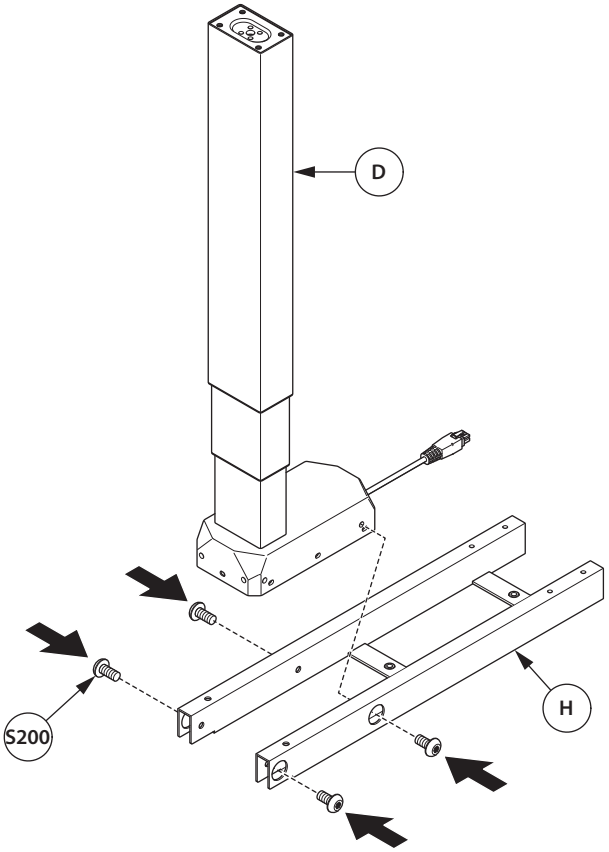



Important


Install screws (S200) LOOSELY

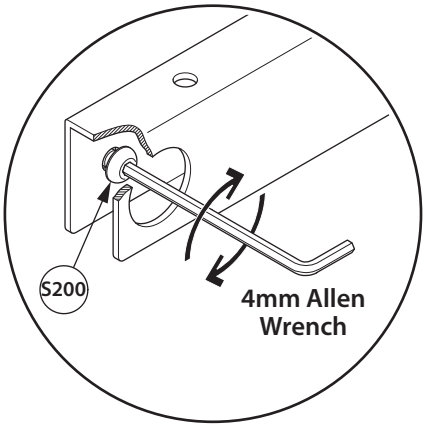

3 Repeat 2nd step 2 to attach 2nd column (D2) to frame (H)

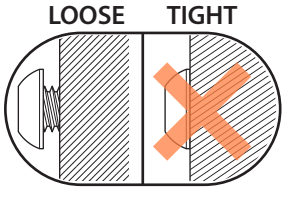


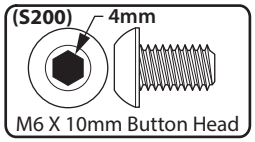

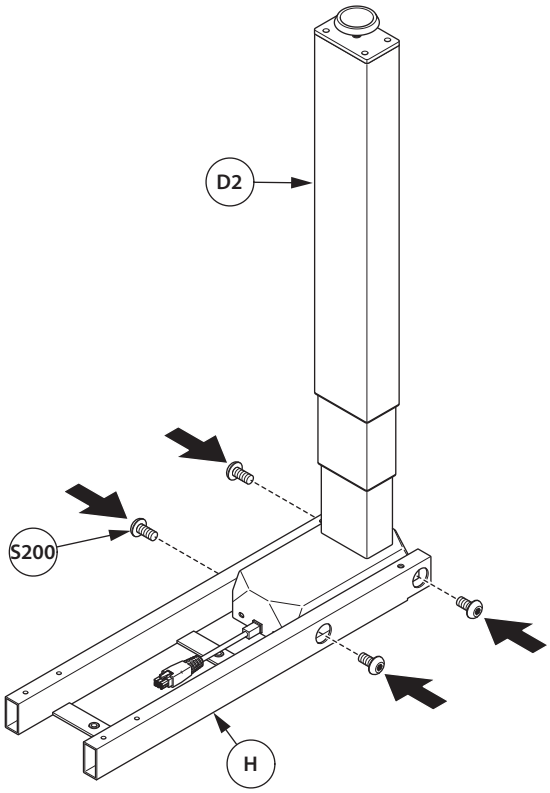

Important


Install screws (S200) LOOSELY

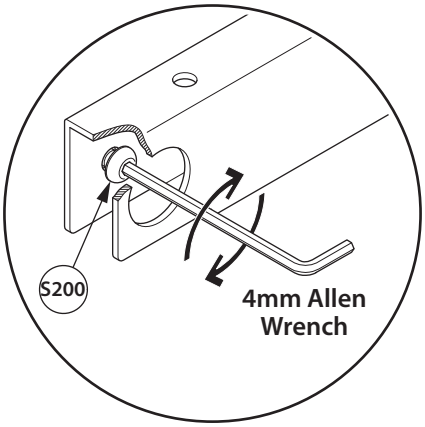


4 Attach bracket (B1) to column (D) - Tilt column (D) and frame (H) slightly to align holes

5 Attach bracket (H3) to column (D2)

6 Repeat step 4 to attach 2nd bracket (B2) to column (D)

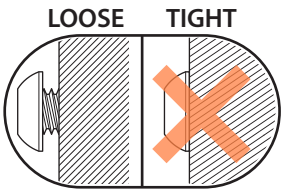

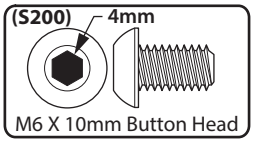


Important


Install screws (S200) LOOSELY



NOTE: Plate **(H3)** attaches to center leg **(D2)** with glide.

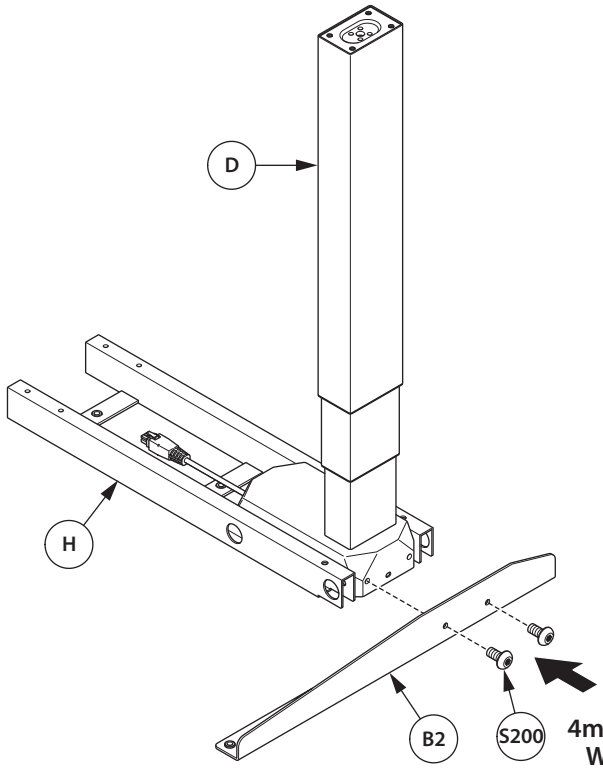



7 Tighten all screws (S200)

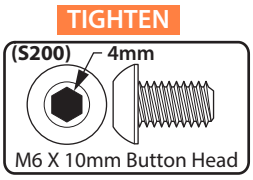



Important


TIGHTEN all screws (S200)

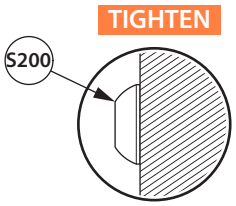

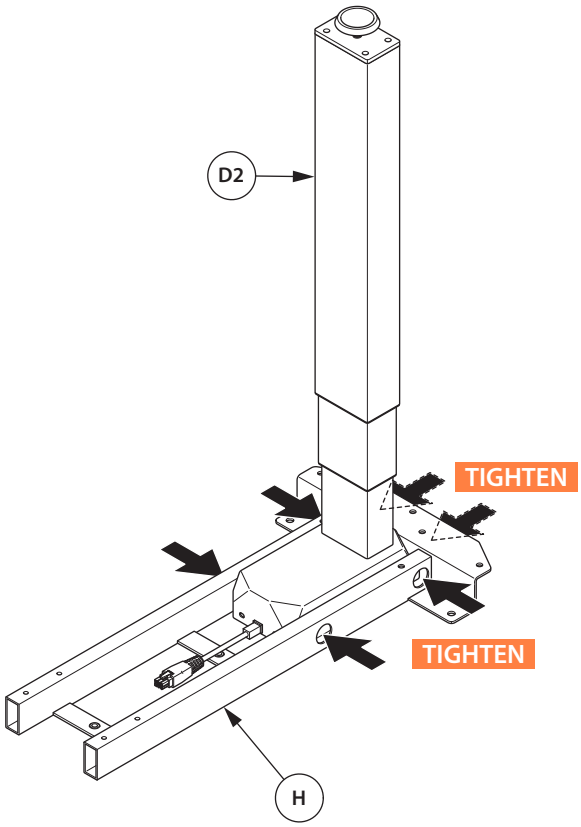


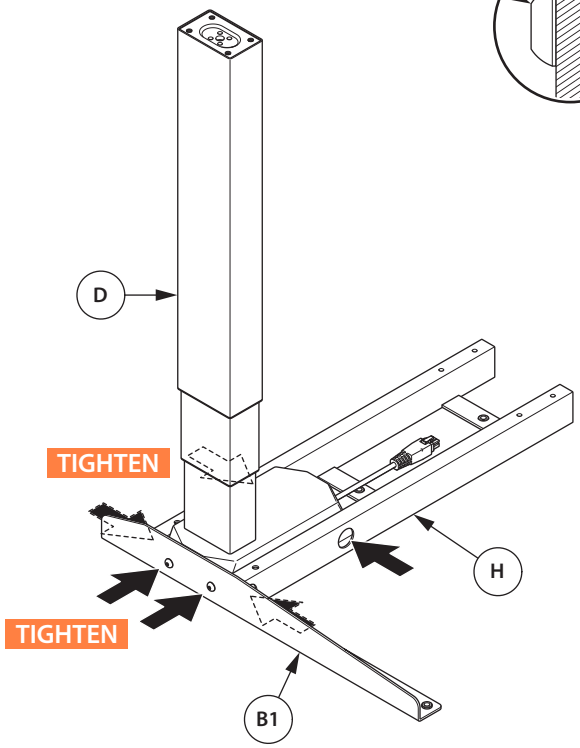

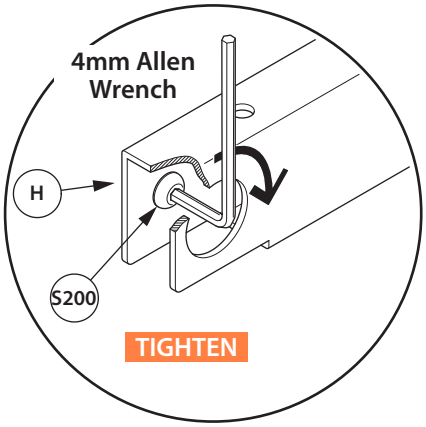


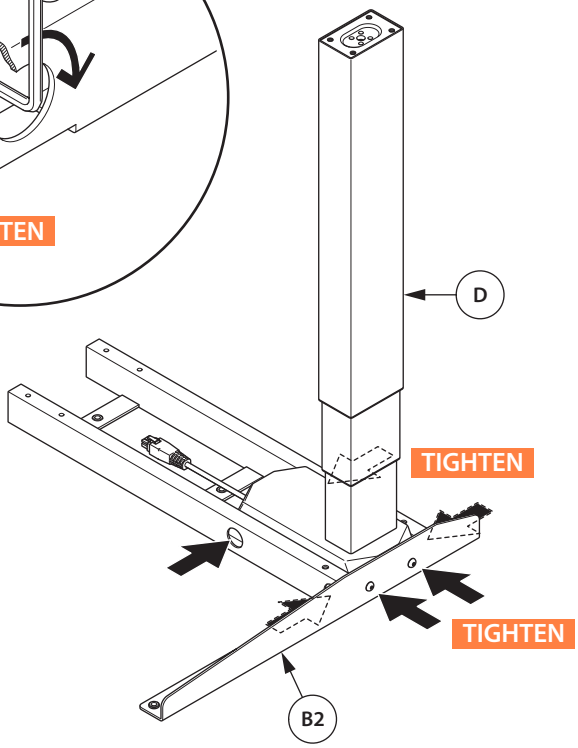


8 Attach frame (H2) to bracket (H3)

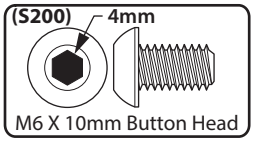


FOR 90° TABLES

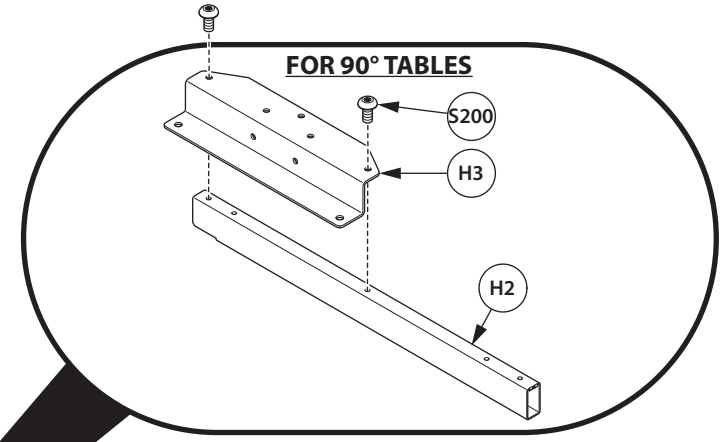


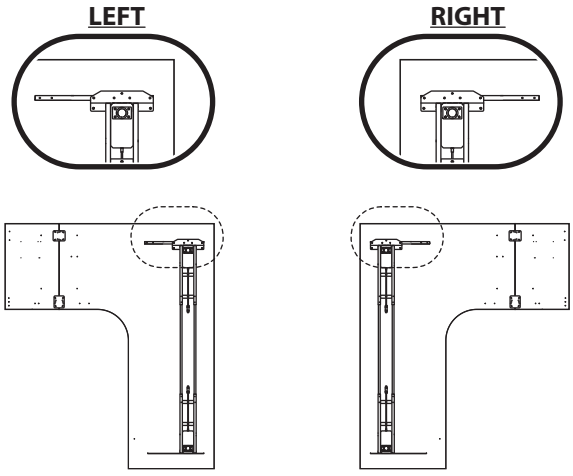


OR


FOR 120° TABLES

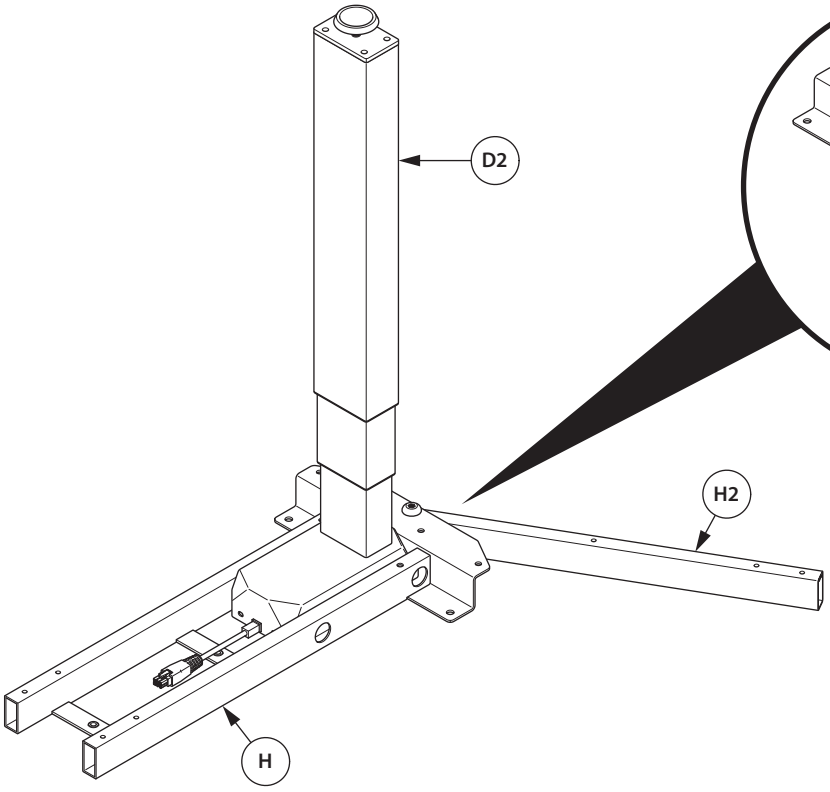


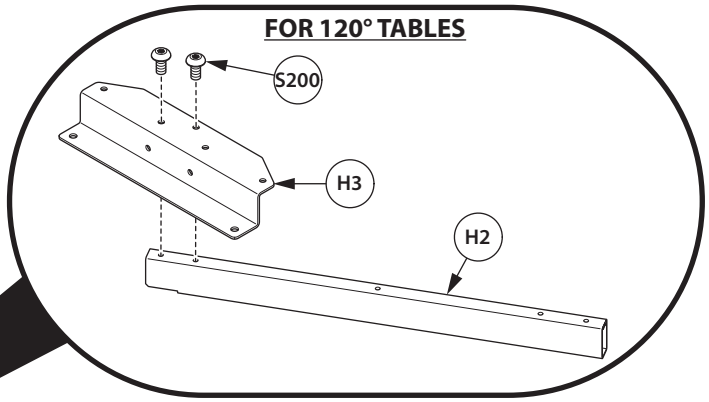


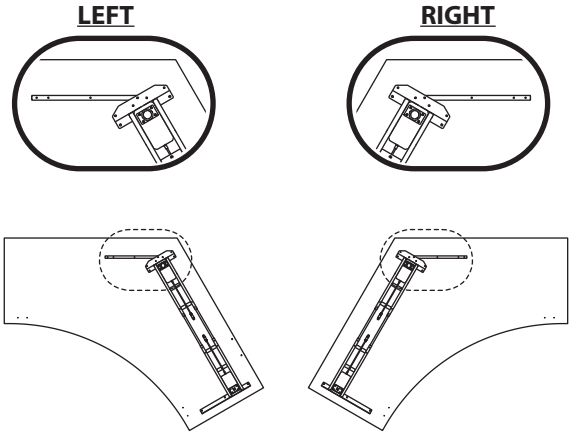

9 Install feet (E) as shown

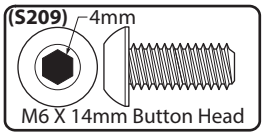


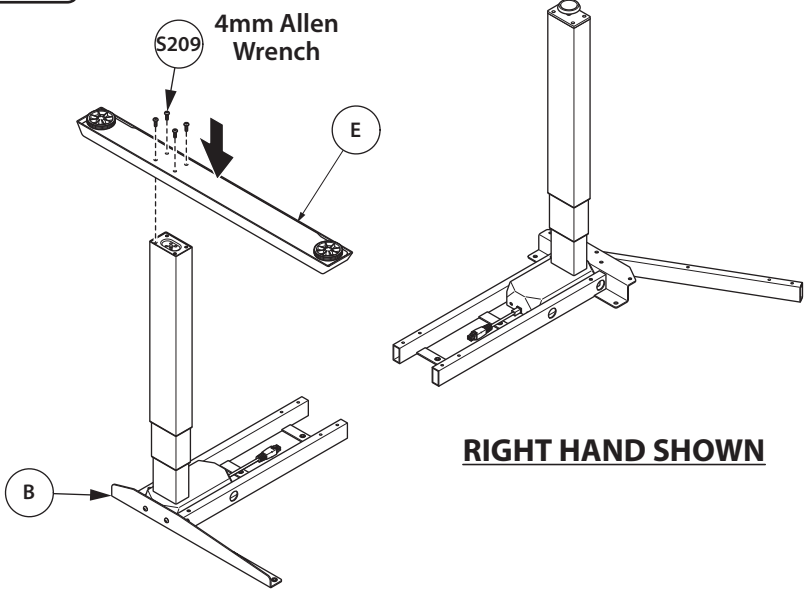

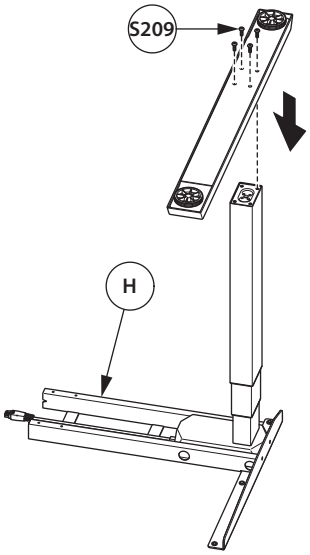

RIGHT HAND SHOWN

10 Flip frame assembly to feet and slide rail (H1) and frames (H) & (H2) together

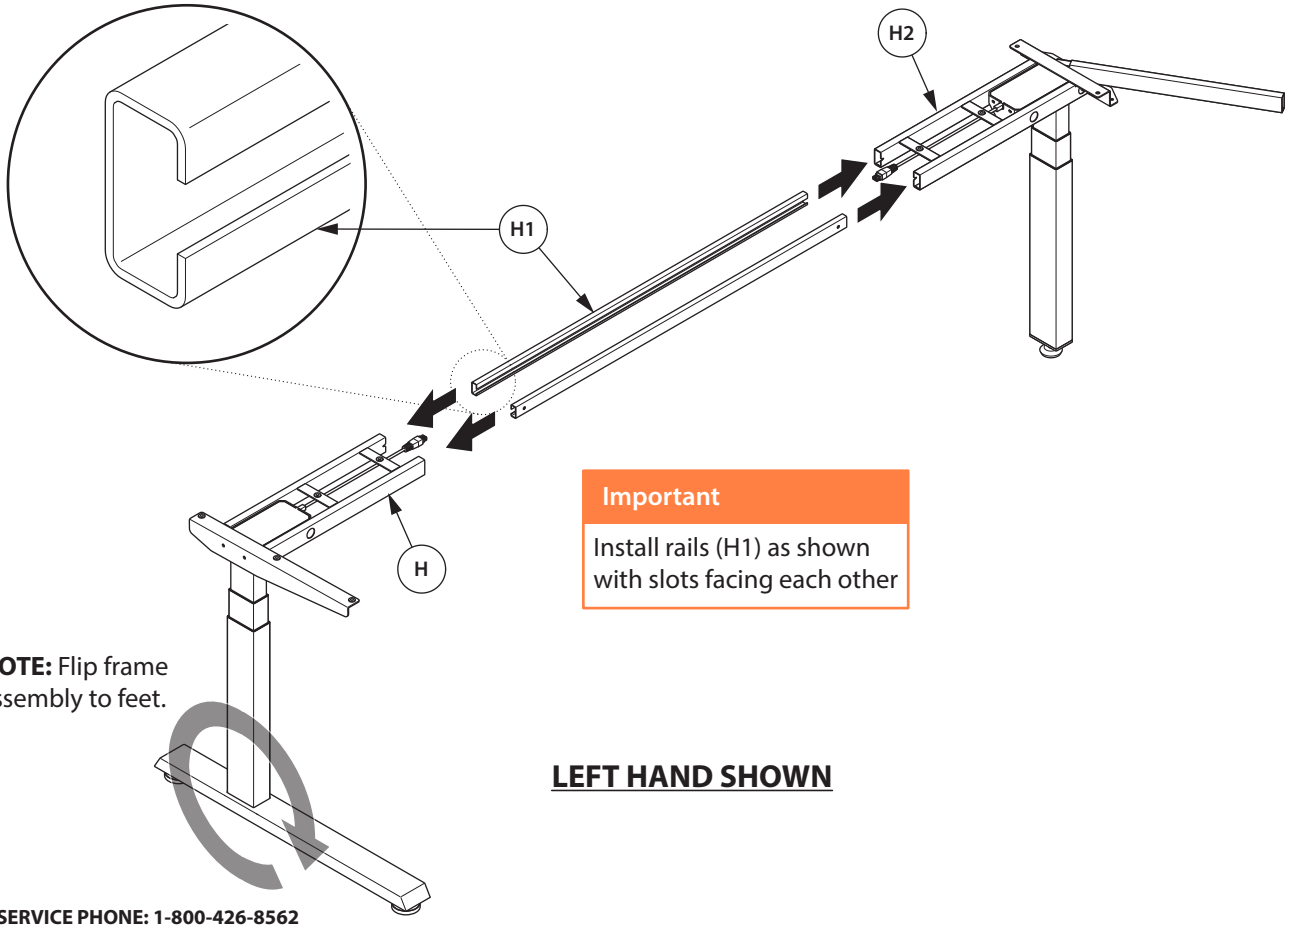

Important

Install rails (H1) as shown with slots facing each other


NOTE: Flip frame assembly to feet.

LEFT HAND SHOWN

11 Slide rail (H1) and frames (H) & (H2) together


Important

Install rail (H1) as shown with slot facing inward

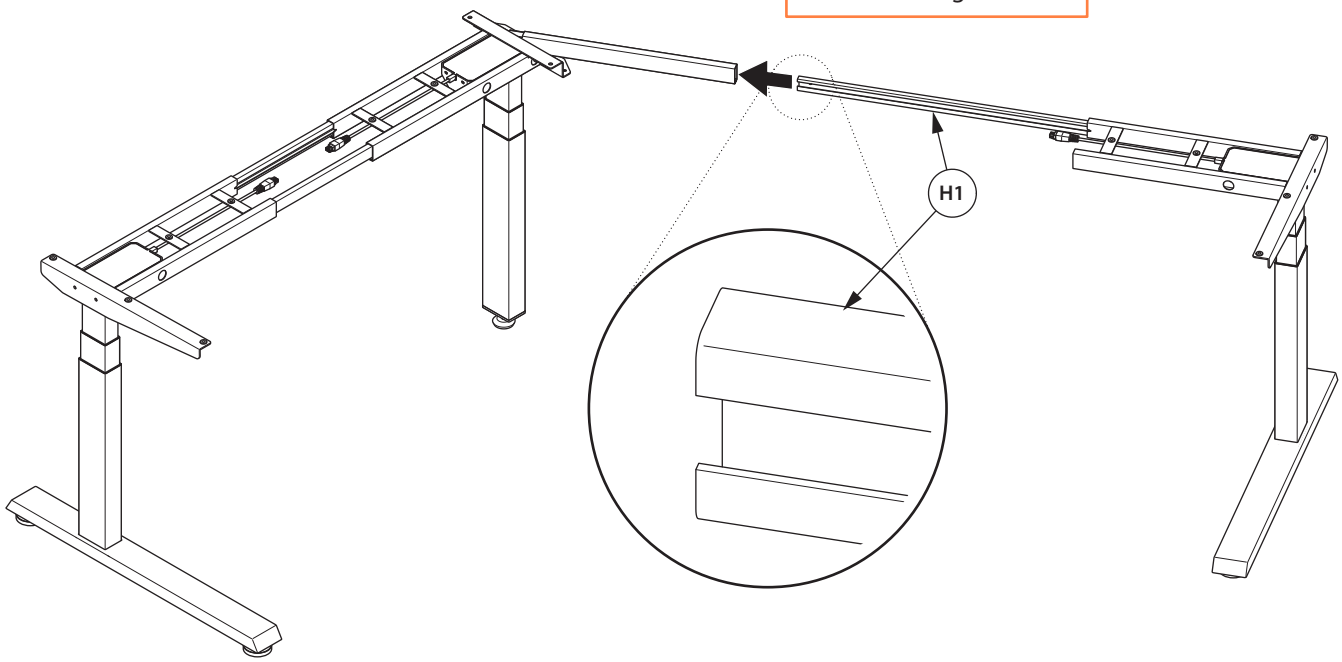


12 Attach frame (H) to desk top (A) - Align holes in brackets (B) with holes in desk top (A)

(S201)

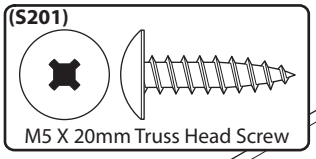



M5 X 20mm Truss Head Screw

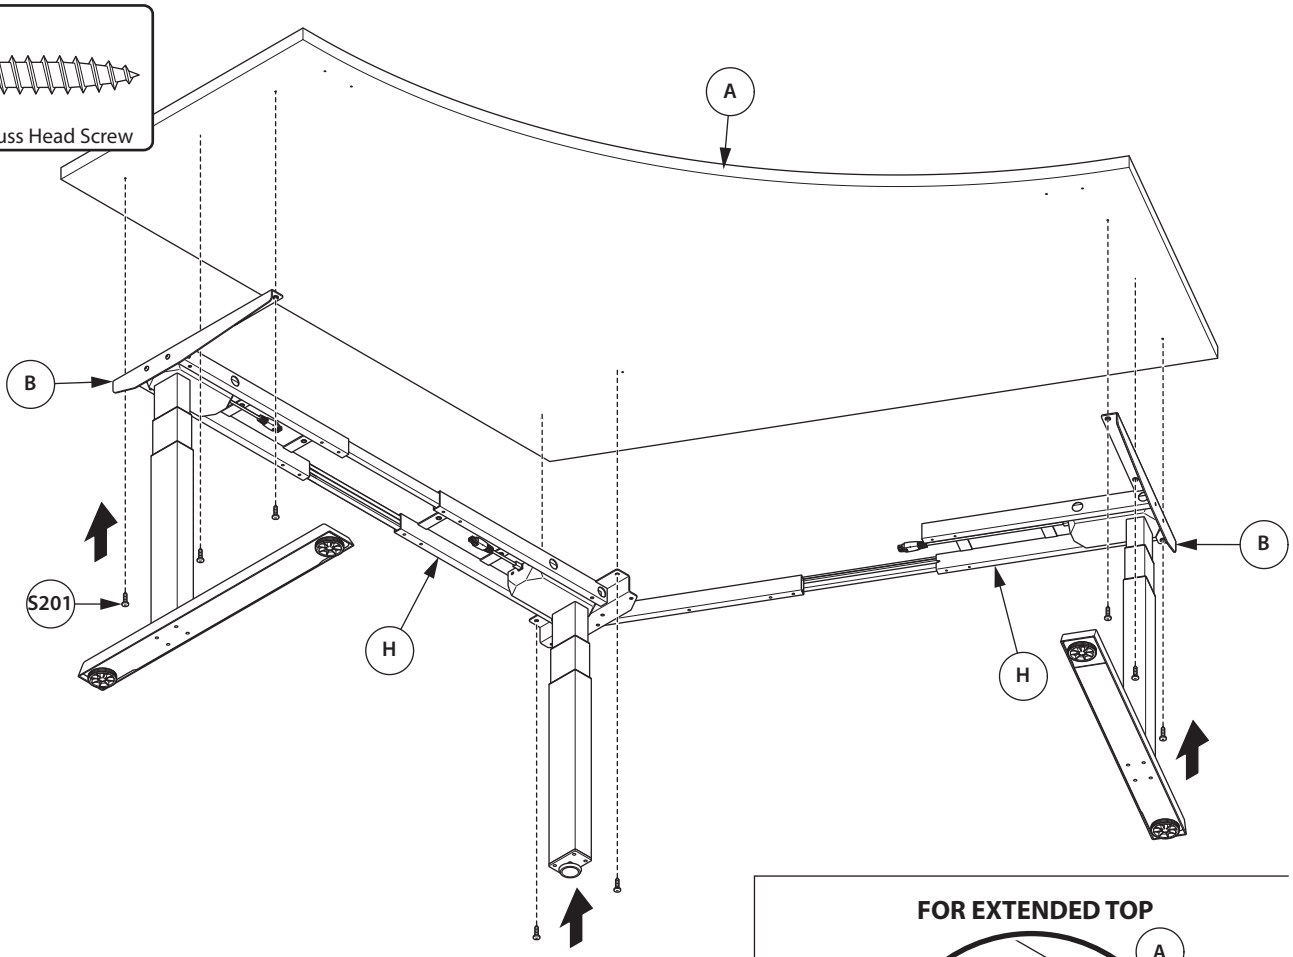


FOR EXTENDED TOPS

FOR EXTENDED TOP

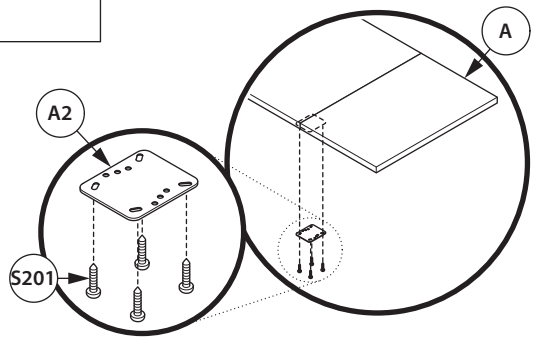

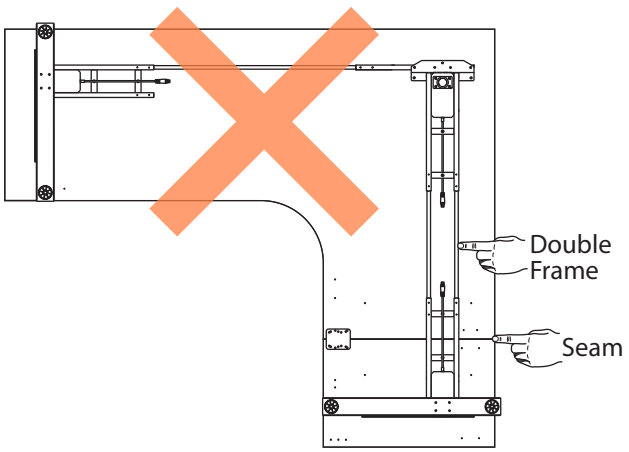


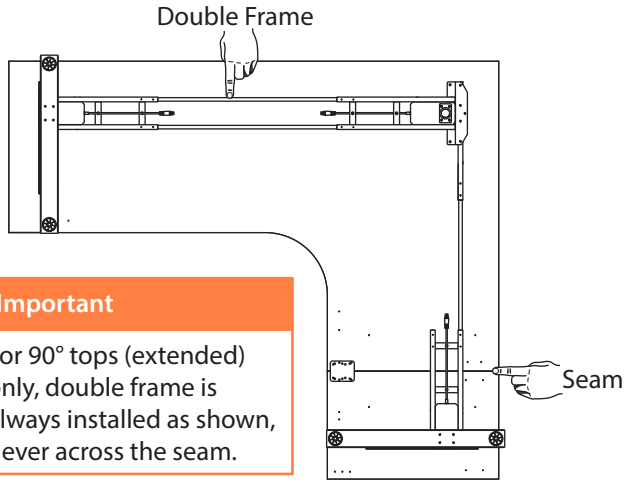


Important

For 90° tops (extended) only, double frame is always installed as shown, never across the seam.

13 Install 6 screws (S201) as shown

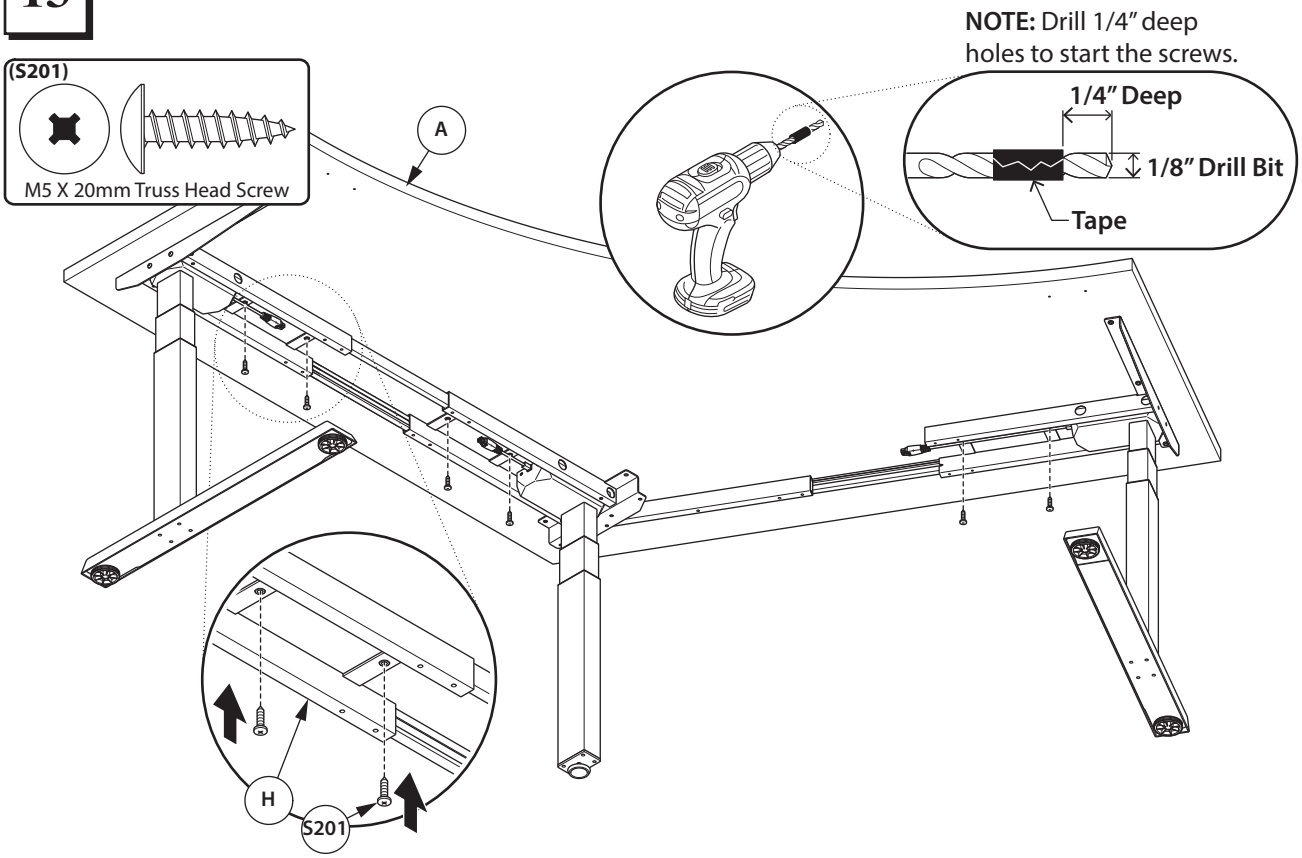


14 Install 12 set screws (S-90) as shown

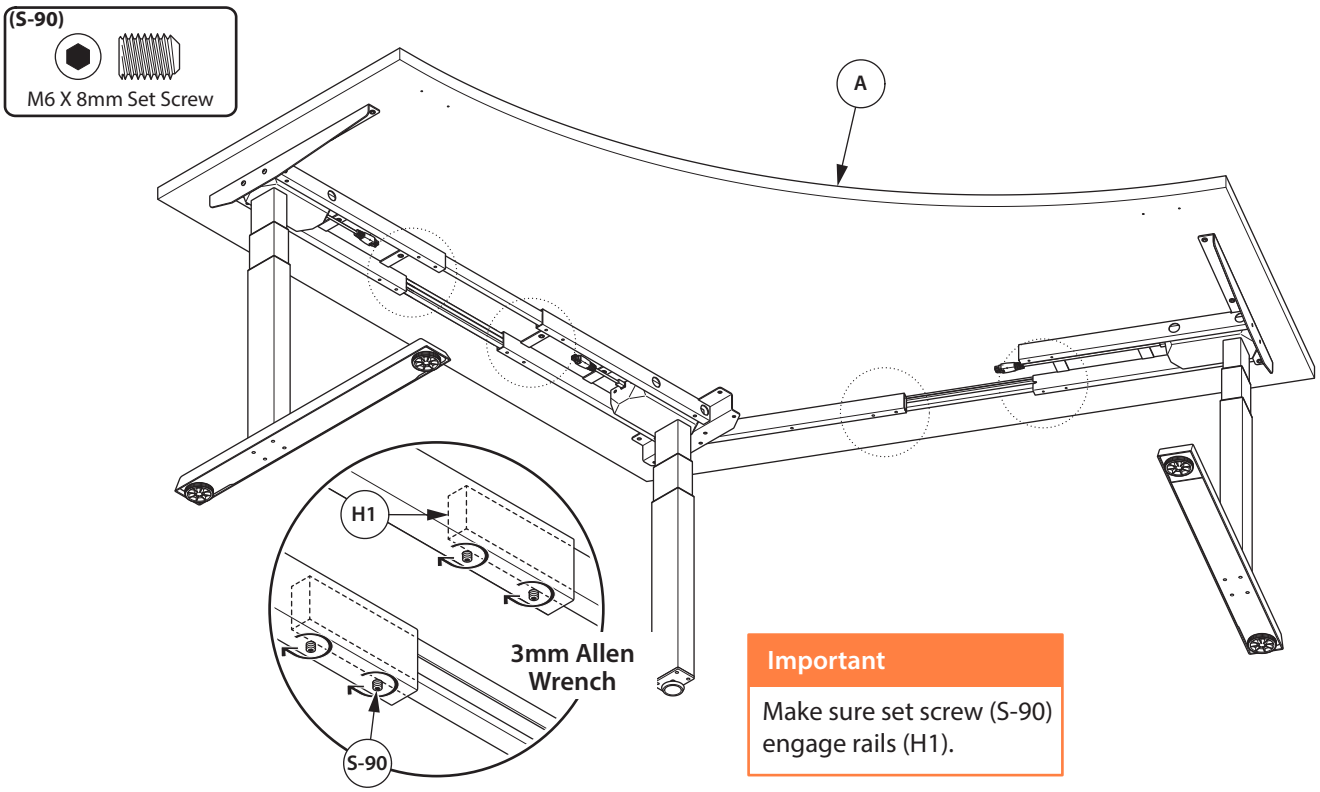

Important

Make sure set screw (S-90) engage rails (H1).


15 Install control box (F) as shown

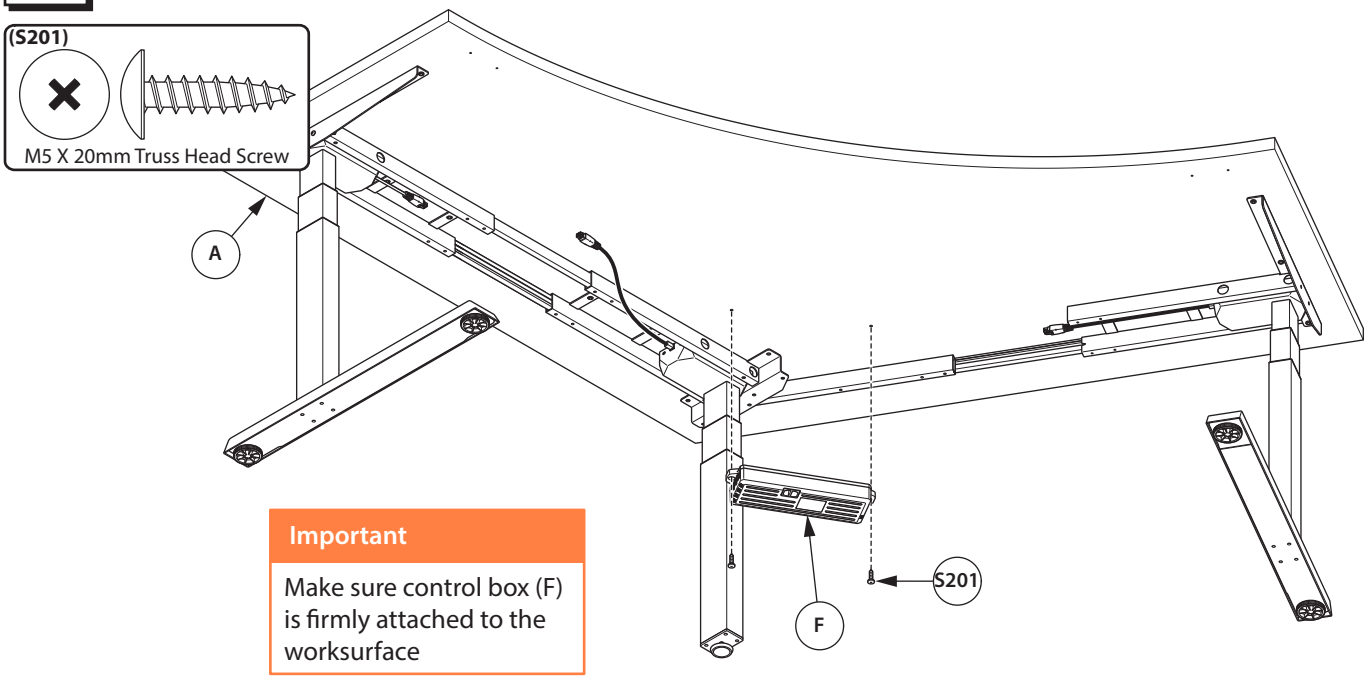


Important

Make sure control box (F) is firmly attached to the worksurface

16 Plug motor extension cable (J) column (D) as shown

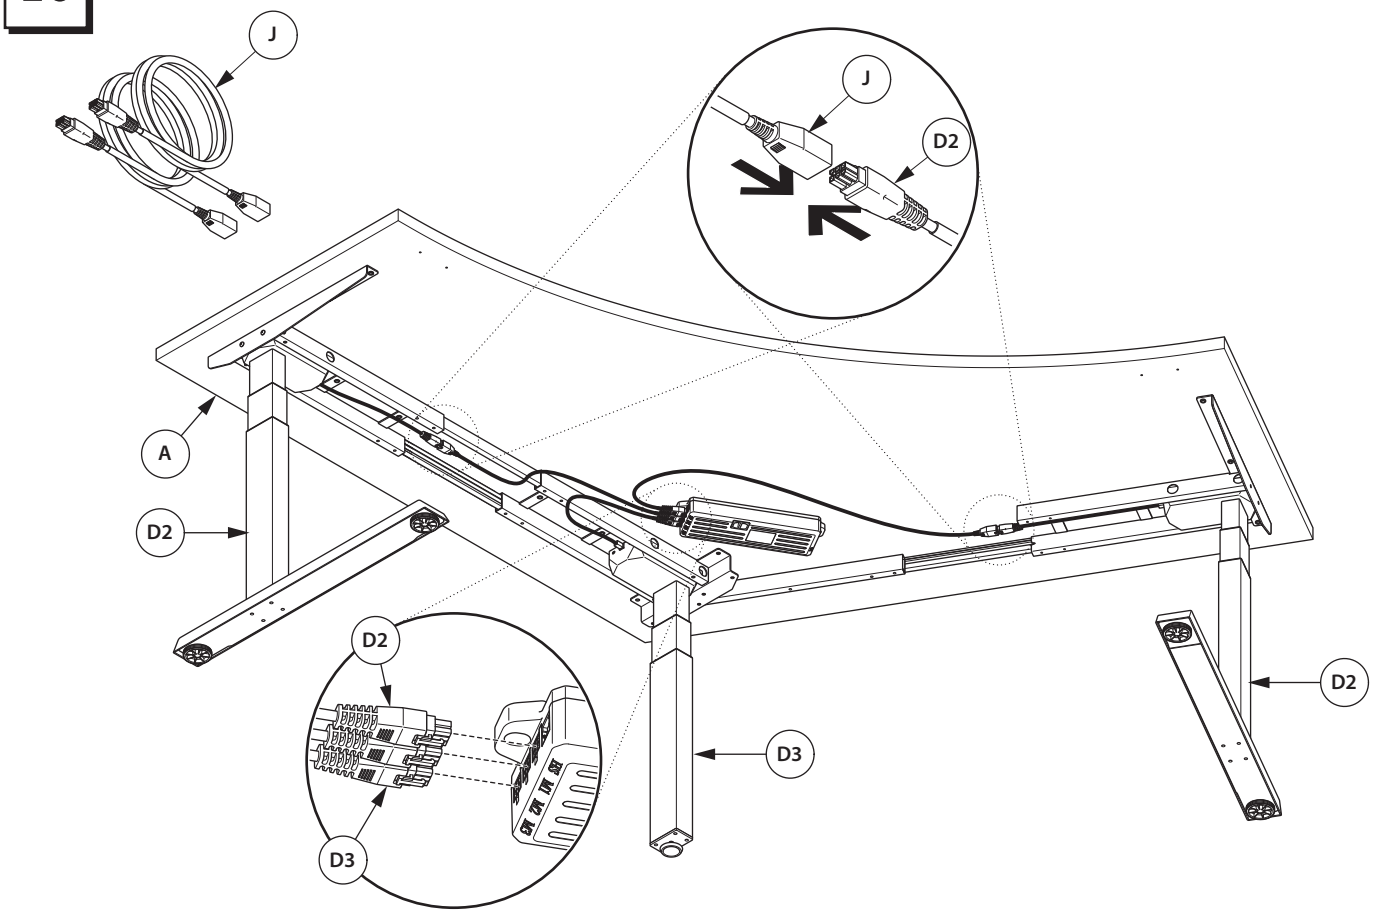


17 Plug power cable (G) into control box (F) as shown

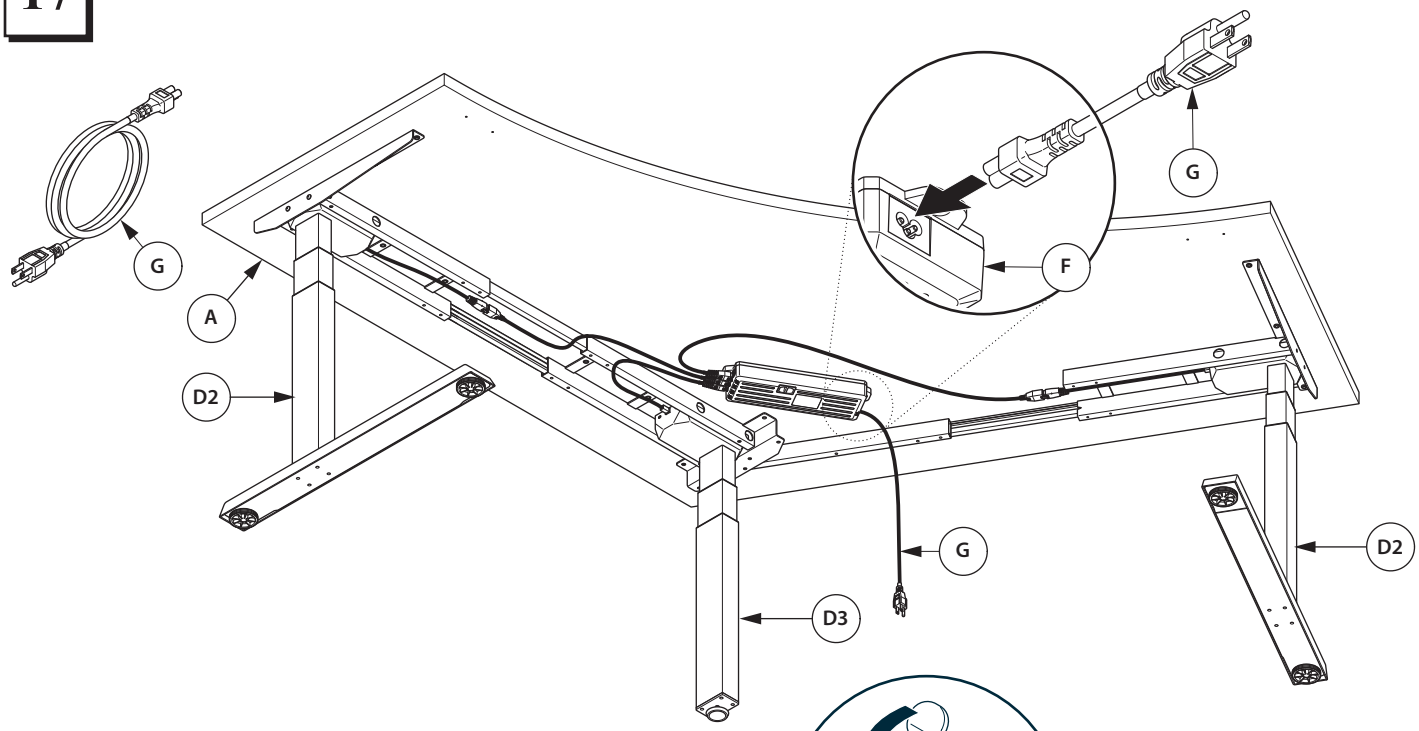


18 Install paddle handset (C)

(S201)

M5 X 20mm Truss Head Screw

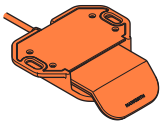

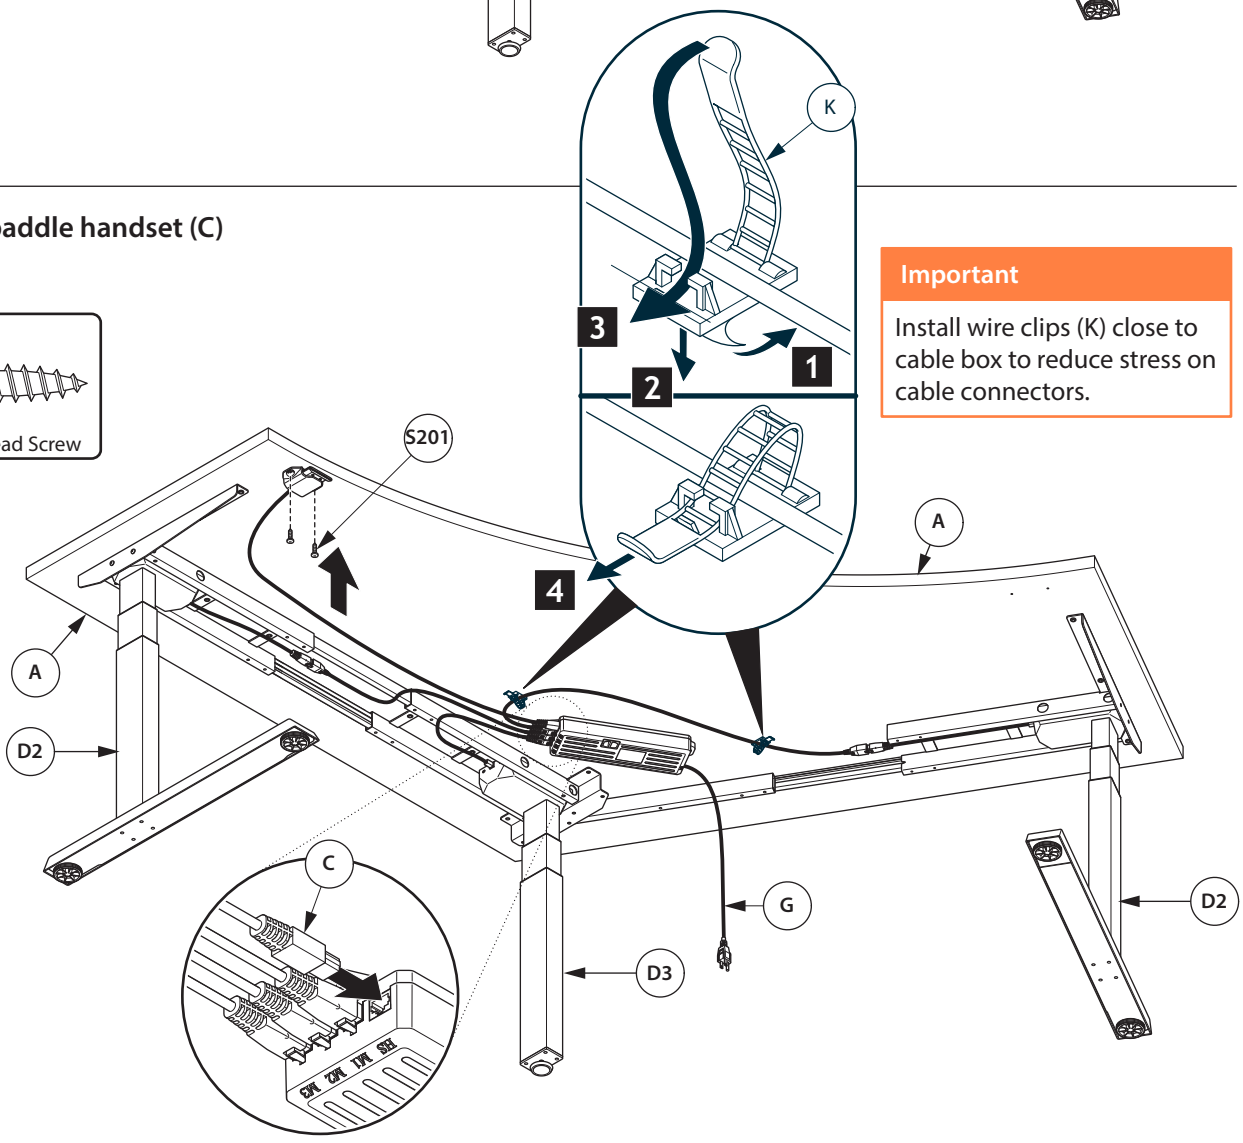


Important

Install wire clips (K) close to cable box to reduce stress on cable connectors.

SYNCHRONIZE DESK


19 **Lower desk all the way down using paddle handset (C)**

NOTE: This PAGE is for this paddle shown.

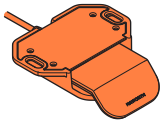

Important


Prior to first use, synchronize the motors in the columns (D)

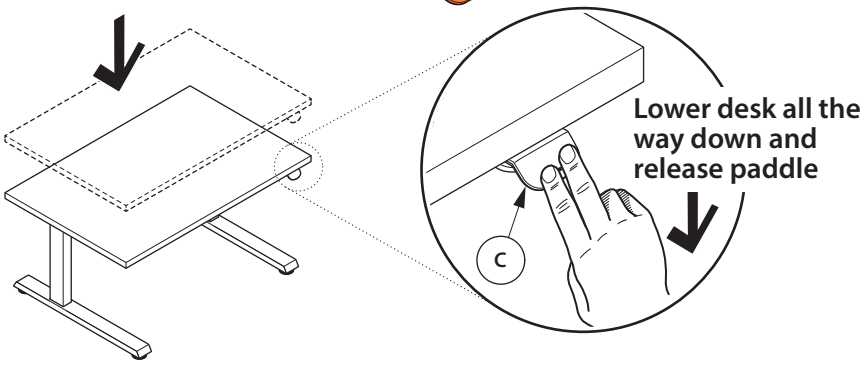

- If table is already at lowest position skip to step 20.
- If table will not go up or down, hold down paddle until desk reaches its lowest point and moves up slightly.
- If table will go down but not up, repeat step 20.

---

20 **Lower desk all the way down using paddle handset (C)**

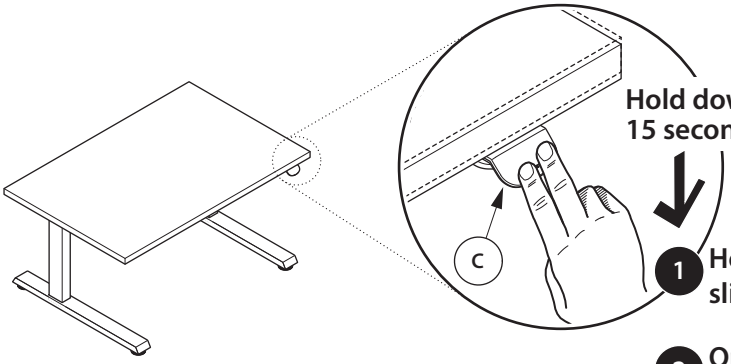

Hold down for 15 seconds



NOTE: Desk must be synchronized prior to first use, monthly to maintain synchronization, every time power is interrupted, and any time a cable, plug or paddle is plugged into the control box.

1. Hold down until desk slightly moves back up.
2. Once desk slightly moves up, release.
3. Your desk has synchronized and is ready to be used.

- If the process has been completed and the desk did not move up slightly when synchronization was complete, wait 30 minutes and try again, holding the paddle for 20 seconds instead of 15.
- If it still does not reset, unplug desk for 30 minutes, then plug it back in and go through steps 19-20 again.

21

Be sure to synchronize your desk as noted below to keep it calibrated and functioning properly.

1) Before first use

2) After any cables/cords are disconnected/reconnected or after servicing any component (swapping out paddles, disconnecting/reconnecting the cables/cords, etc.)

3) After any interruption in power or loss of power (or any time the power cord is unplugged from the outlet and plugged back in)

4) Monthly to maintain optimum desk performance