

Section 7 - Accessories


Tray

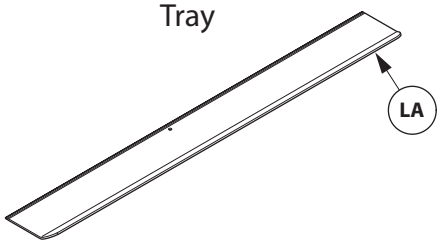


Ledge

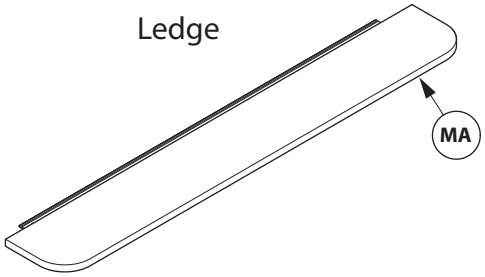


Spanning Top
(Full)

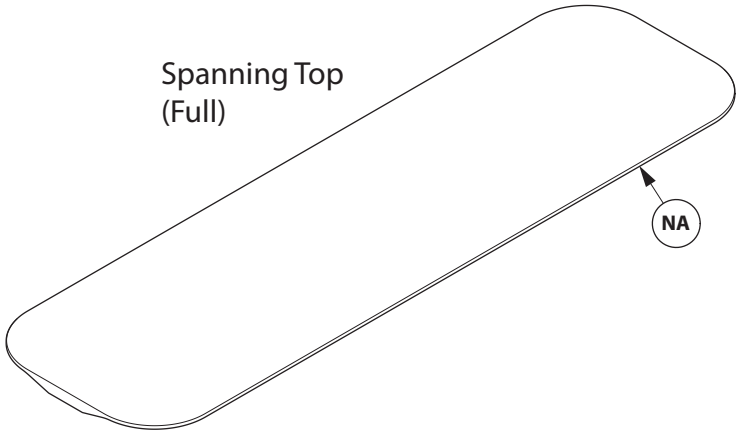


Spanning Top
(Half)

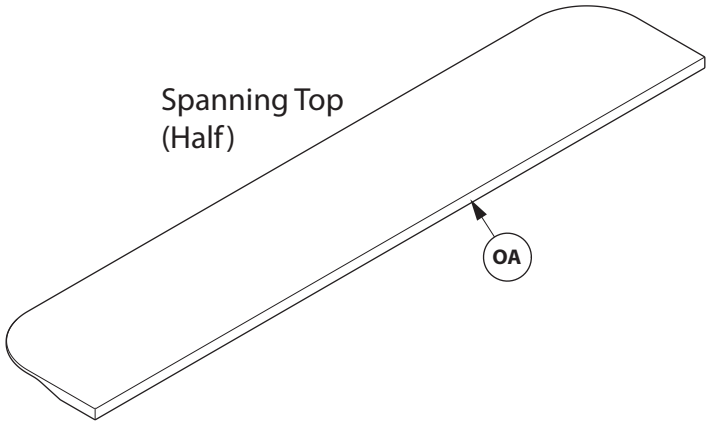

Coat Hanger

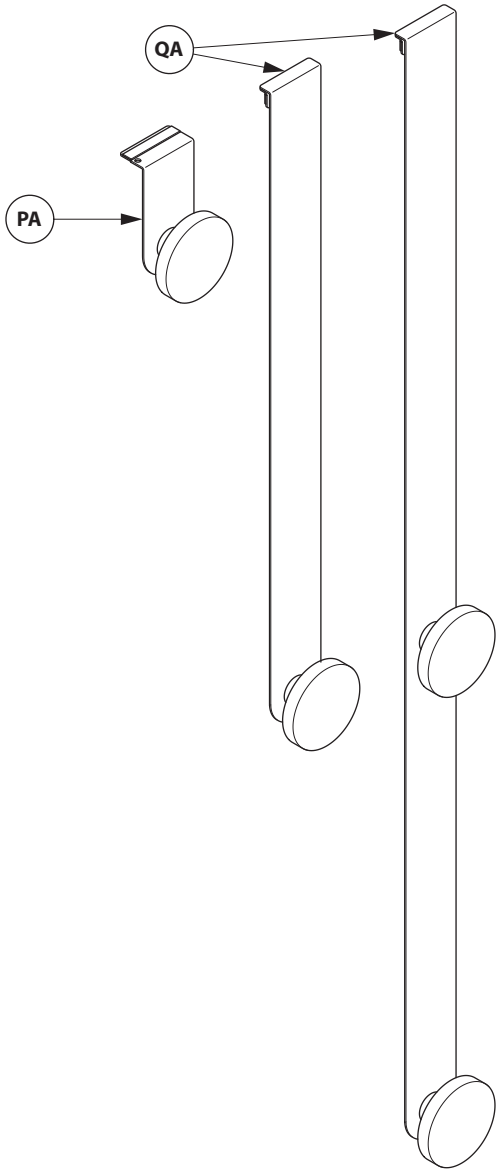


TV Mount (Workware)

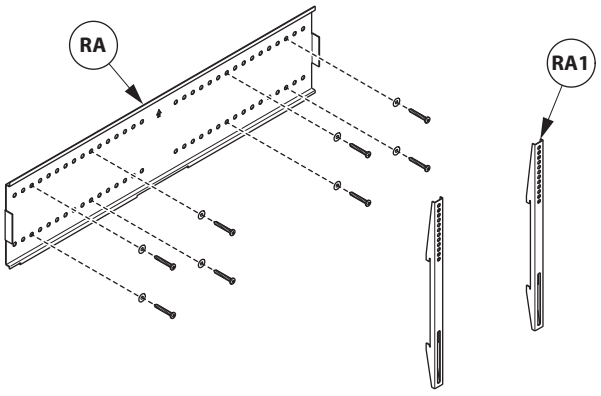



Tray or Ledge Installation

Horizontal Tile Rail - Tile

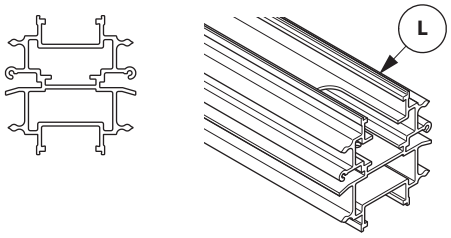

Horizontal Tile-Insert Rail

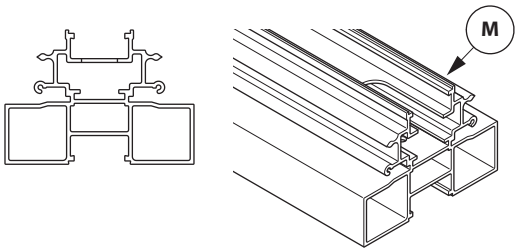


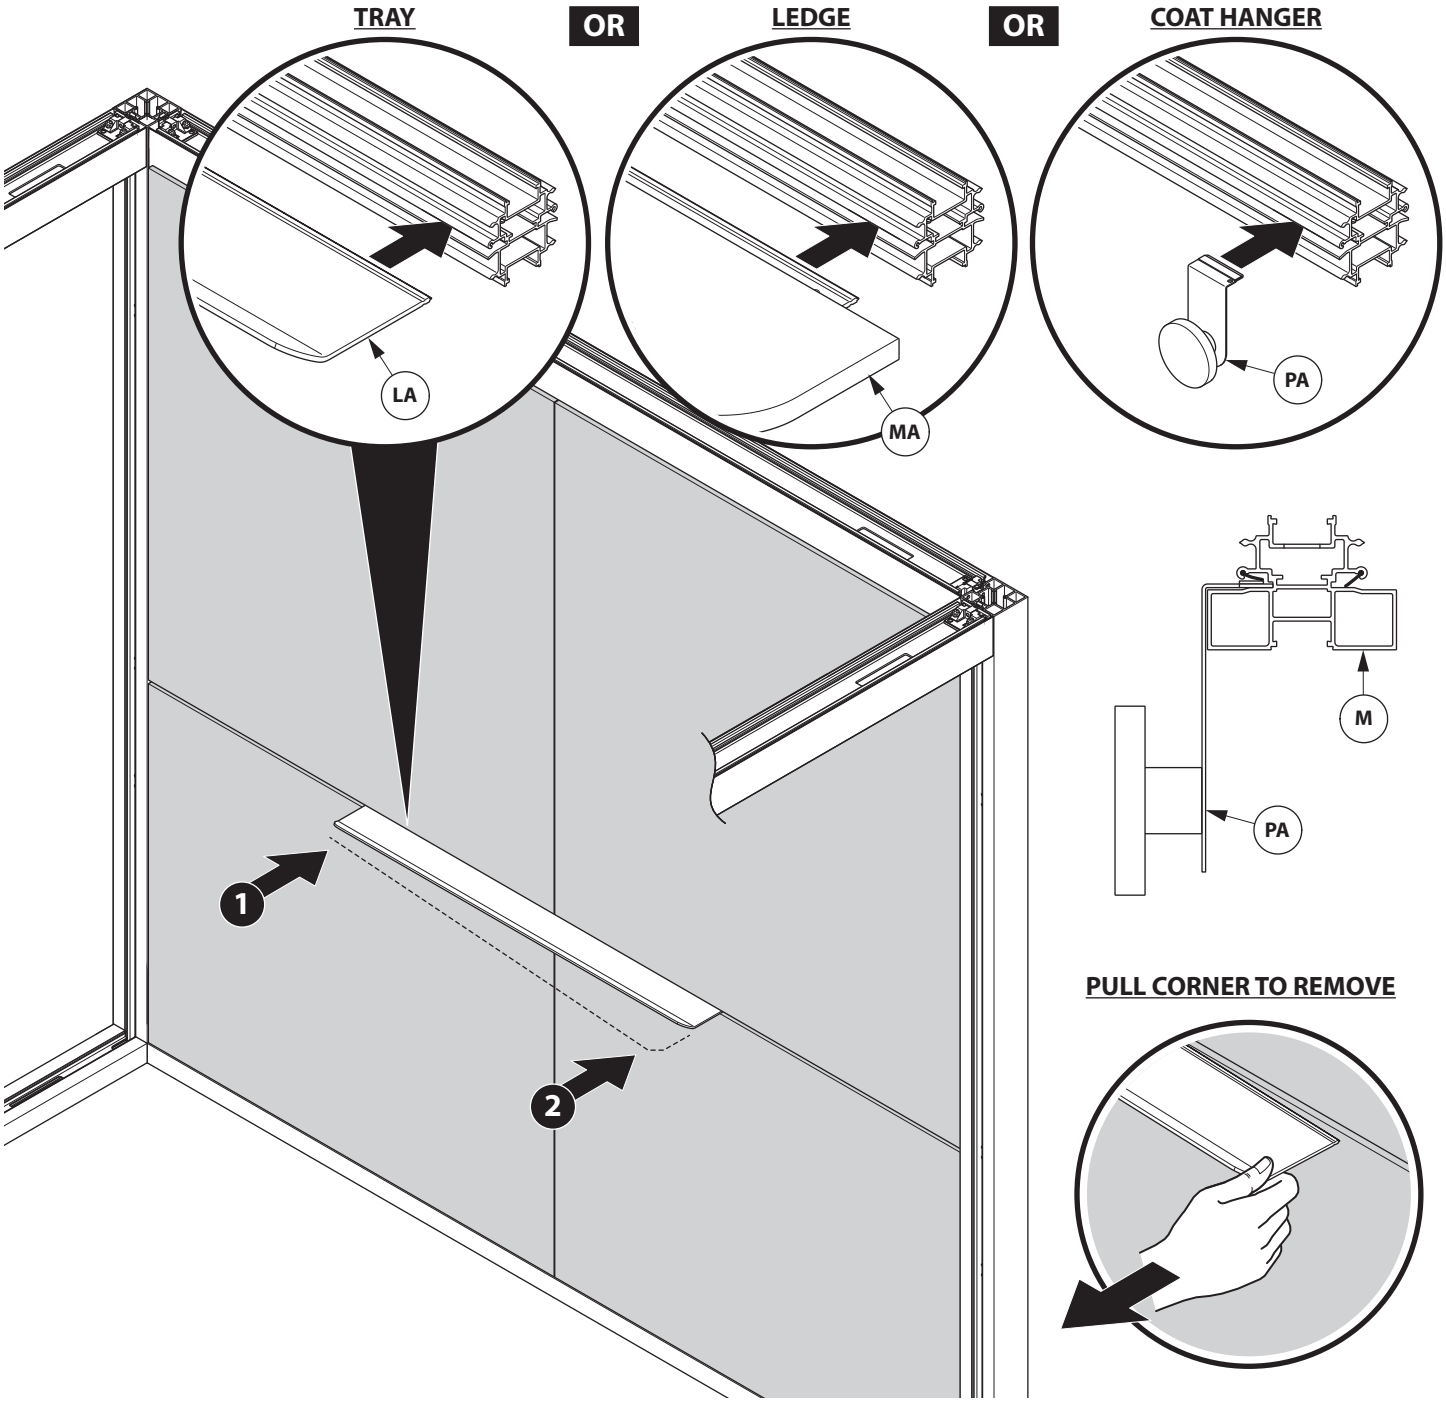


PULL CORNER TO REMOVE

Coat Hanger Installation

1 **Install hanger to top rail**

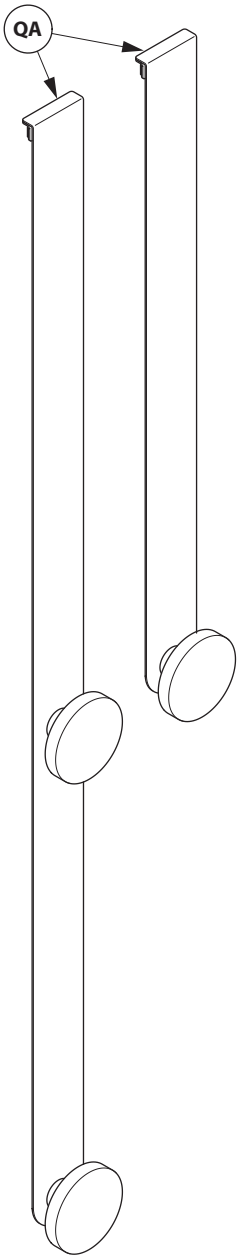


NOTE: Make sure the coat hanger is fully engaged.

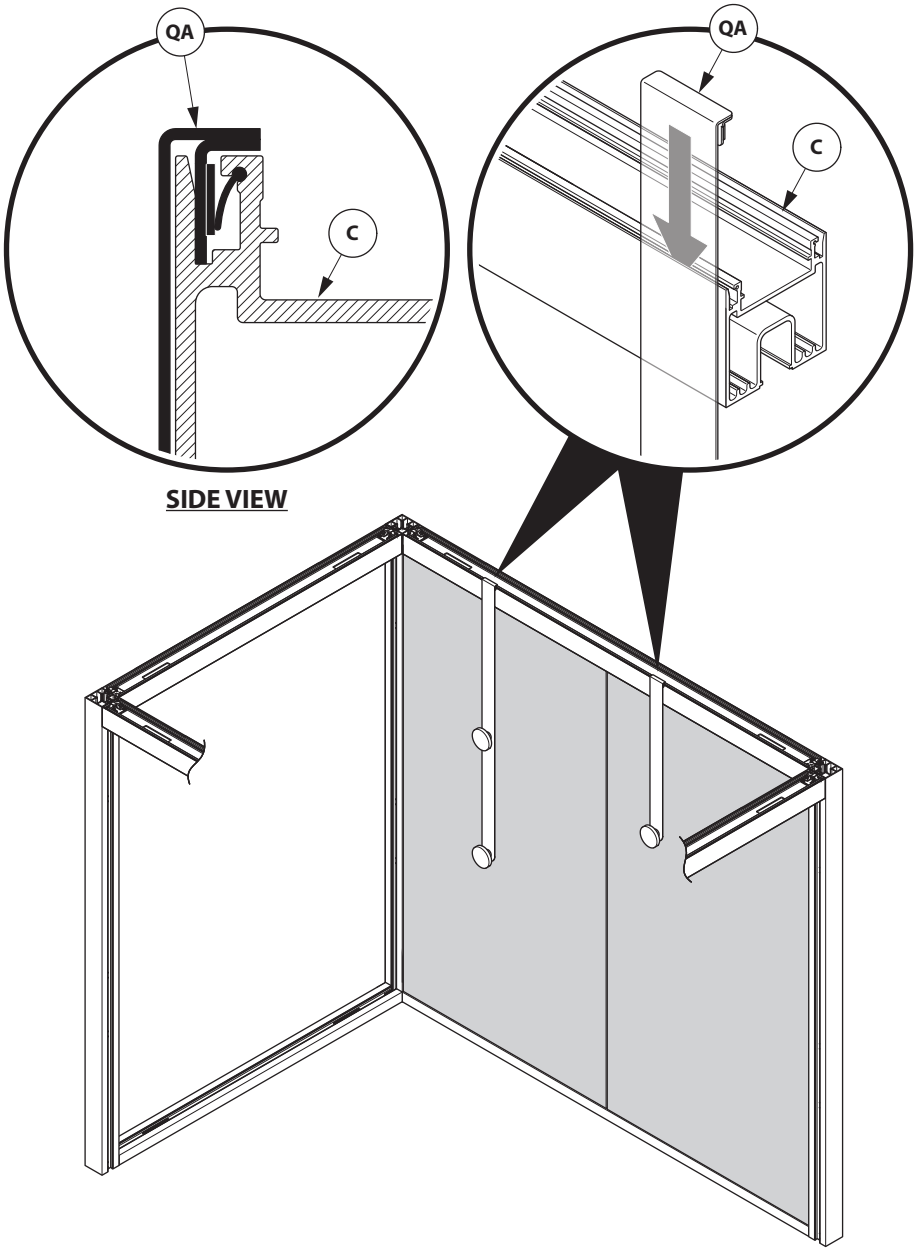


SIDE VIEW


Spanning Top Installation

1 **Install plates to underside of top**

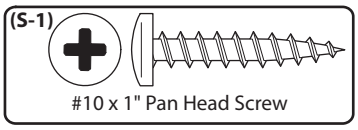



FULL

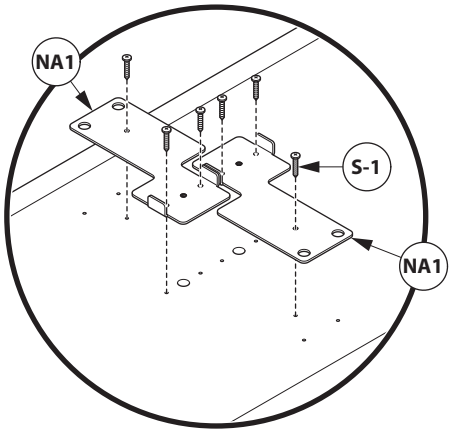

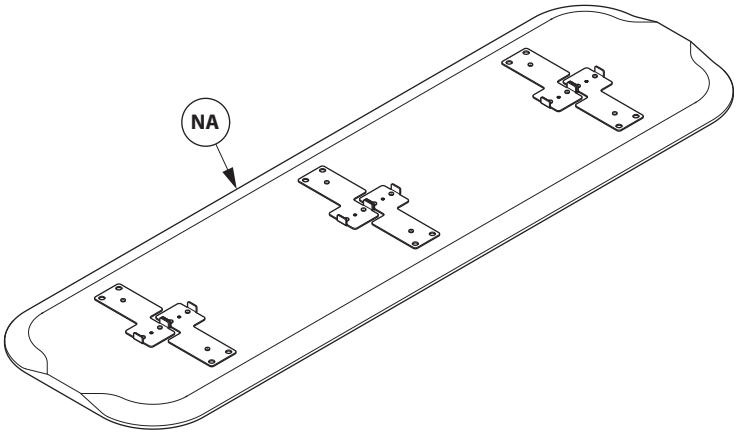



HALF

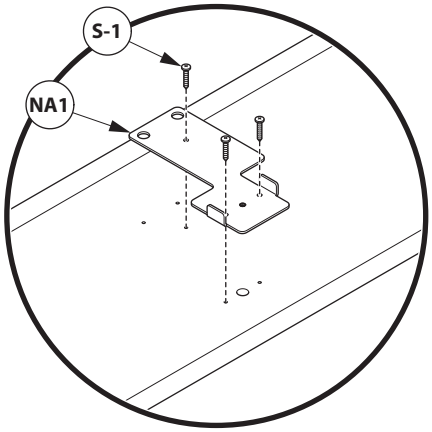


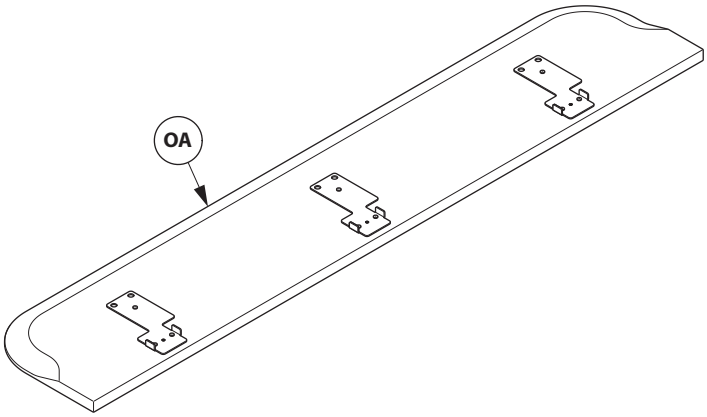


2 Install anti-twist brackets and foam tape

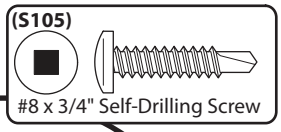

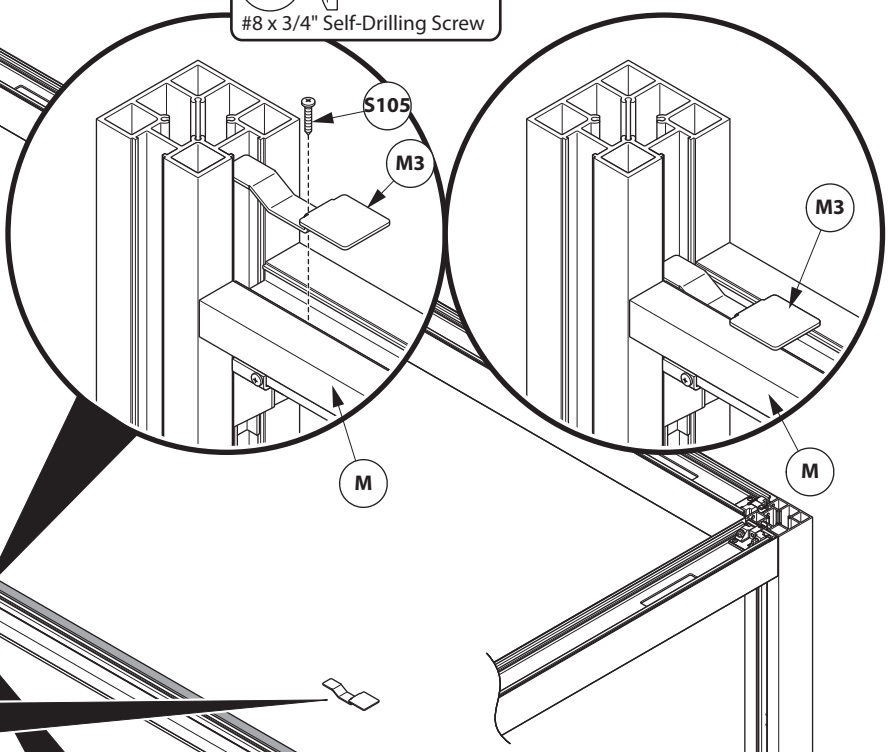


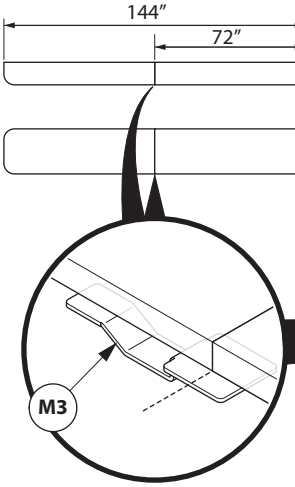


NOTE: 3rd bracket is for split tops only. Make sure the square end of the bracket is centered supporting both tops.

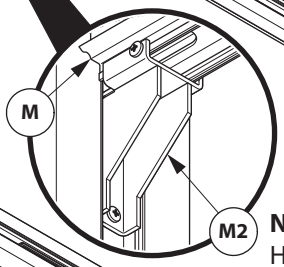


NOTE: Refer to **Section 3**, Horizontal Tile - Insert Rail - Support Bracket **(M2)**.

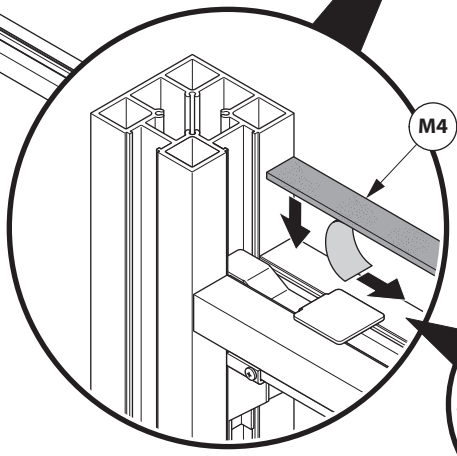

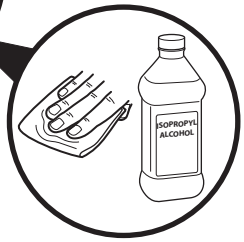

NOTE: Wipe mounting surface area with Isopropyl Alcohol to ensure area cleaned and achieve full bond.


NOTE: The foam tape is applied to the opposite side the worksurface overhangs.

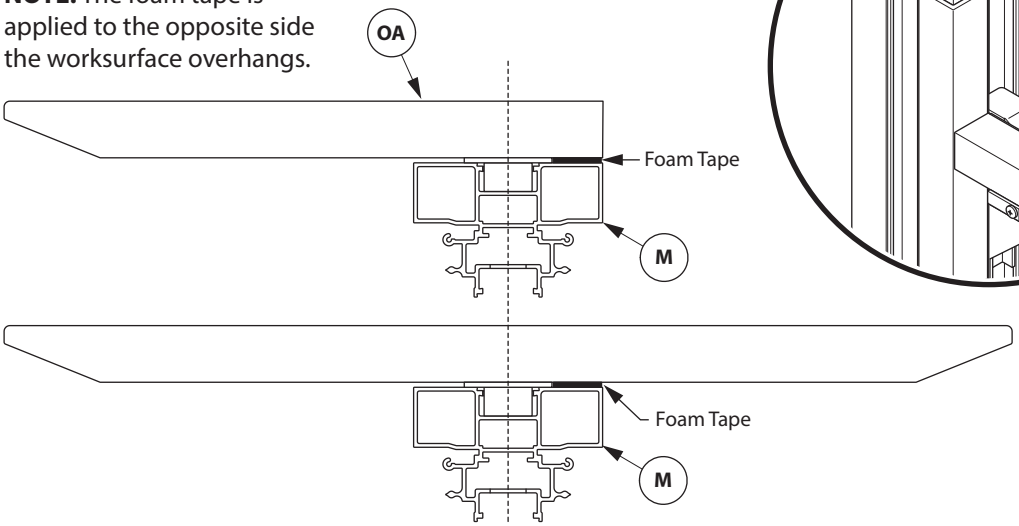


Shelf Top Installation


3 Install shelf top to horizontal tile rail


NOTE: Careful not to scratch top of rail in case of future reloacation.

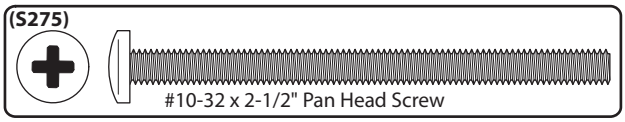


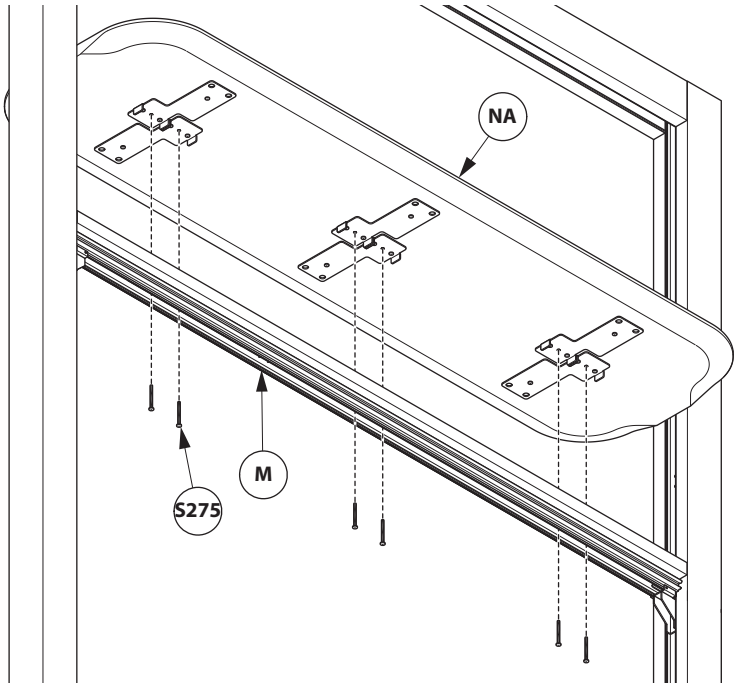

4 Install brackets

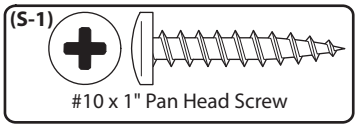


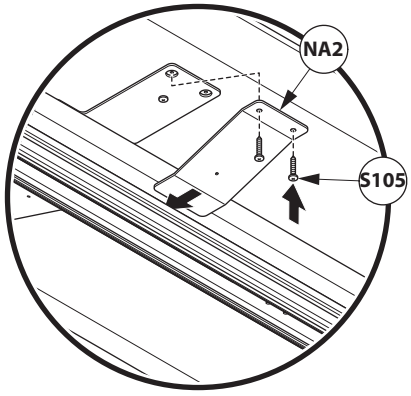


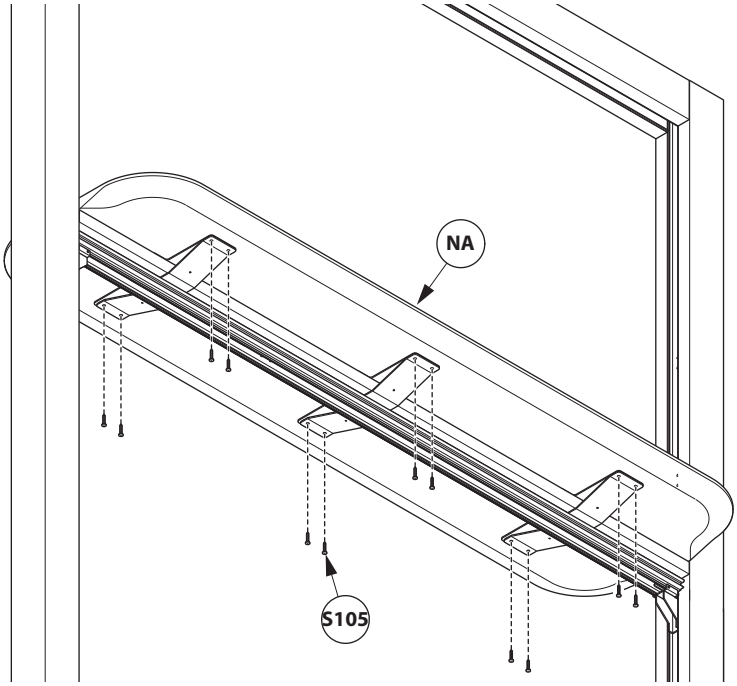

Shelf Top Installation

5 **Install tiles**

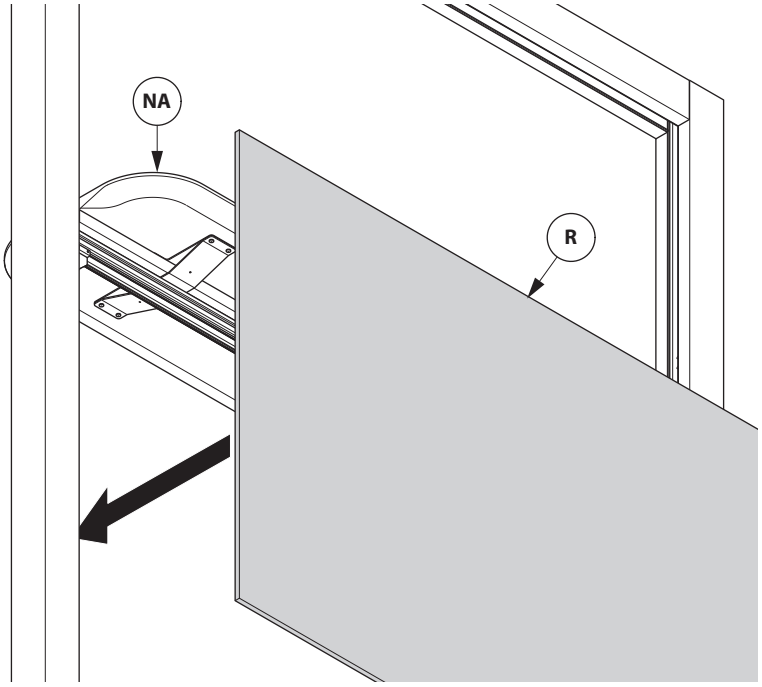


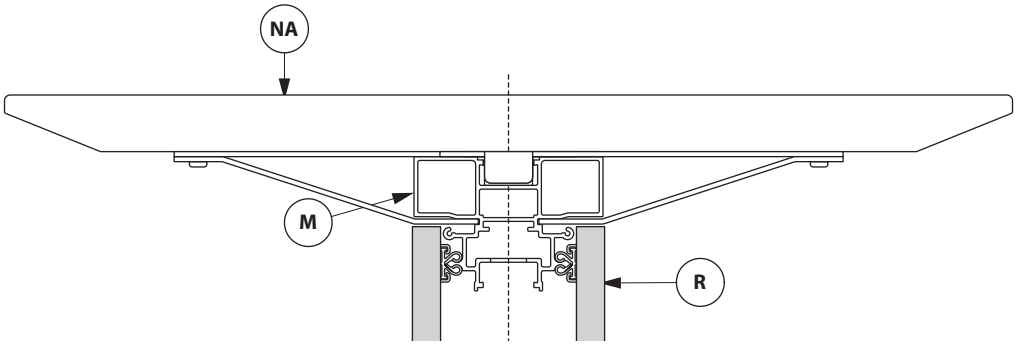


6 **Install covers**

(S276)


#6-32 x 3/8" Flat Head Screw

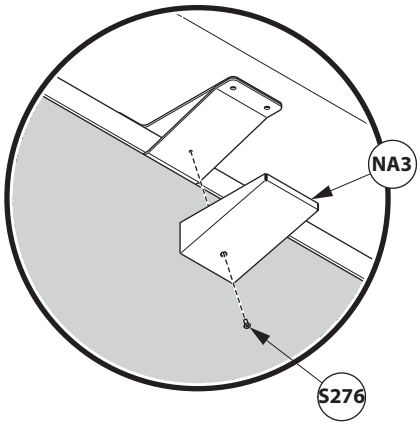

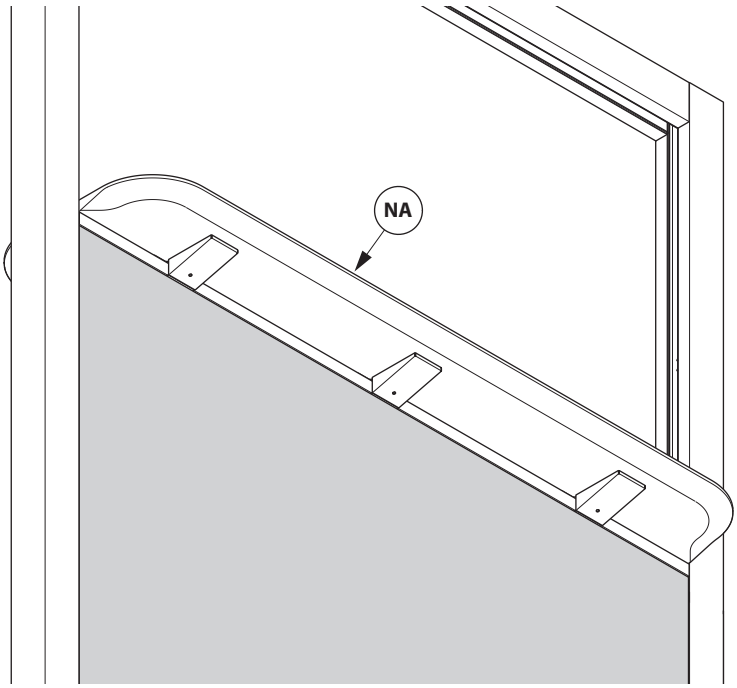


Worksurface Installation

1 **Use template to locate and predrill holes**

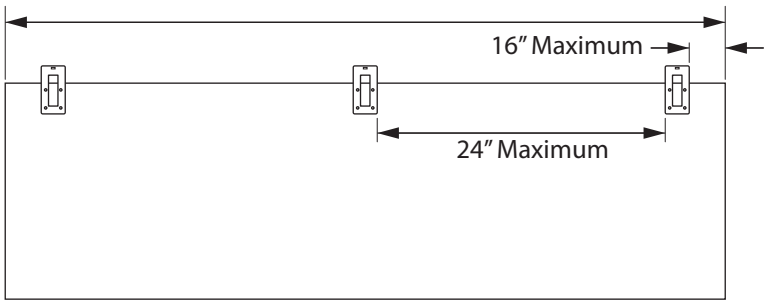



Bracket Template

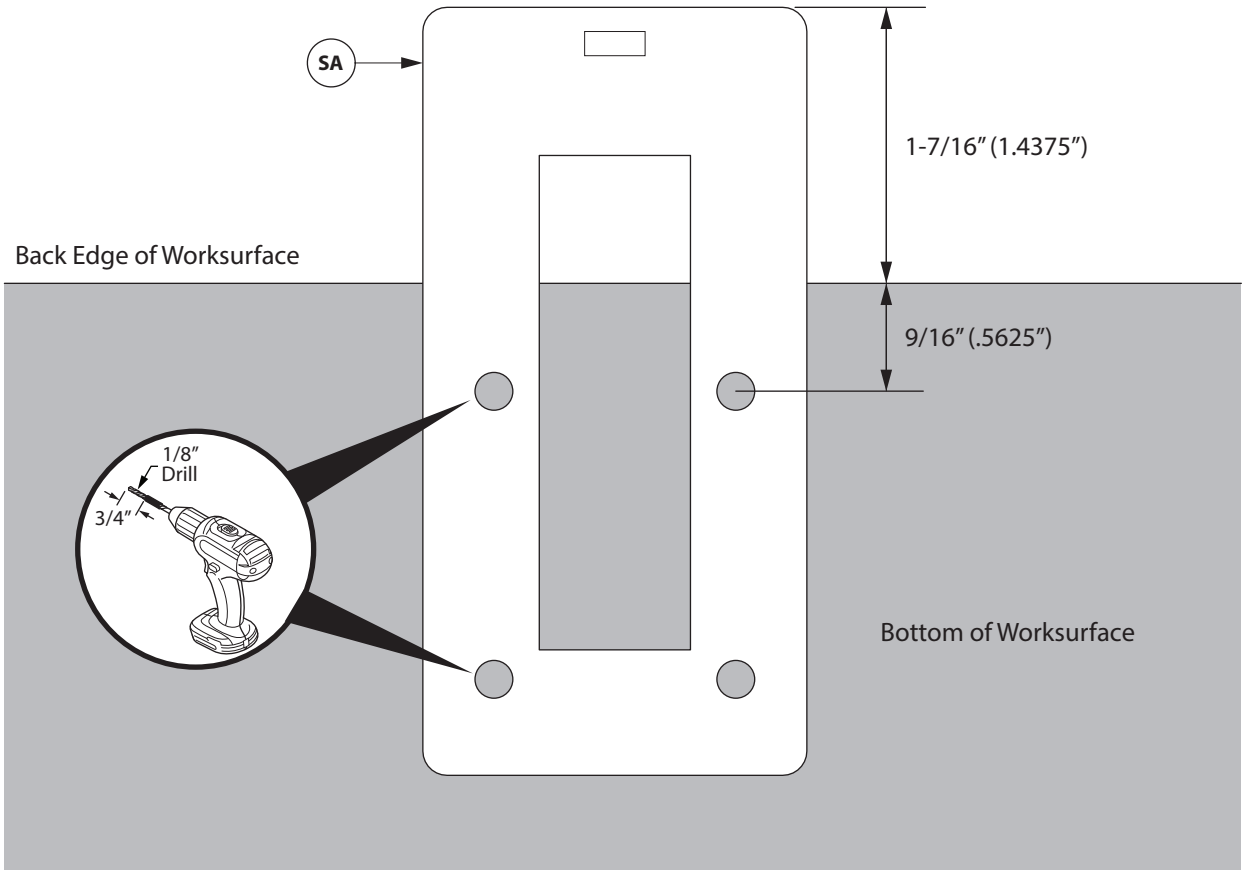

2 **Before installing brackets determine if the tile is above or below the worksurface**


TILE - TILE RAIL

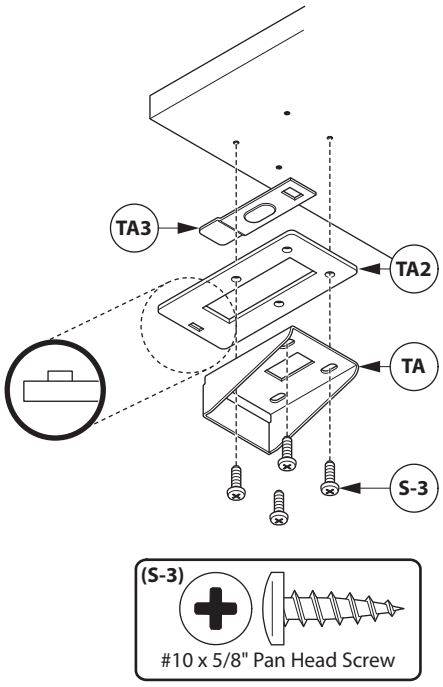


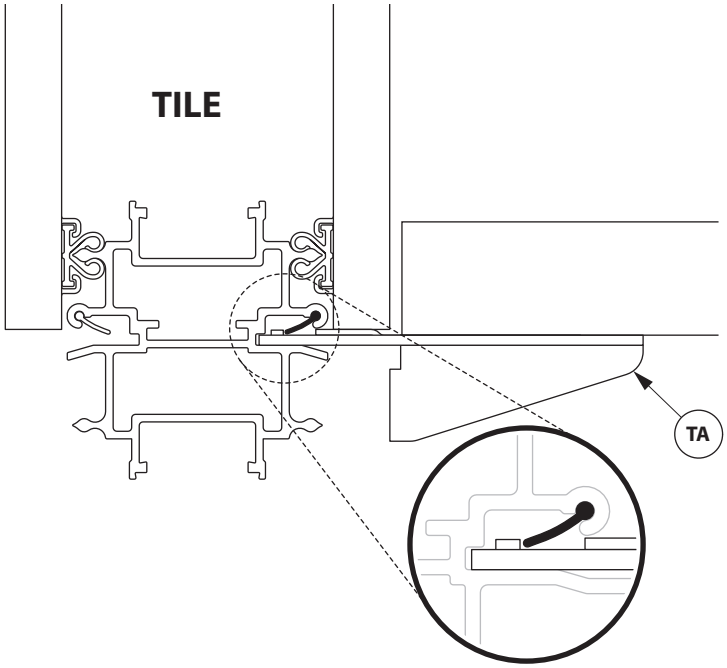


OR

TILE - INSERT RAIL

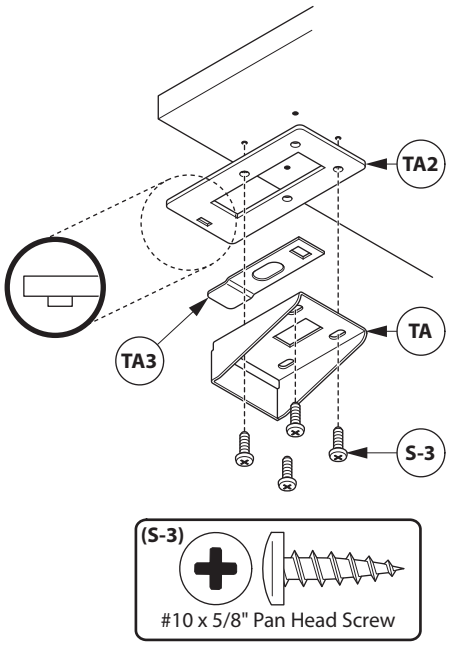

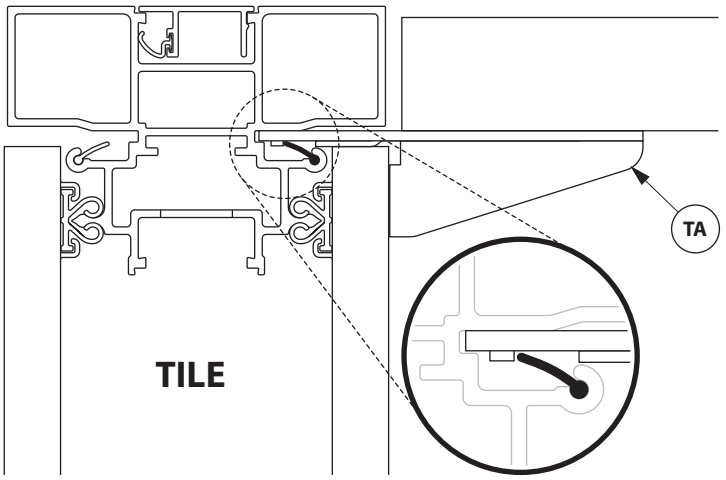


2 **Install worksurface**

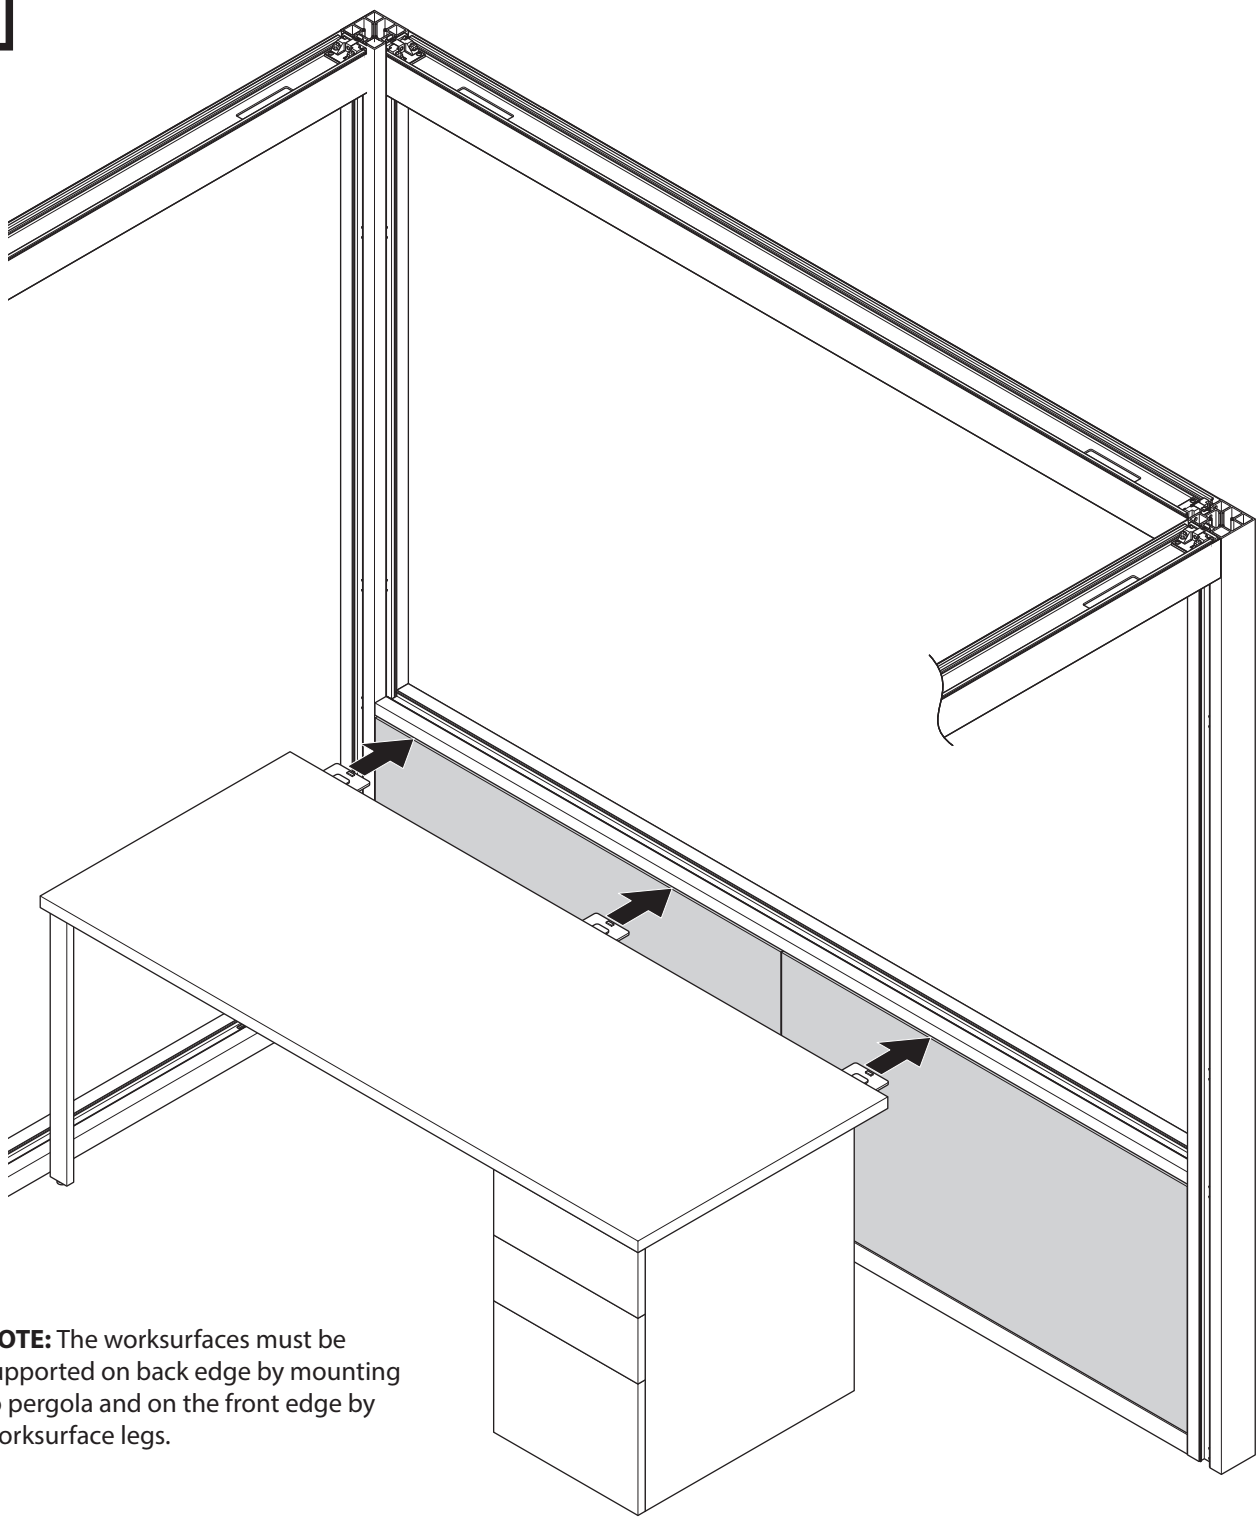

NOTE: The worksurfaces must be supported on back edge by mounting to pergola and on the front edge by worksurface legs.


3 **Remove worksurface**

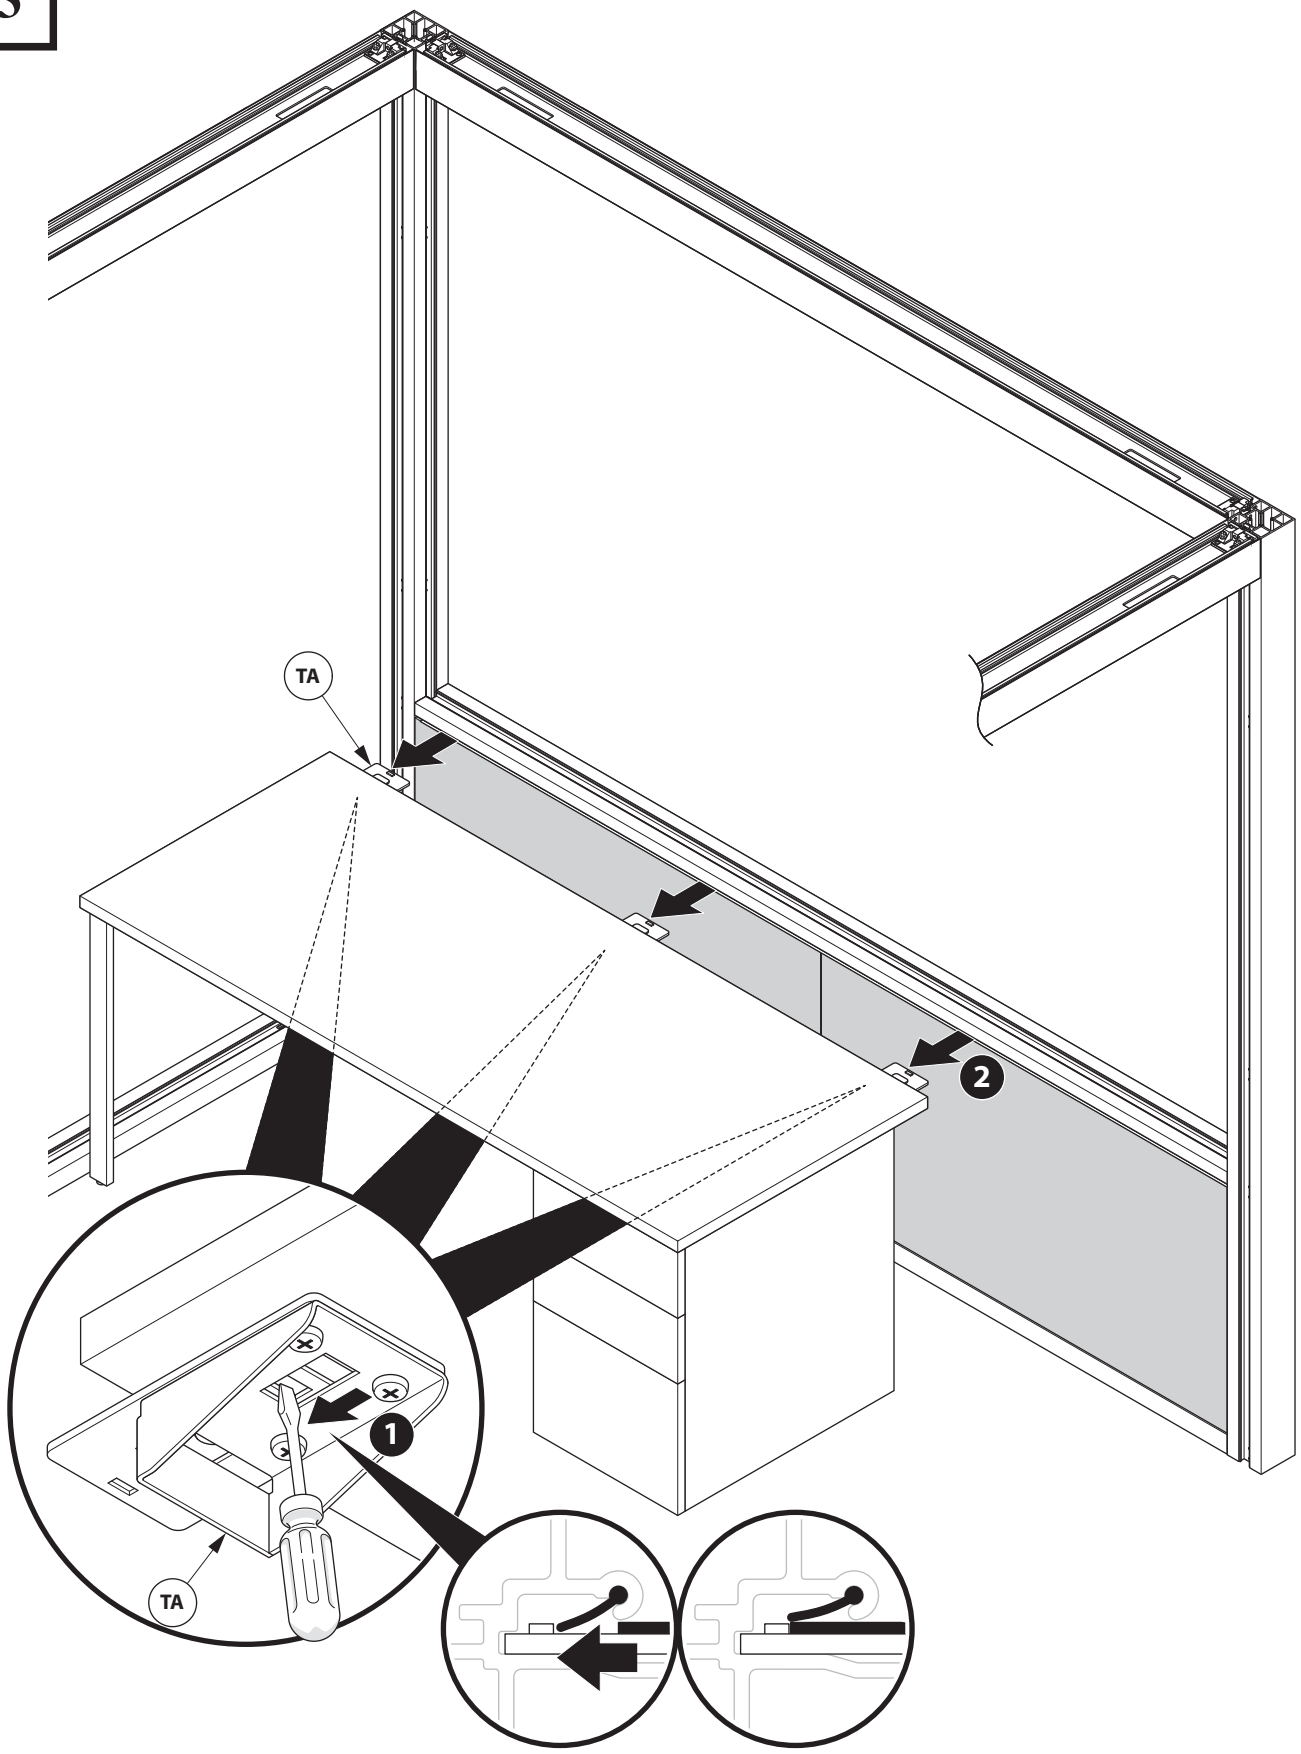


TV Mount (Workware)

1 **Install TV mount level**

(S280)

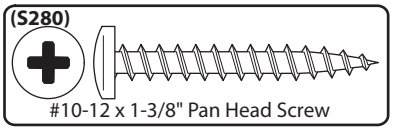


#10-12 x 1-3/8" Pan Head Screw

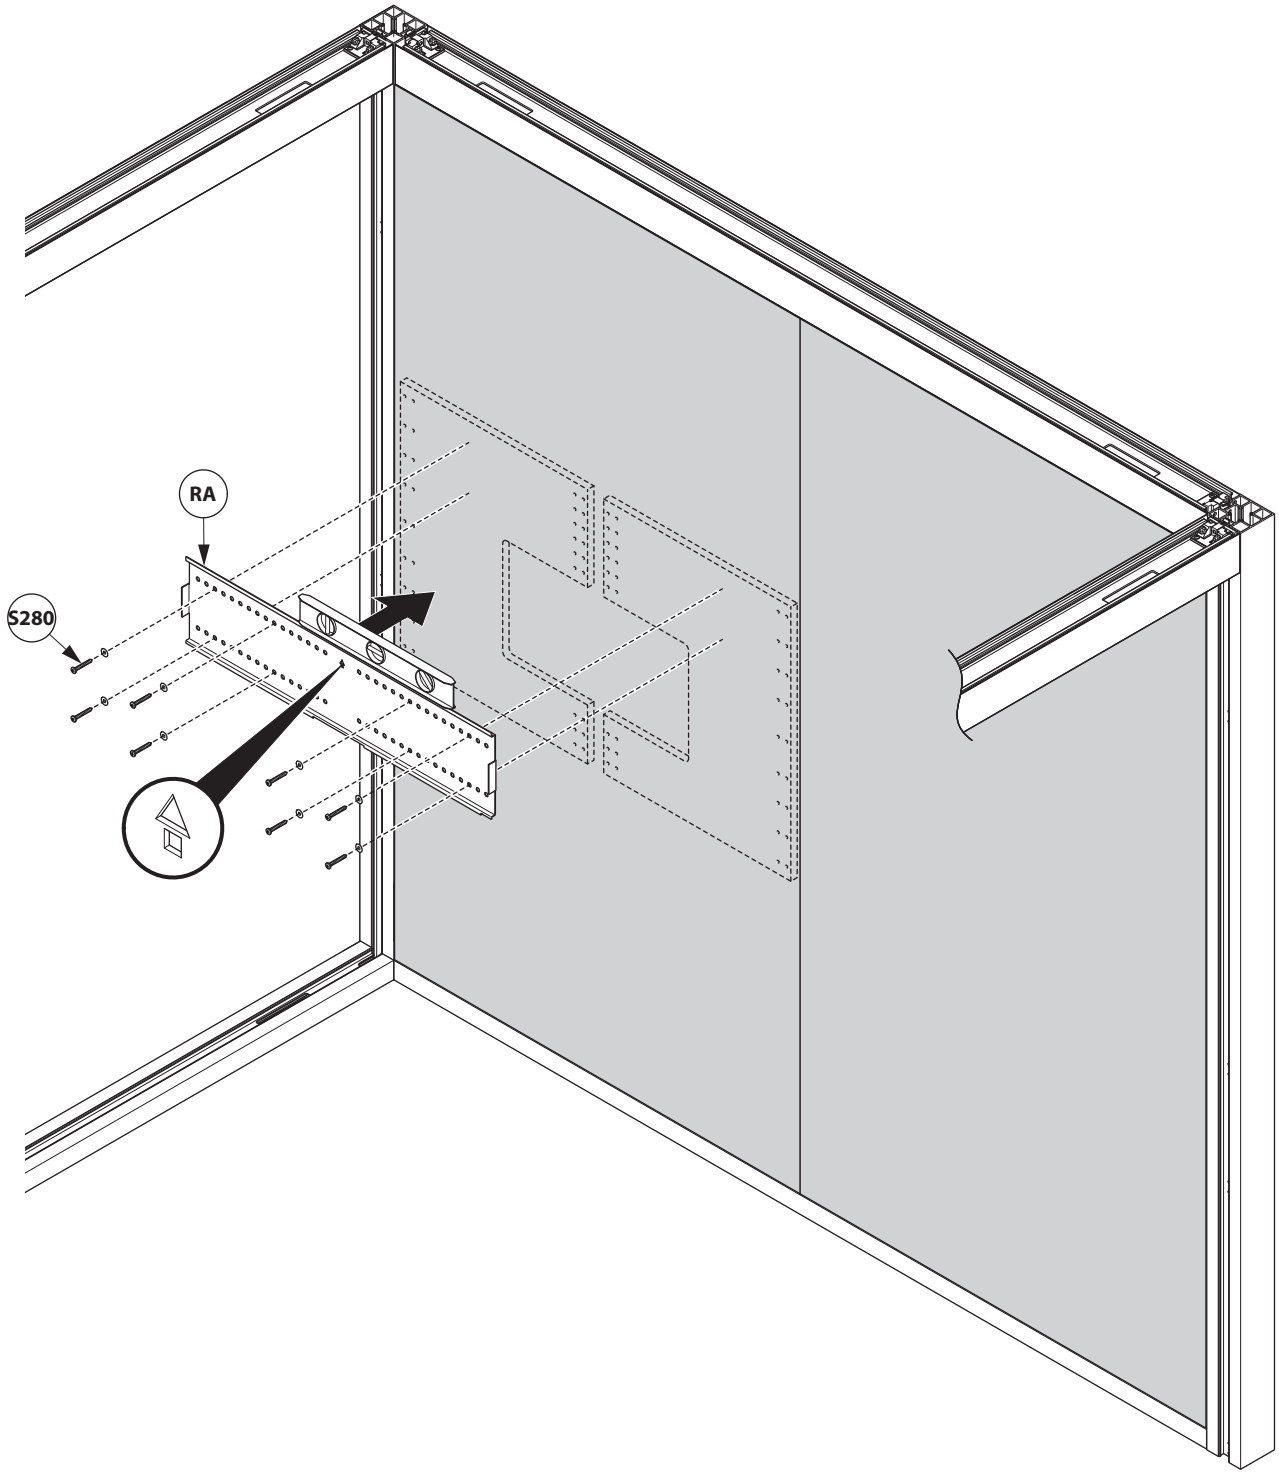

2 Install brackets to TV

NOTE: A variety of screw sizes and spacers are provided to accommodate a wide range of TV's.

NOTE: Install cables and plugs before proceeding to the next step.

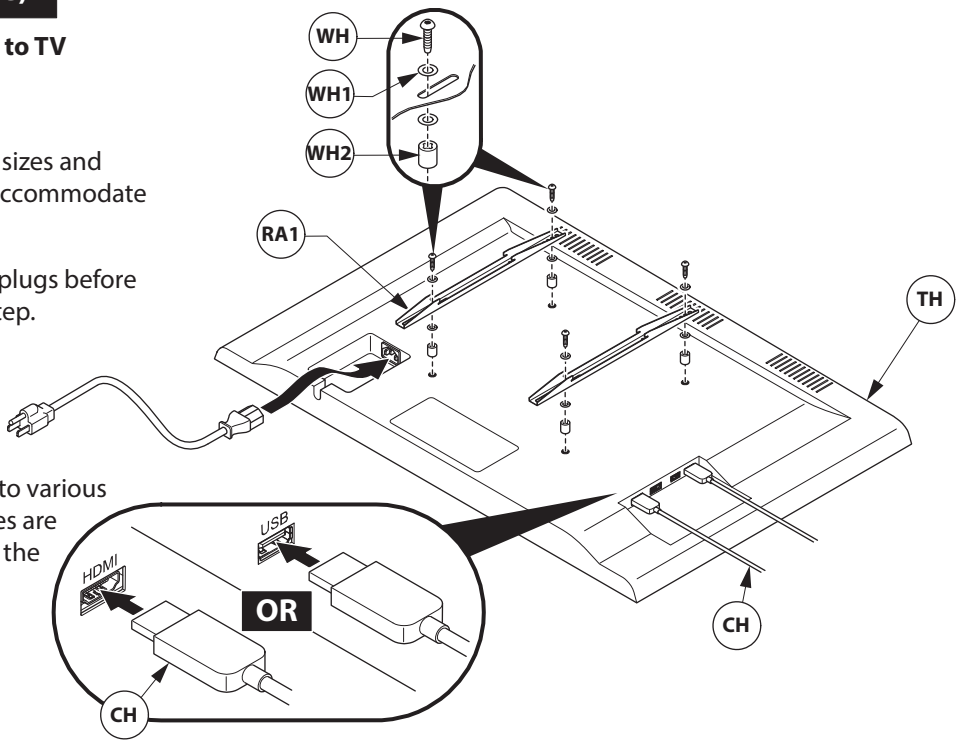

NOTE: Due to various setups cables are supplied by the customer.

3 Hang TV

NOTE: Maximum load: 75 Kg. (165 lbs)

