
GROUPE LACASSE

T-Mount Panel

Installation Instructions

Installation Tools:

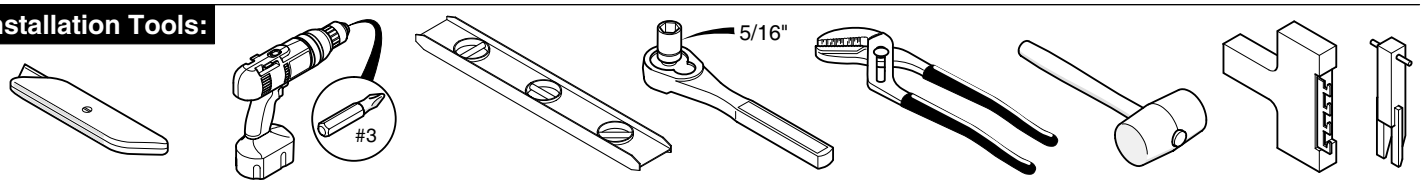

1.

NOTE: For ease of installation, identify T-mounted panel conditions and install T-mounts before joining those panels to the others. T-mounts mount on the panel side rails or in pre-drilled holes in panel frames for center mount conditions. The T-mount can also be mounted along the width of non-powered panels by drilling a 3/8" diameter hole on the centerline of top and bottom frame rails of the panel sub-assembly. On non-powered and powered panels, T-mounts must be mounted at least six (6) inches from the panel side rails to allow receptacle access.

Center and Off-Center Location

NOTE: The panel to be T-mounted to the face of another panel must be of equal height.

Remove top caps and raceway covers from panel.

Remove base raceway assembly by using a 5/16" ratchet socket and making a quarter-turn to unseat **(Fig. 1)**.

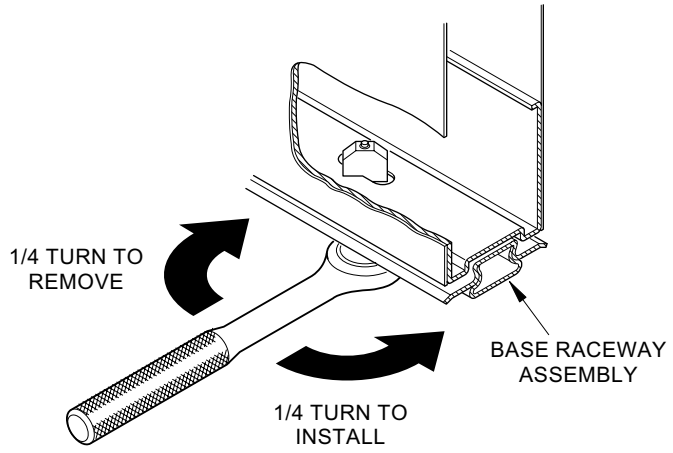


FIG. 1

2.

Attach top center mount bracket to T-mount side rail with four (4) screws provided. Insert light blocks into grooves in the T-mount side rail. Hook top T-mount bracket with rail over panel top and into pre-drilled hole at the bottom of the 2" deep communication channel. Top center mount bracket must be fully seated onto frame rail.

Insert bottom center mount bracket in the pre-drilled hole in the bottom frame rail. Align bracket with holes in T-mount side rail and start screws through rail and into bracket. Adjust bracket up against the panel frame and tighten the screws.

Replace base raceway assembly **(Fig. 1)**.

Unscrew the glide stem and pull the glide housing from the T-mounted panel, and replace with T-mount glide housing and glide stem.

Notch raceway cover retainer flanges to clear bottom bracket and install.

Attach T-mount panel to T-mount rail.

Check that top center mount is fully seated onto top rail.

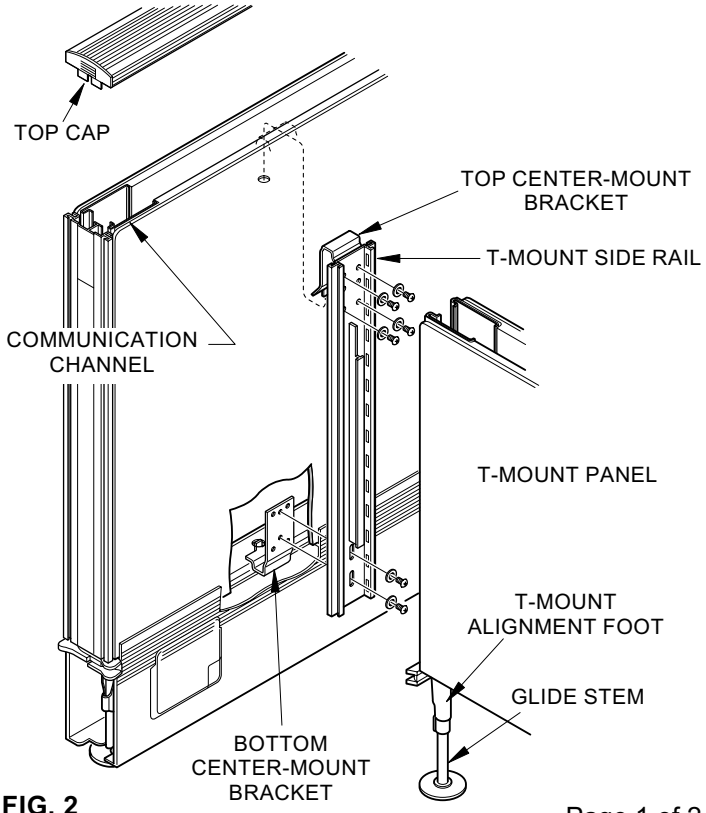


FIG. 2

3.

Notch top cap retainer flanges to clear top center-mount bracket.

Install top cap. Center top cap, end-to-end, on panel. Insert top caps flange on one side, then push cap down until it snaps in to place **(Fig. 3)**.

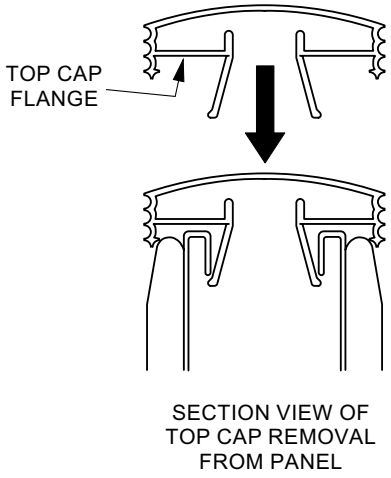


FIG. 3

4.

T-Mount Side Rail Attachment

Attach bottom side rail clip to bottom of T-mount rail. Tabs should be pointing up on the left or right side of T-mount rail depending on which side T-mount rail is to be mounted.

Remove glide stem and alignment footing from T-mounted panel and replace with T-mount alignment footing and glide stem.

Align top side rail clip with side rail of panel and Insert.

Hook T-mount side rail into bottom of panel side rail. Align and fasten T-mount rail to top side rail clip with screws provided.

Attach T-mounted panel to T-mount side rail. Refer to Side Rail Attachment Installation Instructions **(E100-7200)**.

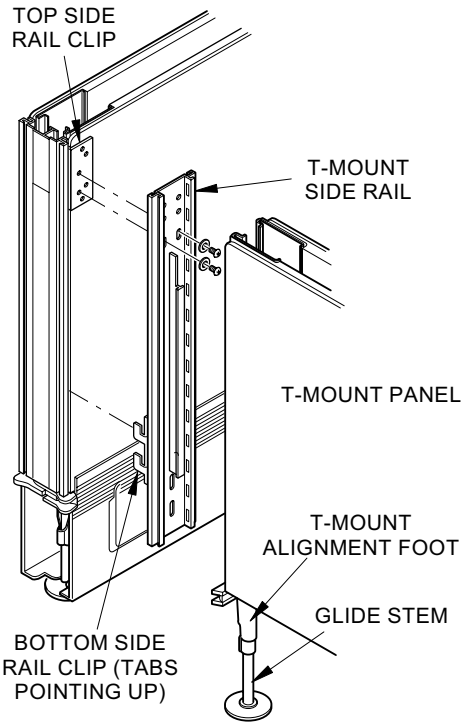


FIG. 4