

NVISION

Shelf/Overhead Storage

Installation Instructions


Tools Required

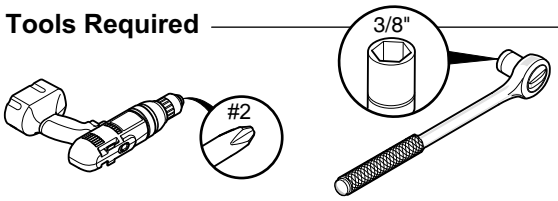

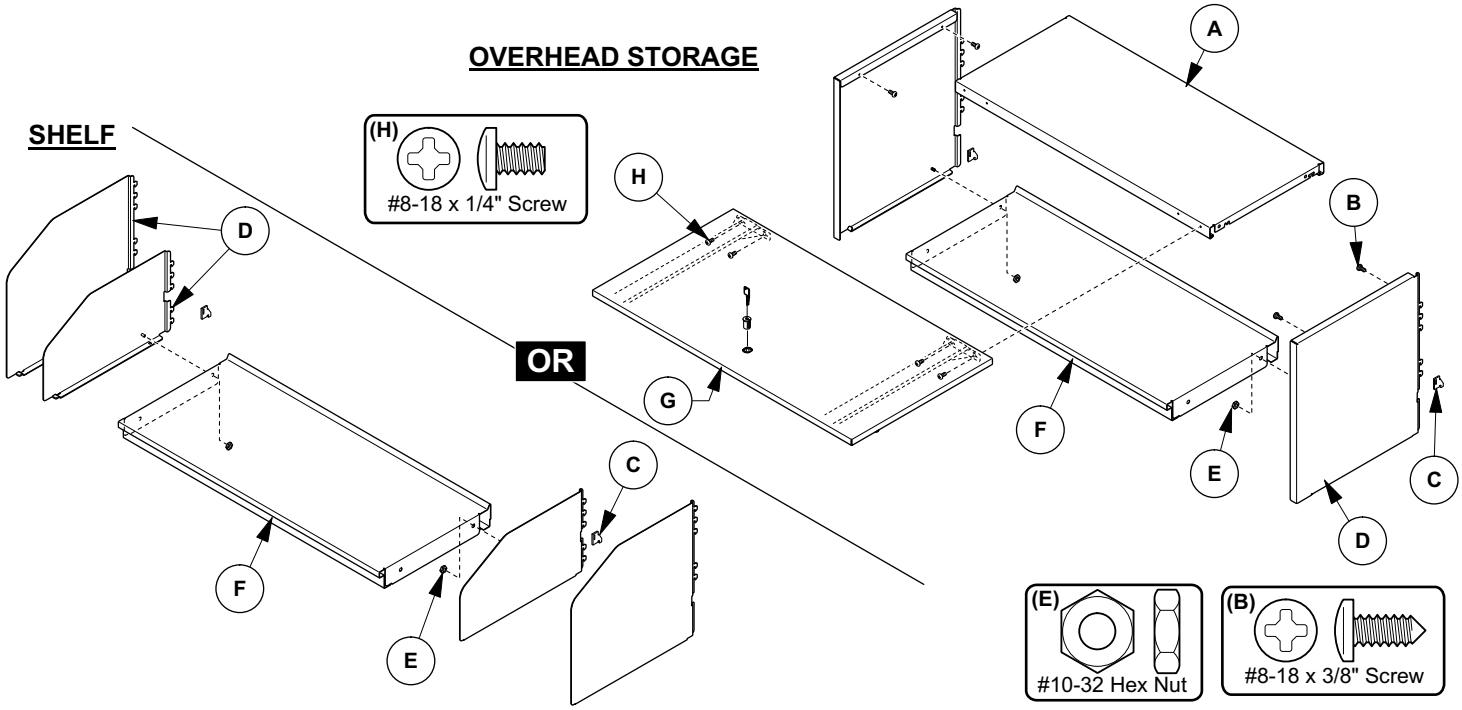


FOR OVERHEAD STORAGE

1 **Install screws (B)**

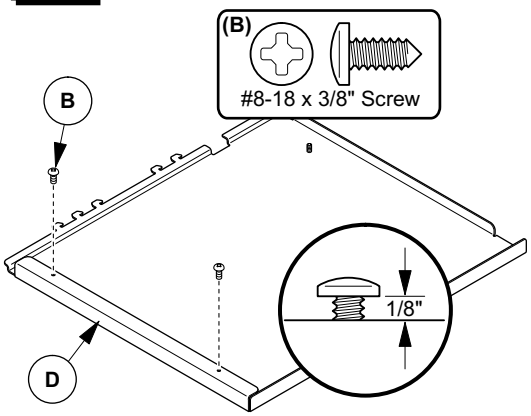


2 **Install end panels (D) as shown**

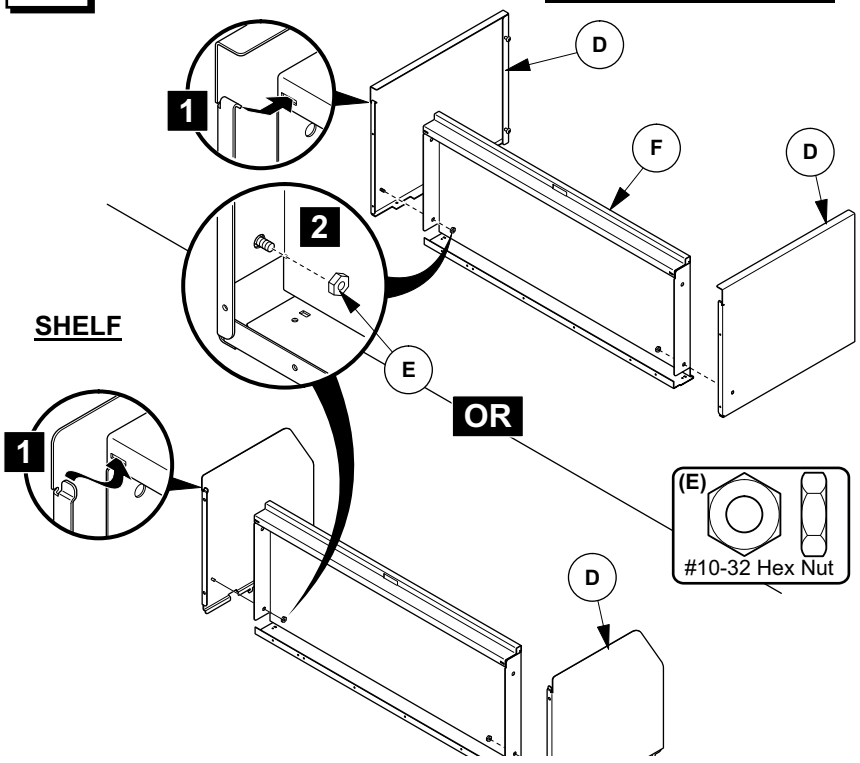

CUSTOMER SERVICE PHONE: 1-800-279-6557


FOR OVERHEAD STORAGE

3 Install top (A) and tighten screws (B)

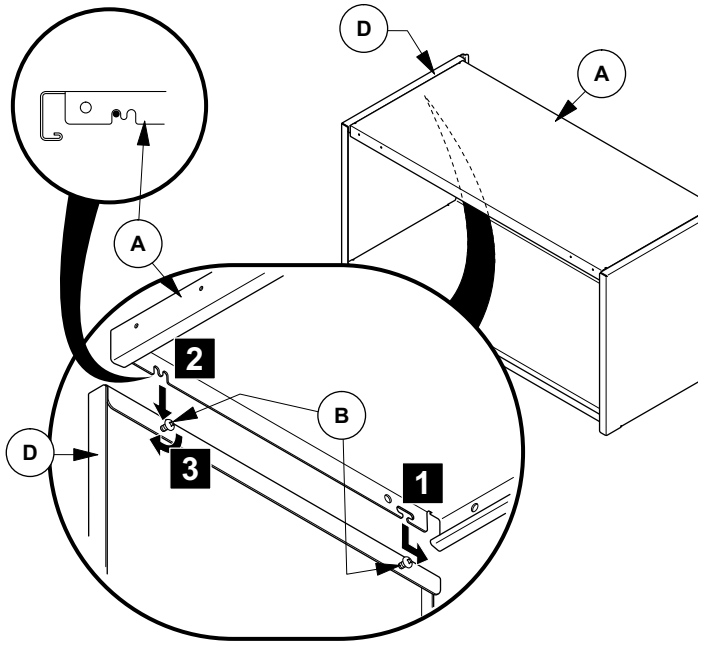

4 Install and adjust door (G) as needed


NOTE: If door **(G)** is misaligned from RIGHT to LEFT loosen screws **(H)** and move the doors in the direction necessary for alignment.

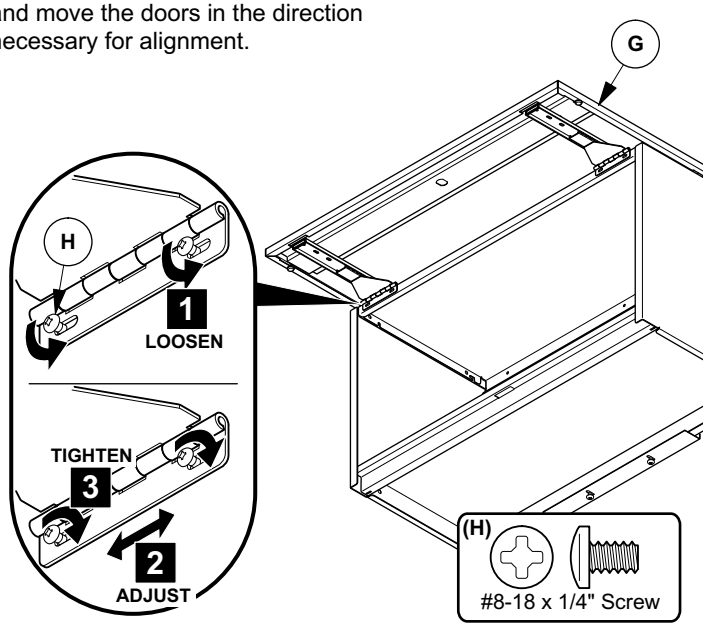

5 Install Shelf/OSU (J) as shown


NOTE: After installing on panel, rotate both anti-dislodgment clips **(C)** making sure clips are engaged in slots to prevent accidental removal of unit.

NOTE: When installing OSU/Shelf to wall track make sure anti-dislodgment clips **(C)** will not interfere with mounting screws of the wall track.

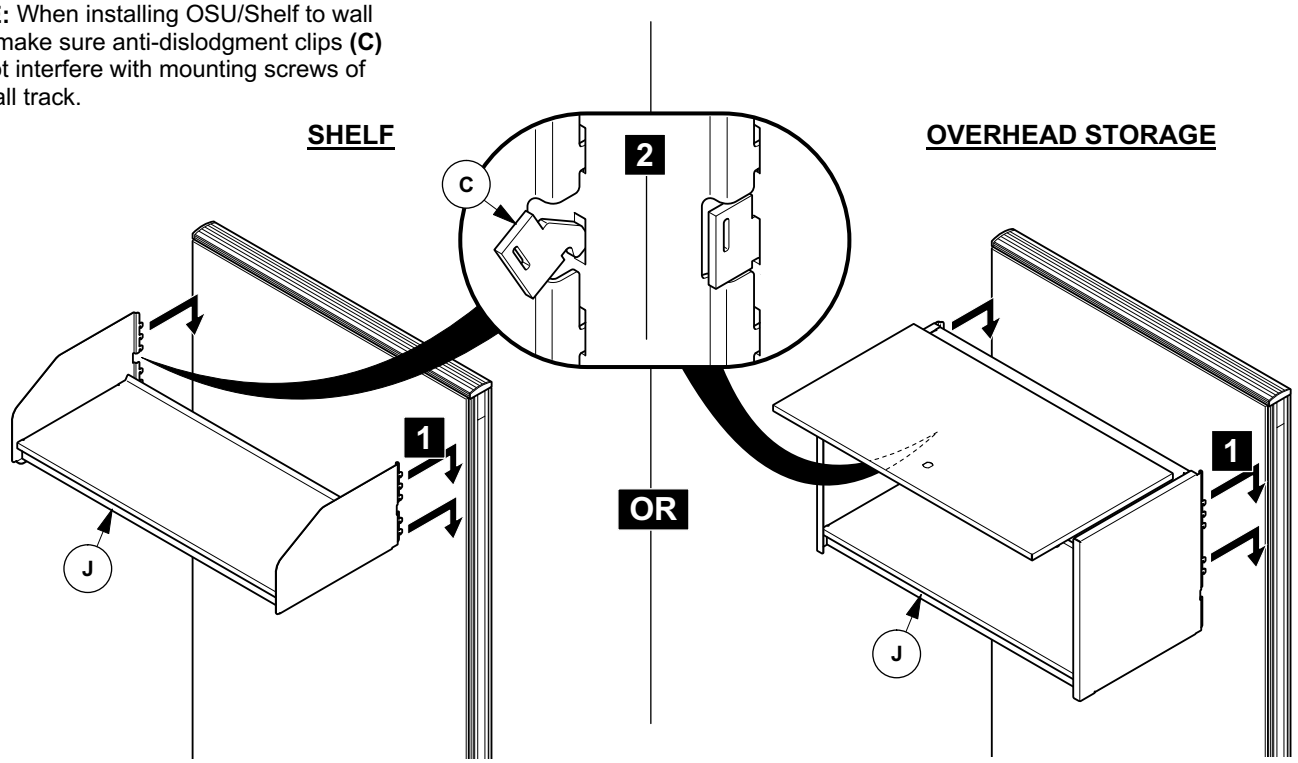

OPTIONAL LOCK PLUG INSTALLATION


1 **Replace square key (R1) with round key (R2)**

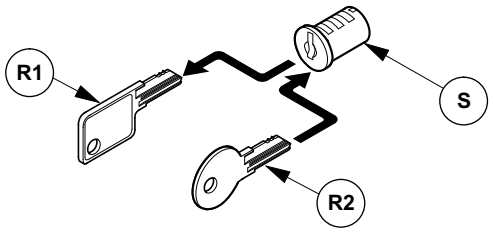

2 **Install lock plug (S)**

NOTE: Position cam to unlocked (9:00 o'clock) position.

NOTE: It may be necessary to rotate cam until lock plug engages.

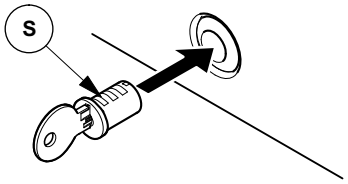

3 **Remove round key (R2) and insert square key (R1)**

NOTE: Hold the lock plug (S) in place with thumb while removing the control key (R2).

