
nvision™

andersonhickey™

Shelf/Overhead Storage

Installation Instructions

Installation Tools:

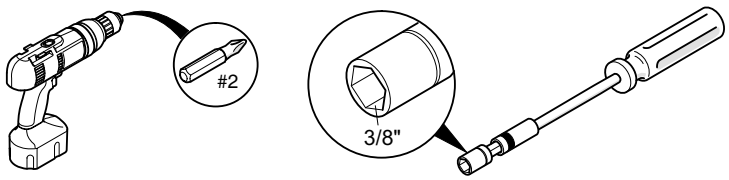


Hardware Pack
(8) Hex Nut - #10 - 32

1. Install end panels (A) as shown

OVERHEAD STORAGE

SHELF

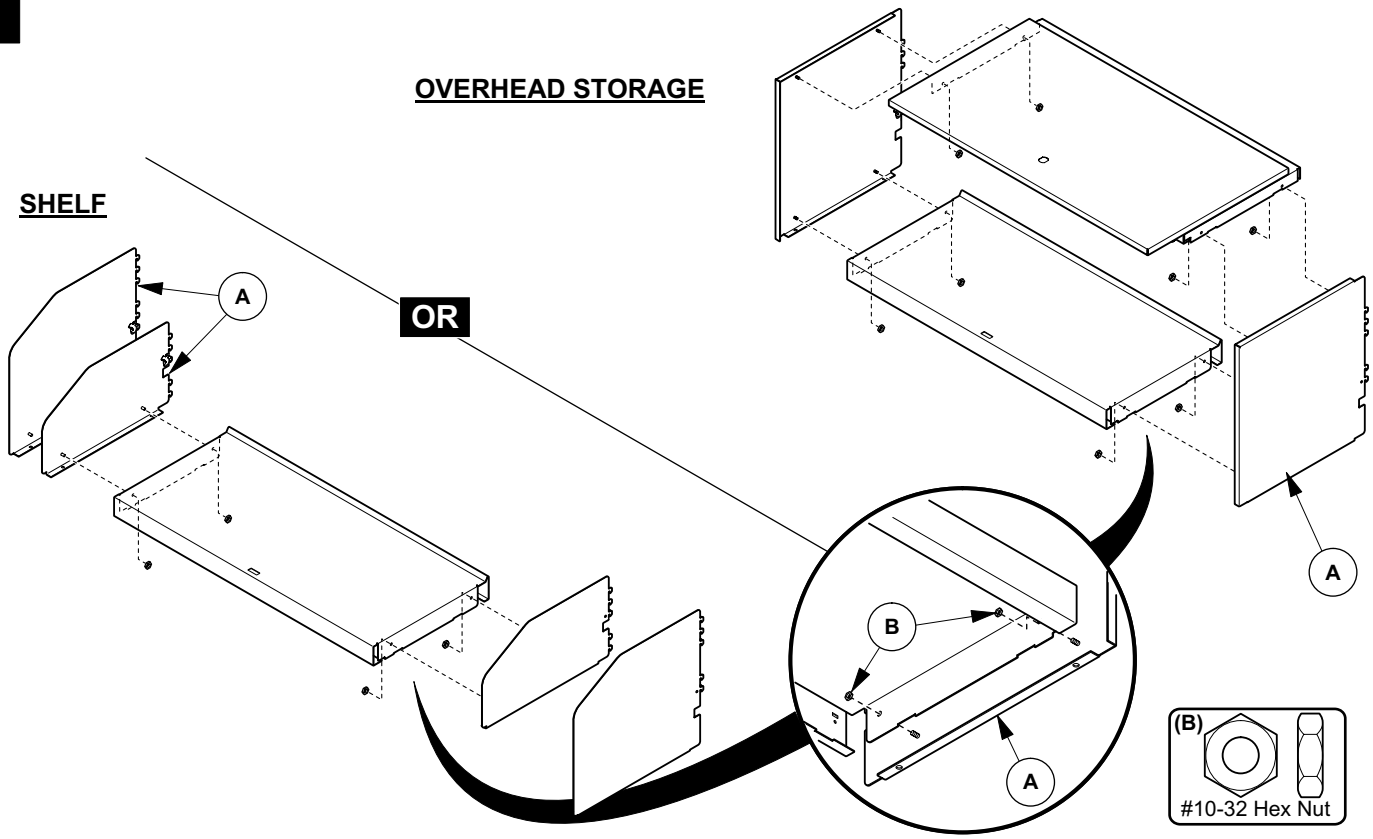


2. Install unit (C) to panel

NOTE: Rotate both antidislodgment clips **(D)** making sure clips are engaged in slots to prevent accidental removal of unit.

SHELF


OVERHEAD STORAGE

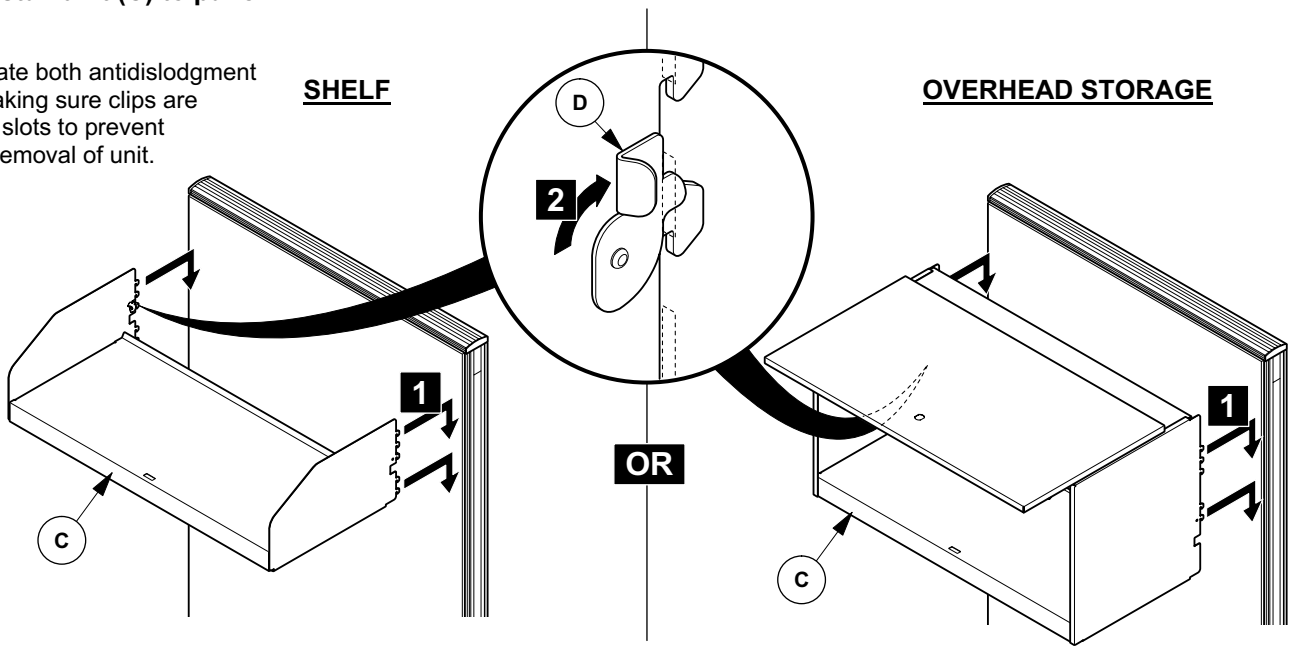

Shelf/Overhead Storage

3. Adjust door (E) if needed

NOTE: If door **(E)** is misaligned from RIGHT to LEFT loosen screws **(F)** and move the doors in the direction necessary for alignment.

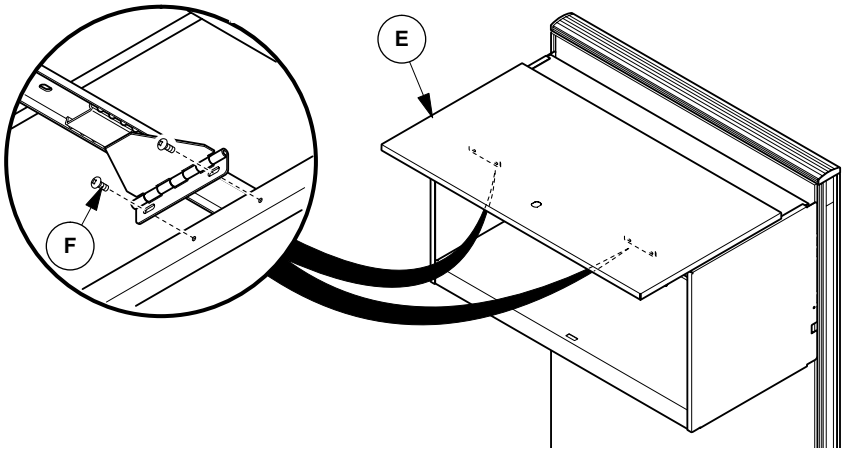

4. Install lock plug (G)

Close the door **(E)** and insert the lock core **(H)** with a control key. Test to make sure it works properly with an NS or NM series key.

