
IMPROV™
SLED BASE CHAIR

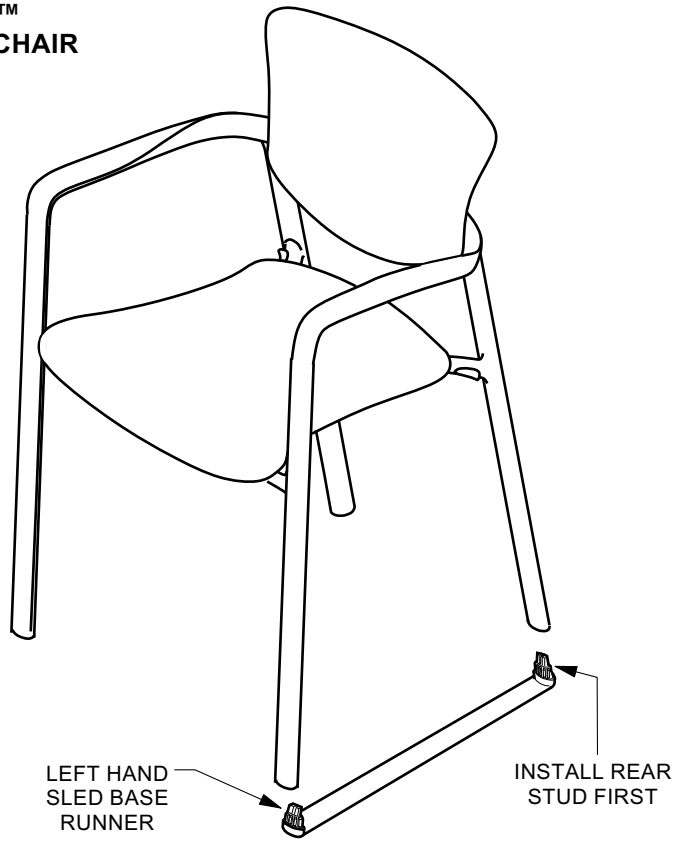

Tools Required

Rubber Mallet

IMPORTANT: Install rear stud of sled base first.

1. Turn chair upside down on a non-abrasive surface to avoid scratching the chair frame.
2. Identify left and right hand sled base runners by lining them up with the chair frame.
3. Install the sled base runners on chair frame by **carefully** lining up the **rear** stud with the chair leg and tapping firmly into the tube with a rubber mallet.
4. Line up **carefully** the **front** stud with the chair leg and tap firmly into the tube with a rubber mallet.
5. Repeat procedure with other base runners.

NOTE: Do not attempt to remove the sled base runners once they are installed. Removal will cause damage to retaining clip and may scratch the frame paint finish.


IMPORTANT

Parts needed for assembly of chair are in bottom liner of carton

DO NOT DISCARD

BOOK RACK FOR IMPROV™
STACKING CHAIR

BOOK RACK IS INSTALLED MANUALLY.
NO TOOLS REQUIRED

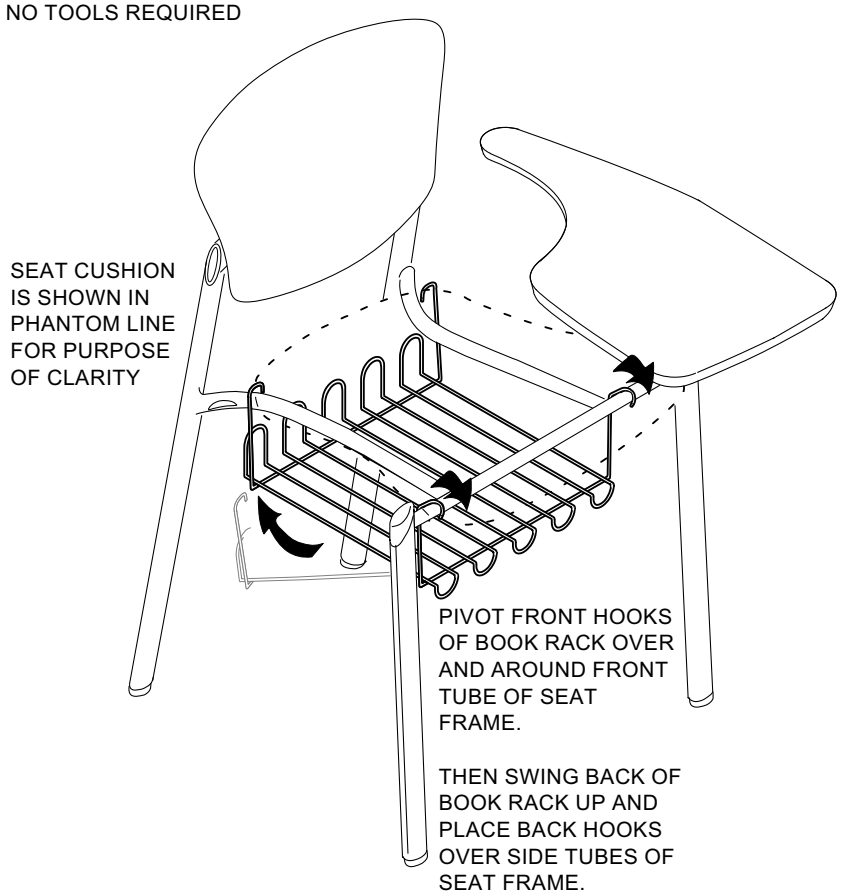

IMPROV TANDEM TABLES
AND CHAIR TO CHAIR CONNECTING BARS
Installation Instructions

Tools Required


#3 Phillips head driver

Assembly:

Tandem tables (In-Line and End of Run)

1. Using a #3 Phillips head driver, remove two (2) seat cushion screws from bottom of seat stretcher on the side of chair to which table will be attached. Follow same procedure on the second chair to which the table will be attached.

2. Table stretchers are shaped to fit around chair stretcher. Line up holes and with a #3 Phillips head driver, attach two (2) 1/4"-20 x 1-1/2" long, phillips, pan head machine screws included with the table. Tighten securely. **Do not re-use original seat screws that were removed from chair**.

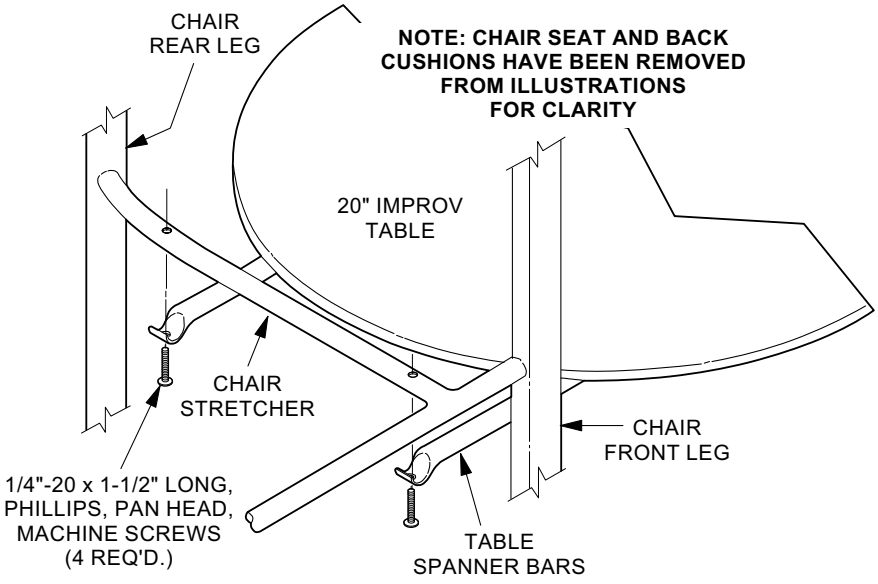

Chair to Chair Connecting Rods

1. Using a #3 Phillips head driver, remove two (2) seat cushion screws from bottom of seat stretcher on the side of chair to which the bars will be attached. Floow same procedure on the second chair to which the bars will be attached.

2. Bars are shaped to fit around chair stretcher. Line up holes and with a #3 Phillips head driver, attach with two (2) 1/4"-20 x 1-1/2" long, phillips, pan head machine screws included with bars. **Do not re-use original seat screws that were removed form chair**.

CHAIR CONNECTING DETAIL




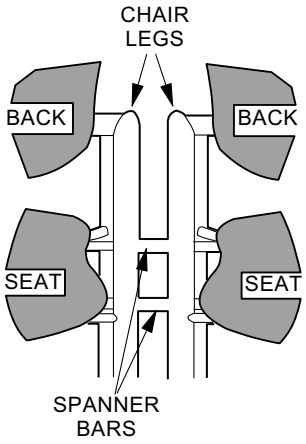


TABLE SPANNER BAR DETAIL

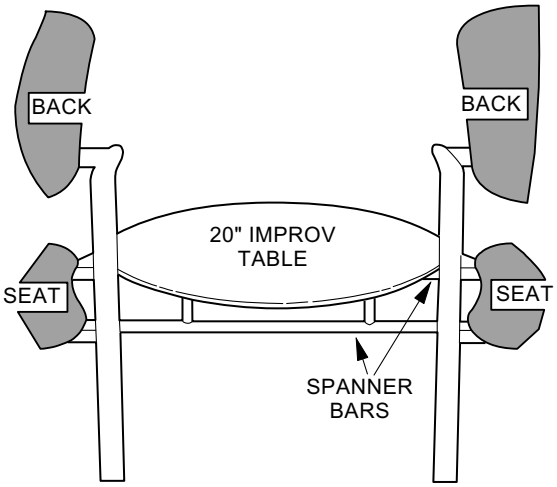





IN-LINE TABLE
CONNECTION



IN-LINE CHAIR
CONNECTION




END-OF-RUN
CONNECTION

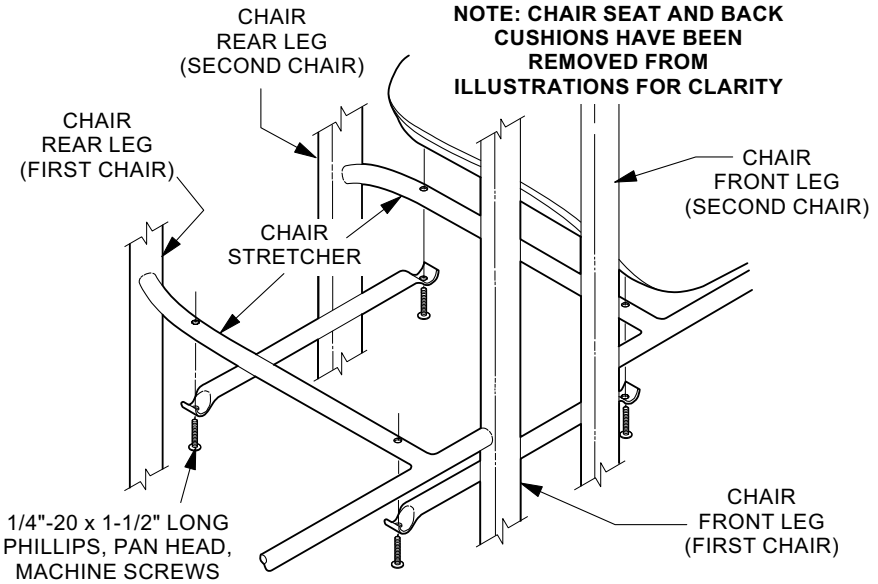

CUSTOMER SERVICE PHONE: 1-800-426-8562

IMPROV
Footrest Cover
Installation Instructions

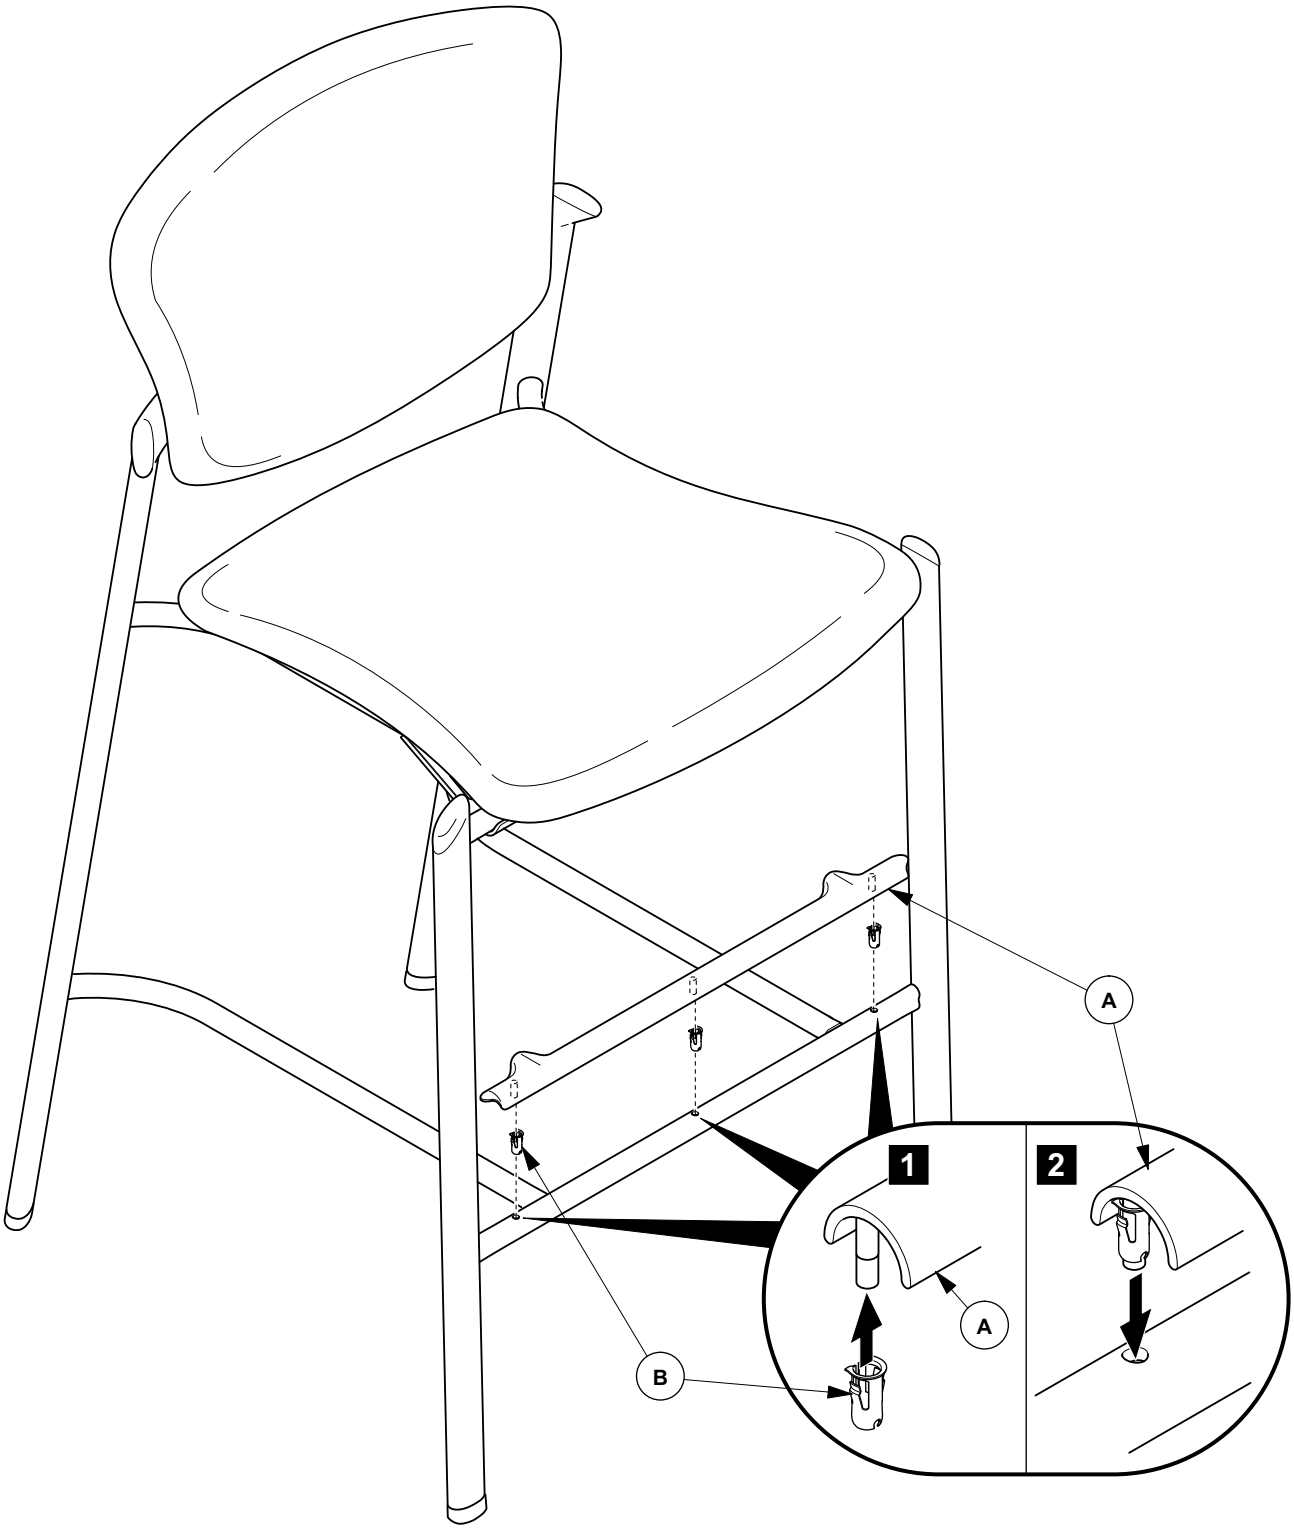

CUSTOMER SERVICE PHONE: 1-800-426-8562