

POPPY®
Service
Installation Instructions


0 1/2 1
1/4 1/4
Scale 1 : 1

Tools Required

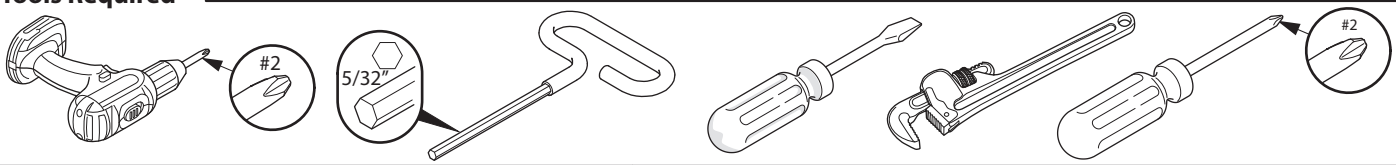

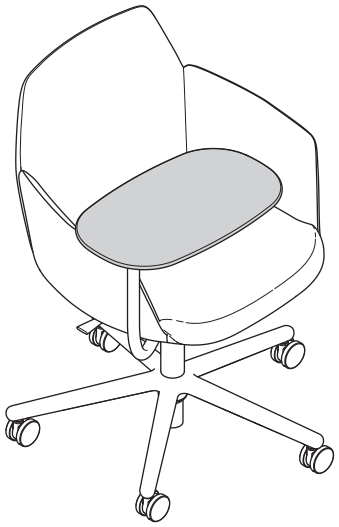



1 Remove tablet

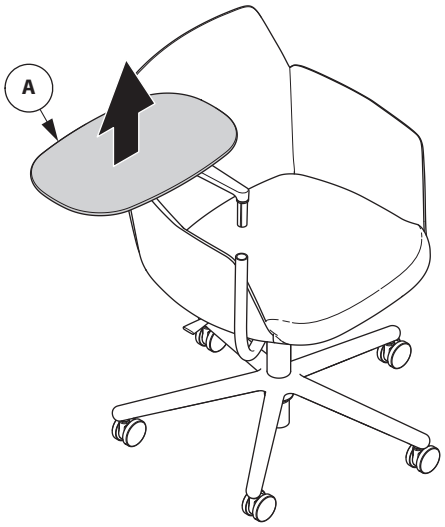

CYLINDER REPLACEMENT

2 Remove base (D) / Reverse to install

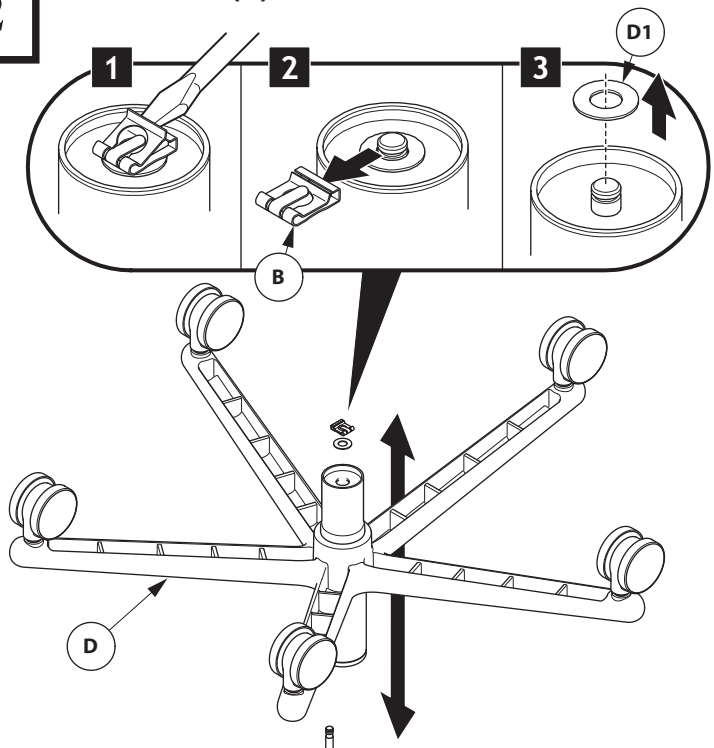


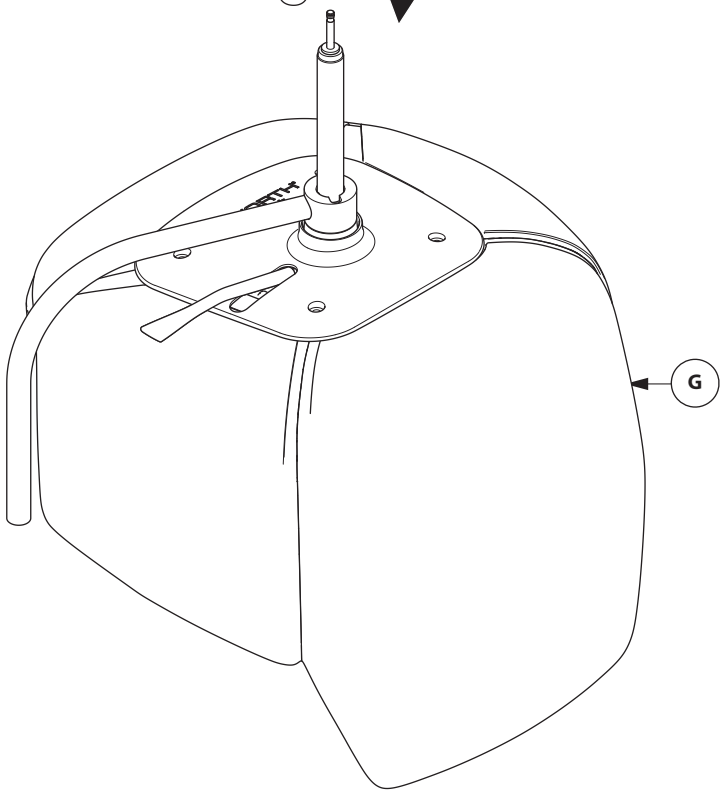

CUSTOMER SERVICE PHONE: 1-800-426-8562


TABLET ARM REPLACEMENT

3 **Remove tablet arm (C) / Reverse to install**

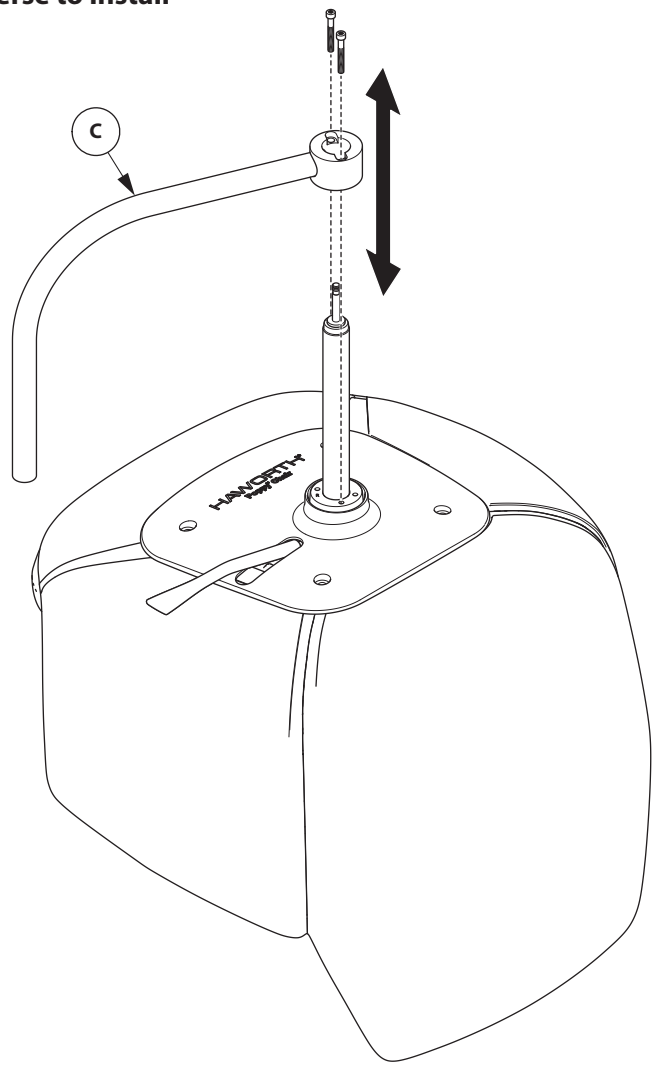


CYLINDER REPLACEMENT

4 **Remove cylinder (D1) / Reverse to install**

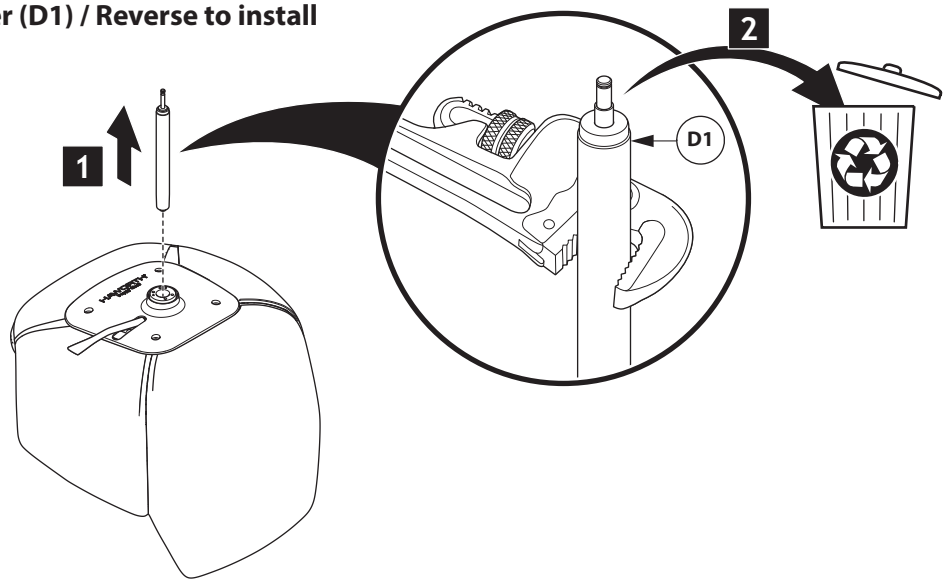


BASE TRIM REPLACEMENT

5 **Remove base trim (E) / Reverse to install**

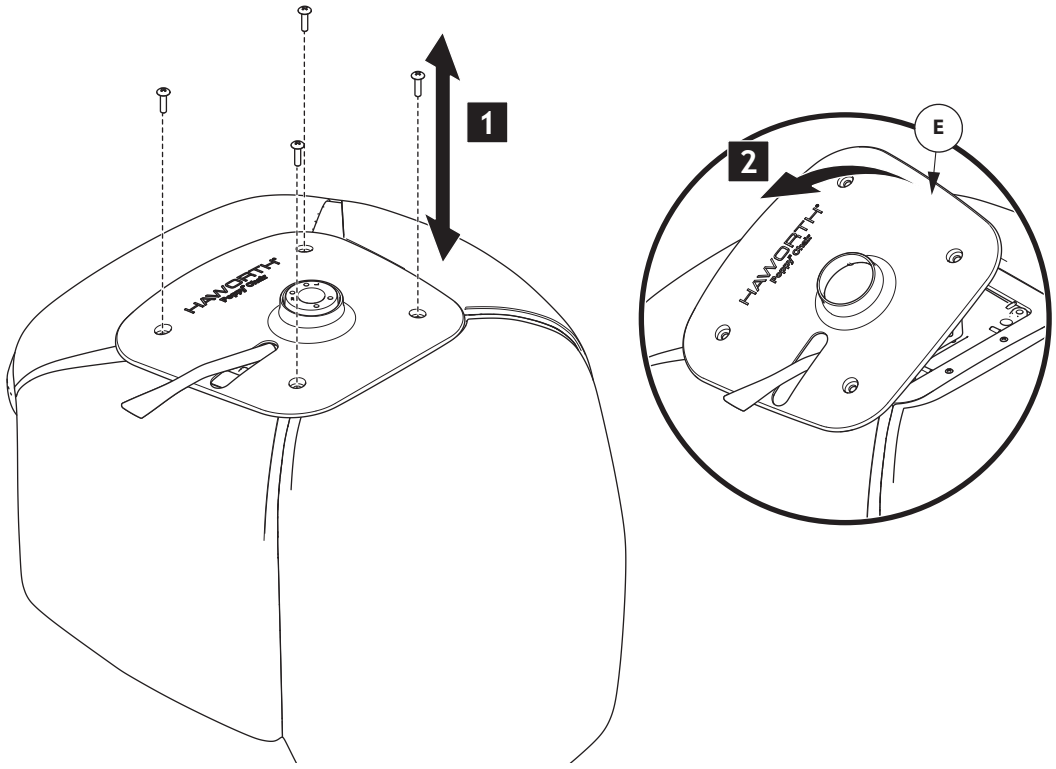


MECH/LEVER REPLACEMENT


6 **Remove mech/lever (C1) / Reverse to install**

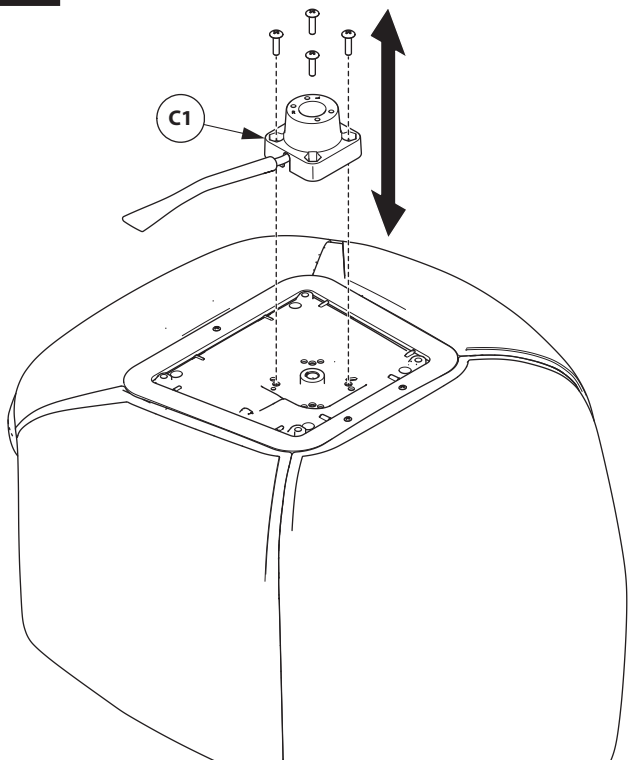

7

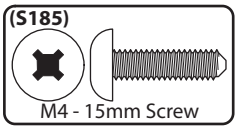


Torque = 30in-lbs

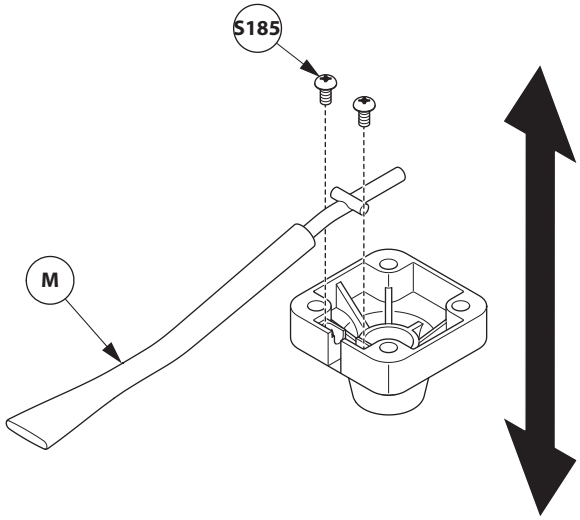

8 Assemble tablet arm (B) to tablet top (A)

NOTE: Use cardboard or other material to protect product finish.

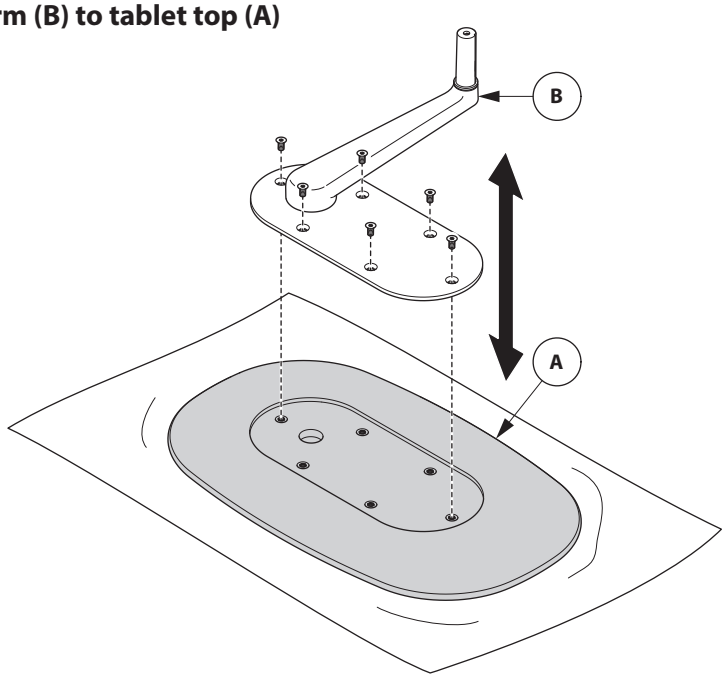

9 Insert tablet arm (B) into chair arm (C)

