VERY®

Chair Back Assembly


Installation Instructions

0 1/2 1

1/4 1/4


Scale 1 : 1


Tools Required

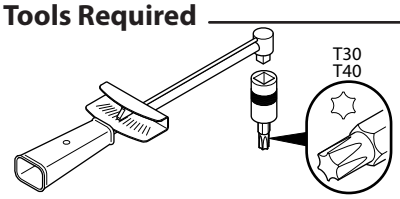


1 Install back (A)


NOTE: Torque to specs.
DO NOT USE POWER DRIVER!

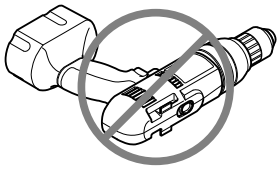

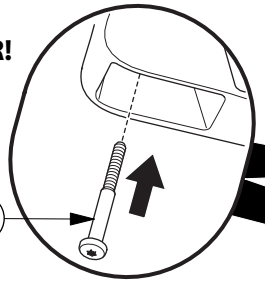

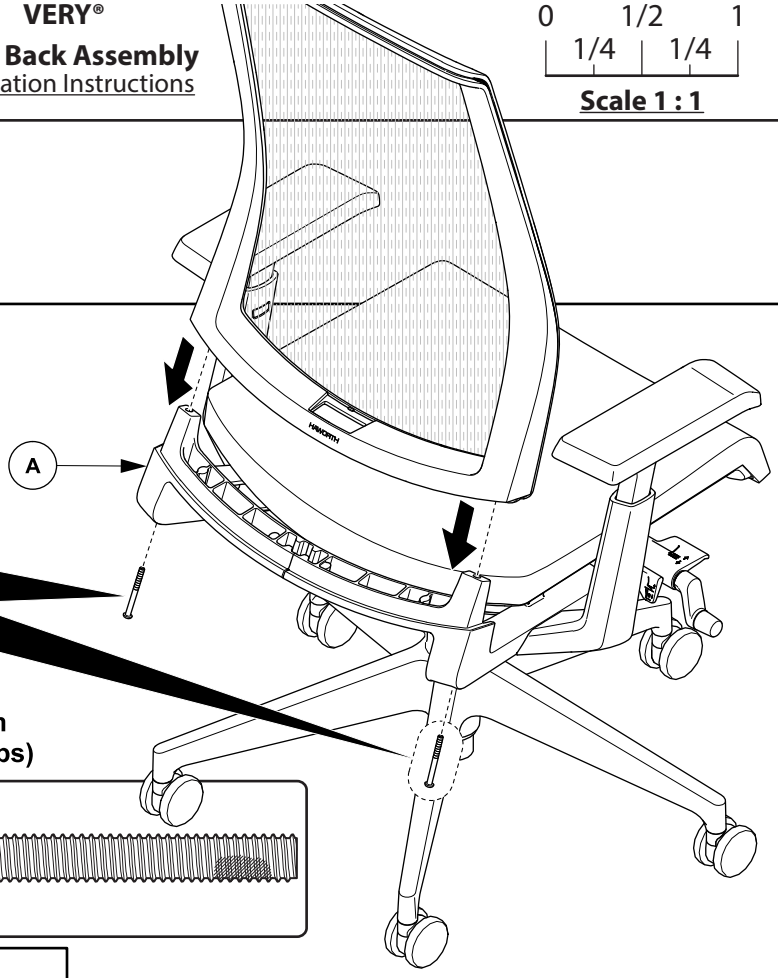



Torque =13.5 N-m (120in-lbs)

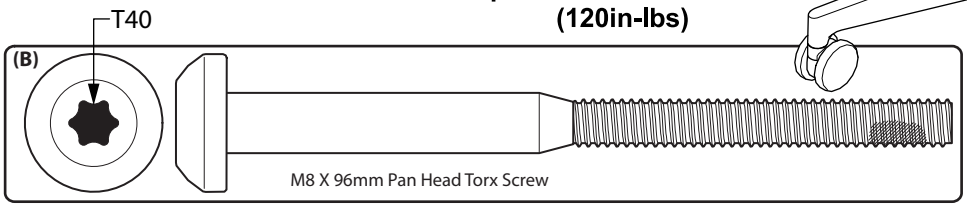


2 Install item (C)

NOTE: Torque to specs.
DO NOT USE POWER DRIVER!

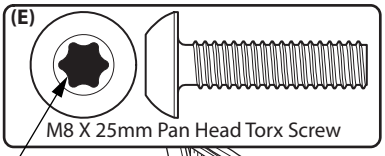

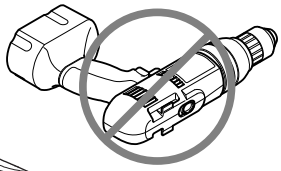

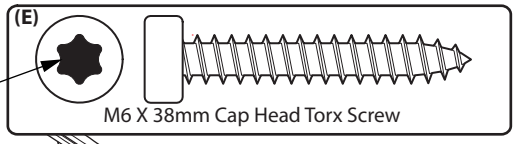

Torque = 7 N-m (65in-lbs)

Torque = 11 N-m (95in-lbs)

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH	E.C.O. No: 5_22847	Page: 1 of 1	Part No: 7029-9714	Rev: 1