
ZODY II / Zody LX
Chair Back Assembly
Installation Instructions


0 1/4 1/2 1/4 1

Scale 1 : 1

Tools Required

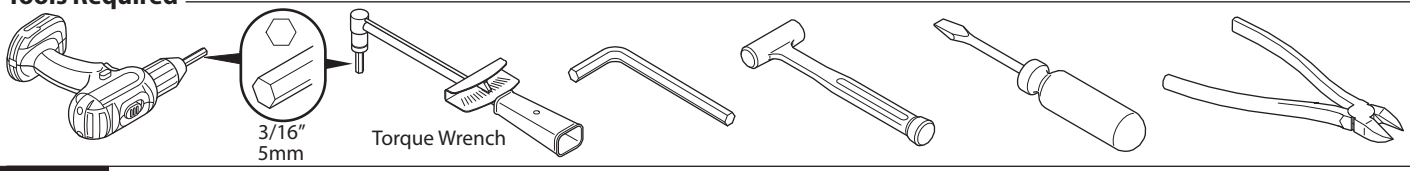


PARTS

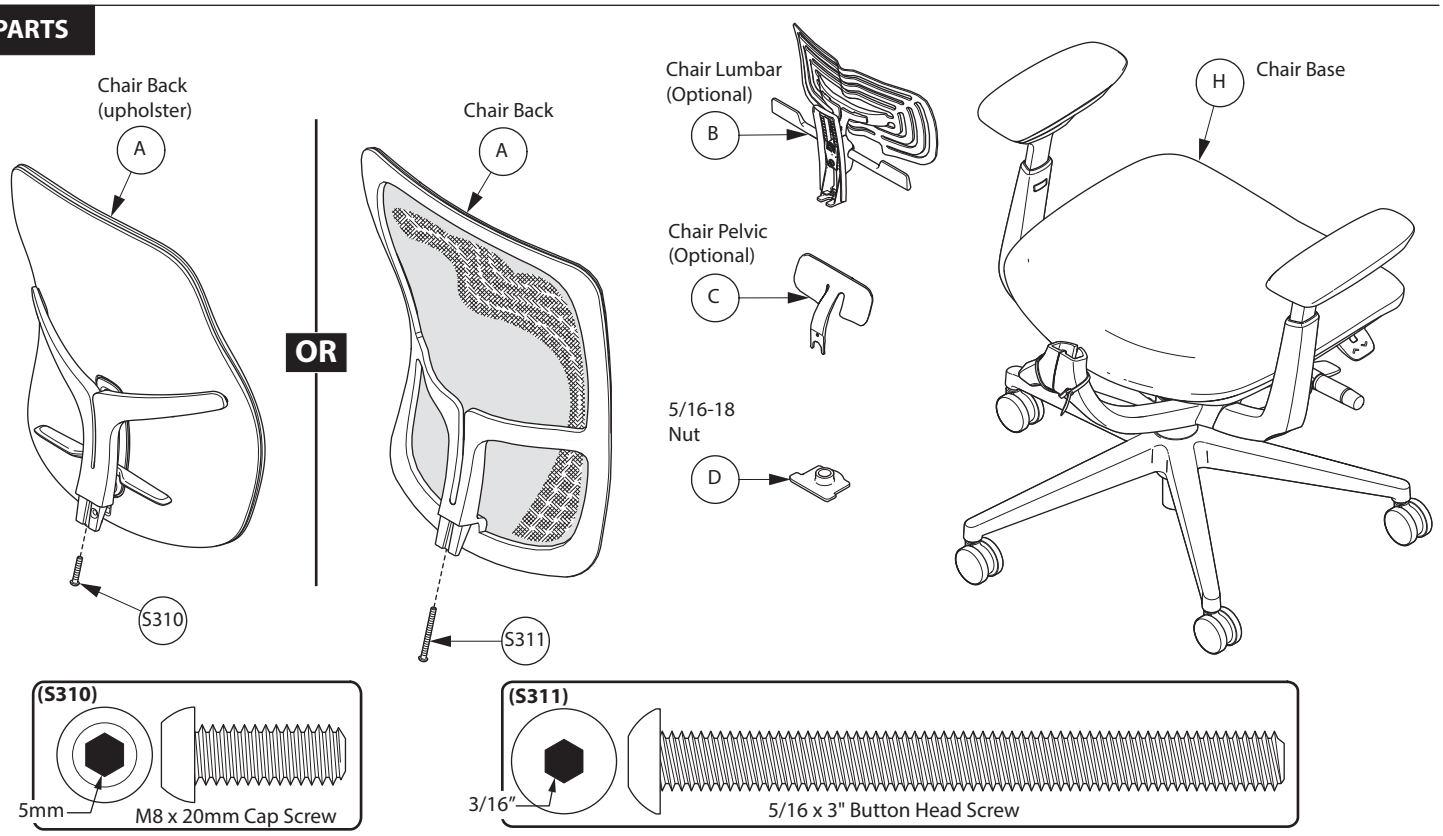


FOR MESH BACK ASSEMBLY ONLY

1 **Slide lumbar (B) between frame and fabric as shown**

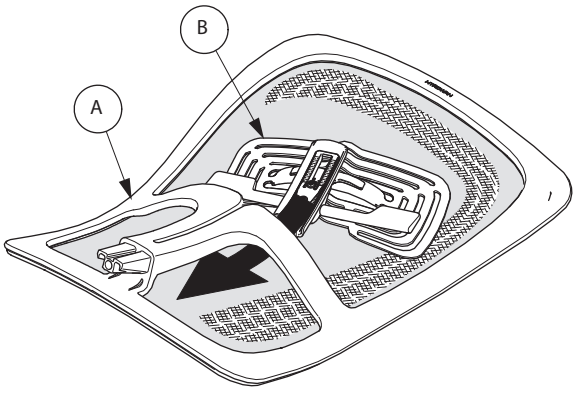


2 **Insert chair back (A)**

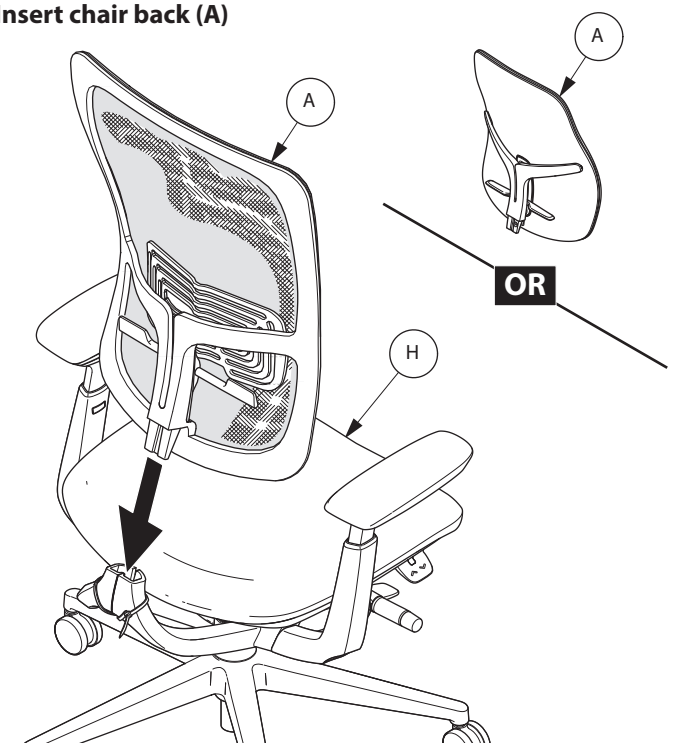

CUSTOMER SERVICE PHONE: 1-800-426-8562

3


Cut and remove zip tie (K)

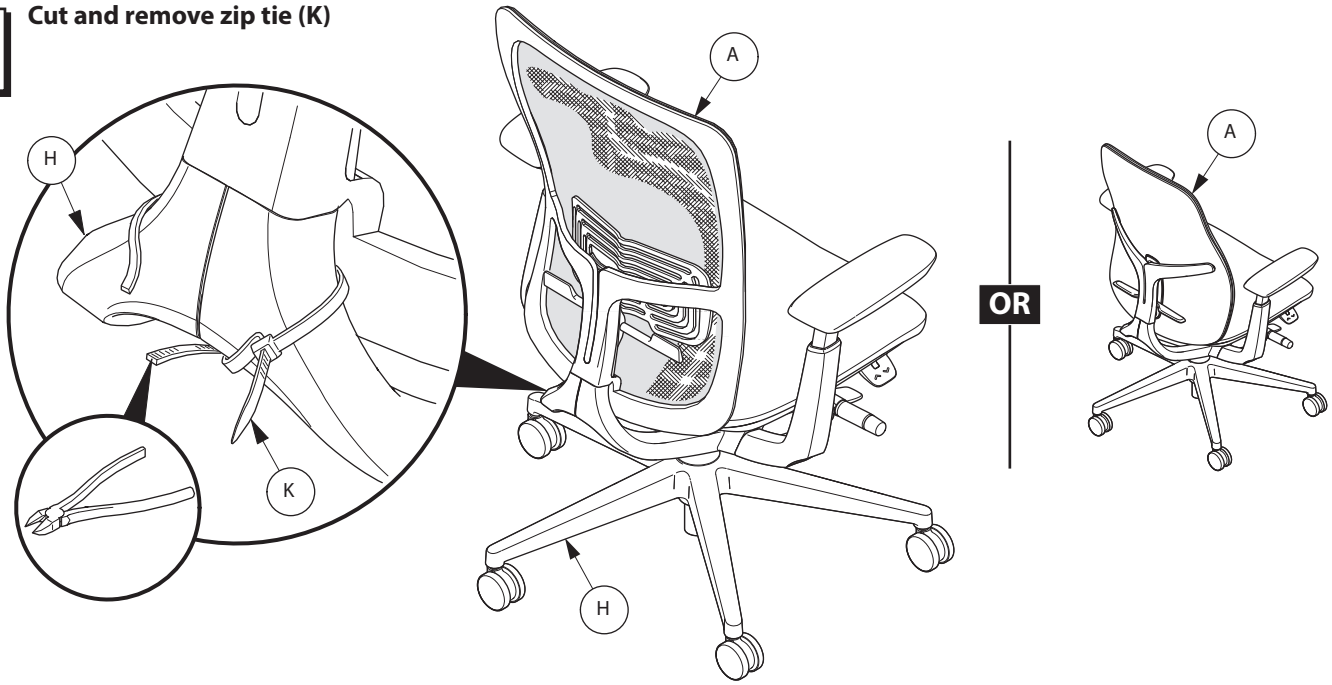


CHAIR WITHOUT LUMBAR

4a

Secure chair back (A) to base (H)

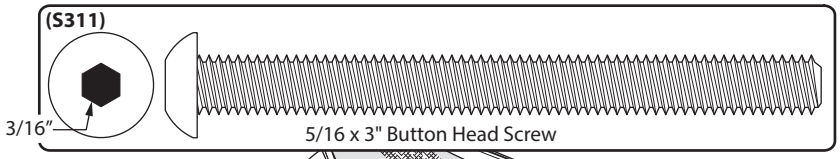


Torque = 8.5 N-m (75in-lbs)

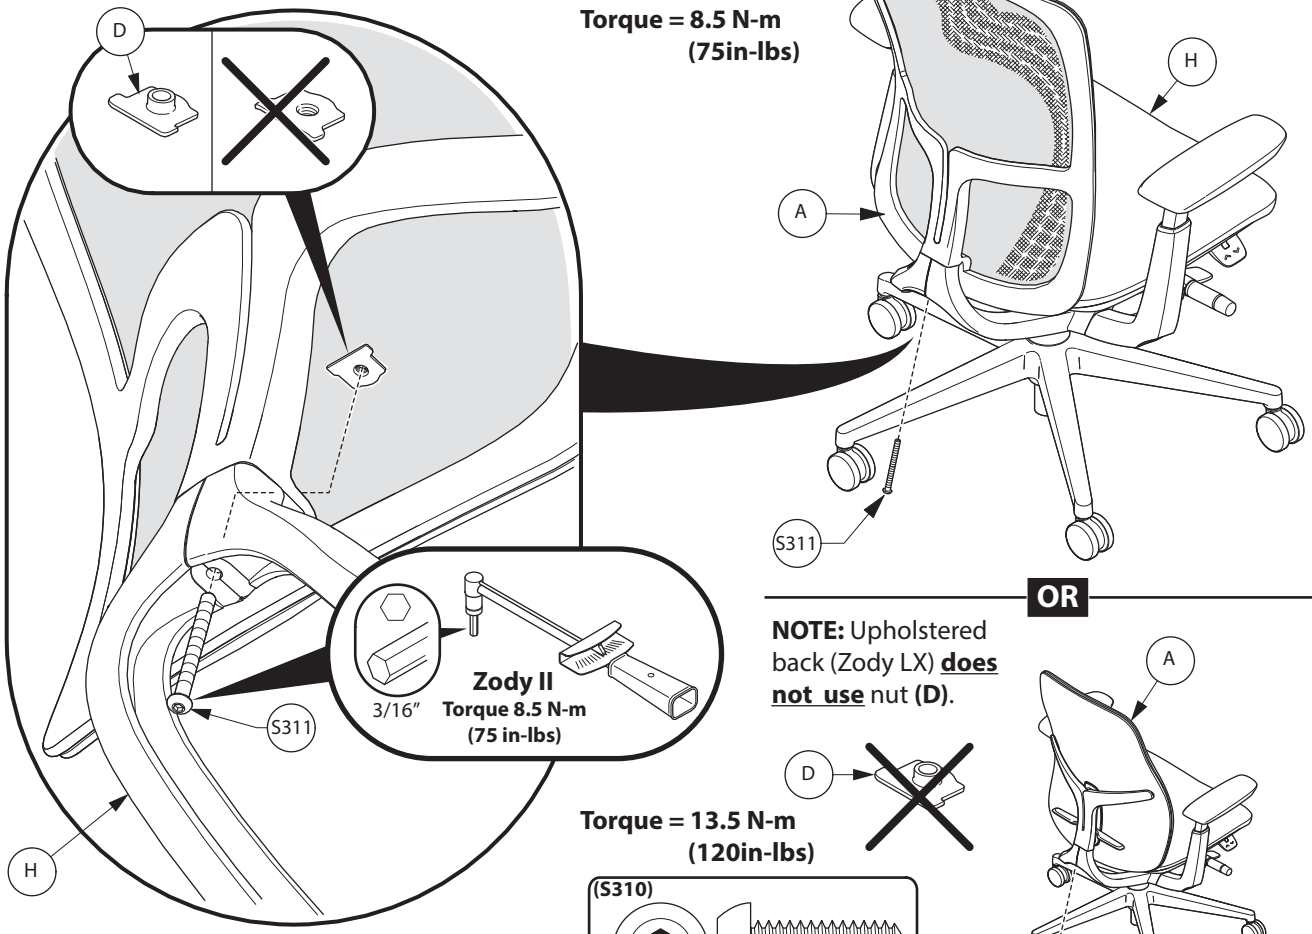

OR


NOTE: Upholstered back (Zody LX) **does not use** nut **(D)**.

Torque = 13.5 N-m (120in-lbs)

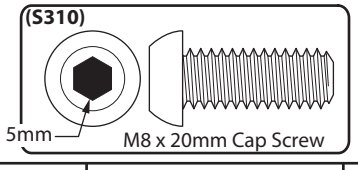


CHAIR WITH LUMBAR - FOR MESH BACK ASSEMBLY ONLY

4b **Secure chair back (A) to base (H)**

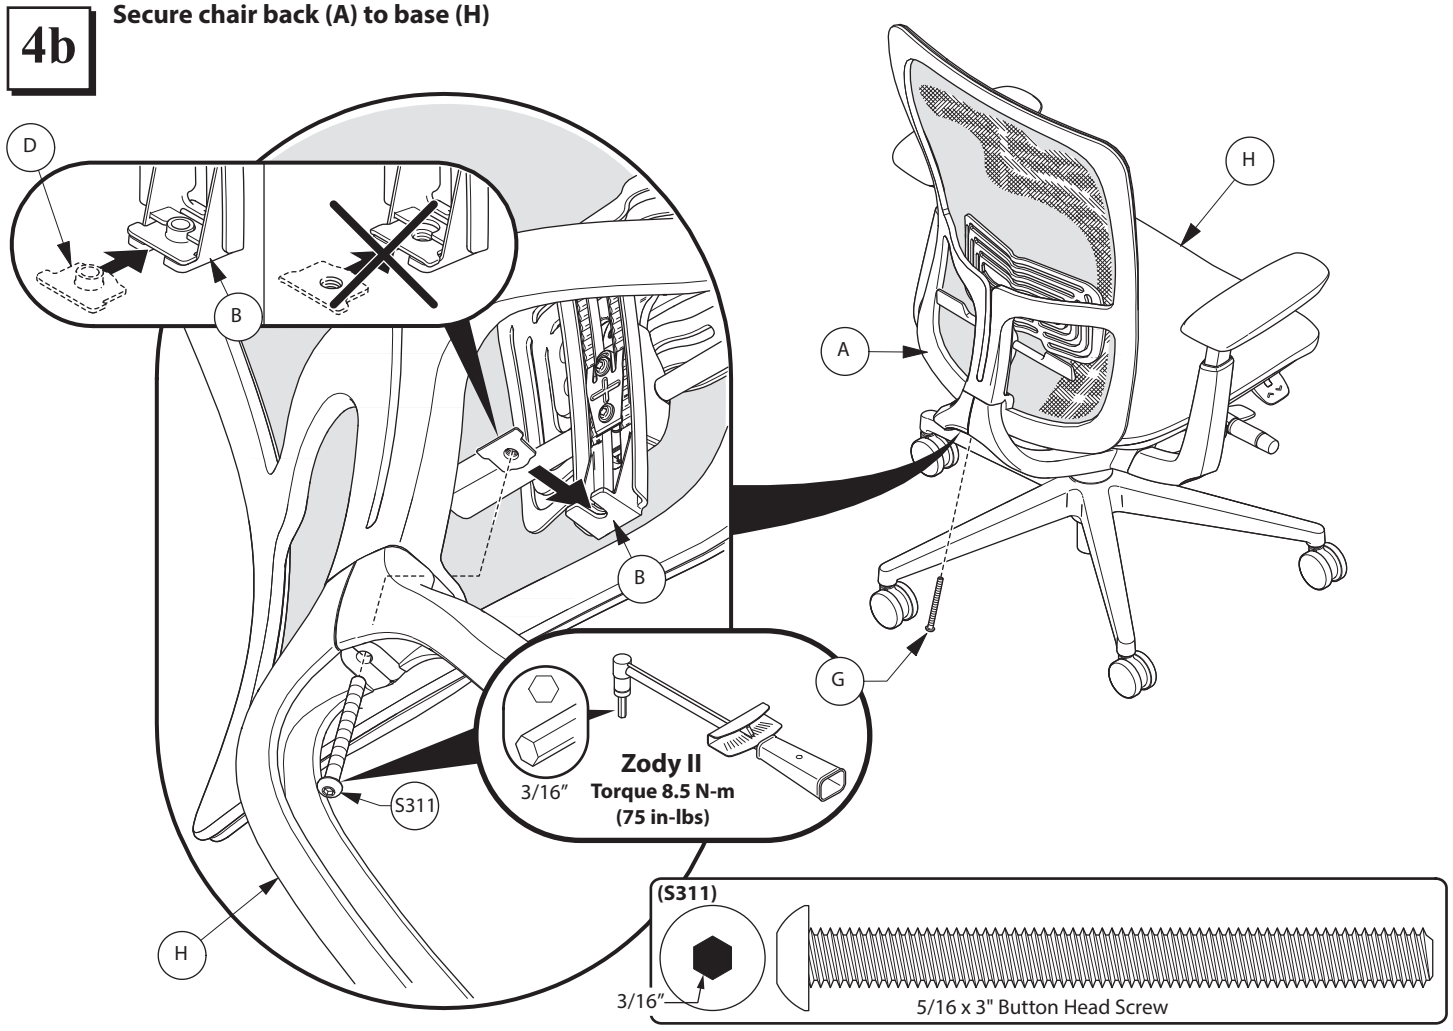


CHAIR WITH LUMBAR AND PELVIC - FOR MESH BACK ASSEMBLY ONLY

5 **Snap pelvic (C) into back of chair (A)**

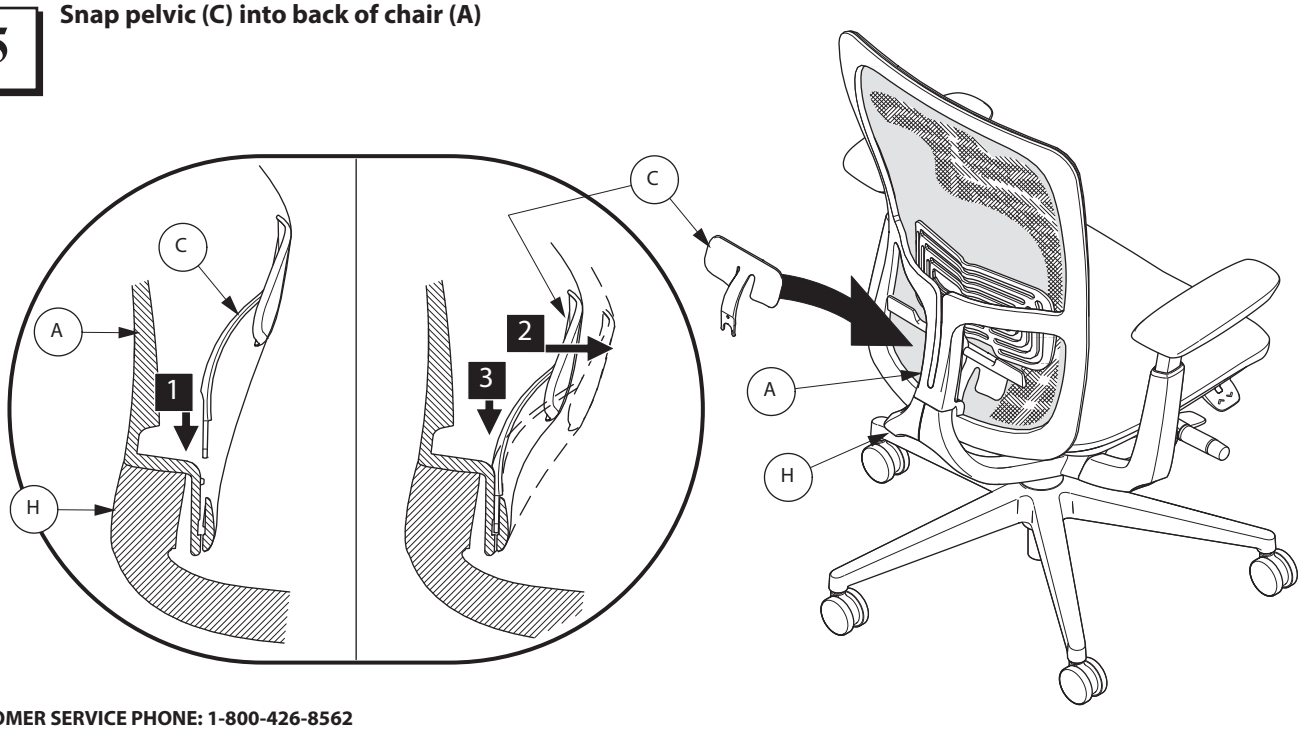

CHECK PELVIC - FOR MESH BACK ASSEMBLY ONLY

6 **Pull up on pelvic (C)**

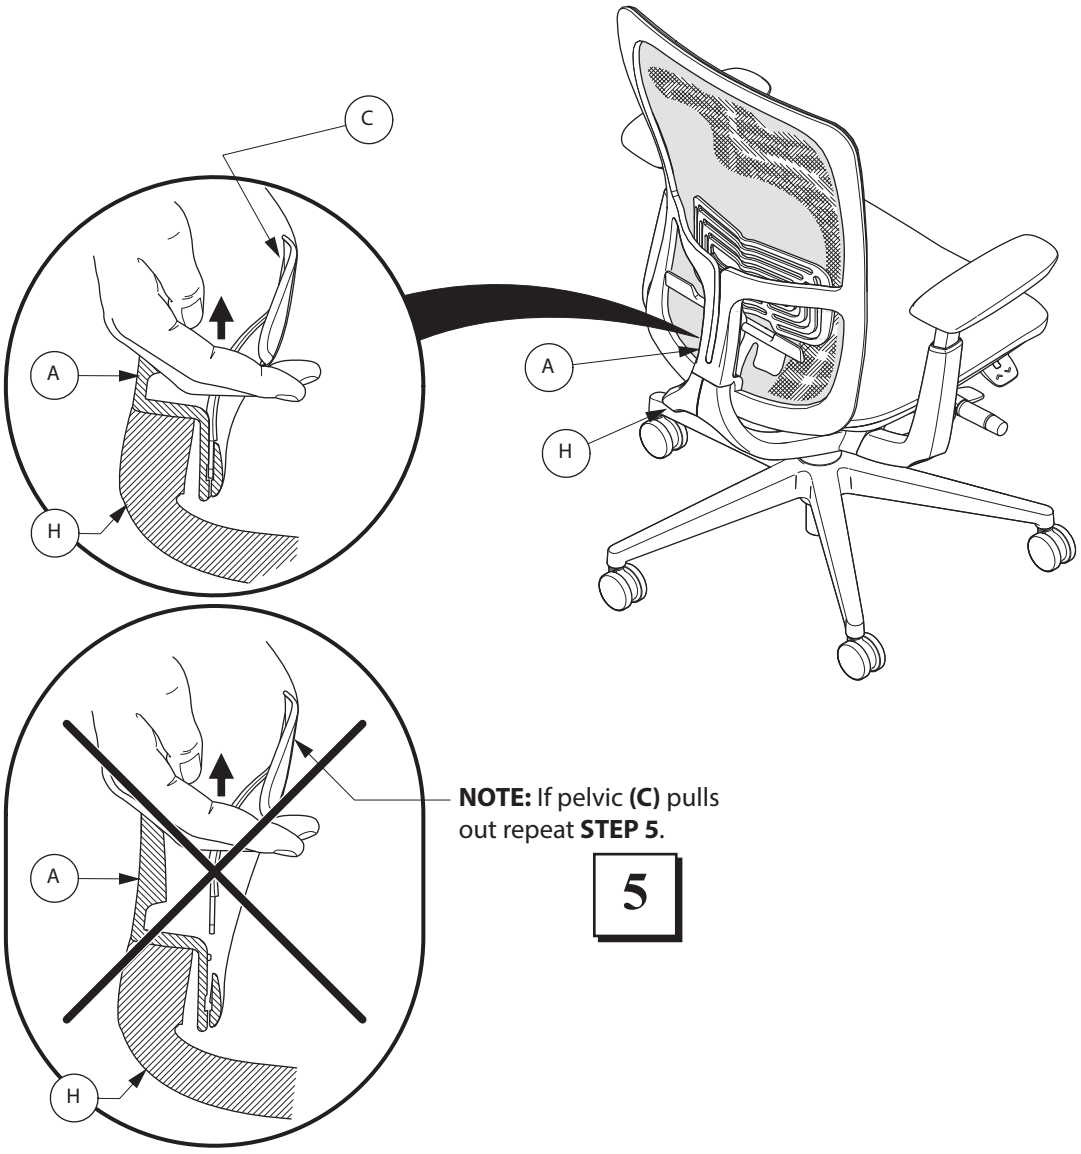

NOTE: If pelvic **(C)** pulls out repeat **STEP 5**.

5