

ZODY®


Chair Back Assembly

Installation Instructions

Tools Required

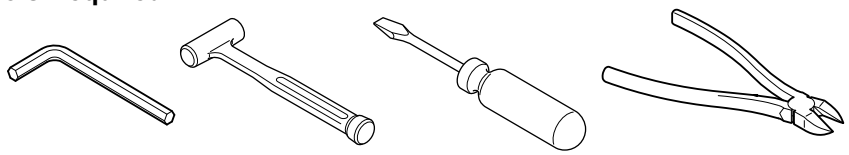

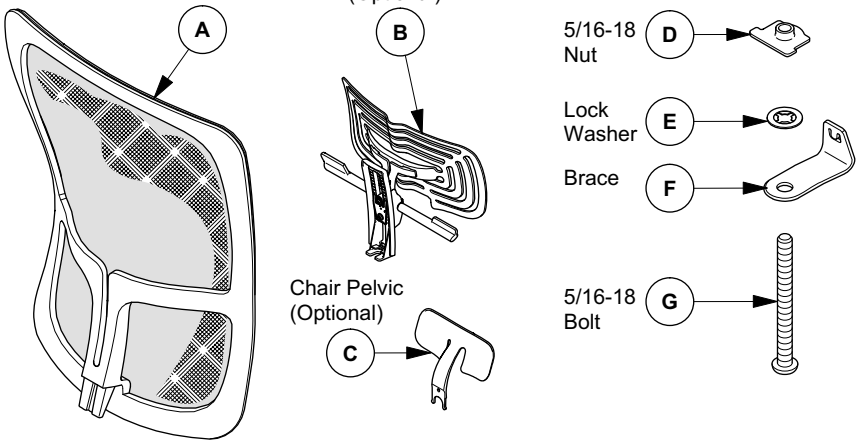

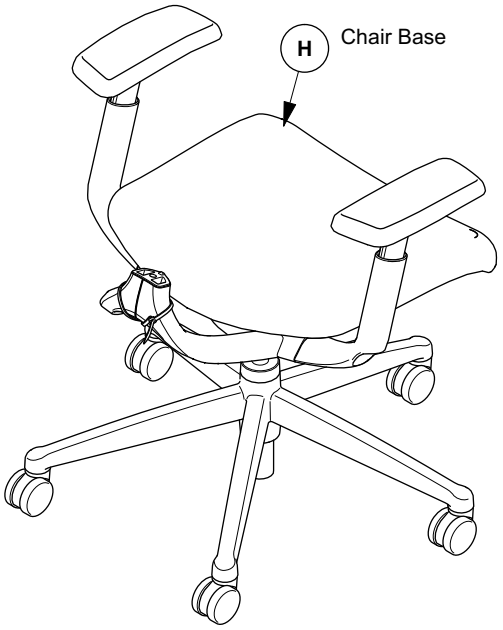


1 Remove plug (J)

IMPORTANT: DO NOT REMOVE ZIP TIE (K) AT THIS TIME!




2 Slide lumbar (B) between frame and fabric as shown

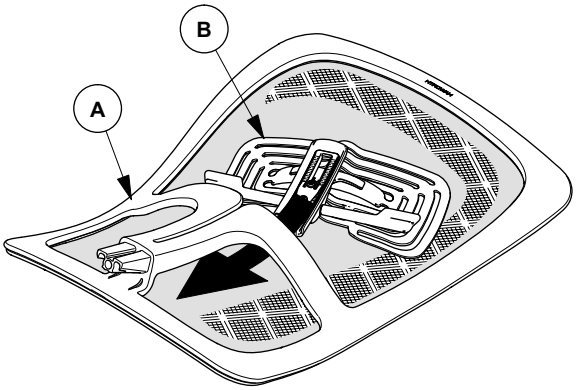


CUSTOMER SERVICE PHONE: 1-800-426-8562

2 Insert chair back (A)

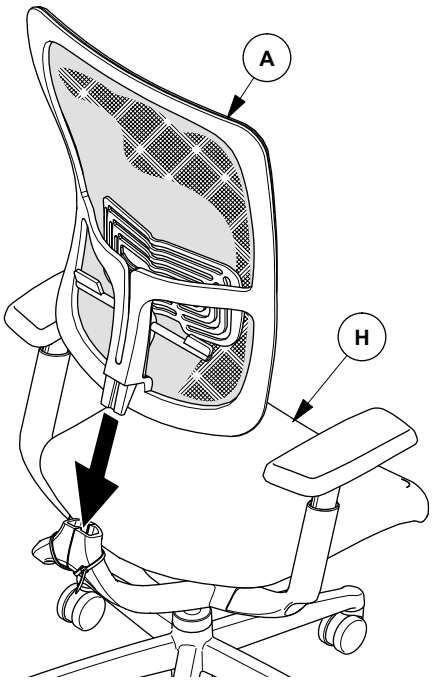


3 Cut and remove zip tie (K)

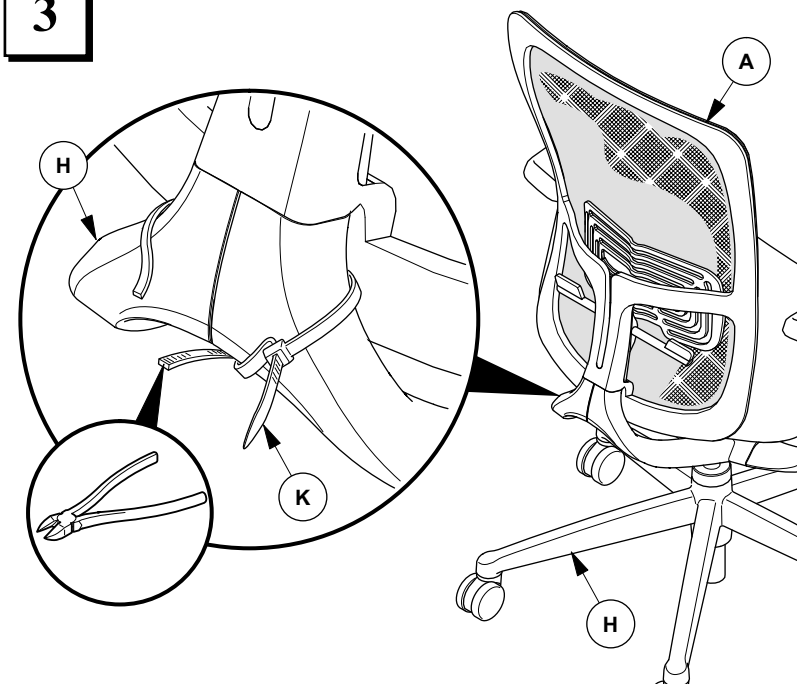

CHAIR WITHOUT LUMBAR

4 Secure chair back (A) to base (H)

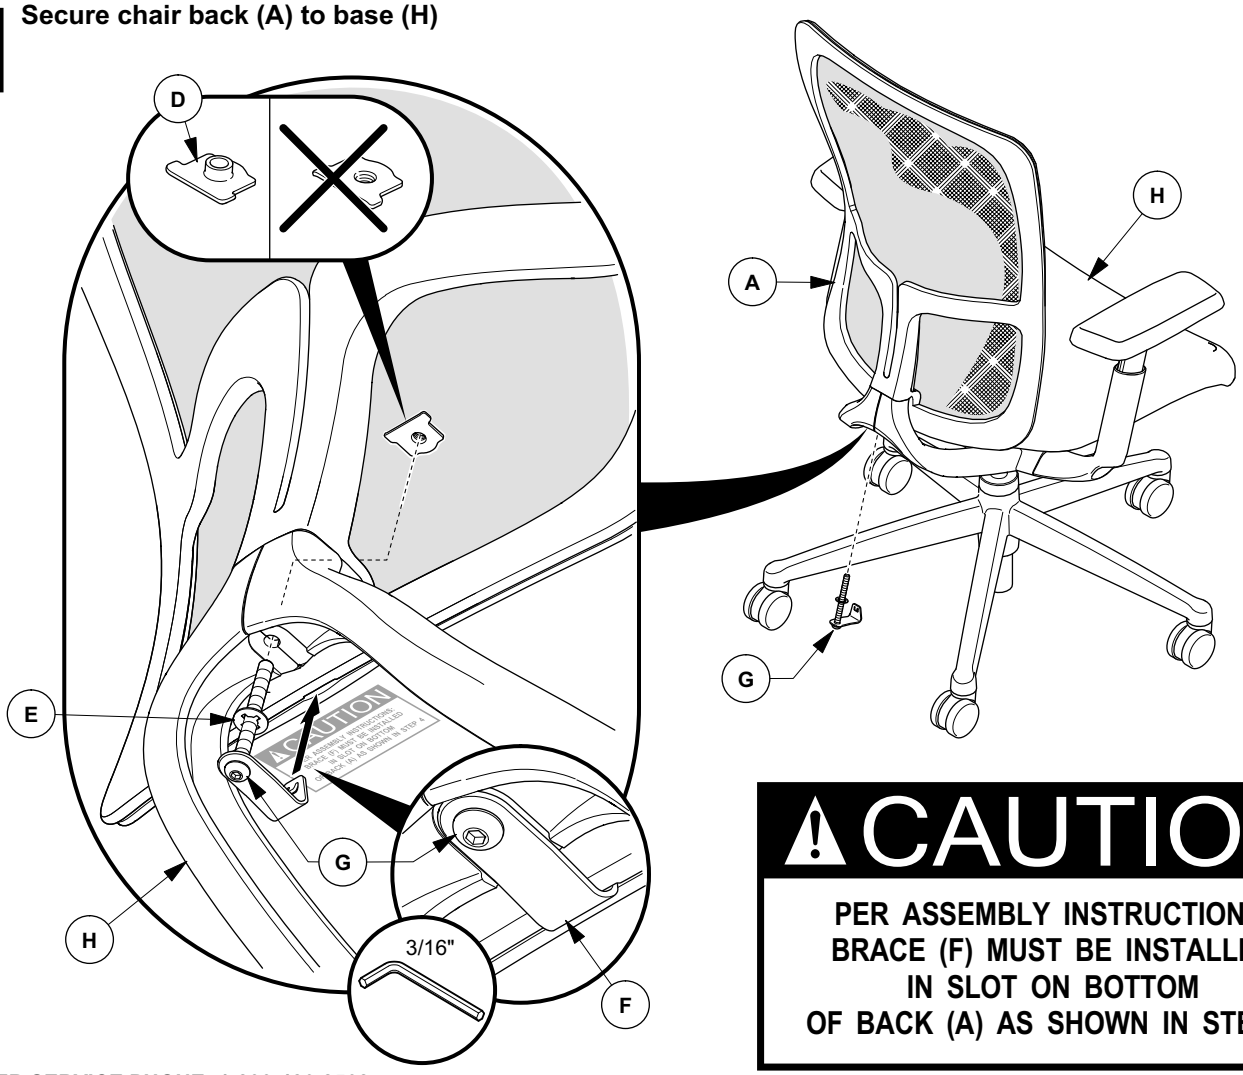


⚠ CAUTION

**PER ASSEMBLY INSTRUCTIONS:
BRACE (F) MUST BE INSTALLED
IN SLOT ON BOTTOM
OF BACK (A) AS SHOWN IN STEP 4**

CHAIR WITH LUMBAR

4 Secure chair back (A) to base (H)

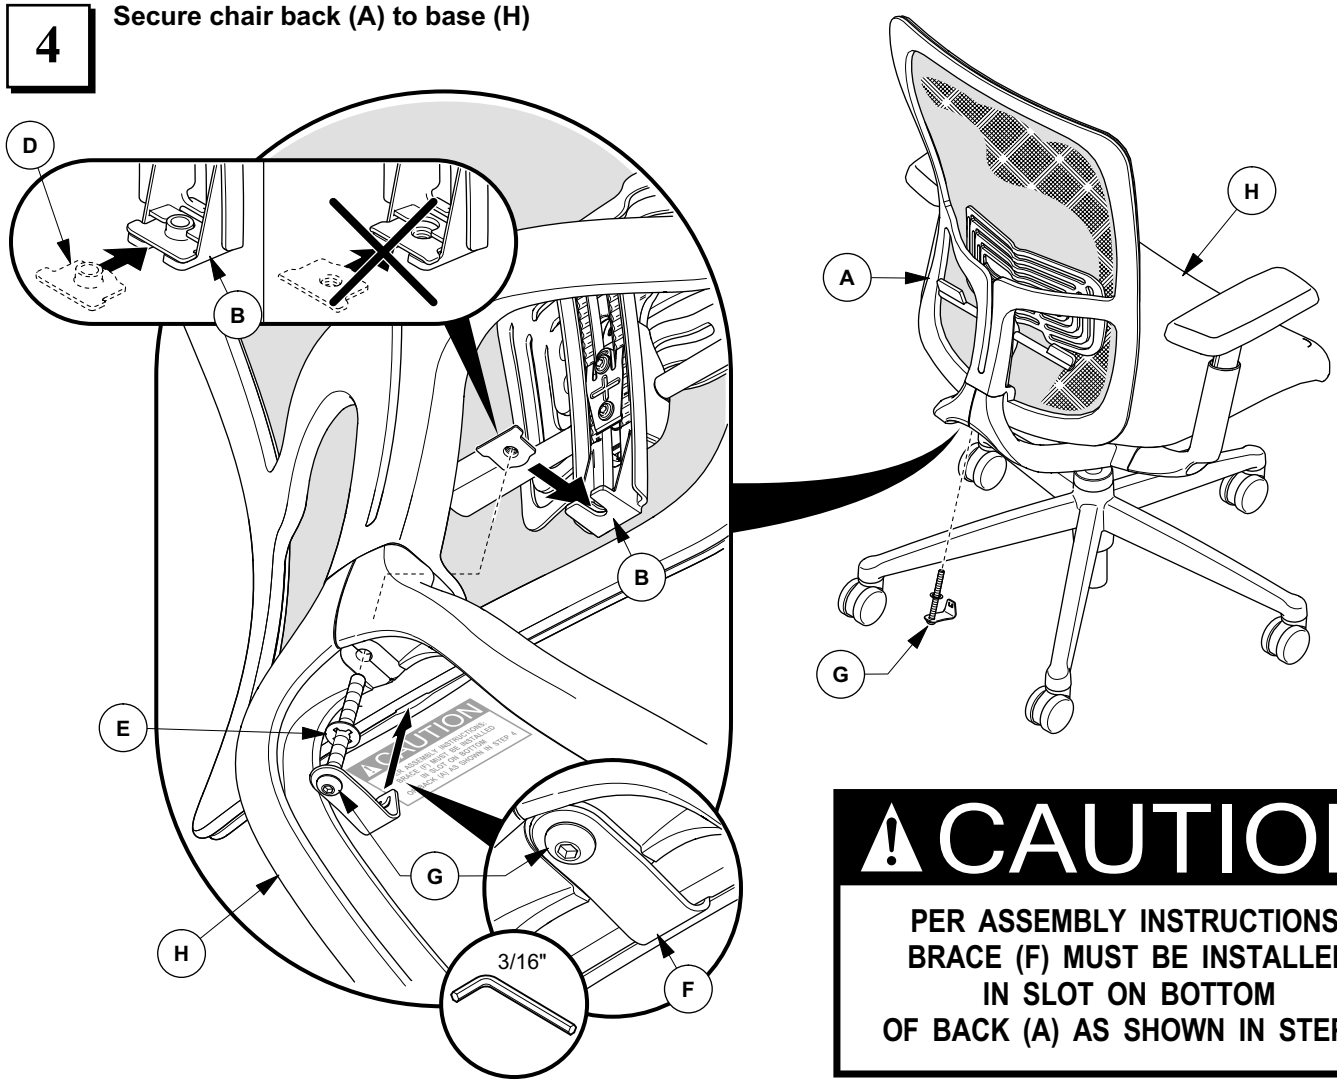


⚠ CAUTION

**PER ASSEMBLY INSTRUCTIONS:
BRACE (F) MUST BE INSTALLED
IN SLOT ON BOTTOM
OF BACK (A) AS SHOWN IN STEP 4**


CHAIR WITH LUMBAR AND PELVIC

5 Snap pelvic (C) into back of chair (A)

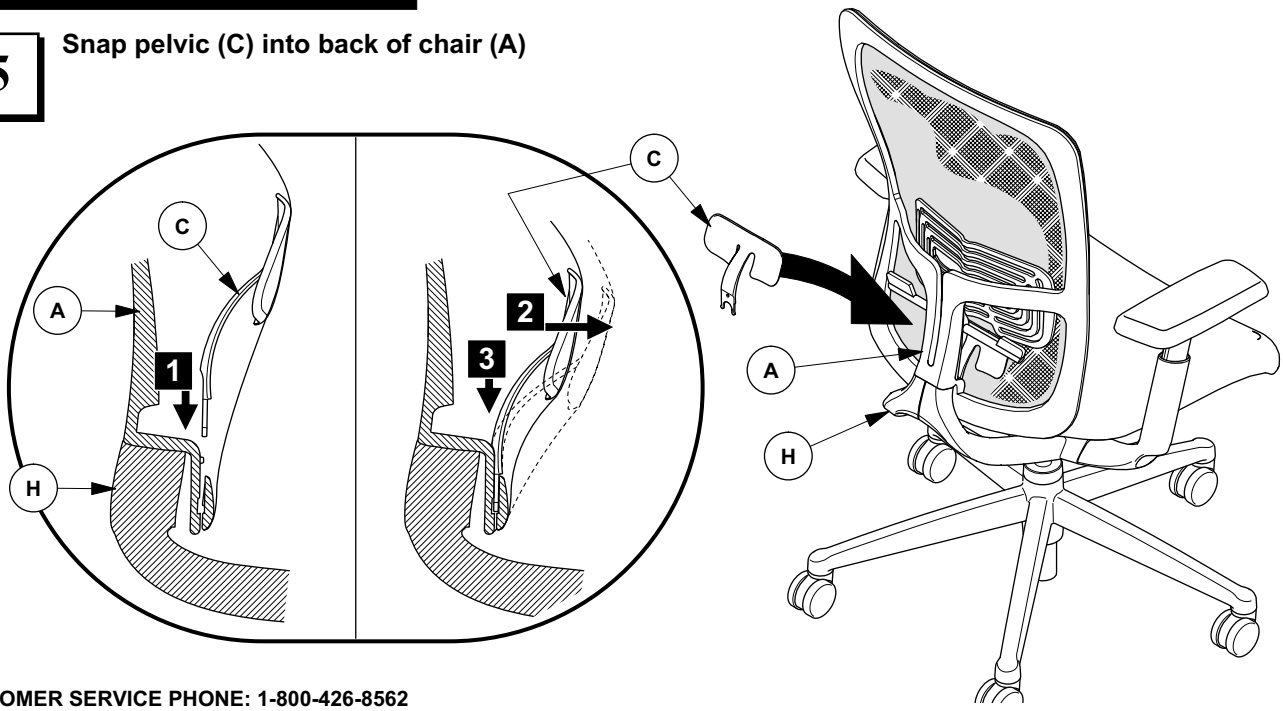

CHECK PELVIC

6 **Pull up on pelvic (C)**

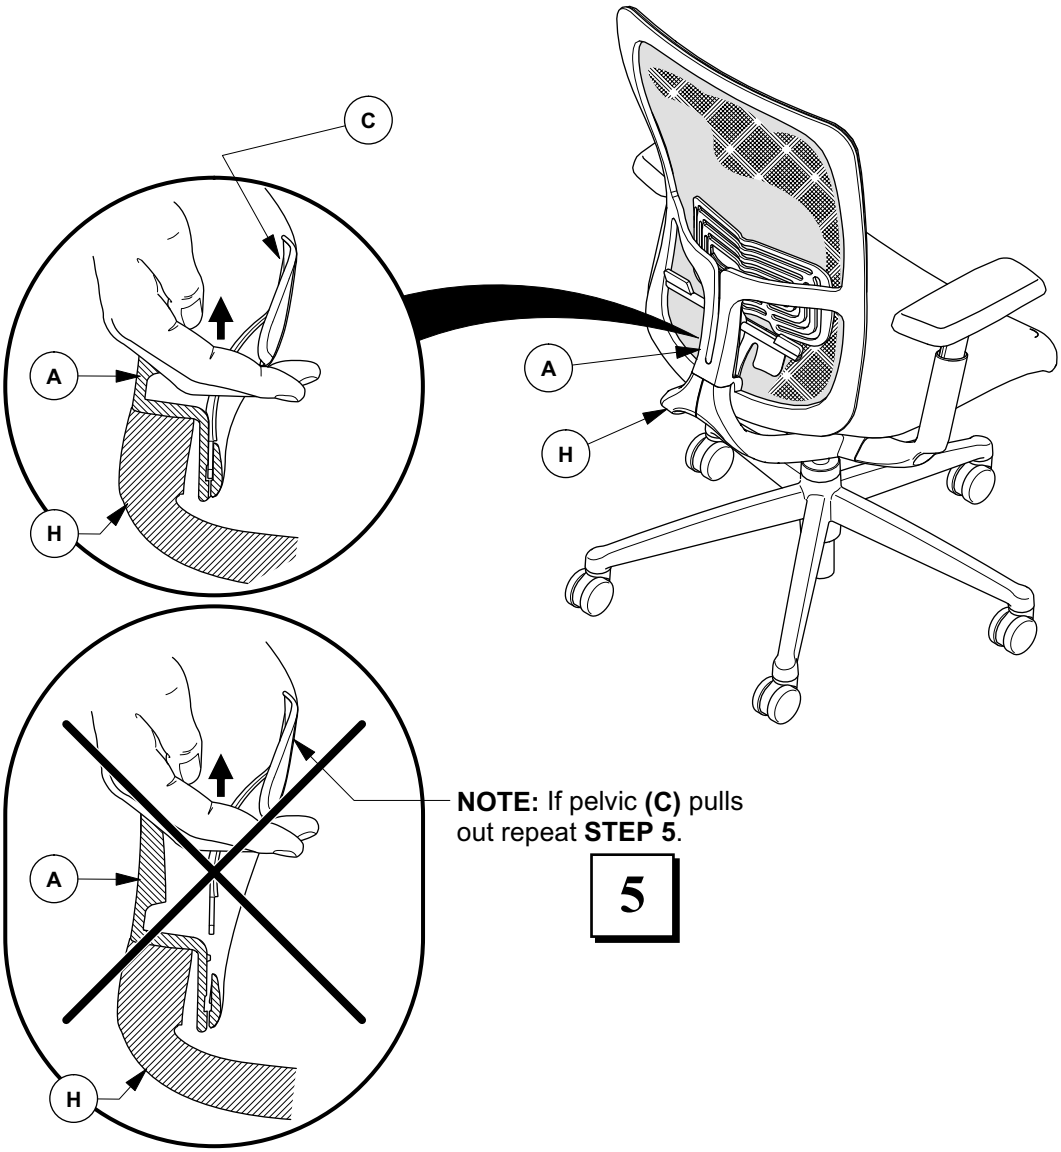

NOTE: If pelvic **(C)** pulls out repeat **STEP 5**.

5