
TBD ®


Functional Screen

Installation Instructions

Tools Required

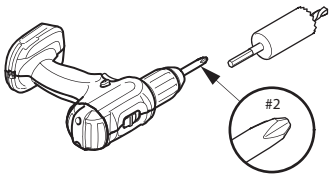


(B)



#8-11 x 7/16" Pan Head


NOTE: For hardwire modules **(A)** you must drill a hole in worksurface.

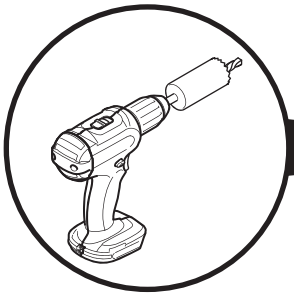

HARDWIRE MODULE

OR

CORDED MODULE

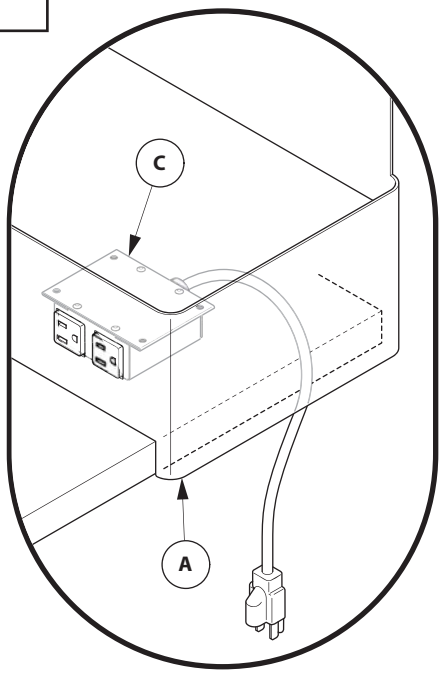

NOTE: For corded modules **(A)** route plug around worksurface.



CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®	E.C.O. No: 355-001	Page: 1 of 1	Part No: 7029-9960	Rev: 1