
IMPORTANT NOTICE: This instruction is for Storage Boxes ordered after 10/27/14. Note the hardware changes used to assembly the product.


Wall Mount Storage Box


Installation Instructions


Tools Required

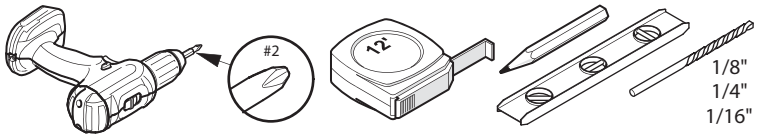


UNITS SHIPPED UN-ASSEMBLED

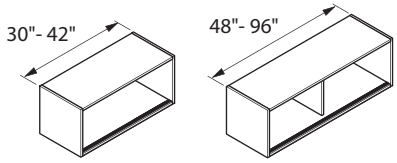

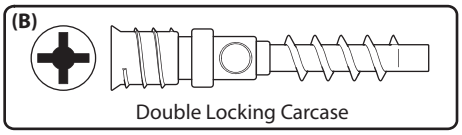


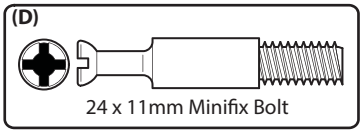

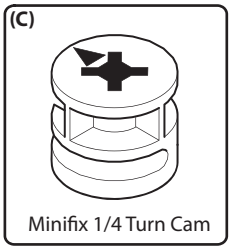


OR


UNITS SHIPPED ASSEMBLED

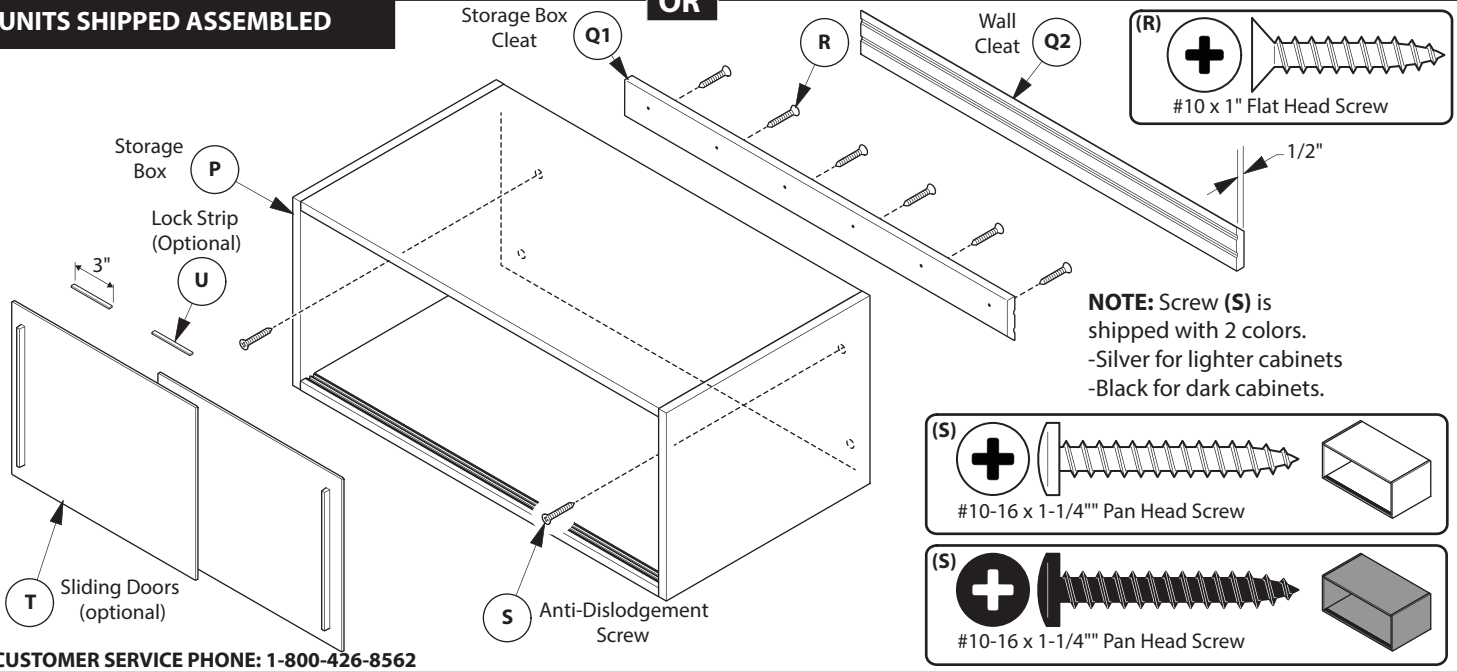



NOTE: Screw **(S)** is shipped with 2 colors.
-Silver for lighter cabinets
-Black for dark cabinets.


CUSTOMER SERVICE PHONE: 1-800-426-8562

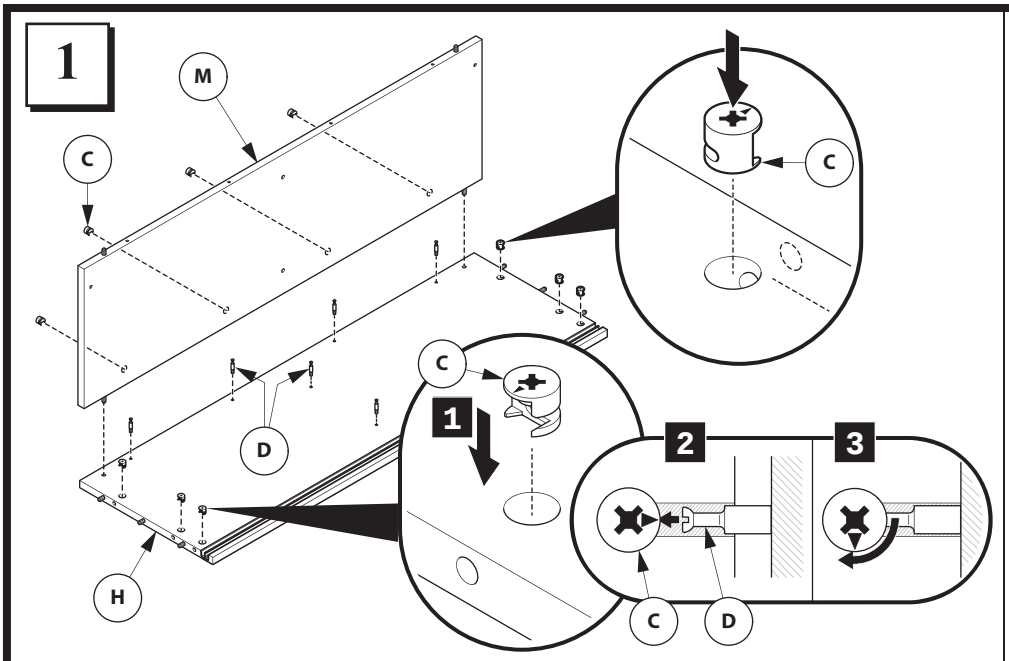


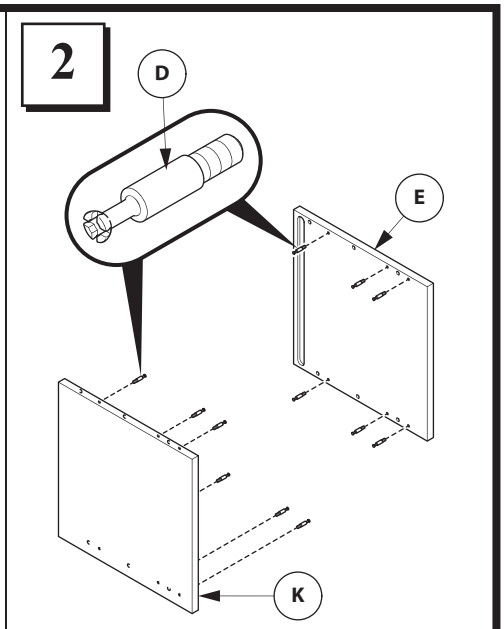

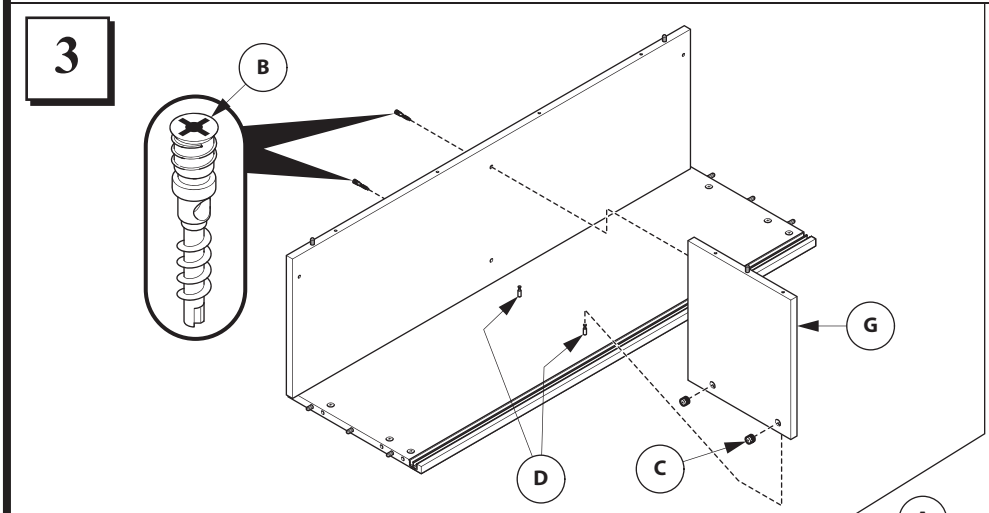

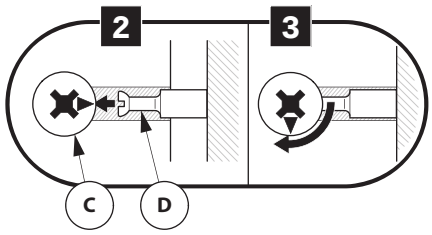


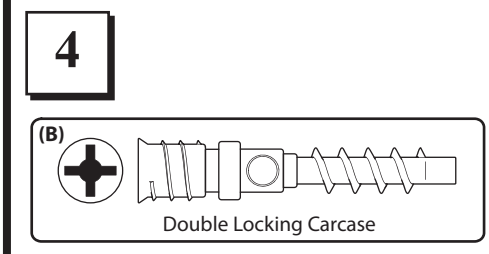

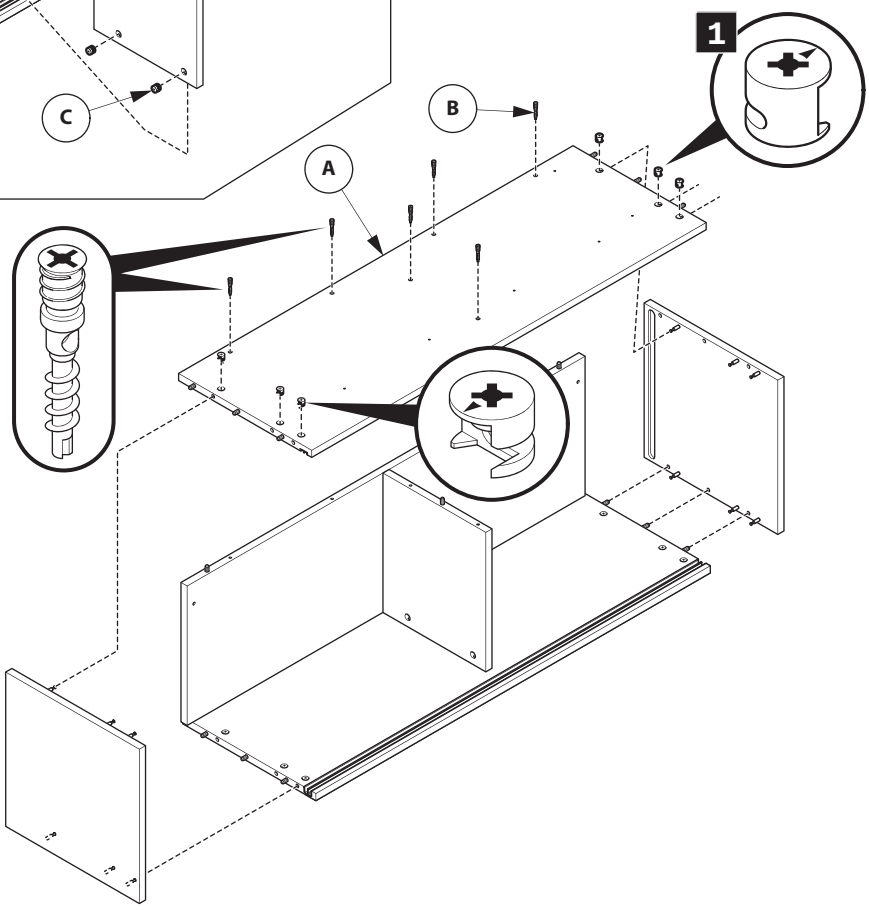


CUSTOMER SERVICE PHONE: 1-800-426-8562

1 If present remove screws (as shown)

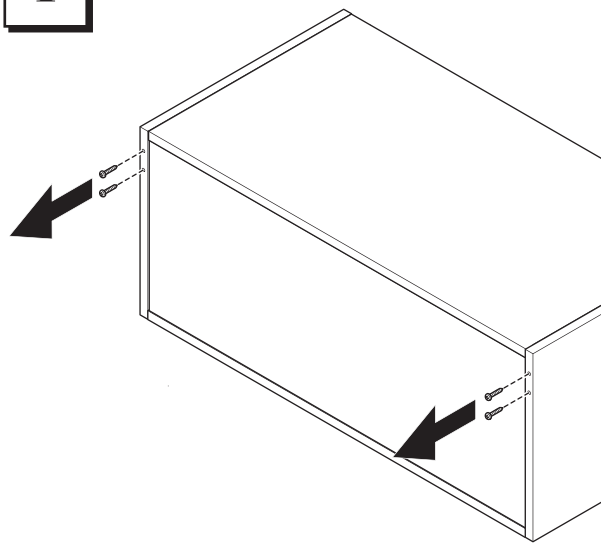


2 Install cleat (Q1)

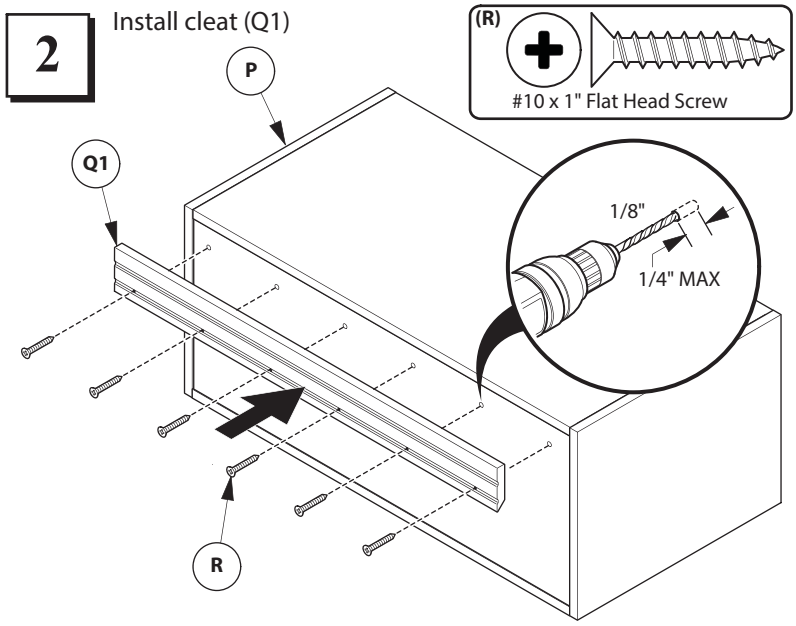



WALL TRACK ATTACHMENT OPTIONS

3 Locate holes using wall cleat (Q2) as template


FOR WOOD STUDS

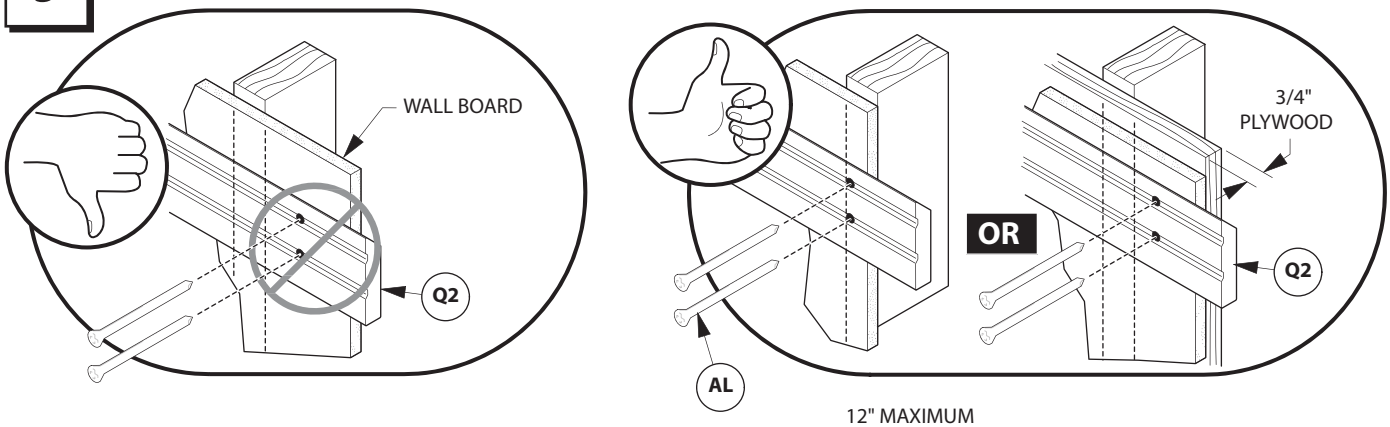

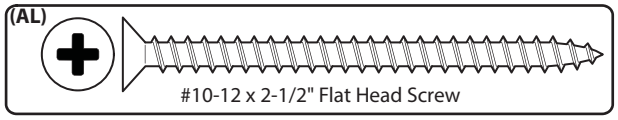

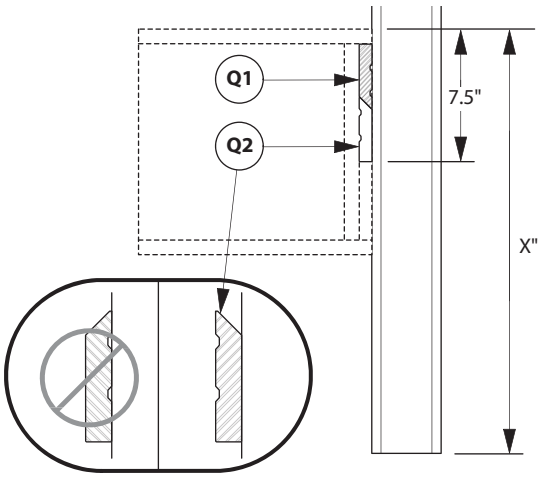



NOTE: Due to varying wall construction, fasteners are not included and must be feild supplied.

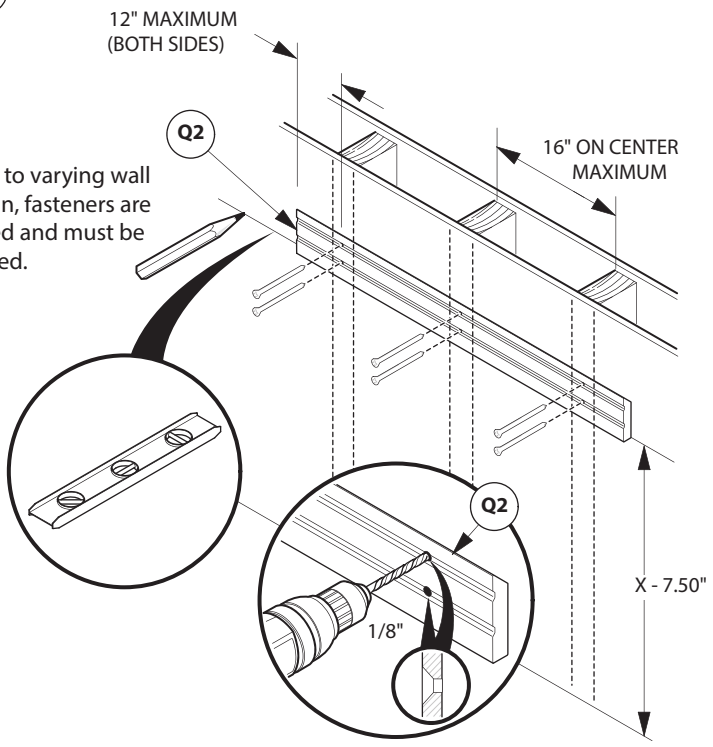


CUSTOMER SERVICE PHONE: 1-800-426-8562

FOR STEEL STUDS

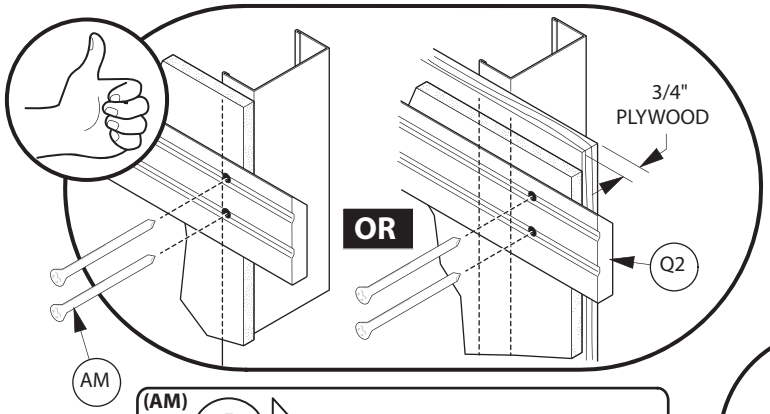

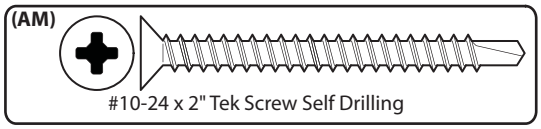


NOTE: Due to varying wall construction, fasteners are not included and must be feild supplied.

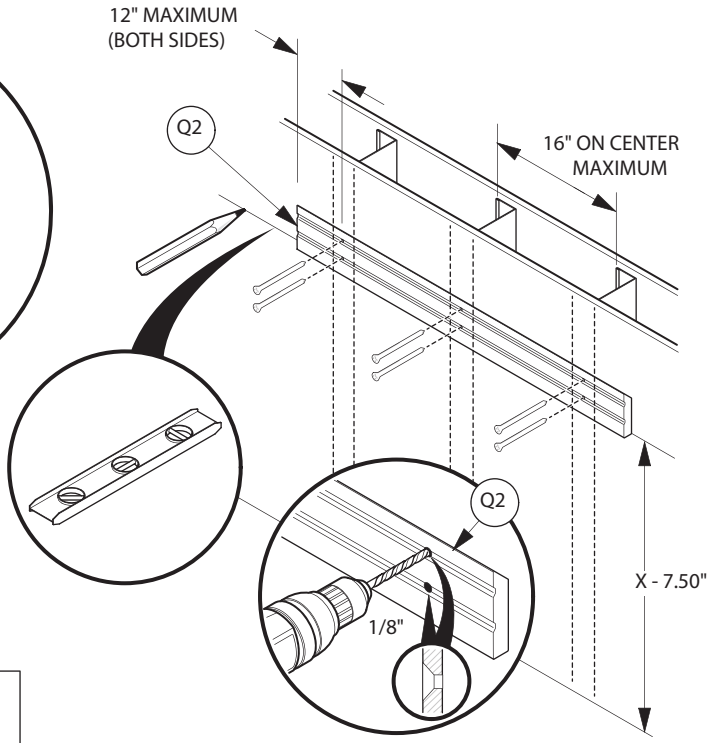


BLOCK WALLS

NOTE: Due to varying wall construction, fasteners are not included and must be feild supplied.

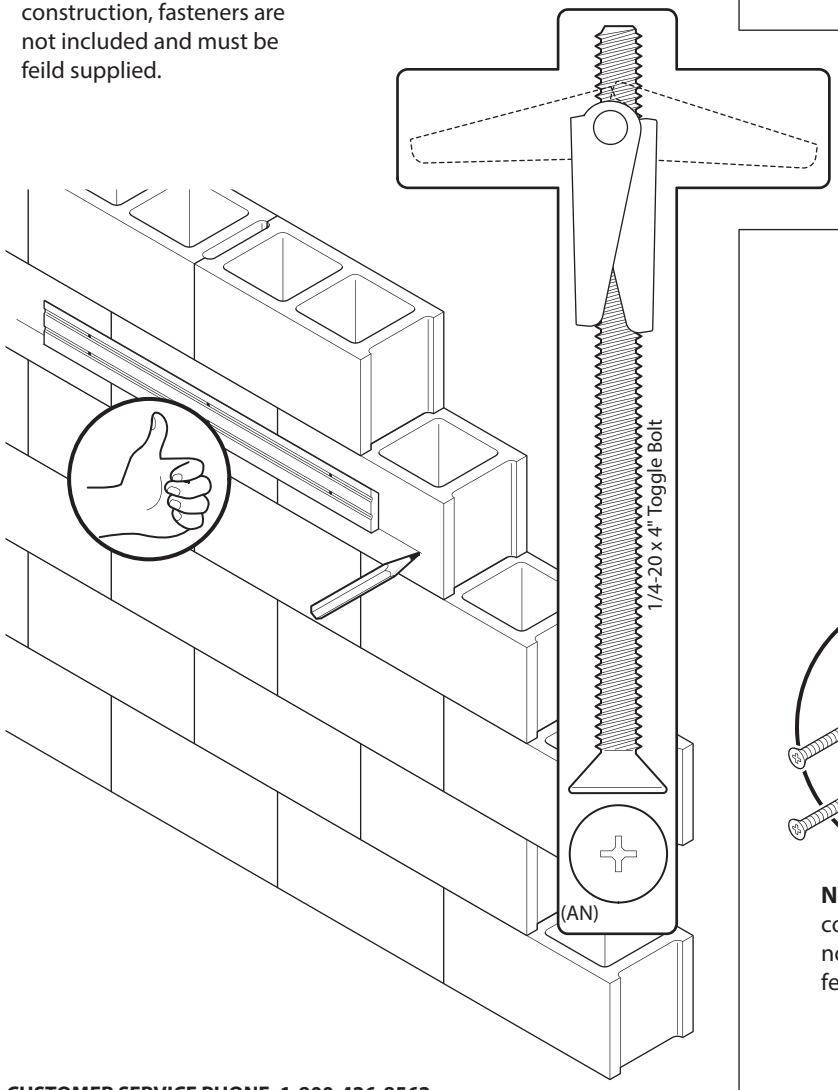

FOR POURED CONCRETE WALLS

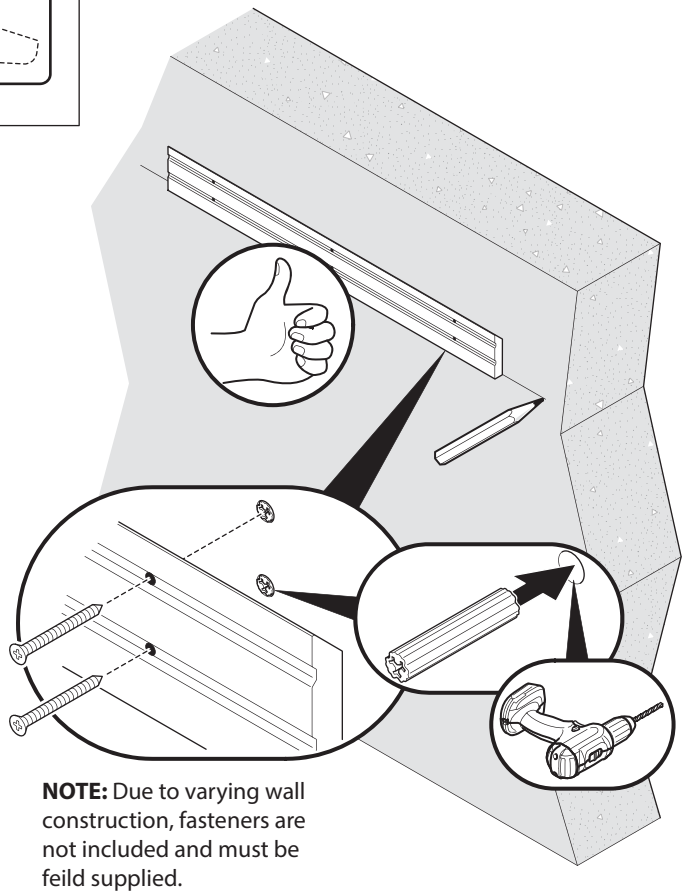


NOTE: Due to varying wall construction, fasteners are not included and must be feild supplied.


CUSTOMER SERVICE PHONE: 1-800-426-8562


4

Install storage box (P)

NOTE: Make sure storage box cleat (Q1) and wall mount cleat (Q2) interlock securely.

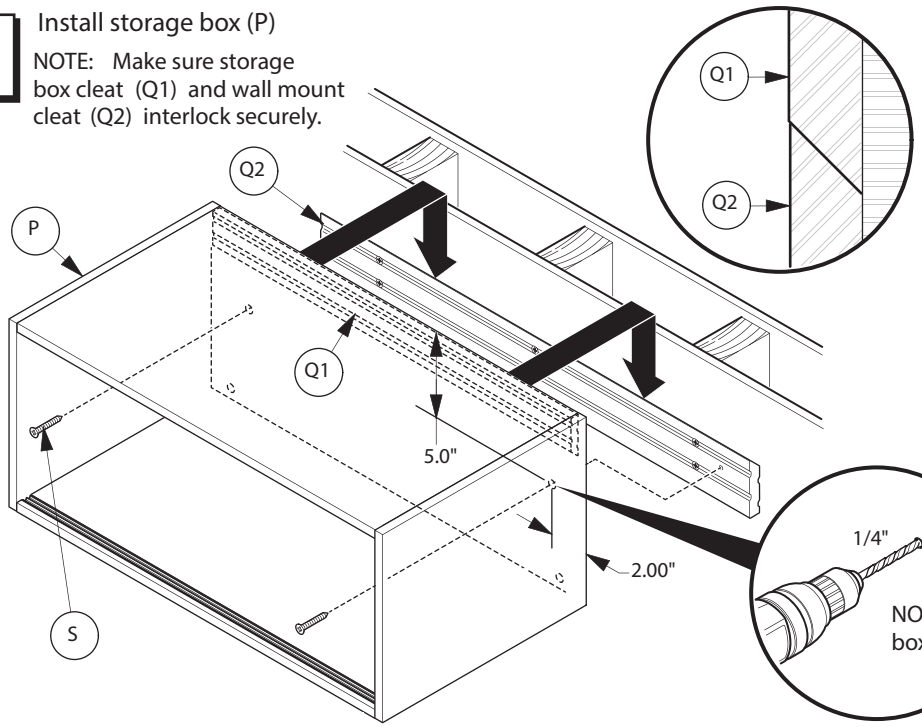

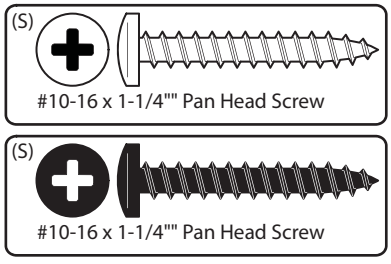

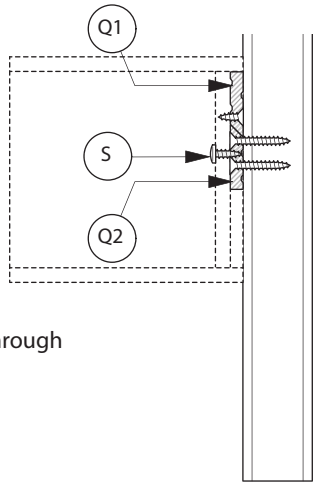


NOTE: Drill through box (P) only.

OPTIONAL DOOR INSTALLATION

1


NOTE: Paraffin wax **MUST** be applied to bottom edge of door to improve sliding door.

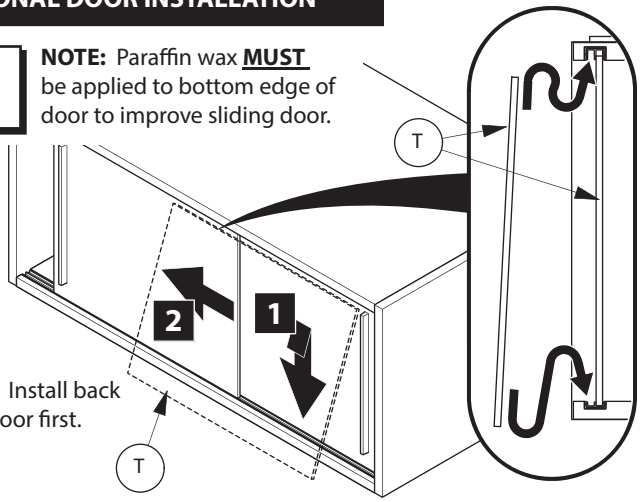


NOTE: Install back right door first.

2

NOTE: Install anti-dislodge strips **(U)** for sliding doors in the track at the center of each door as shown.

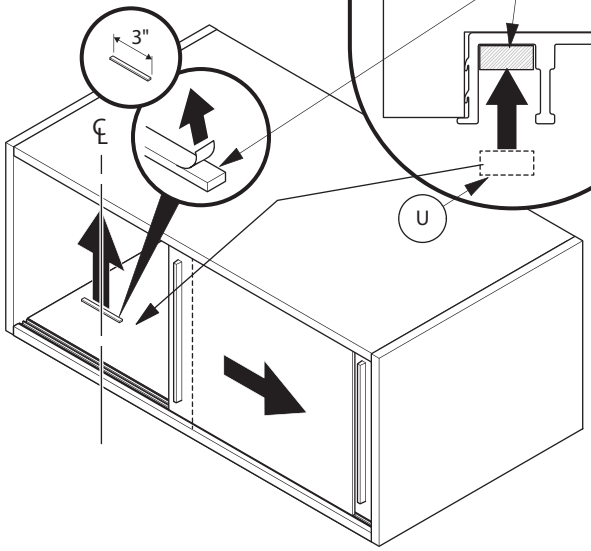


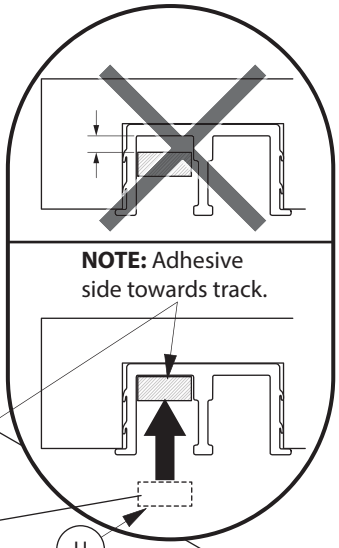

NOTE: Adhesive side towards track.


CUSTOMER SERVICE PHONE: 1-800-426-8562

3

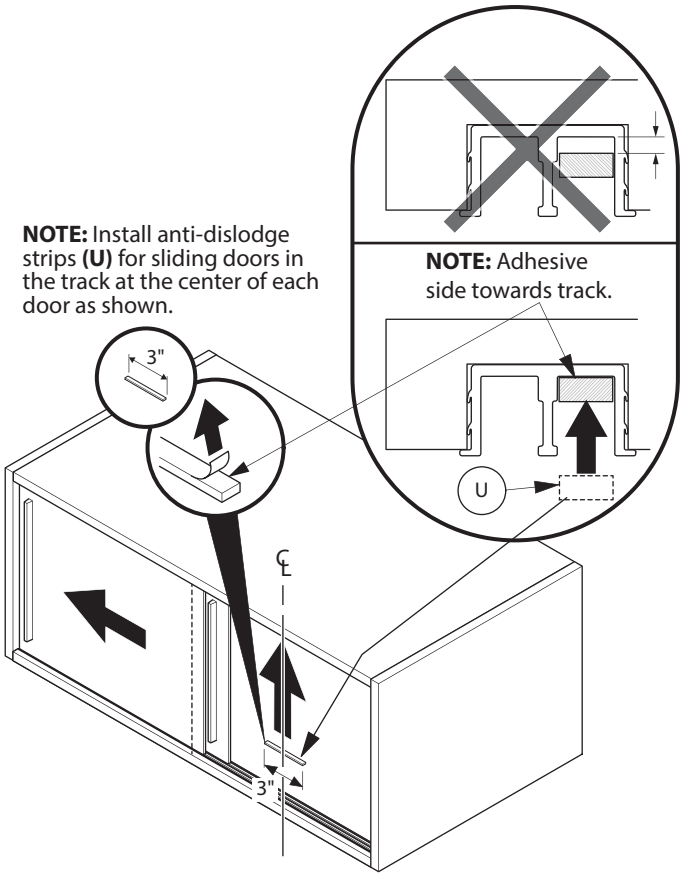

OPTIONAL LOCK PLUG INSTALLATION


1 **Replace square key (X) with round key (CK-3)**

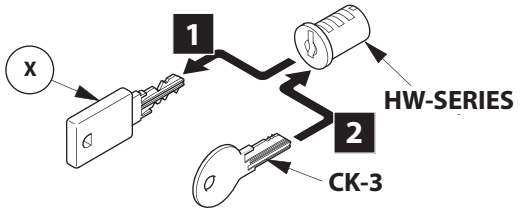

2 **Install lock plug (HW-SERIES)**


NOTE: Position cam to unlocked (12:00 o'clock position.

NOTE: It may be necessary to rotate cam until lock plug engages.

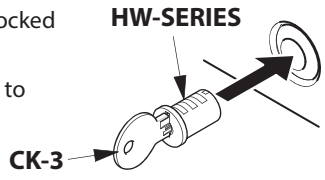

3 **Remove round key (CK-3) and insert square key (X)**

NOTE: Hold the lock plug **(HW-SERIES)** in place with thumb while removing the control key **(CK-3)**.

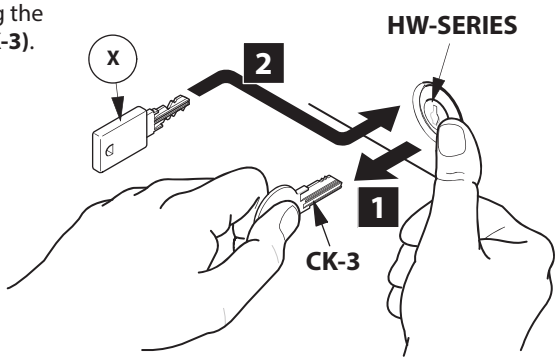


CUSTOMER SERVICE PHONE: 1-800-426-8562


OPTIONAL TASK LIGHT INSTALLATION

1


(AA)



#10-16 x .44" Pan Head Screw

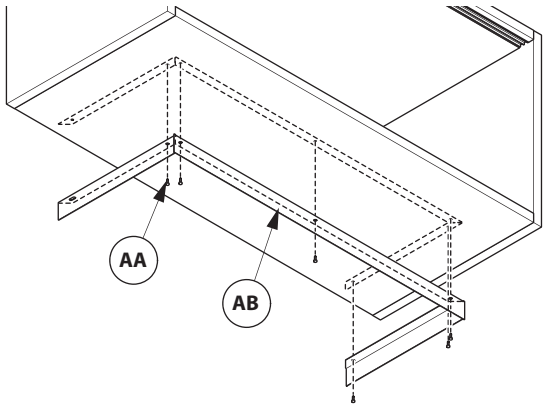

2

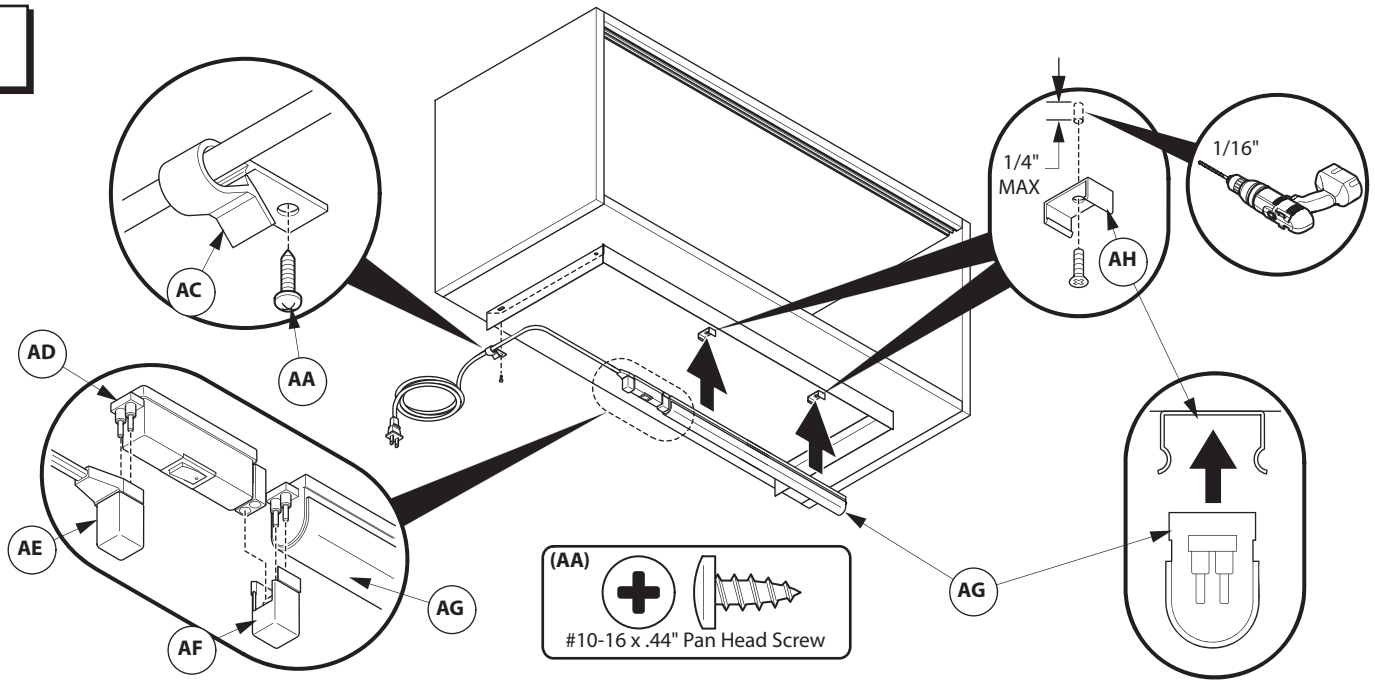

(AA)

#10-16 x .44" Pan Head Screw

OR

