



COMPOSE®
Glass Panel
Installation Instructions

Tools Required

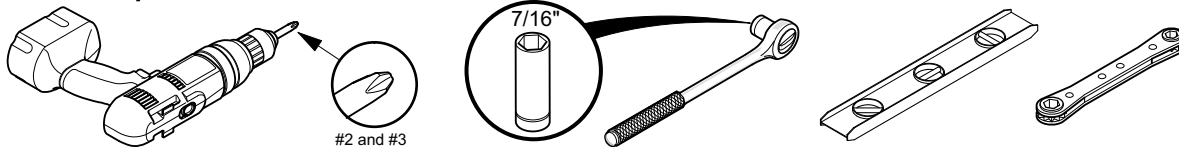

NOTE: U-channel must always match height of shortest panel.

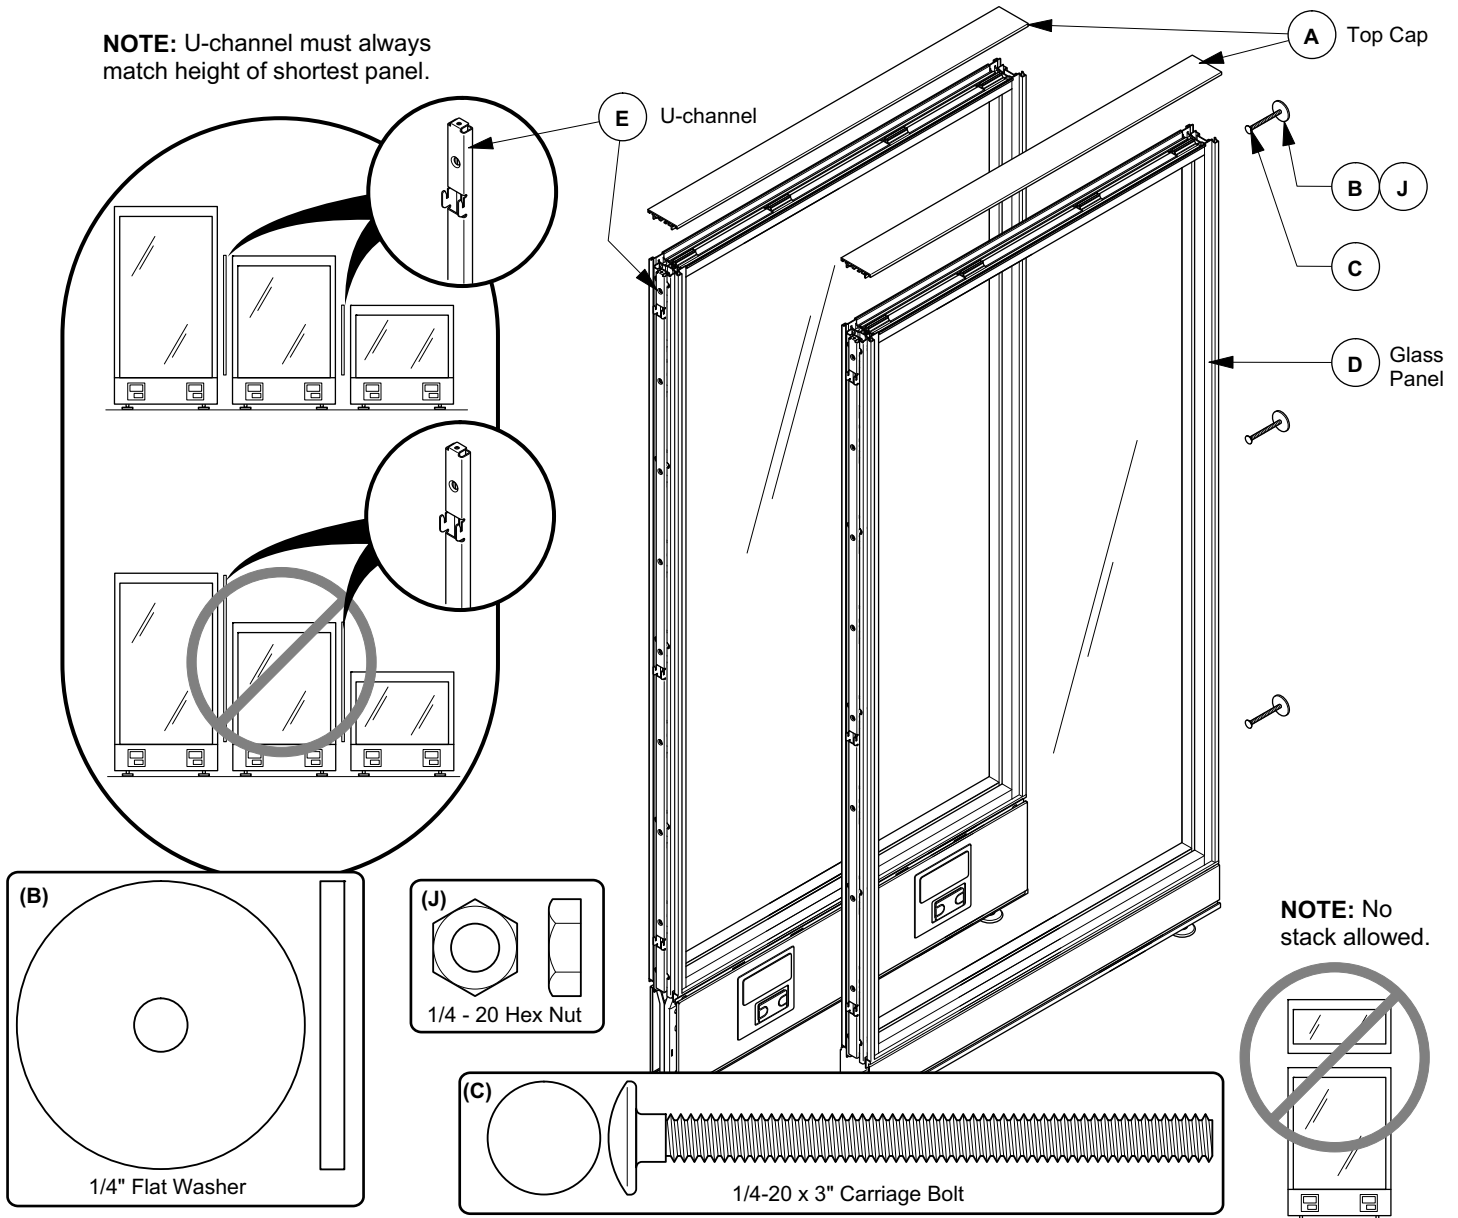

ELECTRICAL ASSEMBLY

Connection of panels to permanent wiring of building **MUST** be done by a licensed electrician who must control the size and loading of each branch circuit. The person or group installing HAWORTH products is responsible for complying with all NEC and local code requirements. In some localities it is also required that the electrician perform all electrical work including installation of receptacles and flexible connectors of the pre-wired electrical system. Check with your local jurisdiction for any restrictions in your area. See "PREMISE Power Installation Instructions" which accompany electrical products.

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®





E.C.O. No: 360-109

Page: 1 of 6

Part No: 7021-9510

Rev: D

GLASS PANEL TO PANEL FRAME INSTALLATION

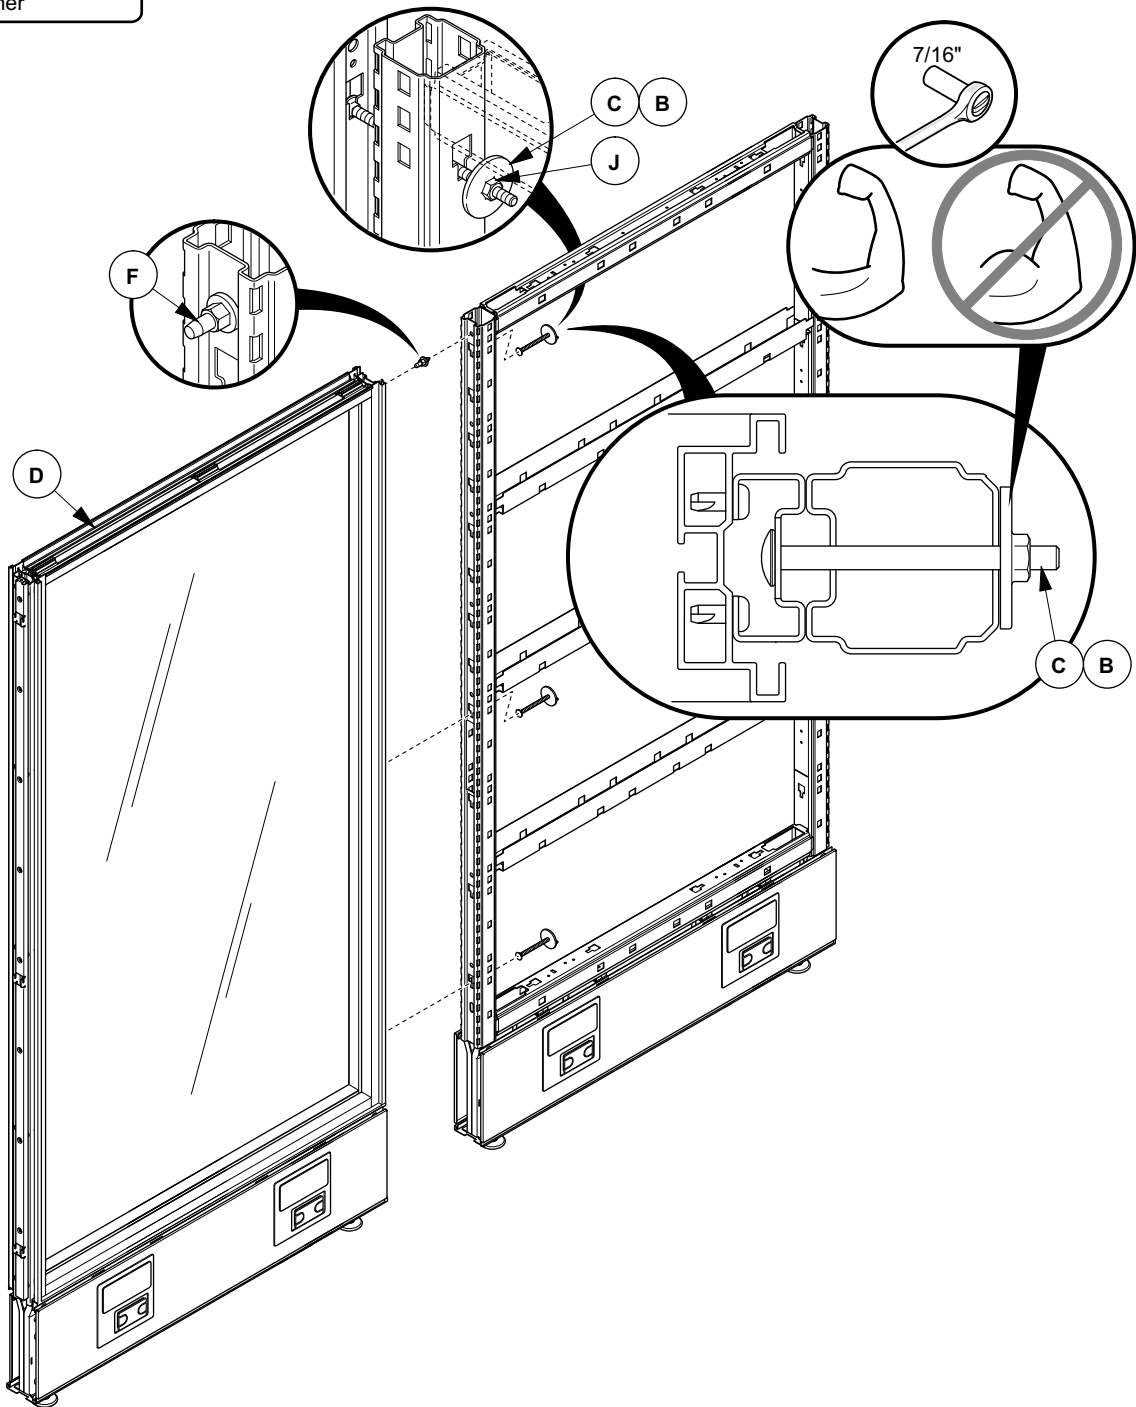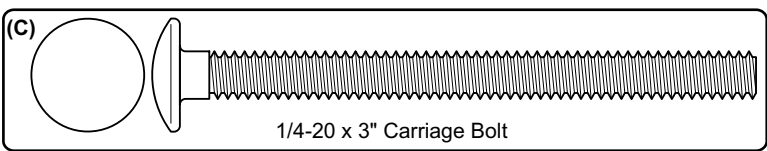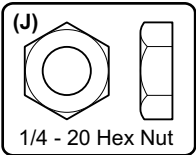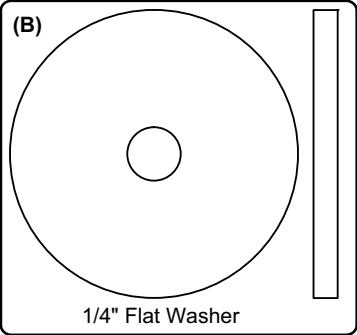

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 360-109

Page: 2 of 6

Part No: 7021-9510

Rev: D


2

Install glass panel (D)

3

See "anti-dislodgement installation" on the next page


NOTE: Adjust glides (G) to level panel.

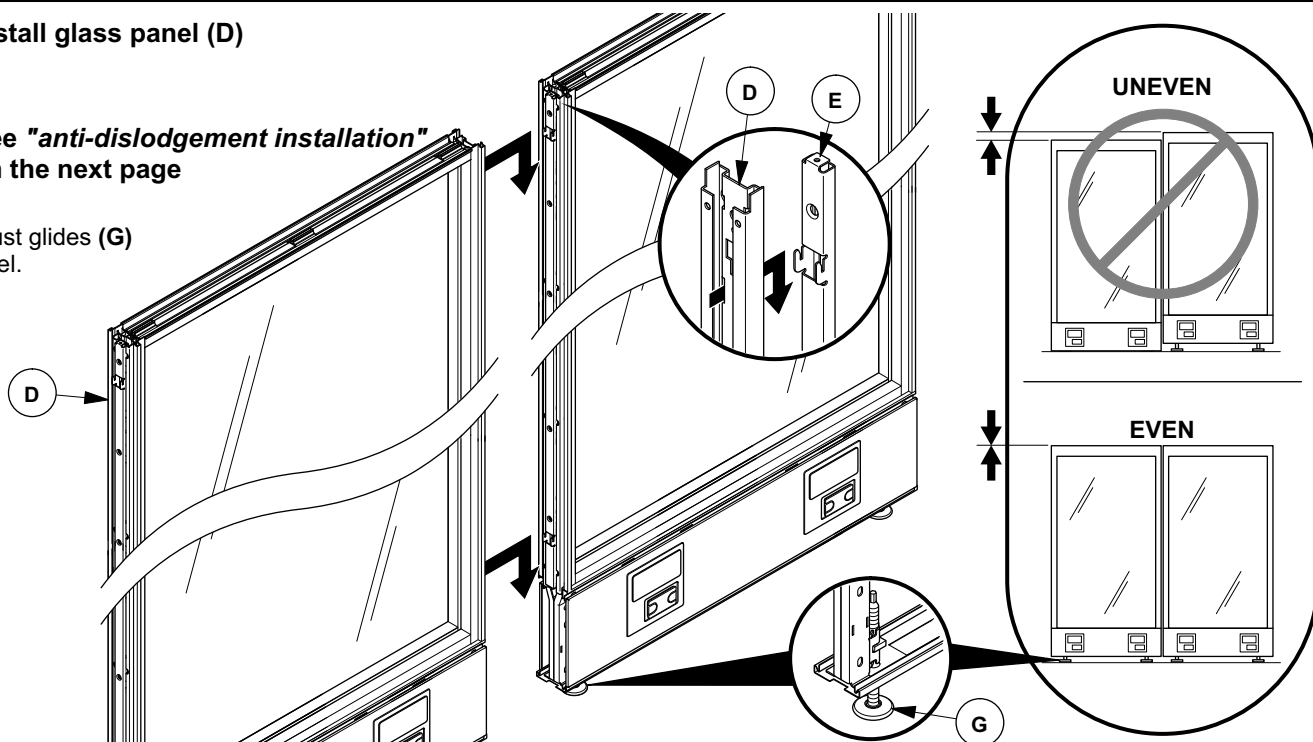

2-WAY & 3-WAY CORNER INSTALLATION

1


Remove U-channel (E) (if necessary)

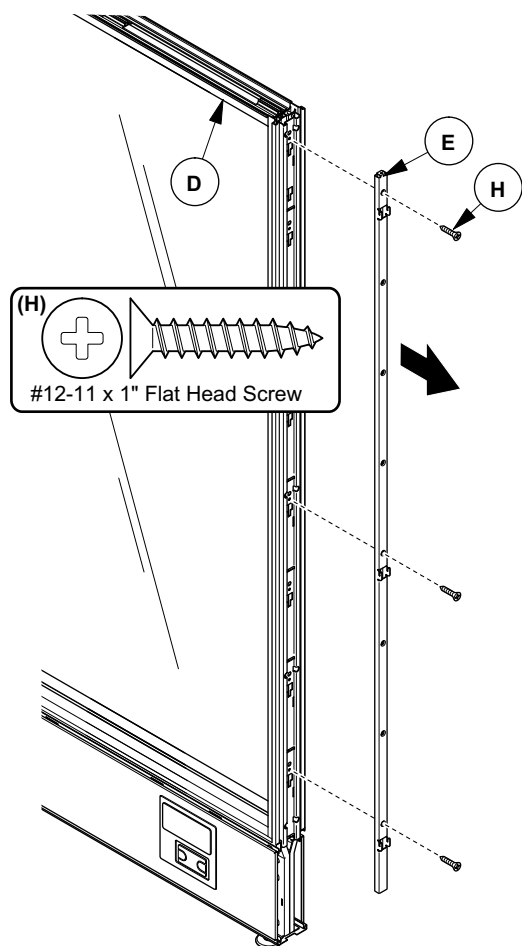

#12-11 x 1" Flat Head Screw

2

Install aligner pin (F)


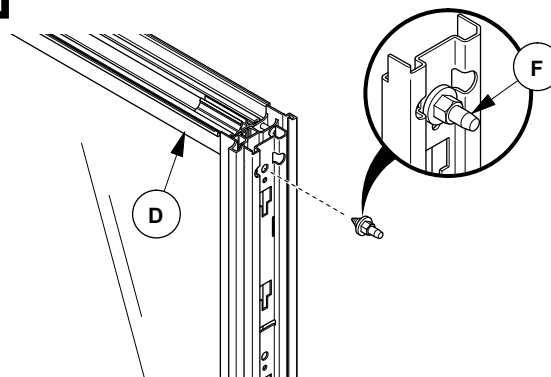


3


Install corner block (K)

4

Assemble panels (D)

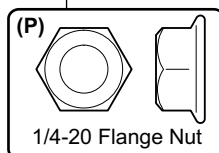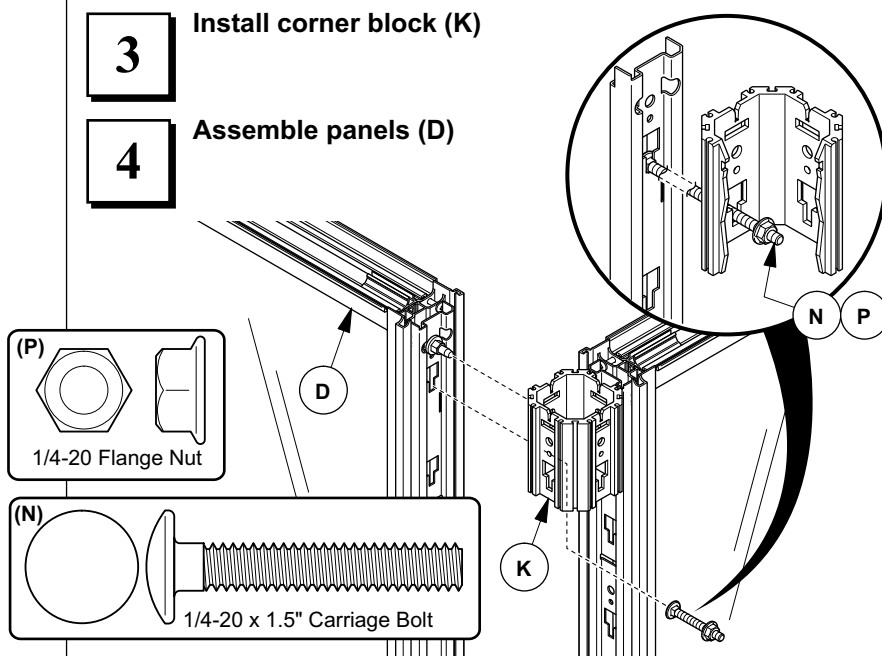

1/4-20 Flange Nut

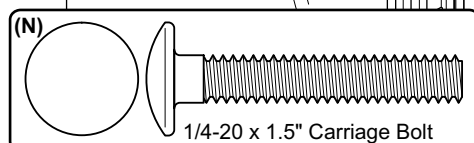

1/4-20 x 1.5" Carriage Bolt

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 360-109

Page: 3 of 6

Part No: 7021-9510


Rev: D

4-WAY & 120° CORNER INSTALLATION

1

Remove U-channel (E)

NOTE: The following installation steps are only for the last panel in a 4-way panel configuration or assembly of 120° configuration. Repeat the steps of "2-way & 3-way corner installation" on previous page for the first 3 panels.

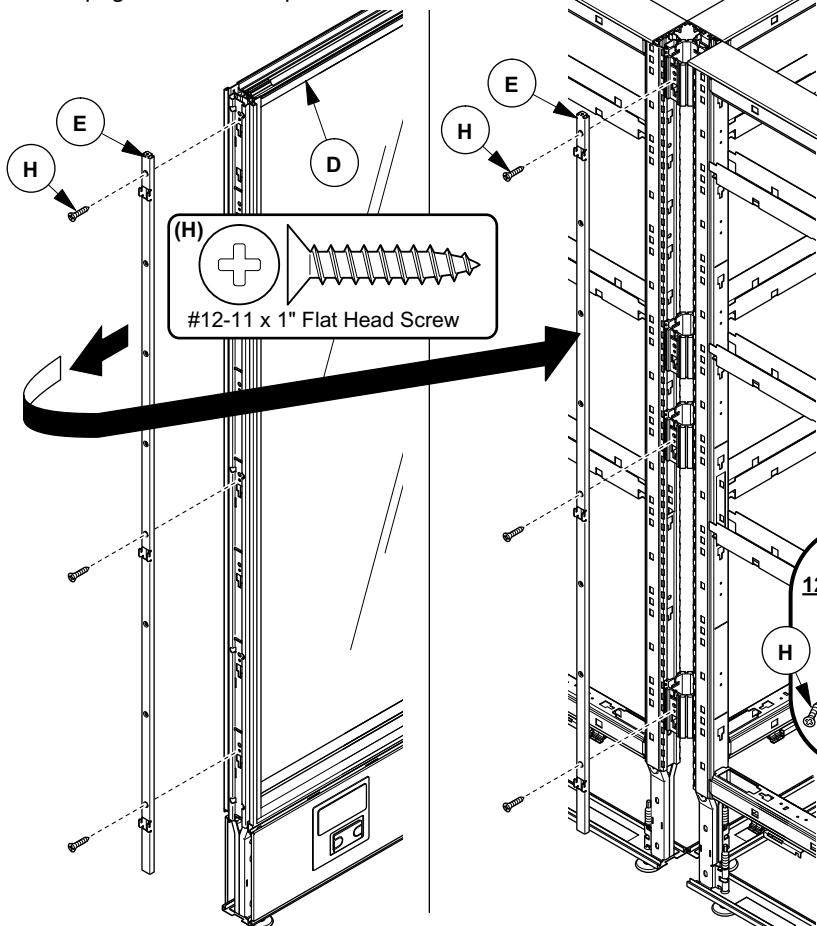


2

Install U-channel (E)


3

Install glass panel (D)

NOTE: Do not try to install anti-dislodgement plate when panels are uneven. Doing so will only strip the threads.

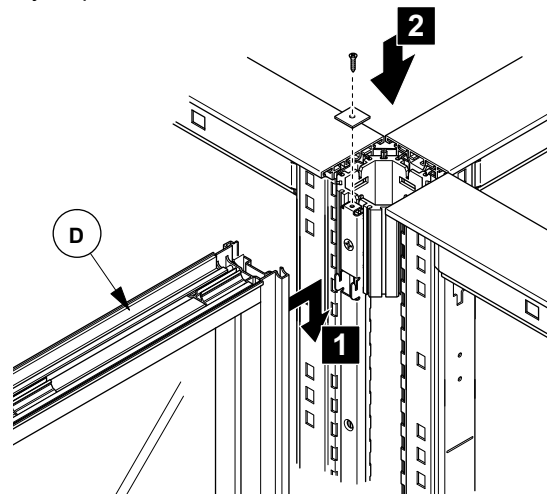


120° ASSEMBLY

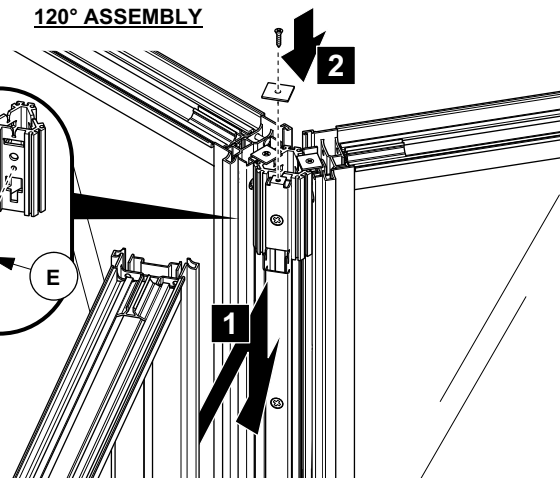

ANTI-DISLODGE MENT INSTALLATION

1


Adjust glides to level panels (H)

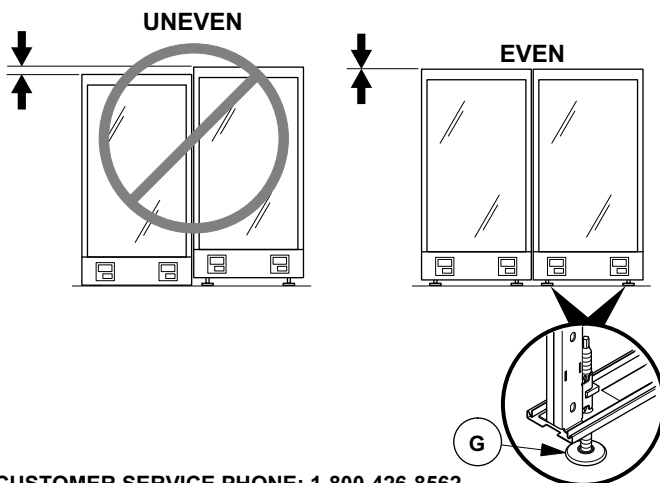

2

Install anti-dislodgement clip (M)

NOTE: Do not try to install anti-dislodgement plate when panels are uneven. Doing so will only strip the threads.

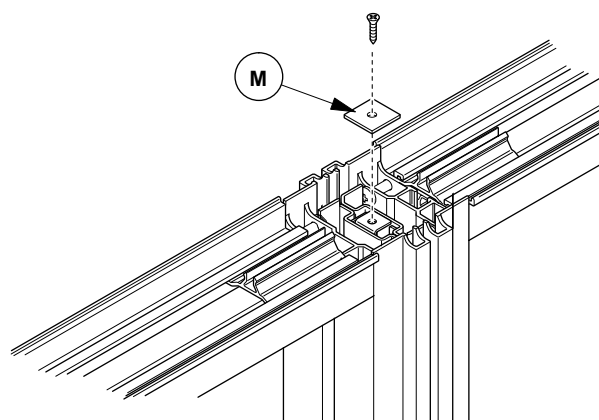

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 360-109




Page: 4 of 6

Part No: 7021-9510


Rev: D

END-OF-RUN TRIM INSTALLATION


FOR STEEL TOP CAP ONLY

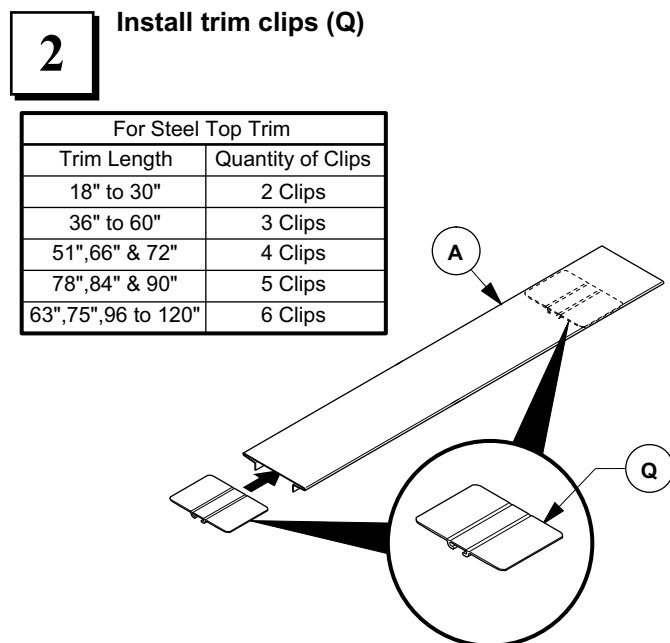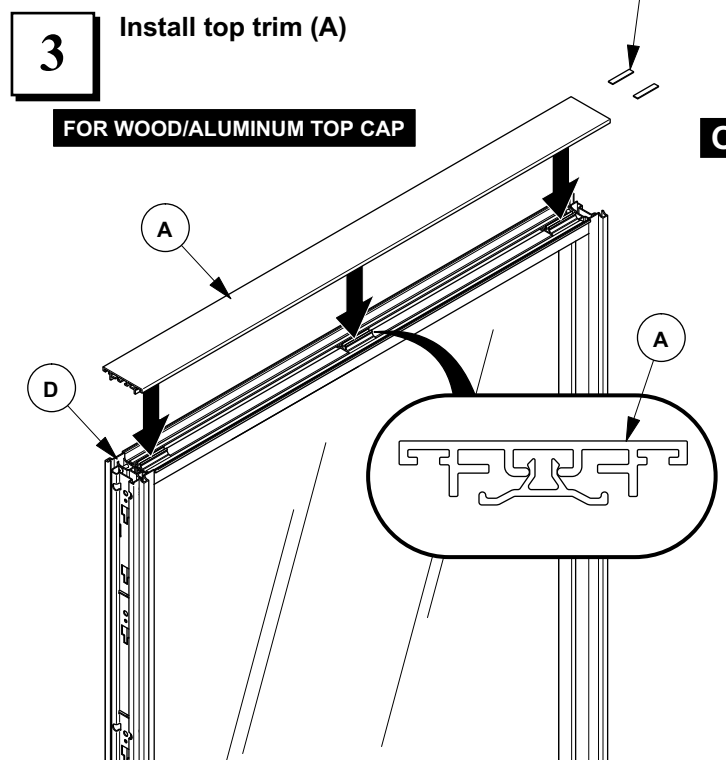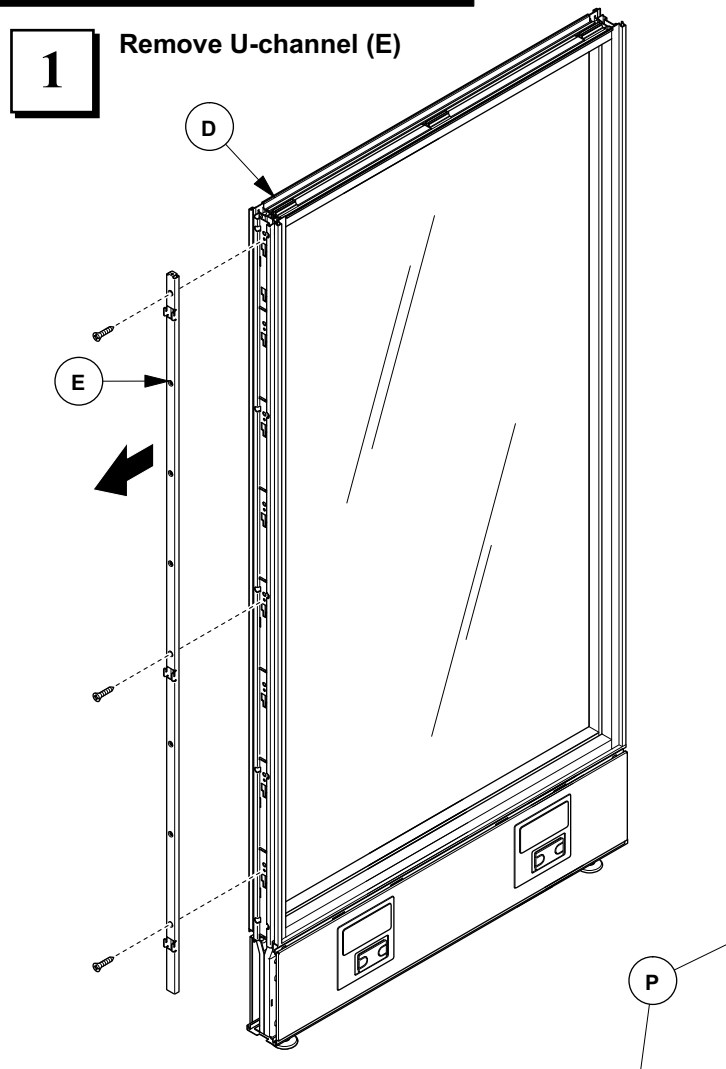

NOTE: Install top cap aligner (P) at intersections for all straight runs.

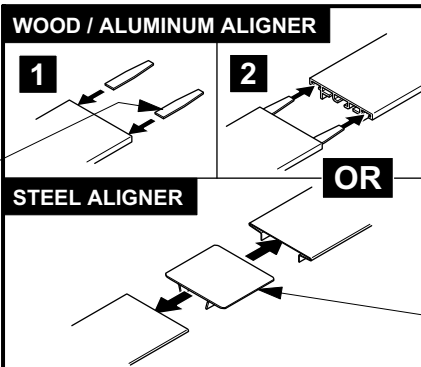

***NOTE:** For use on glass panels manufactured after 11/9/2009.

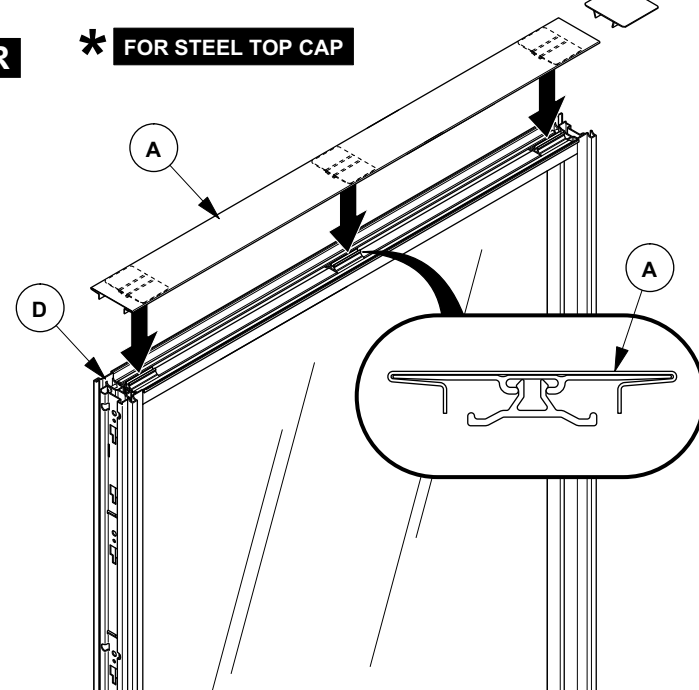

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 360-109

Page: 5 of 6


Part No: 7021-9510

Rev: D

END-OF-RUN TRIM INSTALLATION

3

Install trim cover (L)

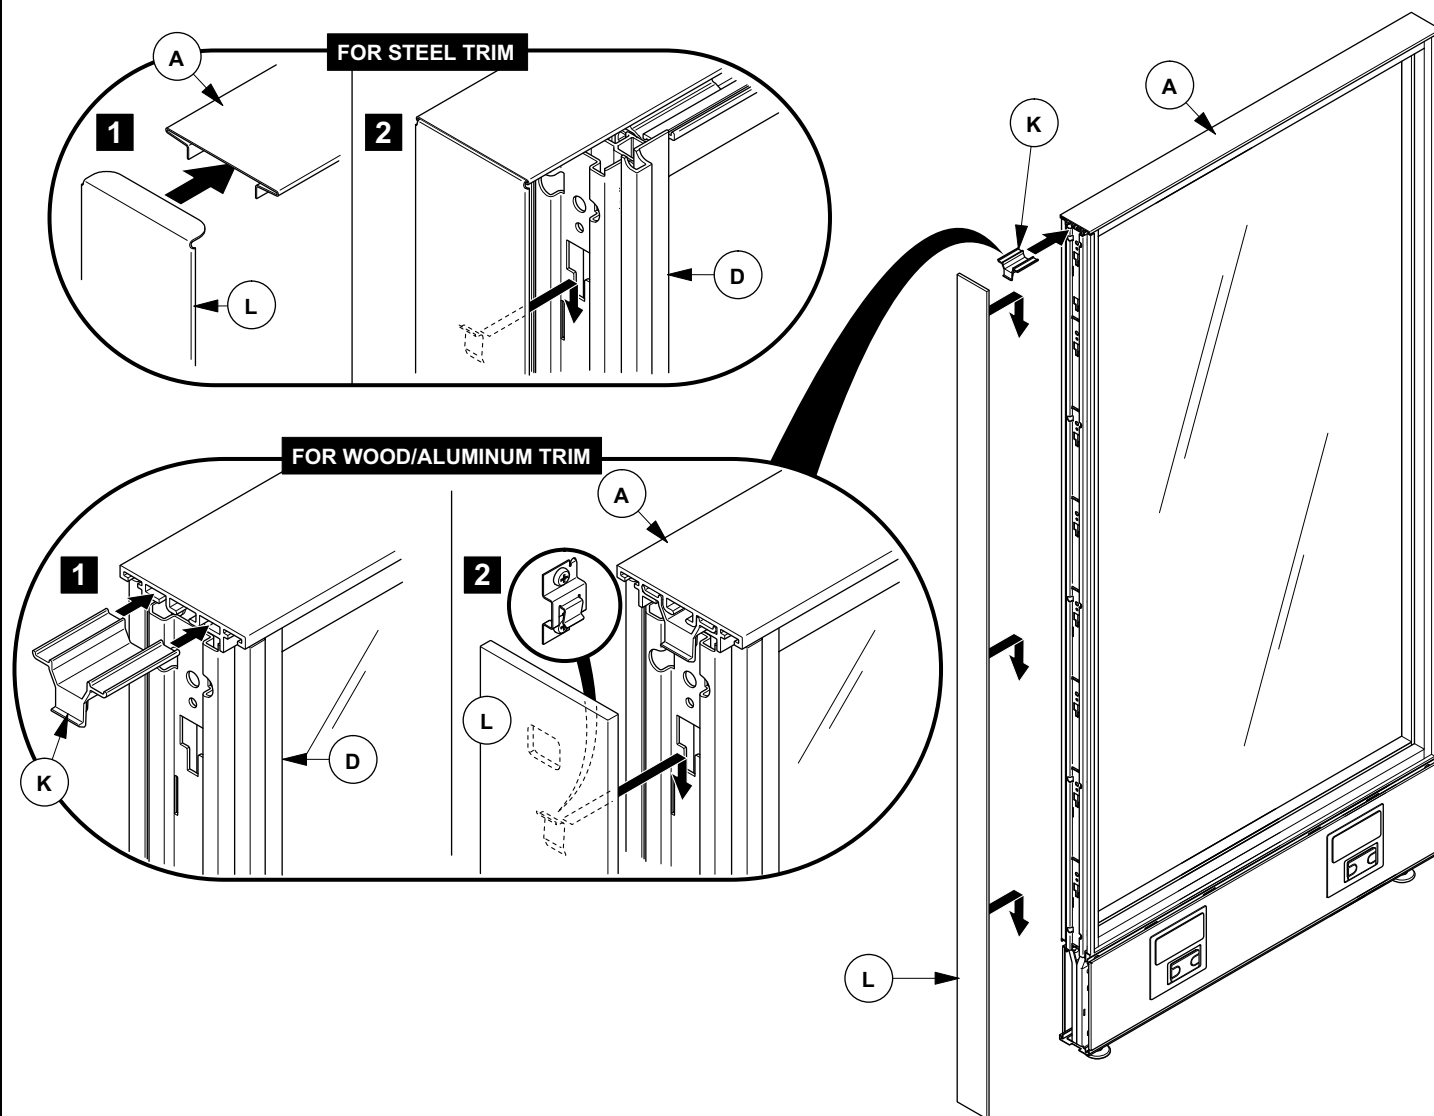

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 360-109

Page: 6 of 6

Part No: 7021-9510

Rev: D