
COMPOSE®

Glass Stack-on-Stack


Installation Instructions

Tools Required

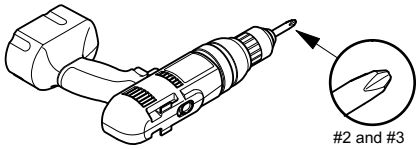


FOR END-OF-RUN BRACKET INSTALLATION

NOTE: Older stacks may require this hole drilled to .177 diameter(#16 drill) use splice plate **(A)** as template.

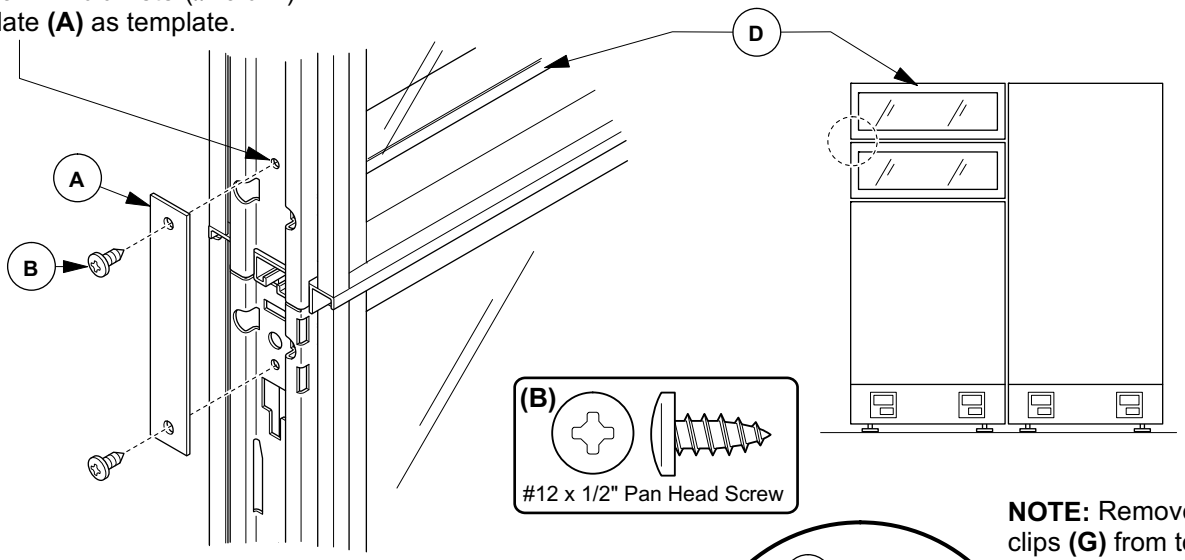


NOTE: Remove plastic clips **(G)** from top of lower glass stacks **(D)** only.

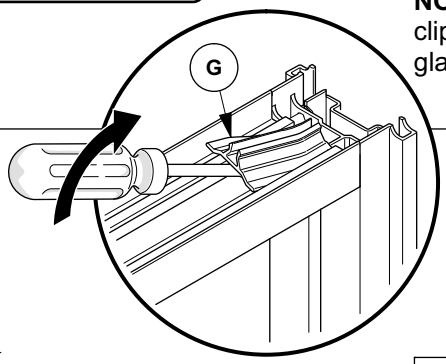

FOR VARIABLE HEIGHT BRACKET INSTALLATION


NOTE: Older stacks may require this hole drilled to .177 diameter(#16 drill) use splice plate **(A)** as template.

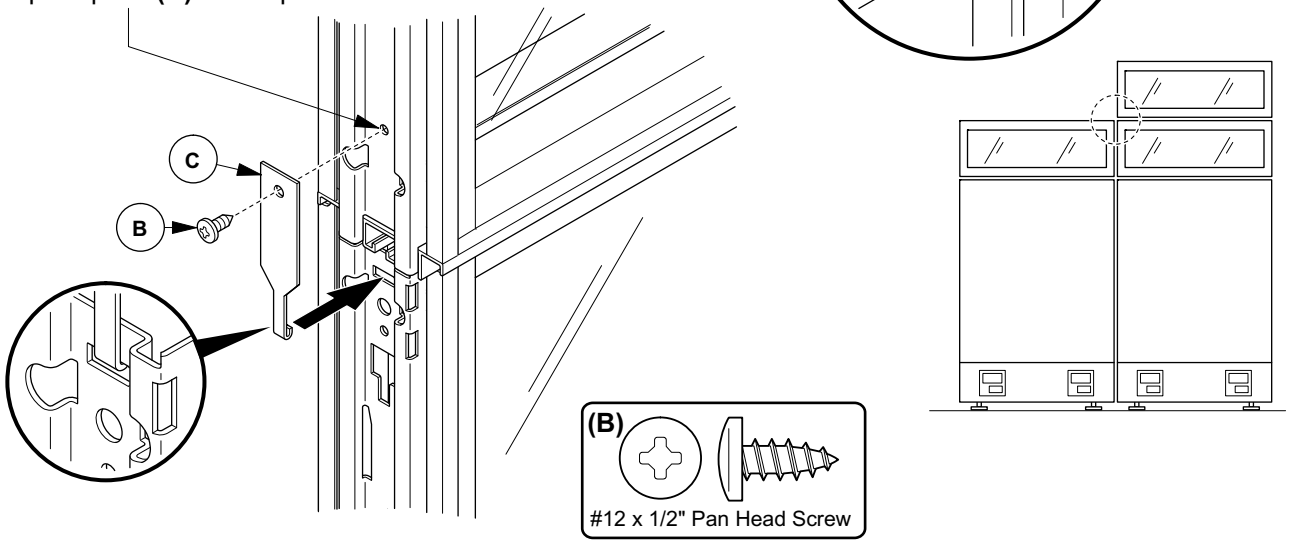



CUSTOMER SERVICE PHONE: 1-800-426-8562

FOR U-CHANNEL INSTALLATION

1 **Install u-channel (E)**

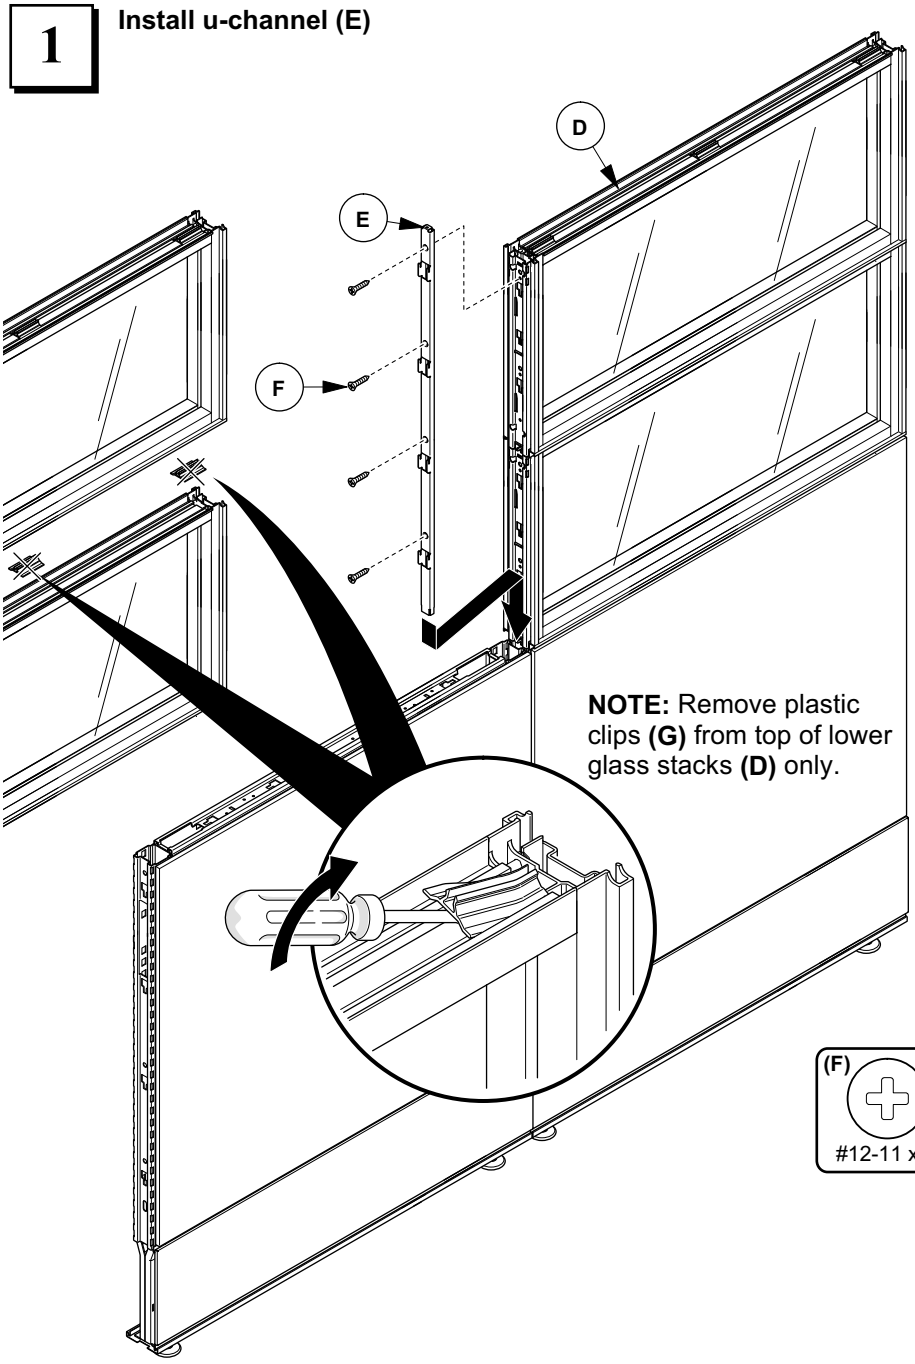

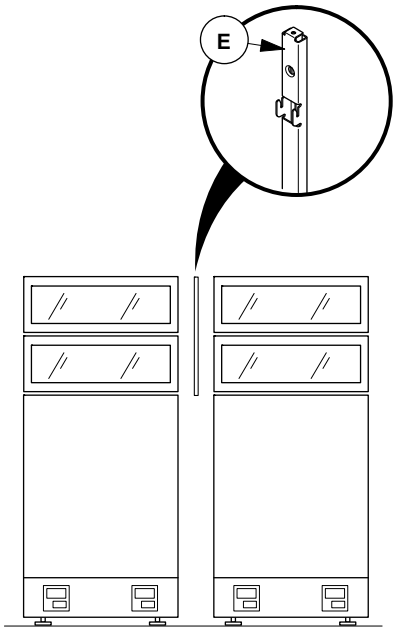

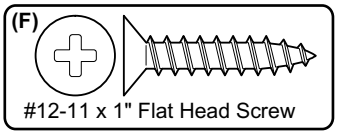

2 **Install anti-dislodgement clip (G)**

NOTE: **Do not** try to install anti-dislodgement plate when panels are uneven. Doing so will only strip the threads.

