


COMPOSE®/PREMISE®/UNIGROUP TOO®


Sliding Door - Retro Fit Kit

Installation Instructions

Tools Required

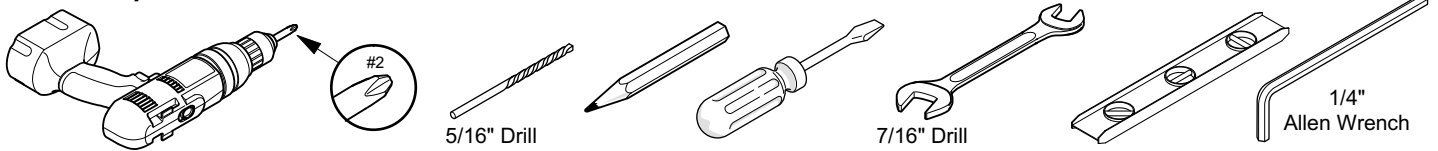

REPLACE ITEMS (N) WITH THESE ITEMS (N)

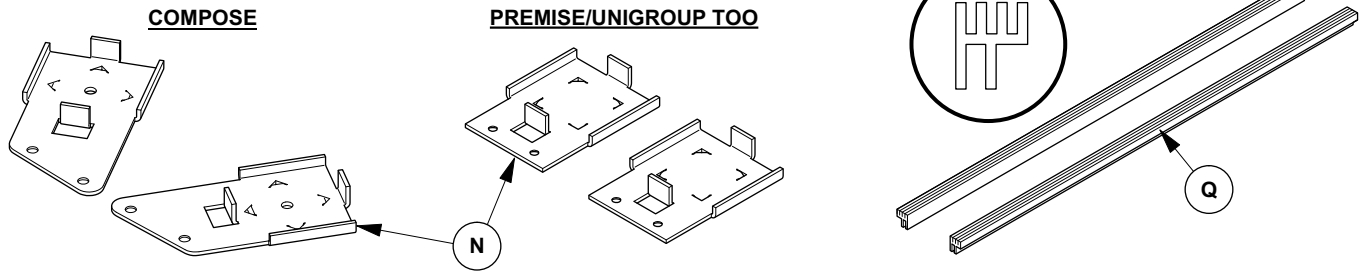


REPLACE STEP 4 WITH STEPS 4a & 4b

4a

Install track (N)

4b

Bend tabs (N1) as needed

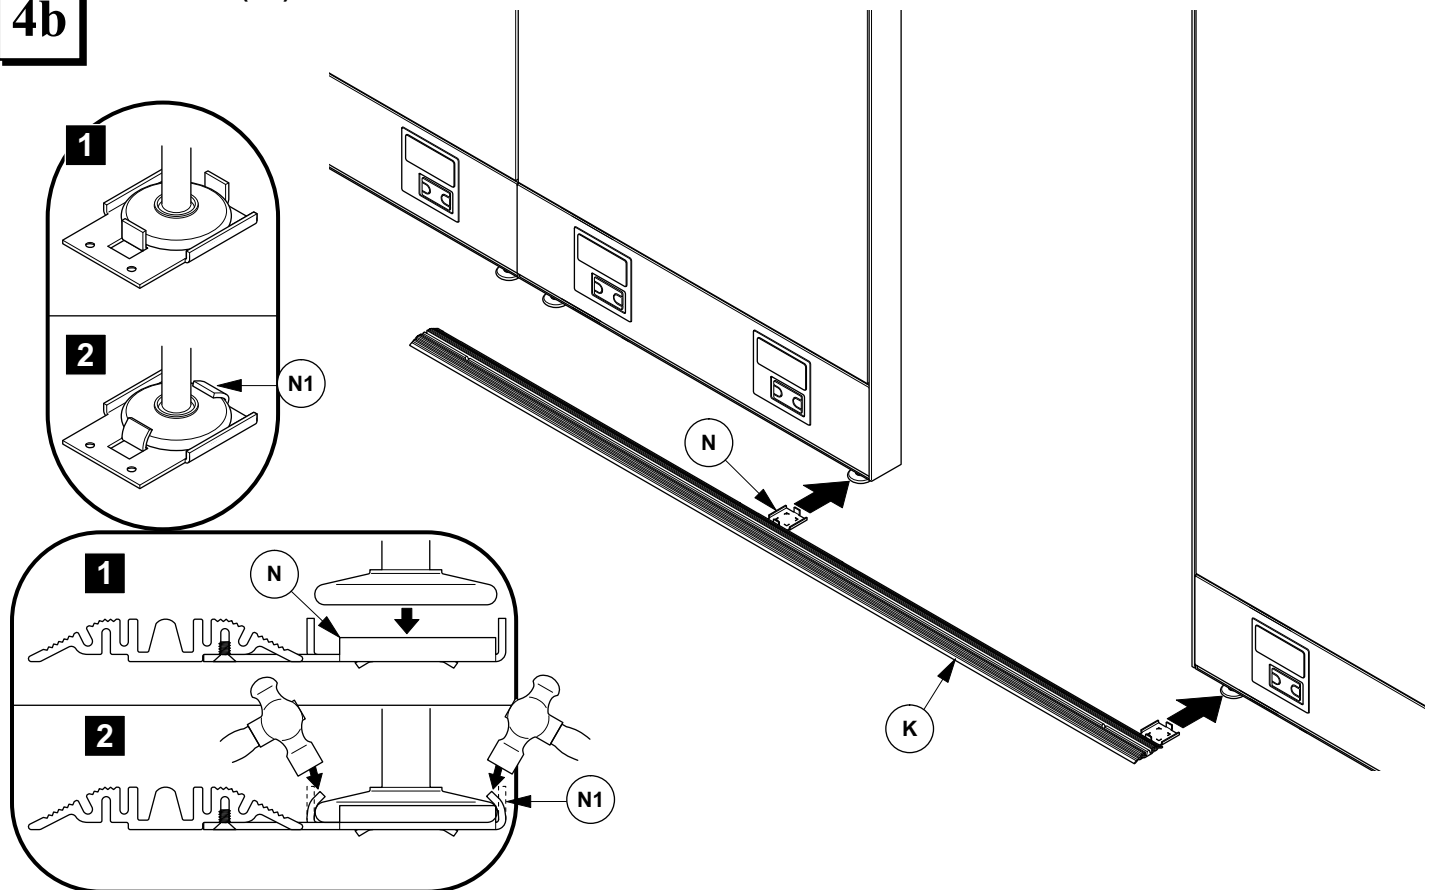

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®

E.C.O. No: 254-368

Page: 1 of 2




Part No: 7029-9688

Rev: A

 Install 1/2 the anti-dislodgment (Q) towards back of door

6a

Install 1/2 the anti-dislodgment (Q) towards back of door

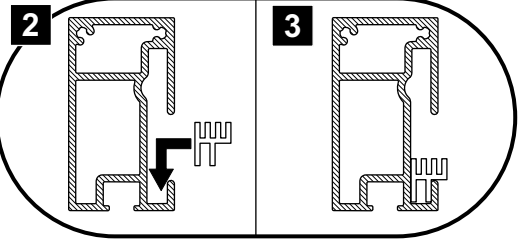
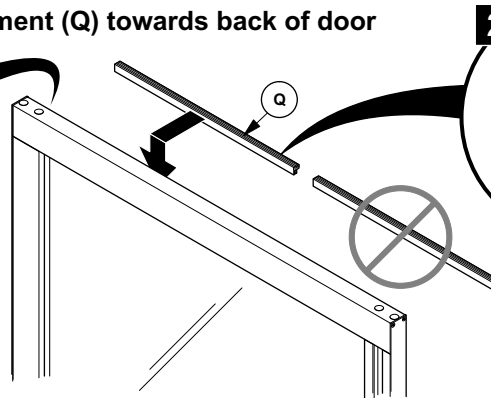
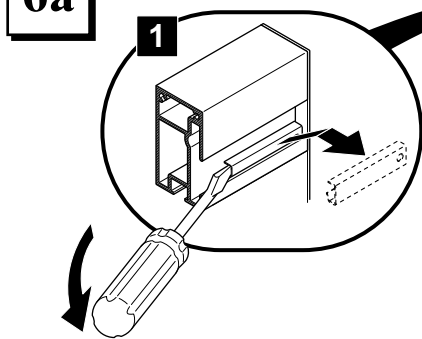


6b




NOTE: When required install stop bumpers **(B)** to back of door as shown. (see chart)

7a

Install door (A)

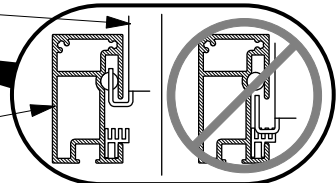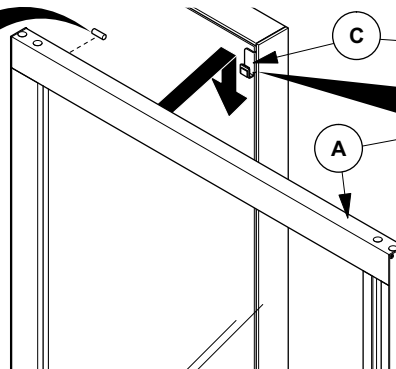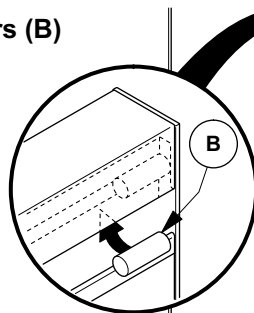



NOTE: Hanger bracket (C) engagement no less than 1/2".

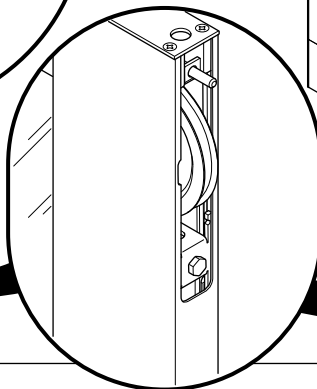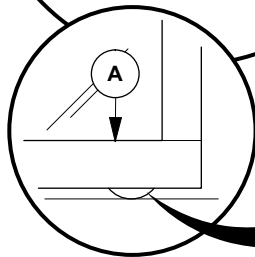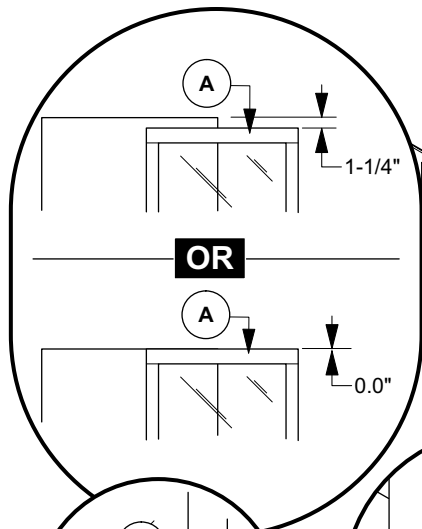

	X = LENGTH	
	INLINE	END-OF-RUN
COMPOSE	0.26"	---
PREMISE	1.18"	---
UNIGROUP TOO	0.36"	0.26"

7b

Close door (A) & install the 2nd 1/2 of anti-dislodgment (Q)

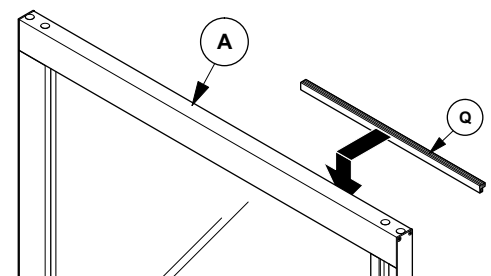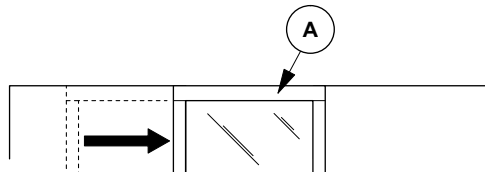

HAWORTH®

Rev: A