

COMPOSE®

Frameless Glass


Installation Instructions

Tools Required

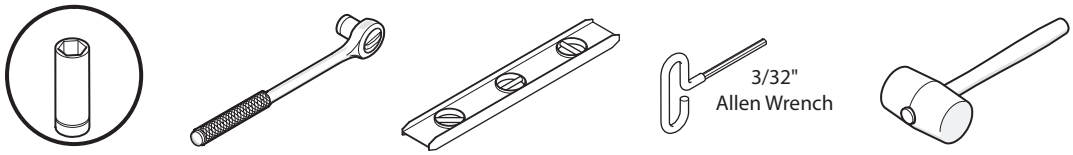






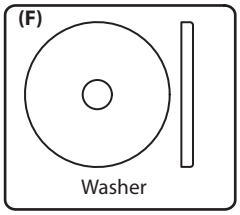


1 Install topper (D)

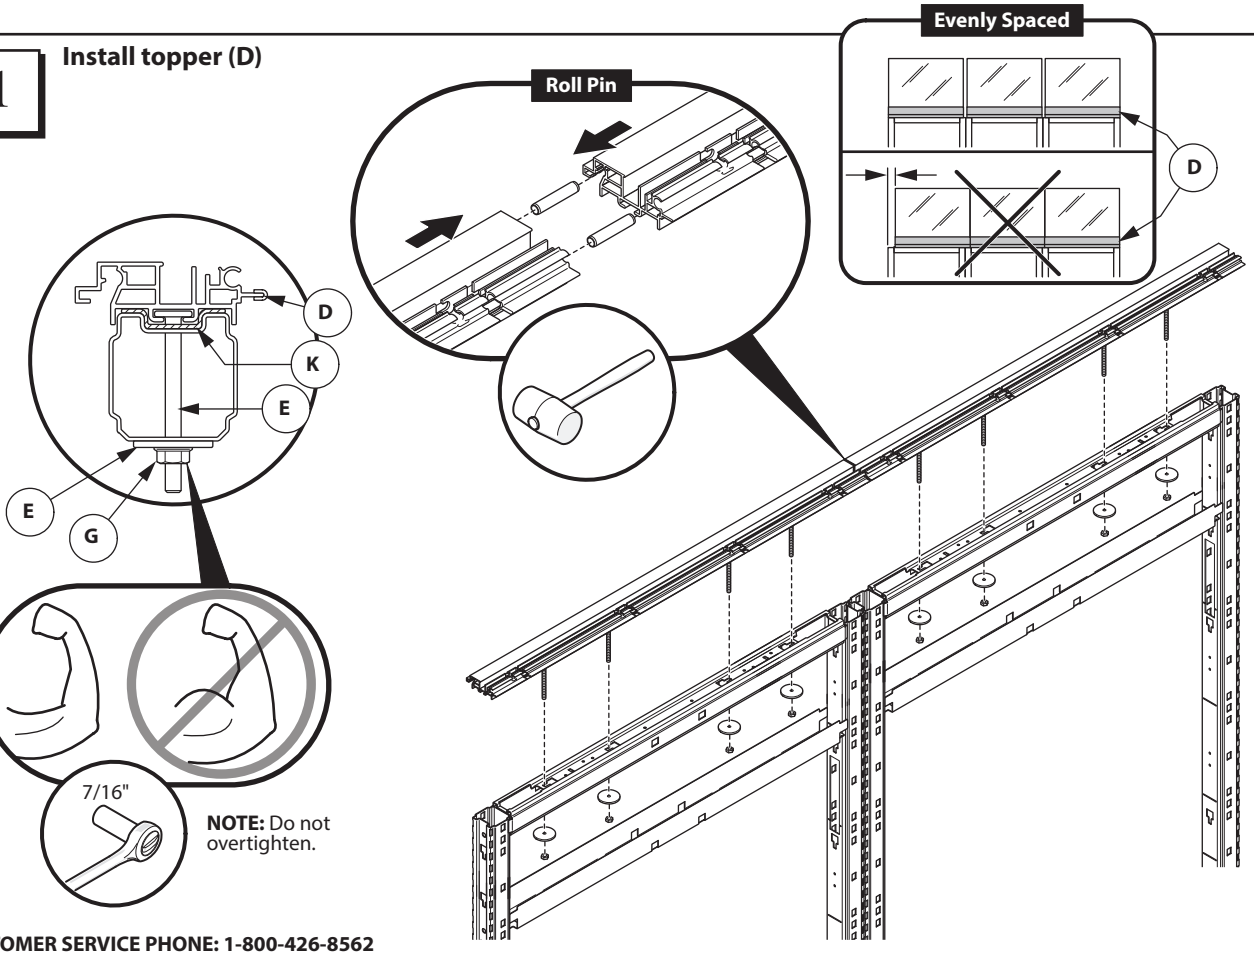


CUSTOMER SERVICE PHONE: 1-800-426-8562

2 Install glass (A)

INSTALL STRIPS (C) WITH RUBBER FACING GLASS

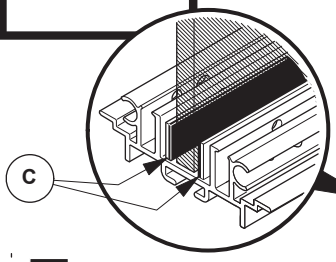

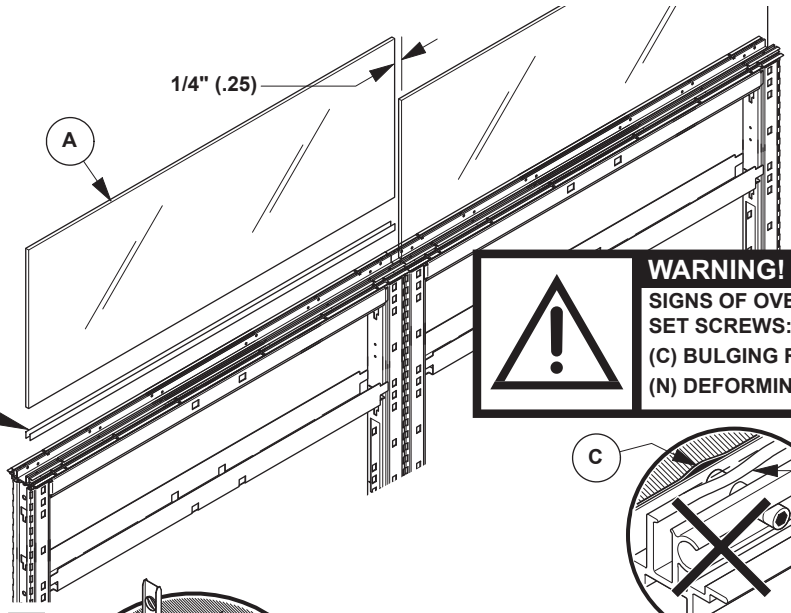


WARNING! WARNING!

SIGNS OF OVERTIGHTING SET SCREWS:


(C) BULGING RUBBER

(N) DEFORMING RAIL

1 CENTER GLASS (A)

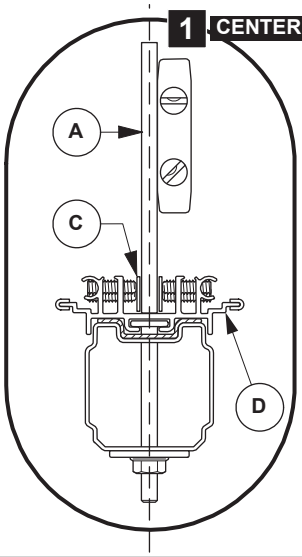


2

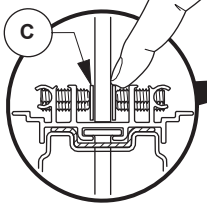

NOTE: Hold as Tightening set screws.


SNUG ALL TOP SET SCREWS

3

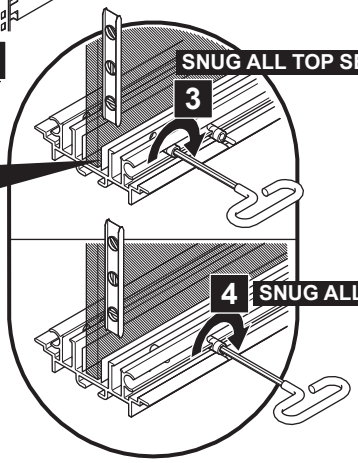

4 SNUG ALL BOTTOM SET SCREWS


0.0" (No Gaps)

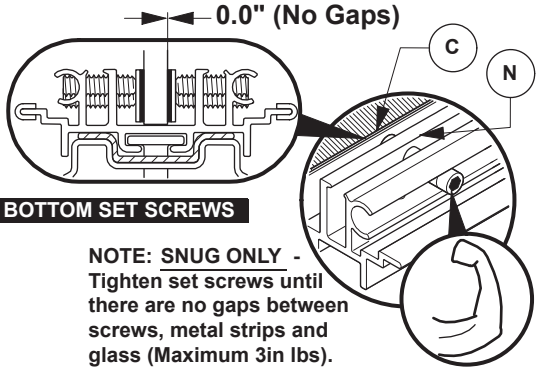

NOTE: SNUG ONLY - Tighten set screws until there are no gaps between screws, metal strips and glass (Maximum 3in lbs).


WARNING! WARNING!

DO NOT ADJUST TOP RAIL AFTER GLASS HAS BEEN INSTALLED REMOVE GLASS FIRST THEN ADJUST TOP RAIL!

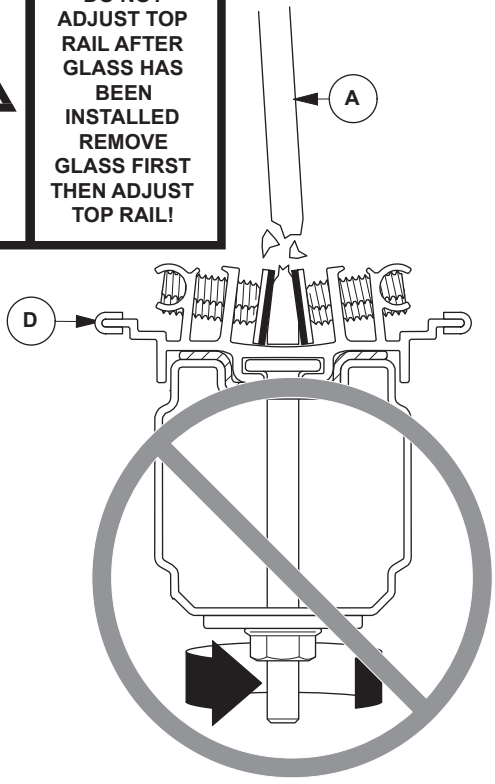


3 Install covers (B)

HINT: Make sure the glass is aligned, plumb, and centered **BEFORE** installing covers.

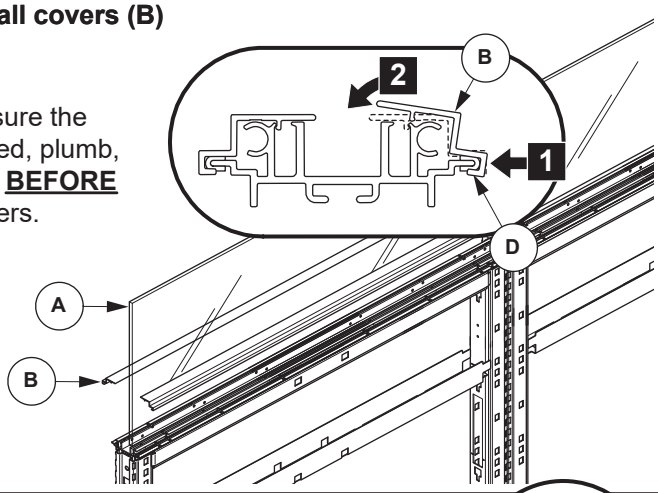

4 Remove covers (B)


NOTE: Careful not to scratch glass.

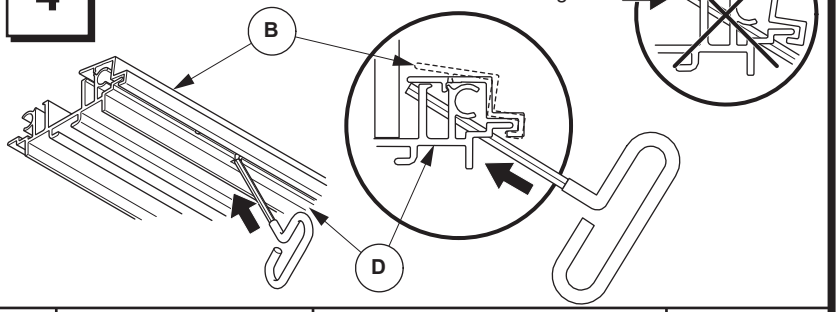


CUSTOMER SERVICE PHONE: 1-800-426-8562

5 Install end-of-run (K)

6 Install end plug (L)

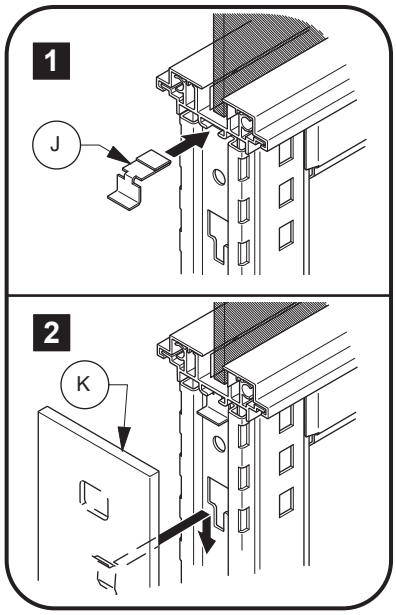

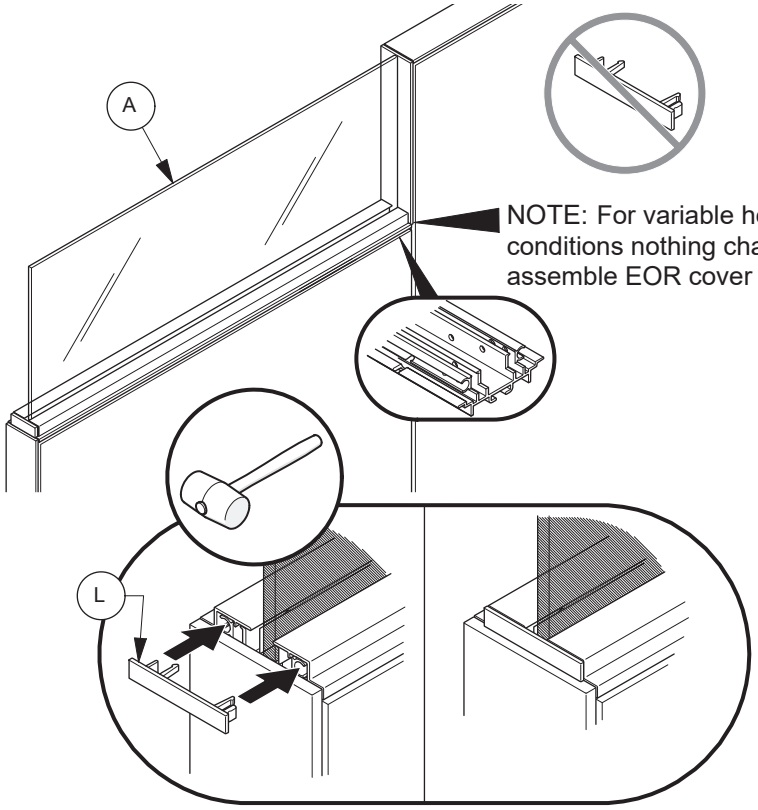

NOTE: For variable height conditions nothing changes simply assemble EOR cover as before.

