

COMPOSE®

Frameless Glass - Steel & Aluminum


Installation Instructions

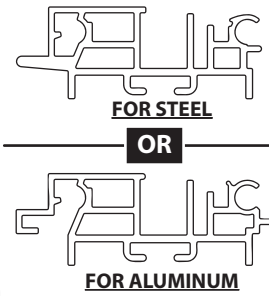


Tools Required

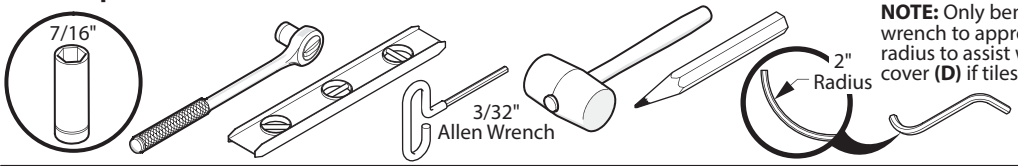


NOTE: Only bend 1/16" allen wrench to approximately 2" radius to assist with removing cover **(D)** if tiles are installed.






⚠ CAUTION

IF REUSING RETAINER (K) MAKE SURE THE MARKED (SCREW INDENTATION) SIDE IS FACING AWAY FROM THE GLASS.

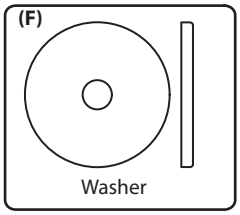


1 Make cardboard template (B1) to mark location

NOTE: Mark centering with each tab **(D3)** shown on topper **(D1)**.

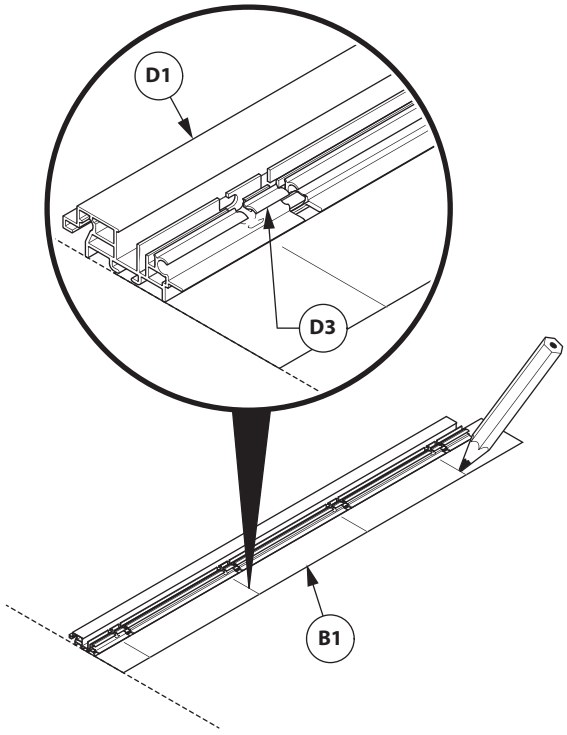

2 Install Screen Tape Strip (B)

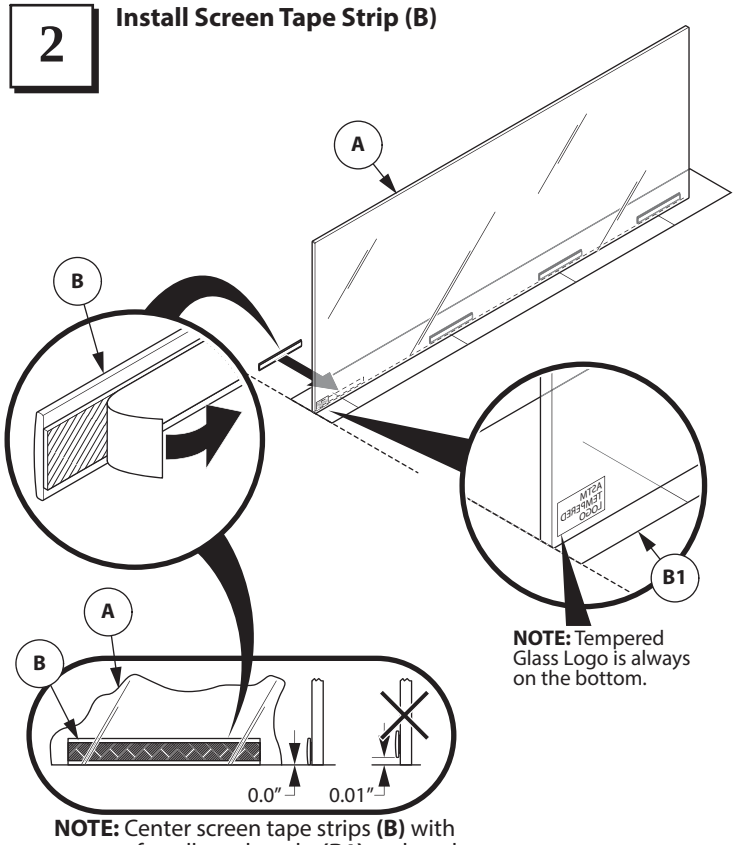

NOTE: Tempered Glass Logo is always on the bottom.


NOTE: Center screen tape strips **(B)** with center of cardboard marks **(B1)** and apply flush with bottom of screen **(A)**.

CUSTOMER SERVICE PHONE: 1-800-426-8562


3 Install topper (D1)

BOLTS **(E)** PER TOPPER

SIZE	BOLTS
18" - 30"	2
33" - 60"	4
63" - 120"	8

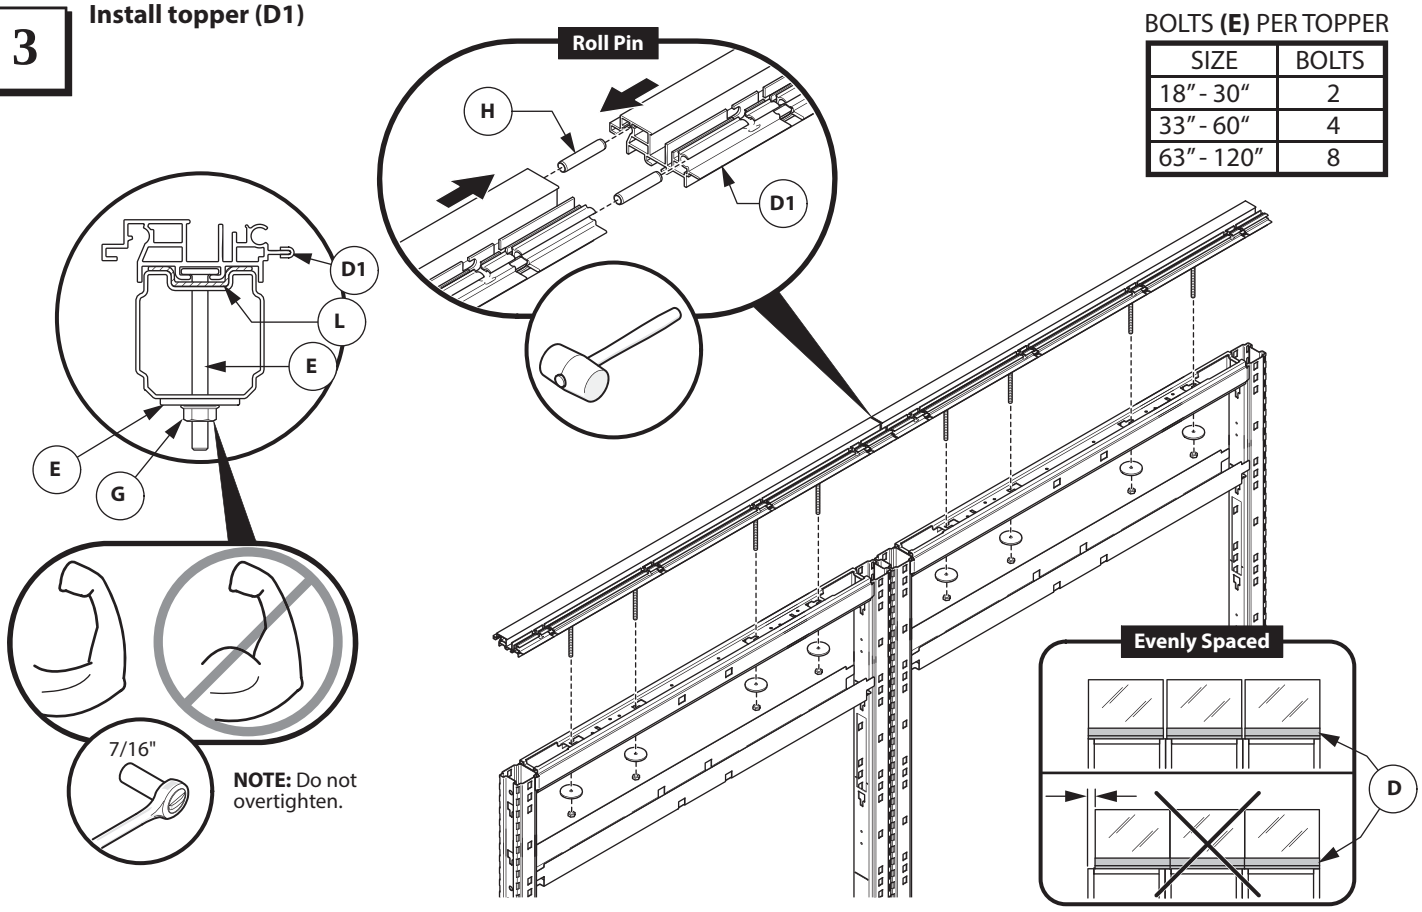

4 Install Nut Plate Assembly (C) and Foam Tape (D2)

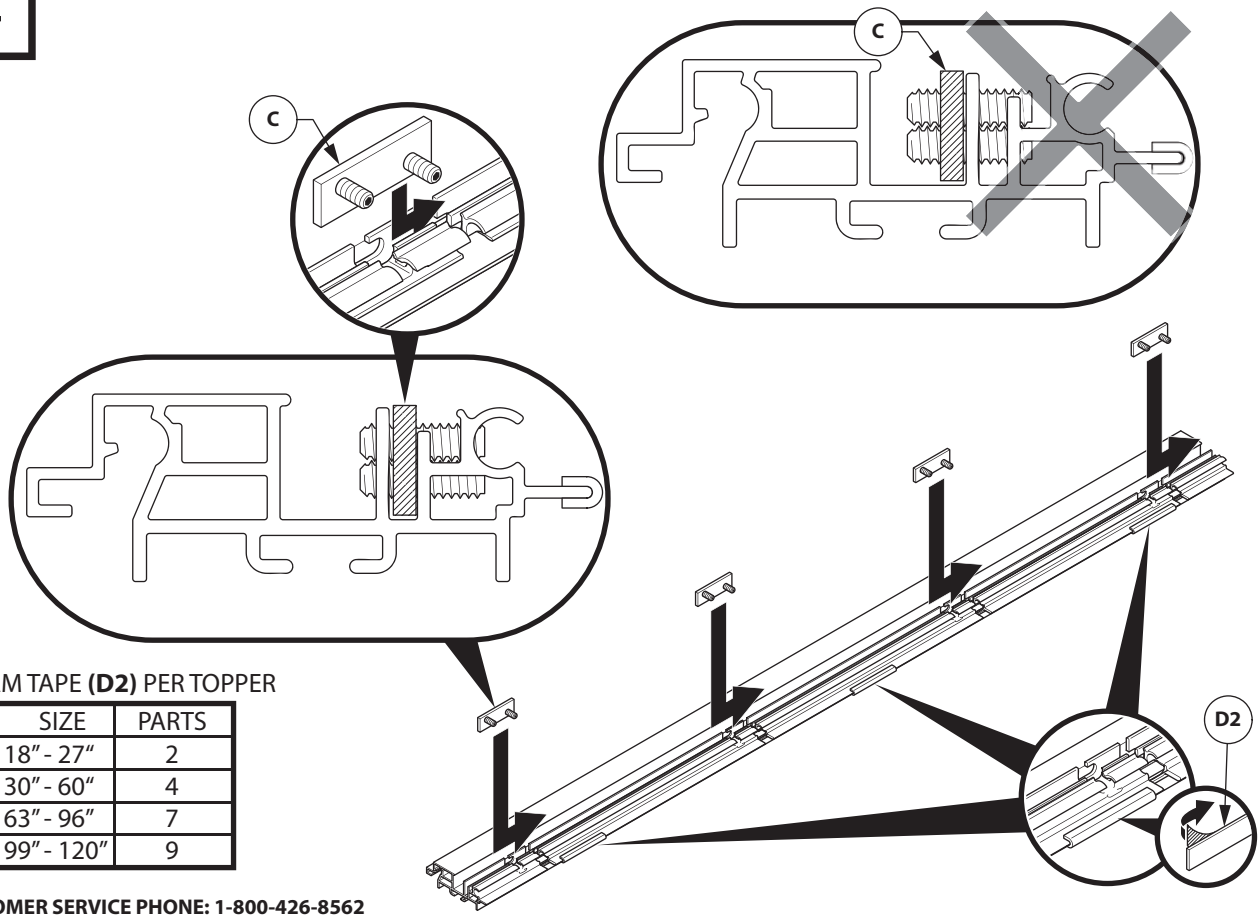



FOAM TAPE **(D2)** PER TOPPER

SIZE	PARTS
18" - 27"	2
30" - 60"	4
63" - 96"	7
99" - 120"	9

CUSTOMER SERVICE PHONE: 1-800-426-8562

5 Install glass (A)

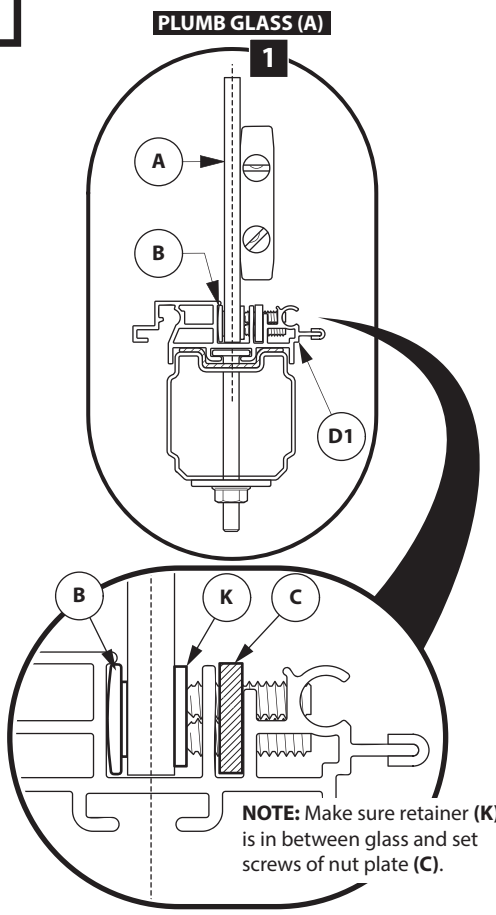


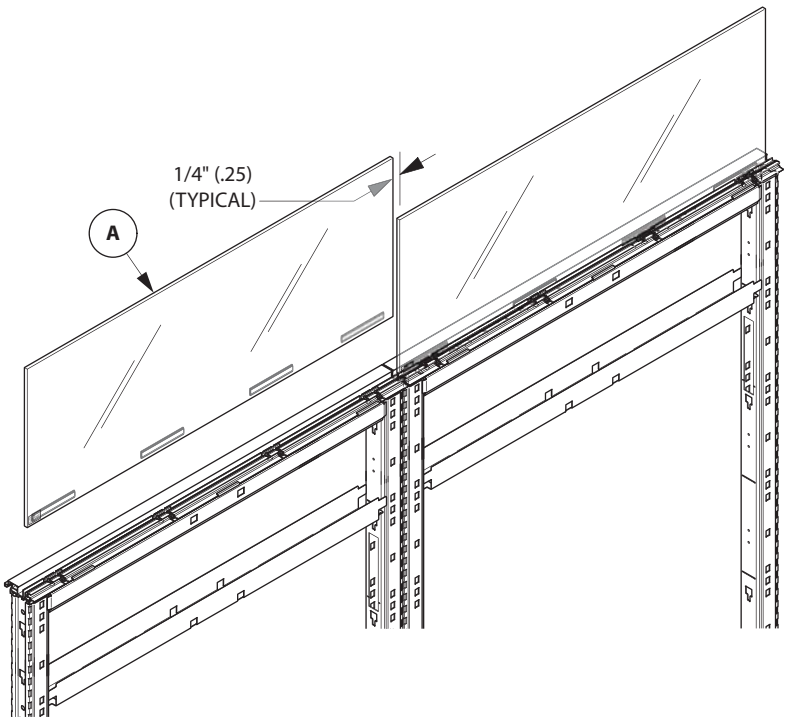


6a Install retainer (K) and secure glass (A)

⚠ CAUTION


IF REUSING RETAINER (K) MAKE SURE THE MARKED (SCREW INDENTATION) SIDE IS FACING AWAY FROM THE GLASS.

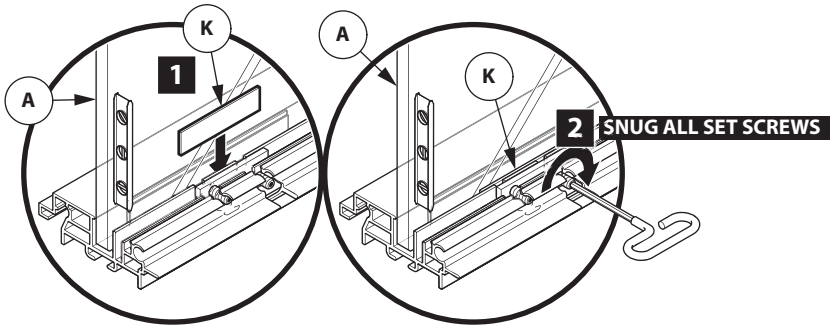

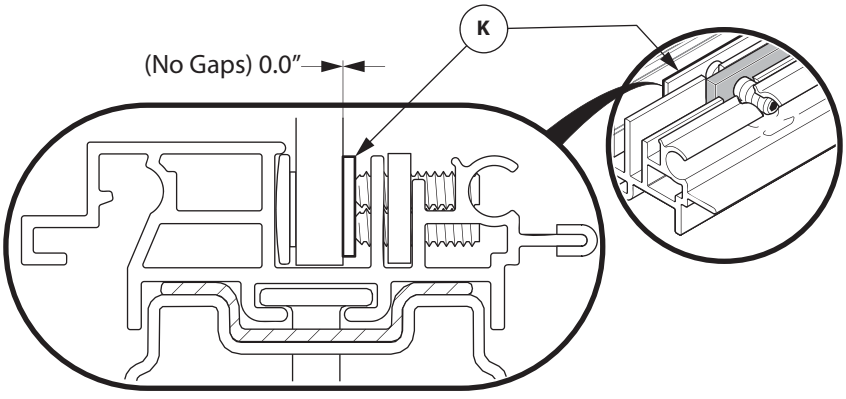

WARNING! WARNING!


TIGHTEN FIRMLY OR UNTIL ALLEN WRENCH FLEXS.

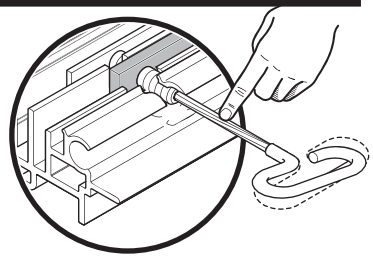

WARNING! WARNING!


6b

DO NOT ADJUST TOP RAIL AFTER GLASS HAS BEEN INSTALLED REMOVE GLASS FIRST THEN ADJUST TOP RAIL!

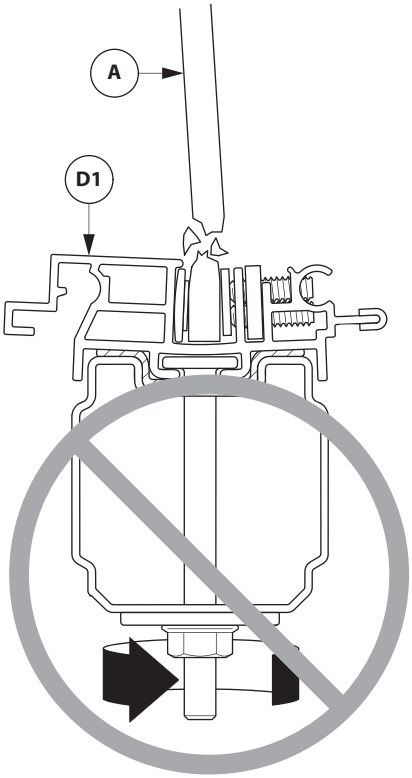

7 Install covers (D)


HINT: Make sure the glass is aligned, plumb, and centered **BEFORE** installing cover.

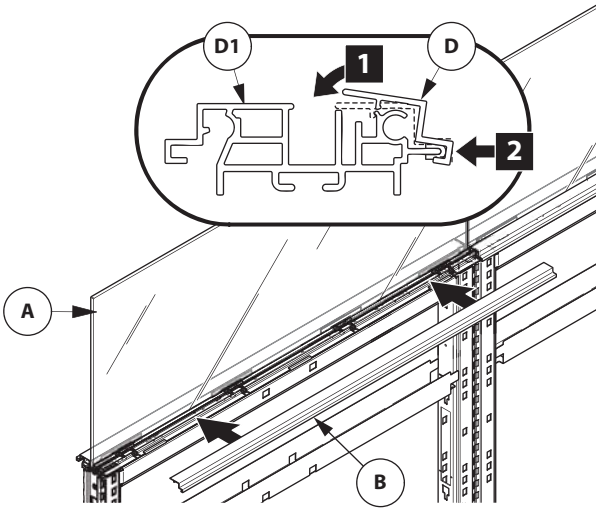

8 Removing covers (D)


FOR ALUMINUM

NOTE: Careful not to scratch glass.

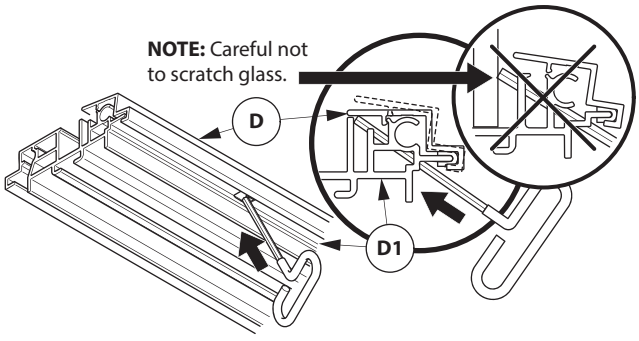

OR


FOR STEEL

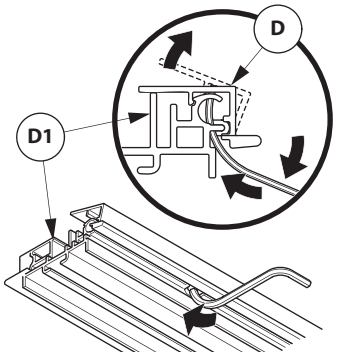

9 **Install end-of-run (M)**
NOTE: Item **(N)** is only used for aluminum end-of-run trim **(M)**.

10 **Install end plug (J)**


FOR ALUMINUM TRIM (M)

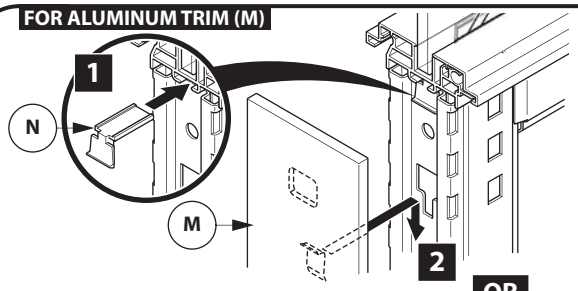



OR

FOR STEEL TRIM (M1)


NOTE: Item **(N)** is not used for steel end-of-run trim **(M1)**.

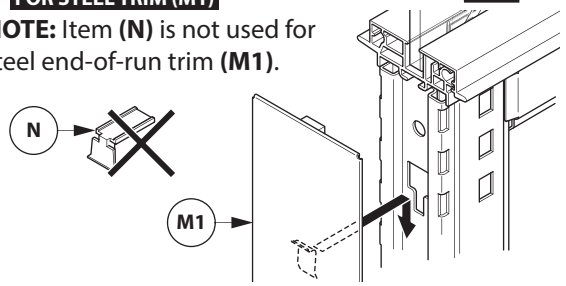

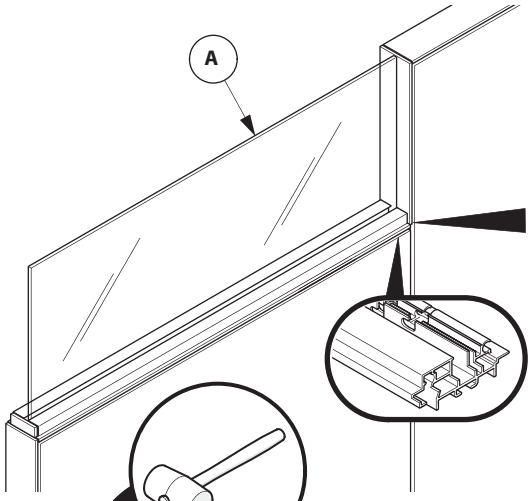


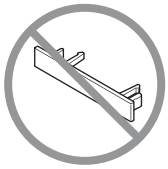


NOTE: For variable height conditions simply assemble EOR cover as before.

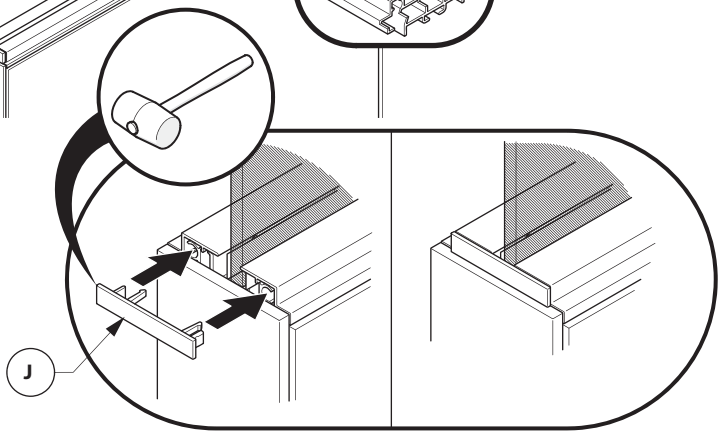


INLINE

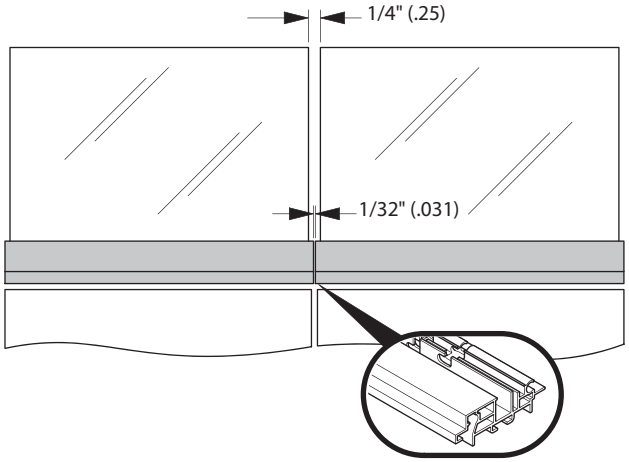

END-OF-RUN

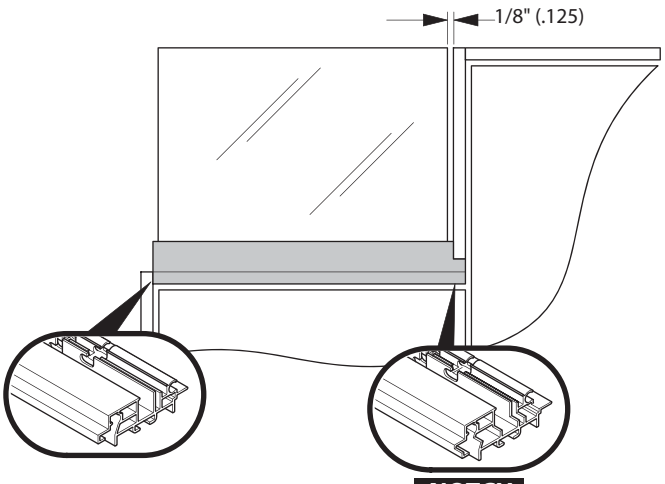

INTERSECTION

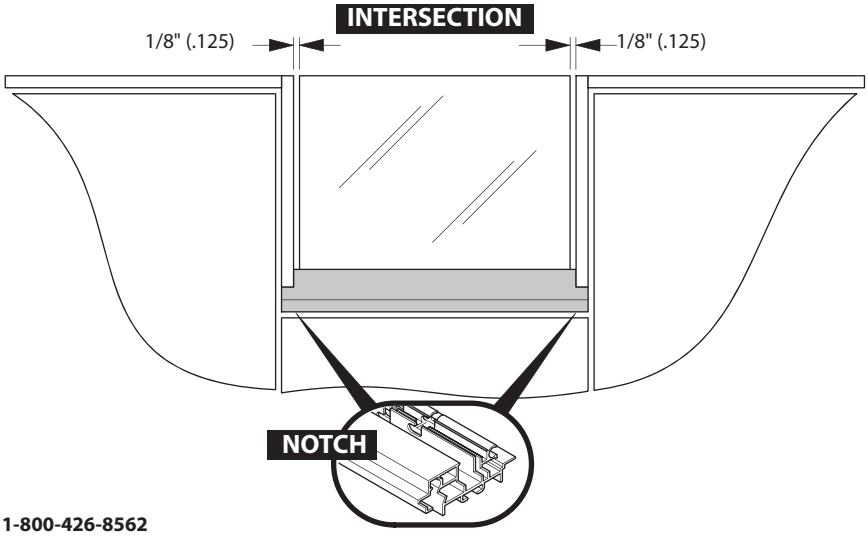

CUSTOMER SERVICE PHONE: 1-800-426-8562