

Panel Mount Worktops

Installation Instructions


Tools Required

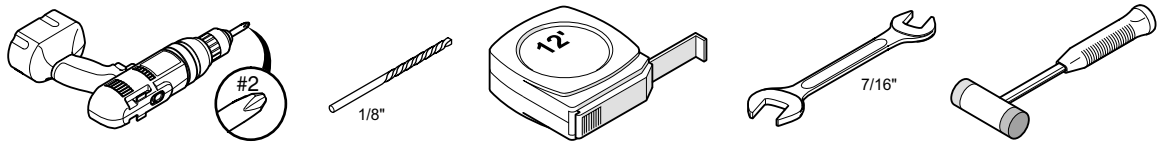


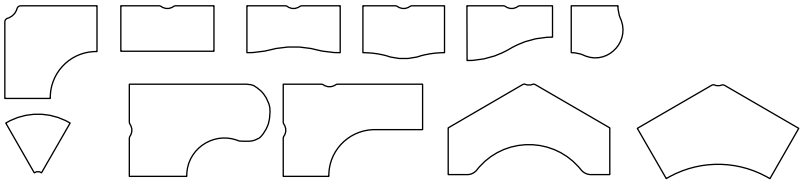

Cantilever Installation

1 **If necessary disassemble cantilever(s) (A & B)**

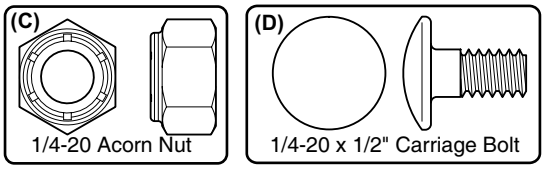

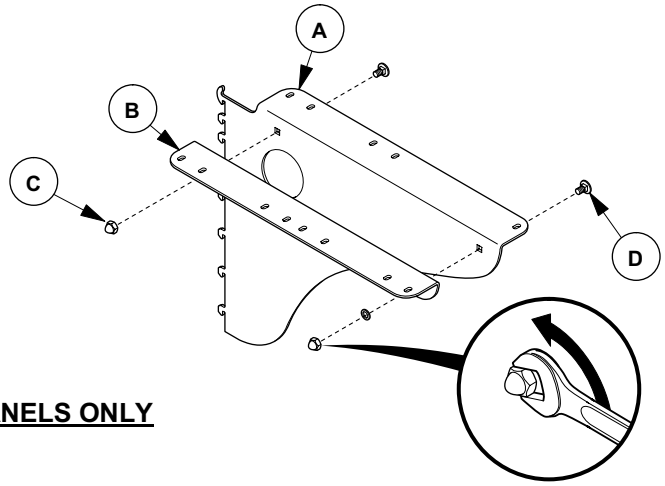



FOR PREMISE PANELS ONLY

2 **Install cantilever(s) (A)**


FOR PLACES PANELS

NOTE: Install dislodgment clip **(R)** for Places 120° cantilevers.

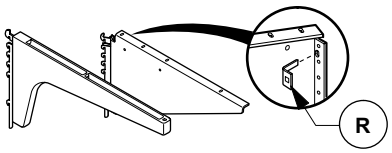

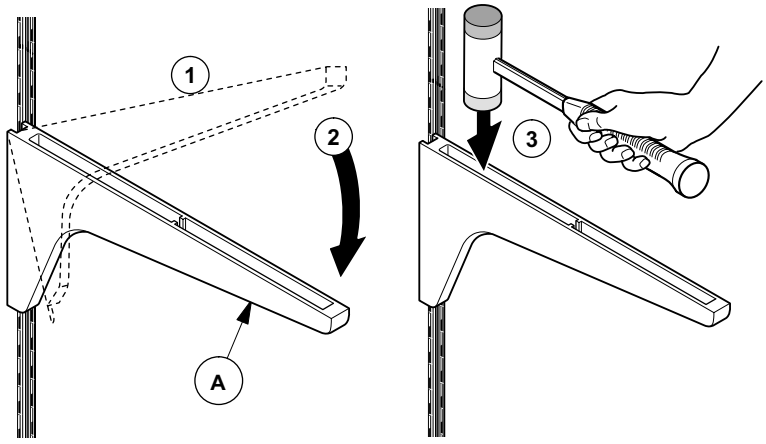


FOR PREMISE PANELS

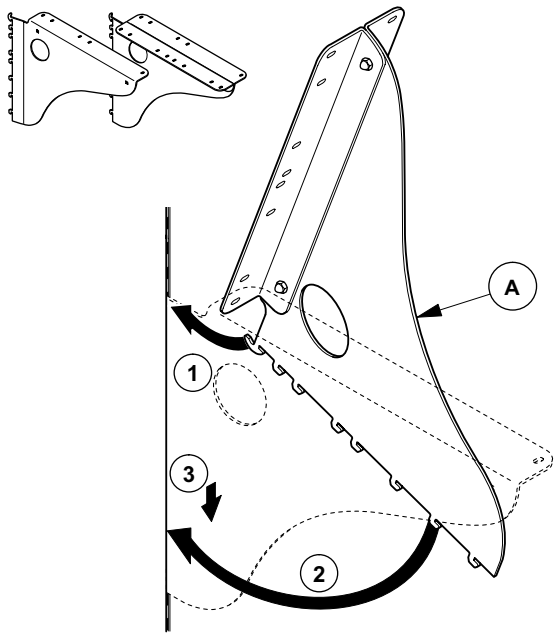

CUSTOMER SERVICE PHONE: 1-800-426-8562


FOR 90° CANTILEVERS

Places **Premise**

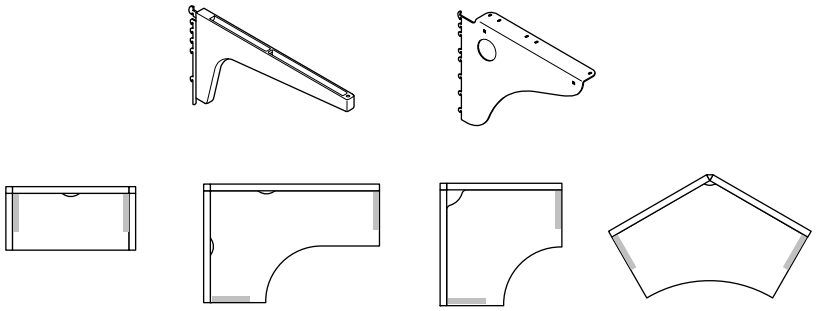

FOR 120° CANTILEVERS

Places **Premise**

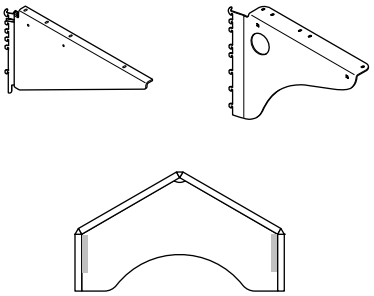


FOR SIDE MOUNT BRACKETS

Places




Premise

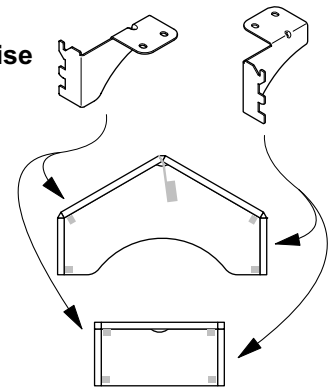


FOR CORNER BRACKETS

Places **Premise 120°** **Premise 90°**

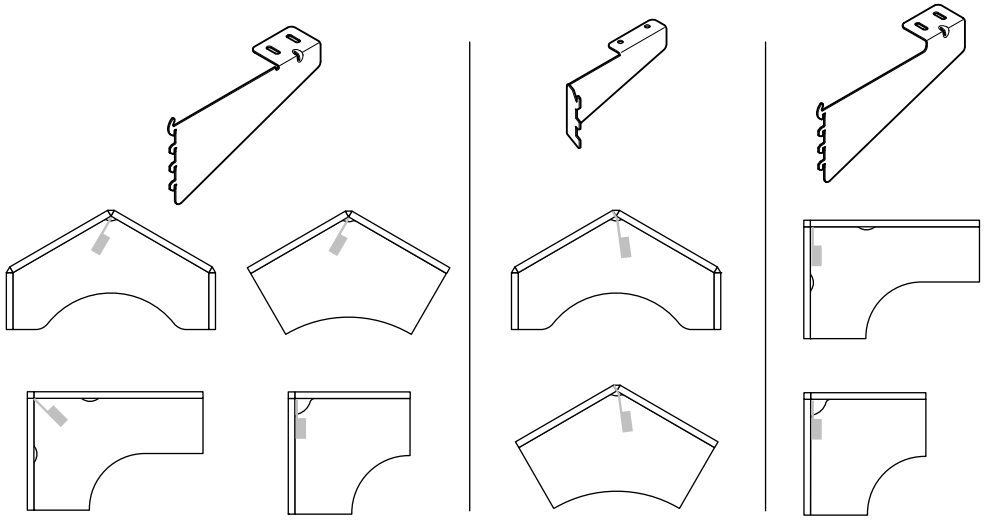


Corner/Side Mount Bracket Installation

3 **Install corner & side mount brackets (E & F)**

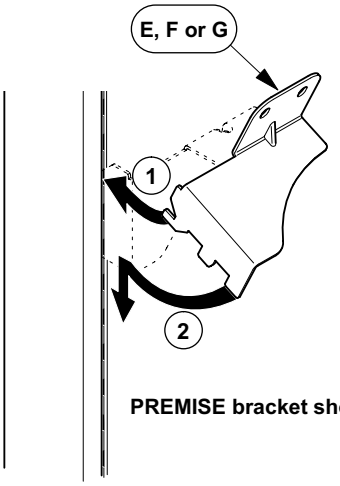


PREMISE bracket shown

FOR PLACES PANELS

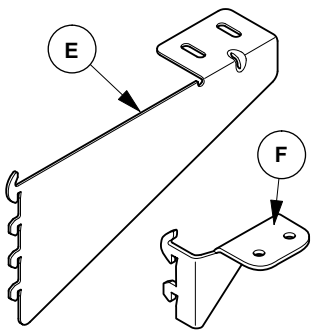


FOR PREMISE PANELS

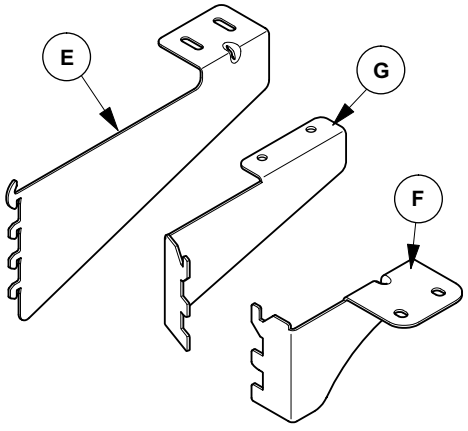


4 Install worktops (H) onto cantilever (A)


NOTE: Align all worksurfaces before screws are tightened.


FOR PLACES PANELS

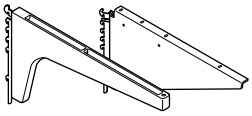


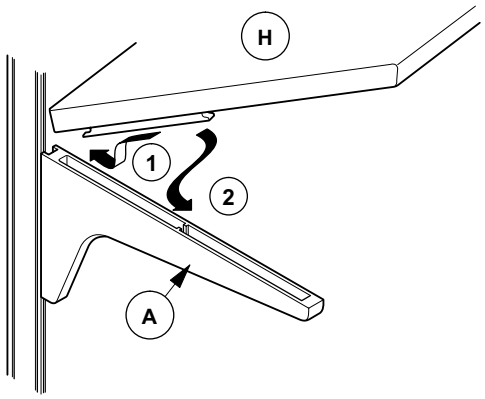


FOR PREMISE PANELS

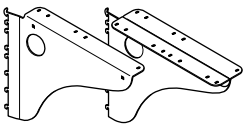

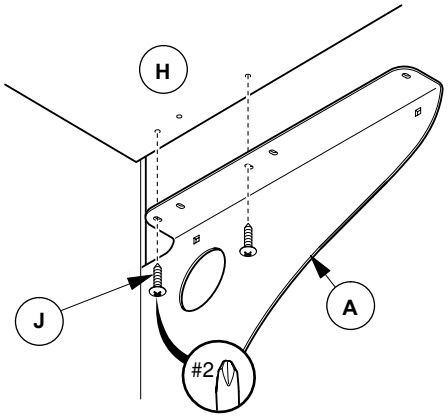

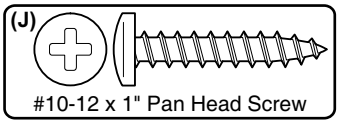


For Corner Installation

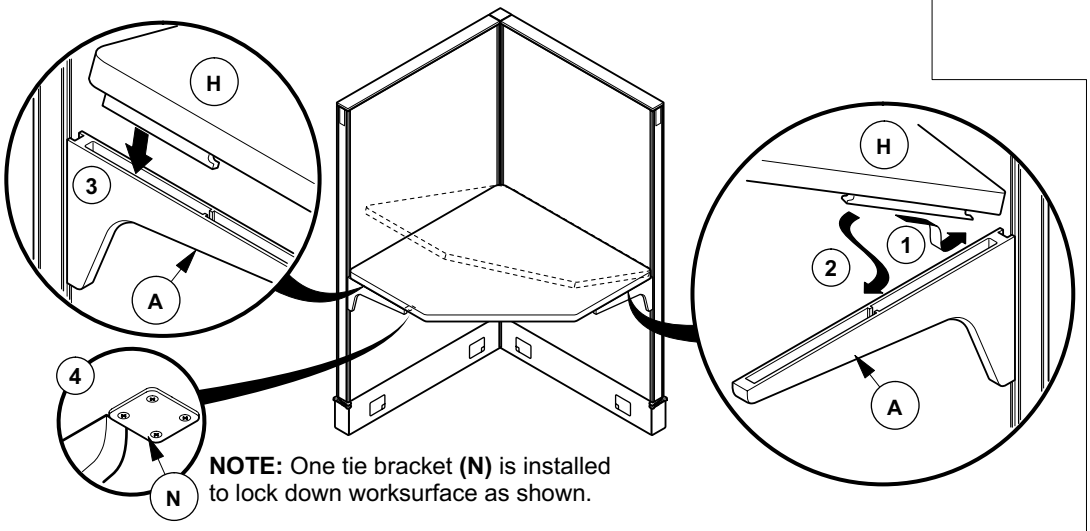


NOTE: One tie bracket **(N)** is installed to lock down worksurface as shown.

5 Fasten worktop (H) to corner bracket(s) (K)


NOTE: Align all worksurfaces before screws are tightened.

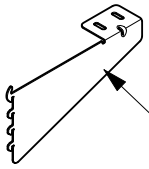

FOR PLACES PANELS

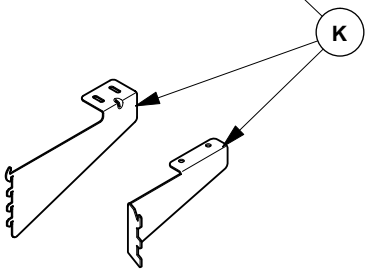


FOR PREMISE PANELS

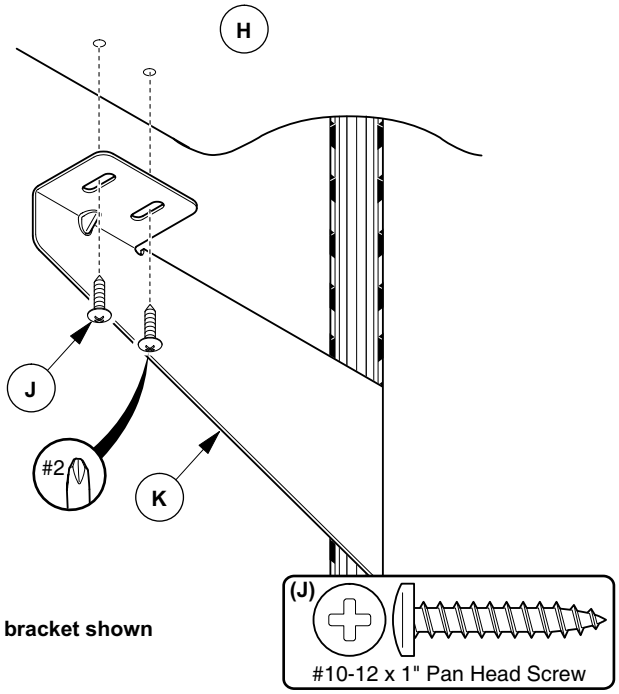

PLACES bracket shown


CUSTOMER SERVICE PHONE: 1-800-426-8562


6 **If necessary use bracket (L) as template and drill 1/8" holes .25" deep**

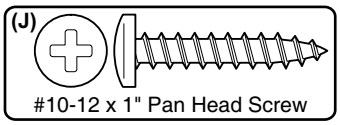

7 **Secure worktop (H) to brackets (L)**


NOTE: Check alignment of worktop before tightening screws.

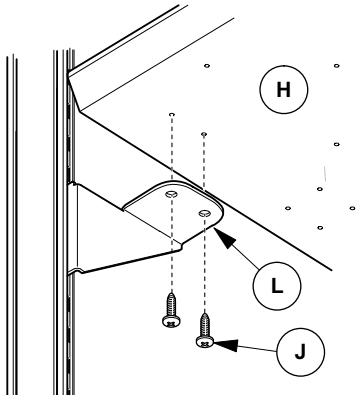

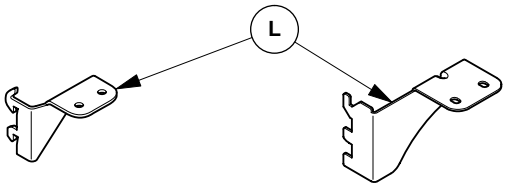

FOR PLACES PANELS **FOR PREMISE PANELS**

FOR Vinyl/Laminate or Wood Tops

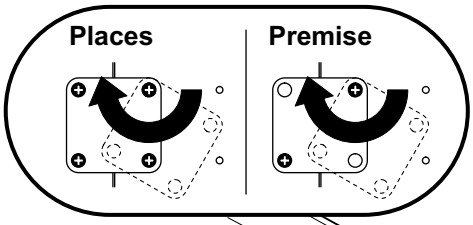


8 **Rotate tie bracket (N)**

NOTE: Tie bracket to be used from adjoining worktop.

9 **Use bracket (N) as template and drill 2 holes .25" deep**

NOTE: Make sure worktops are butted up tight to one another.

10 **Secure bracket (N) to worktop (H)**

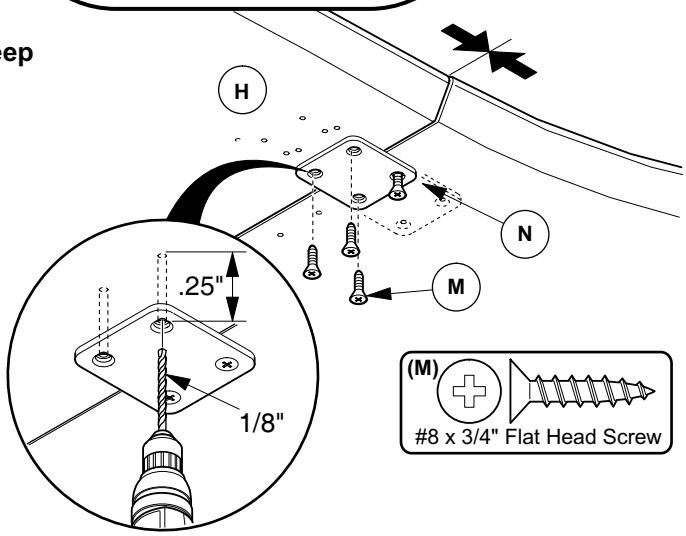

FOR Polyurethane/Laminate Tops

11 **Rotate and fasten tie bracket (N)**

