
OPENEST ®

Corner Booth

Installation Instructions


Tools Required

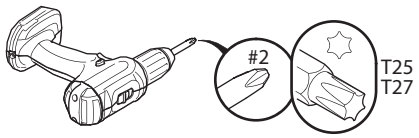


FRAME

1

NOTE: Once product is assembled it is best to move while assembled.

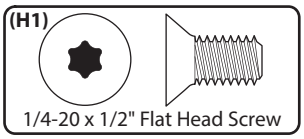


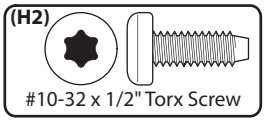

NOTE: Assemble after all **(H1)** installed.


NOTE: Assemble after all **(H1)** installed.

NOTE: Assemble after all **(H1)** installed.

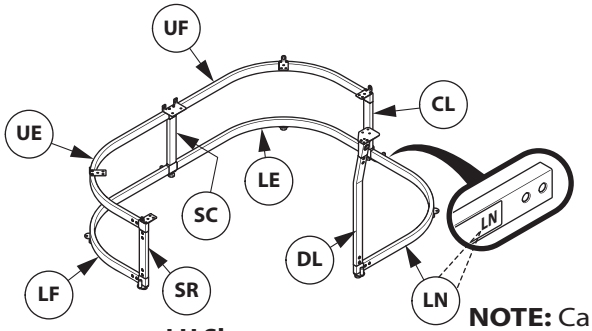

LH Shown


NOTE: Callouts are on the frame.

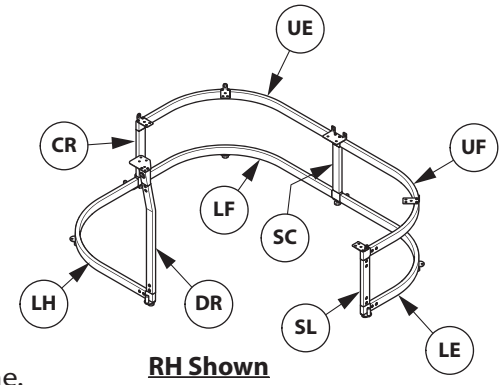


RH Shown

CUSTOMER SERVICE PHONE: 1-800-426-8562


2

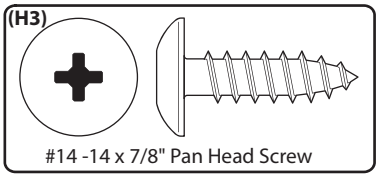


NOTE: <u>Do not</u> tighten frame bolts **(H3)** at this time.

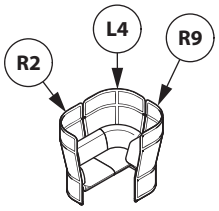

<u>LH Shown</u>

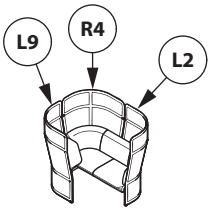


<u>RH Shown</u>

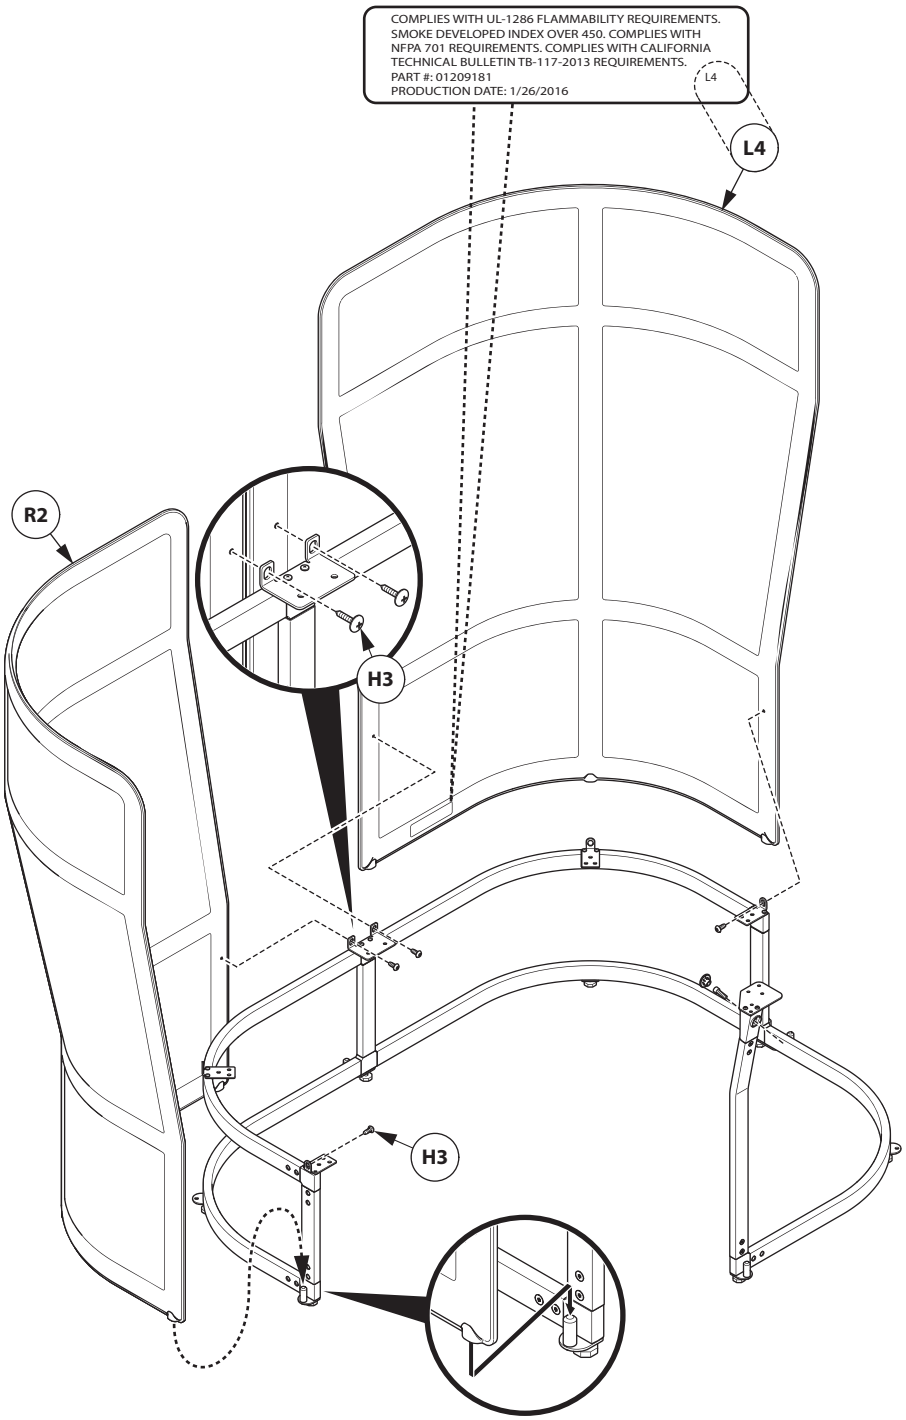


3

(H5)

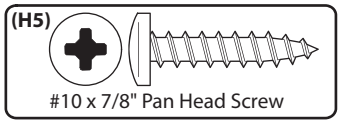


#10 x 7/8" Pan Head Screw

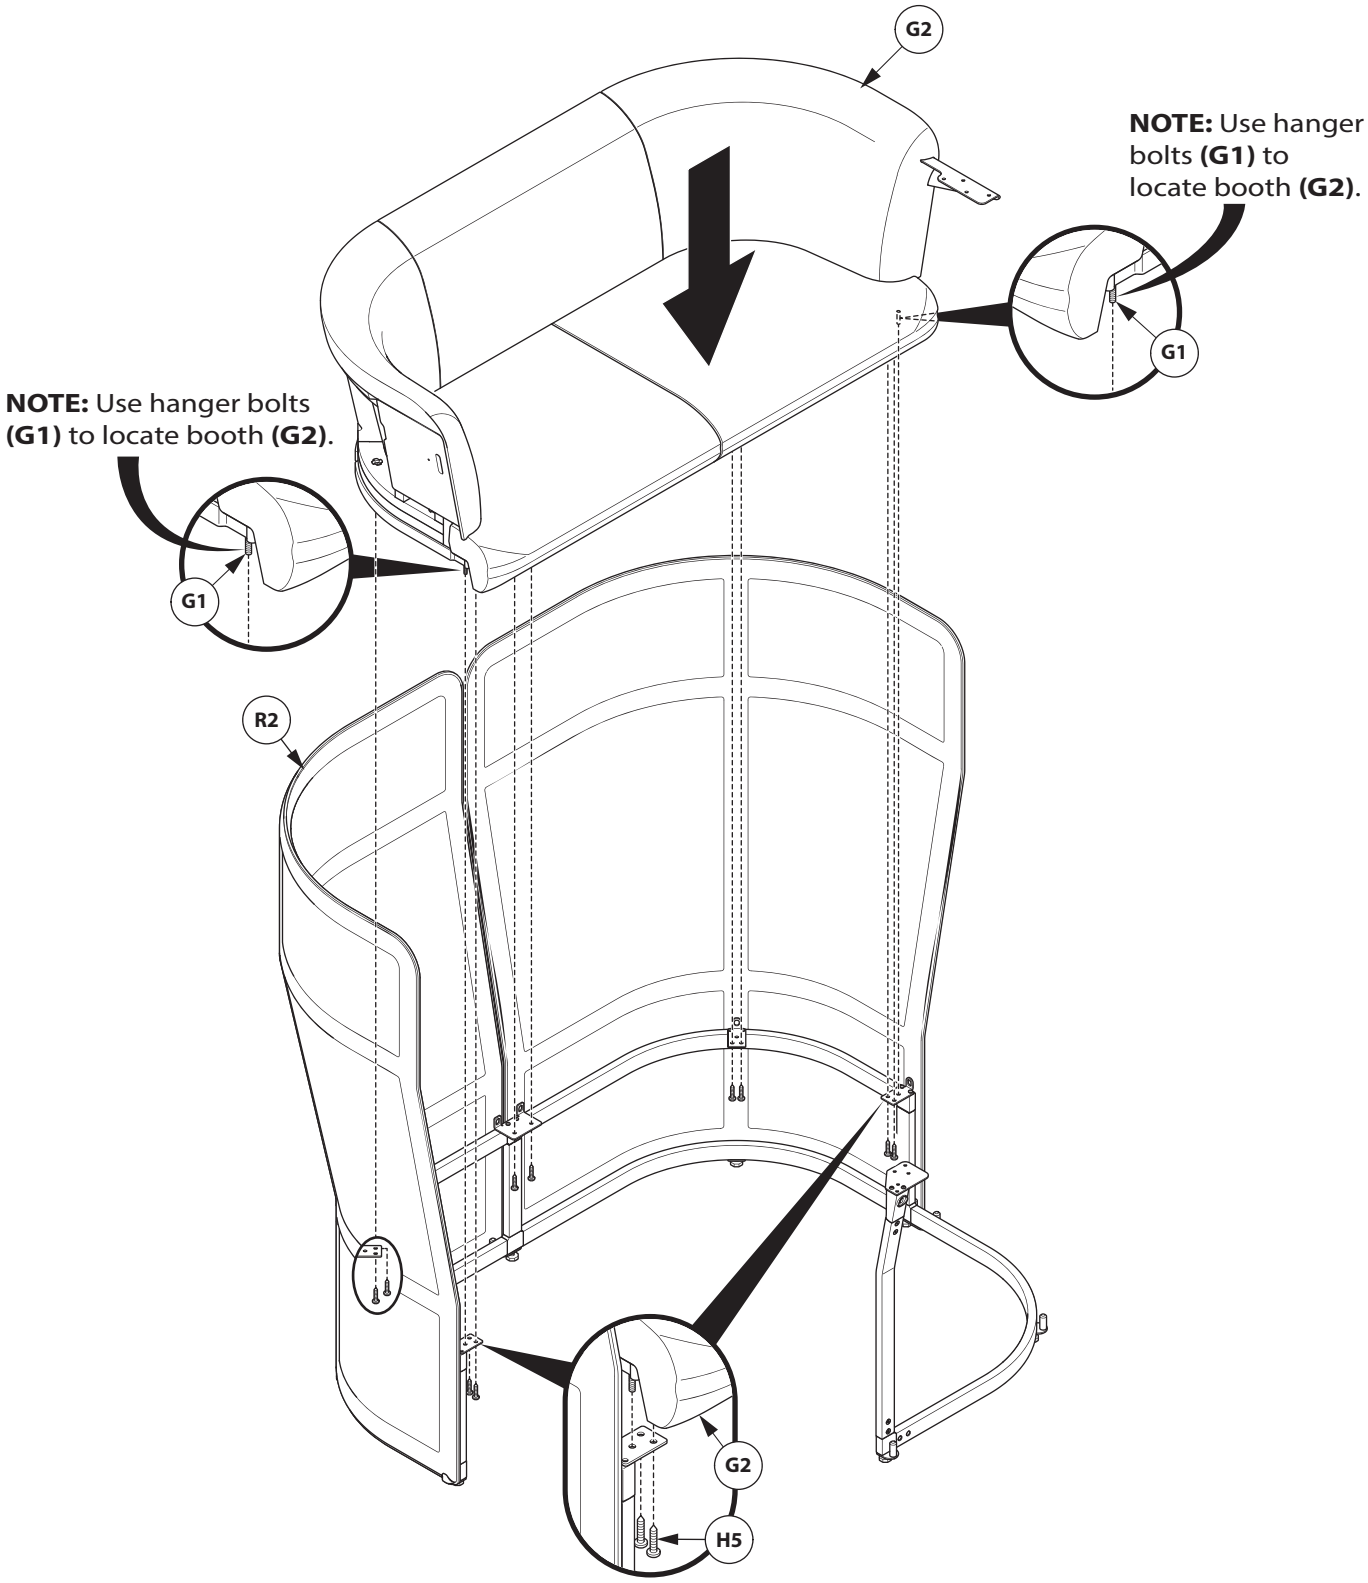


4


(H5)




#10 x 7/8" Pan Head Screw

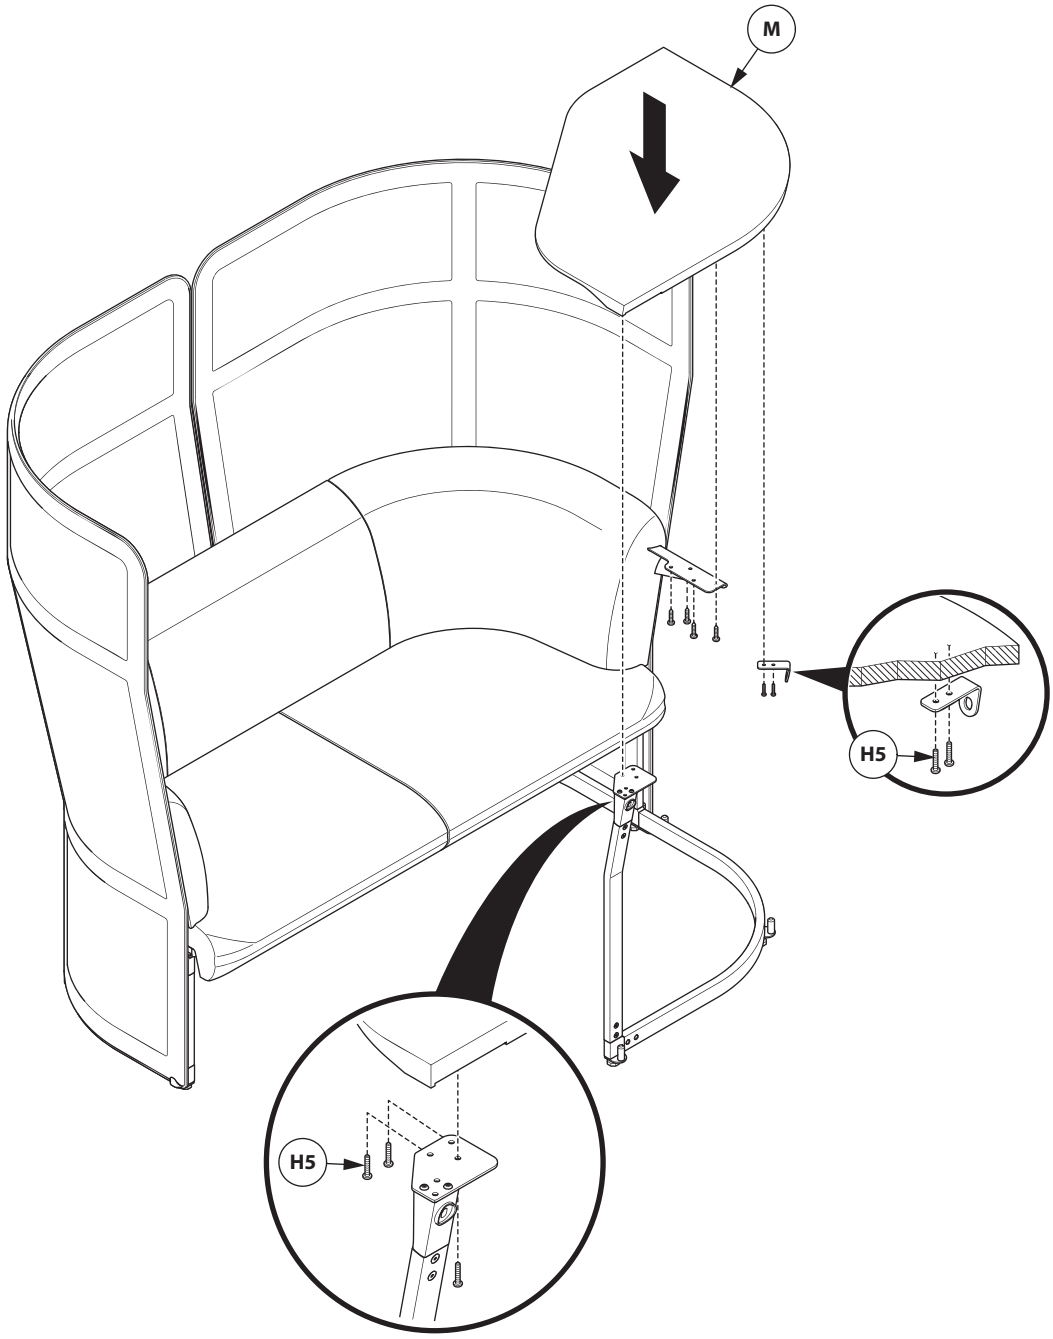

5

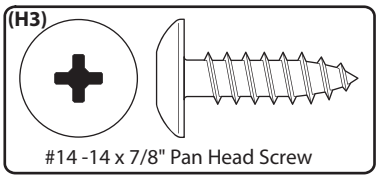

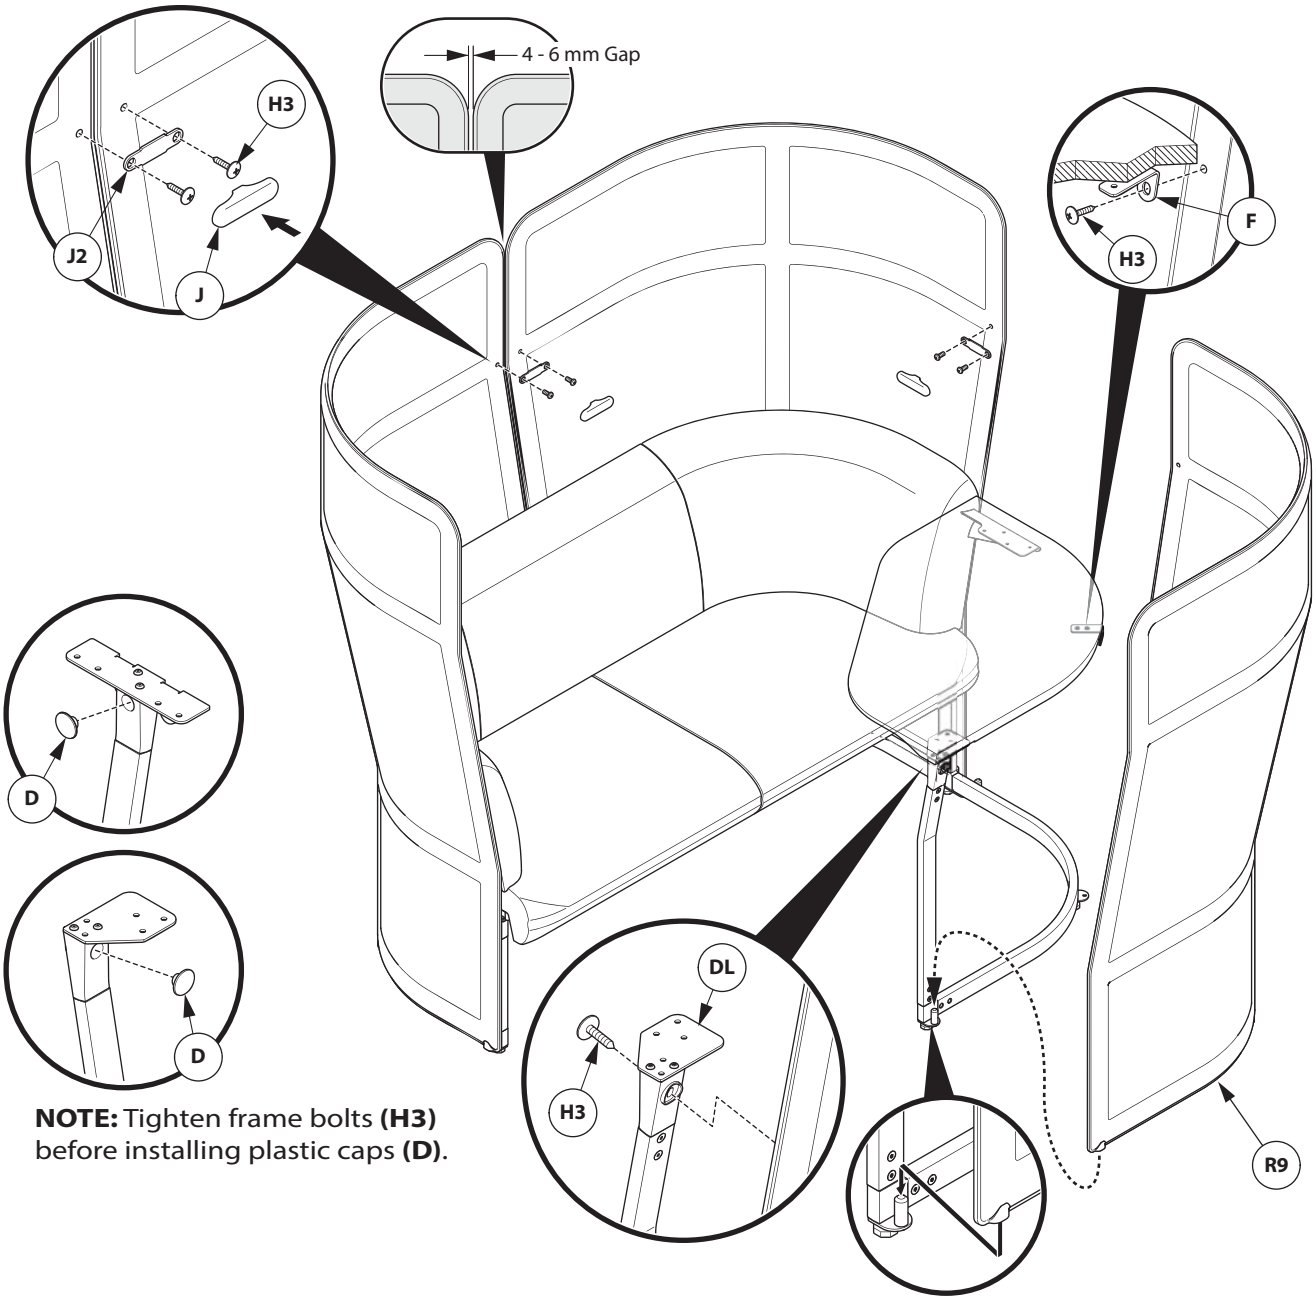

NOTE: Tighten frame bolts **(H3)** before installing plastic caps **(D)**.