NEW VIEWS
MODESTY PANEL TO PANEL
Installation Instructions

1. Insert panel mount bracket into panel trim rail; position on panel as low as possible. Make sure bracket hooks are fully seated in trim rail (Fig. 1).
2. Place modesty panel into position on panel mount bracket. Install two (2) #10-16 x .75 pan head screws through bracket into modesty panel. **NOTE: Lower inside hole on modesty is predrilled, but upper outside hole is not and requires a small pilot hole** (Fig. 2).
3. Install work surface bracket into opposite trim rail at height level with top of modesty panel (Fig. 2).
4. Place work surface bottom side up on a clean, carpeted or padded floor. Remove both channel brackets from work surface (Fig. 3).
5. Turn work surface right side up and attach work surface to work surface bracket using two (2) #8-15 x 1 truss head screws (Fig. 4). **NOTE: Modesty panel will be inset from back edge of work surface approximately 1 1/8".**

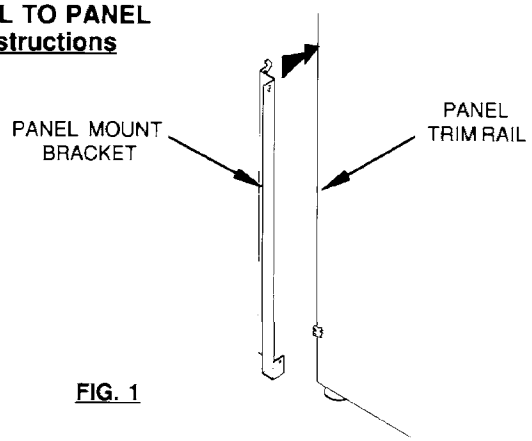


FIG. 1

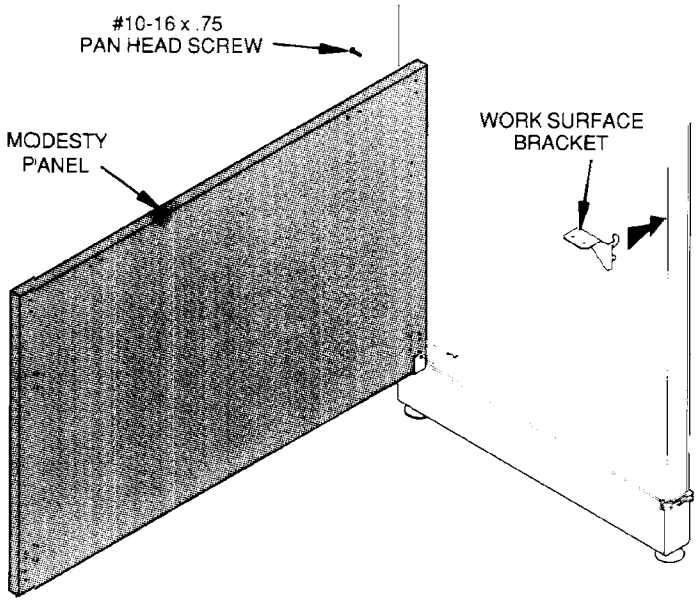


FIG. 2

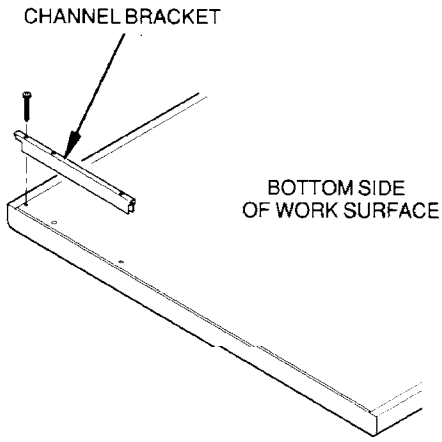


FIG. 3

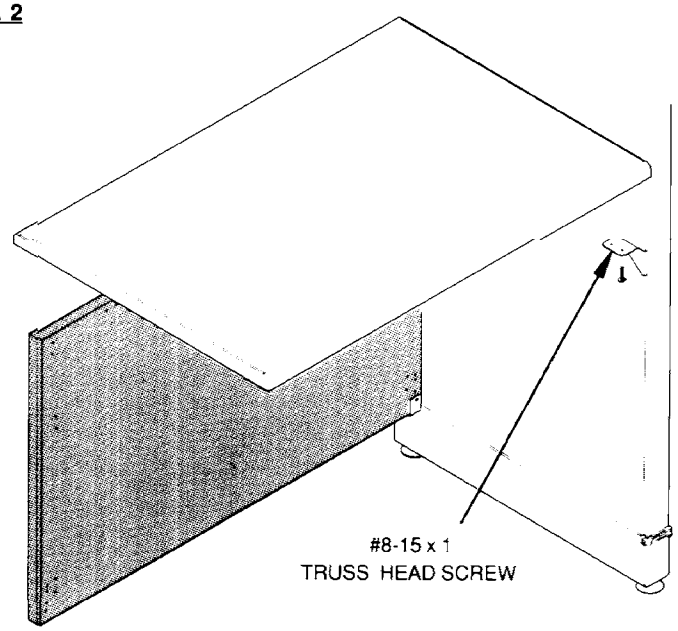


FIG. 4

Part No: 7021-6681	ECO No: 243-572	Page No: 1 OF 1	Rev: A	HAWORTH