PLACES® AND WOOD PLACES® T-MOUNT PANEL KIT

Installation Instructions

NOTE: For ease of installation, identify T-mounted panel conditions and install T-mount kits before joining those panels to others. T-mount kits mount on panel side rails or in pre-drilled holes in panel frames for center-mount conditions. The T-mount kit can also be mounted along the width of non-powered panels by drilling one 3/8" diameter hole on each centerline of top and bottom frame rails of the panel subassembly (T-mount kits cannot be installed within 2½" of the panel sides due to the length of the top and bottom frame rails). On powered panels, T-mount kits must be mounted at least nine (9) inches from the panel side rails to allow receptacle access.

T-Mount - Center and Off-Center Location

NOTE: The panel to be T-mounted to the face of another panel must be of equal height.

1. Remove top caps and raceway covers from panels.
2. Remove base raceway assembly by using a 5/16" ratchet socket and making a quarter-turn to unseat **(Fig. 1)**.
3. Attach top center-mount bracket to T-mount side rail with four (4) screws provided. Insert light block into groves in T-mount side rail. Hook top T-mount bracket with rail over panel top and into pre-drilled hole at the bottom of the 2" deep communication channel **(Fig. 2)**. Top center-mount bracket must be fully seated onto frame rail.
4. Insert bottom center-mount bracket in the pre-drilled hole in bottom frame rail. Align bracket with holes in T-mount rail and start screws through rail and into bracket. Adjust bracket up against the panel frame and tighten the screws **(Fig. 2)**.
5. Replace base raceway assembly **(Fig. 1)**.
6. Unscrew the glide stem and pull the glide housing from T-mounted panel, and replace with T-mount glide housing and glide stem.
7. Notch raceway cover retainer flanges to clear bottom bracket and install.
8. Attach T-mounted panel to T-mount rail.
9. Check that top center mount is fully seated onto top rail.

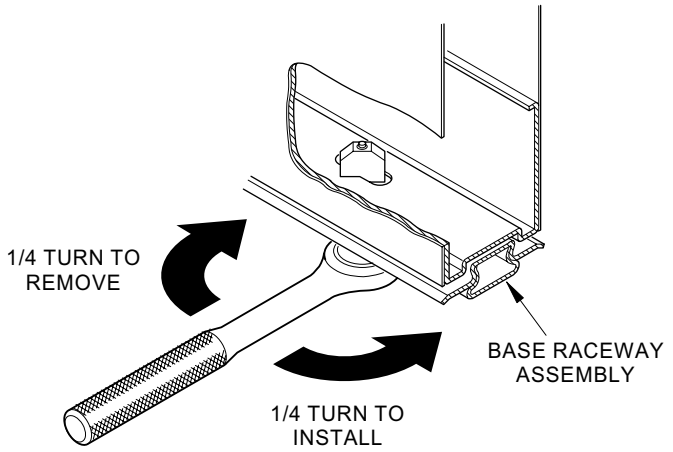


FIG. 1

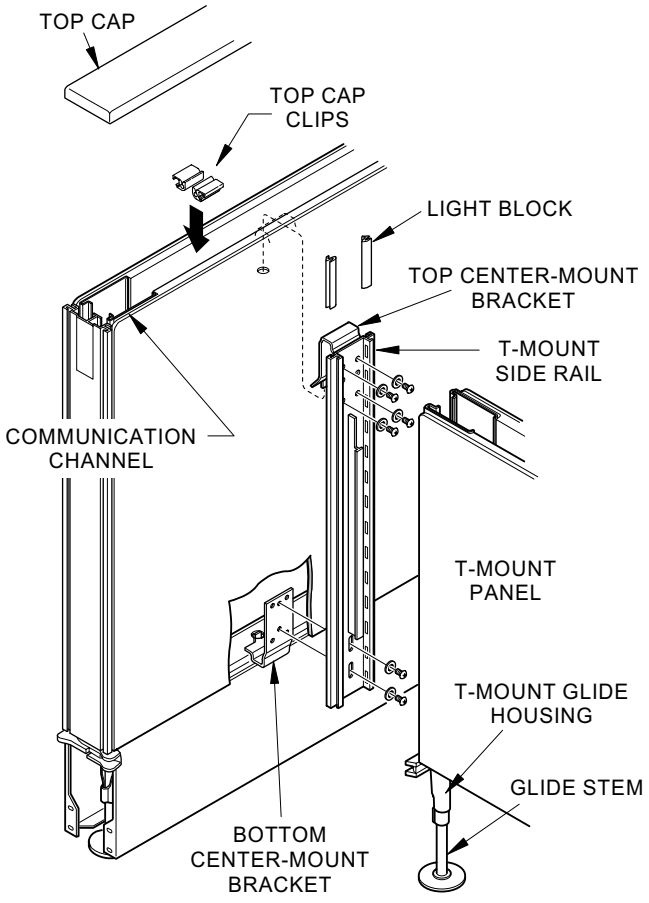


FIG. 2

10. The extra retainer clips provided must be installed in the top panel rail, directly adjacent to the center mount bracket **(Fig. 2)**. Measure for position of the retainer clips in the top rail. Assemble clips into rail **(Fig. 3)**.

NOTE: When installing wood top caps , if a T-mount kit is installed at a location other than center or end of panel, the rib on the underside of the wood top cap must be cut away to allow the top cap to be properly seated.

11. Install top caps according to installation instruction **7021-6452**.

T-Mount Kit - Side Rail Attachment

1. Attach bottom side rail clip to bottom of T-mount rail. Tabs should be pointing up on the left or right side of T-mount rail depending on which side T-mount rail is to be mounted **(Fig. 4)**.

2. Remove glide stem and glide housing from T-mounted panel and replace with T-mount glide housing and stem.

3. Align top side rail with side rail of panel. Insert top side rail clip into panel side rail.

4. Hook T-mount side rail into bottom of panel side rail. Align and fasten T-mount rail to top side rail clip with screws provided.

5. Attach T-mounted panel to T-mount side rail. Refer to Side Rail Attachment Installation Instructions.

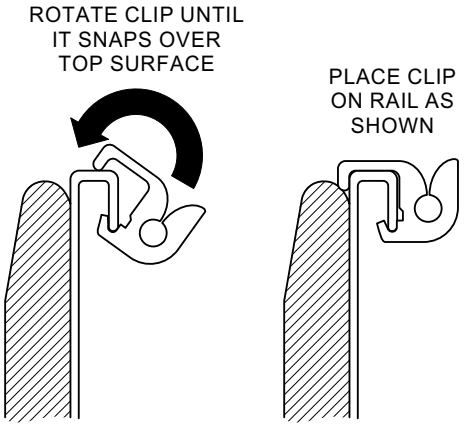


FIG. 3

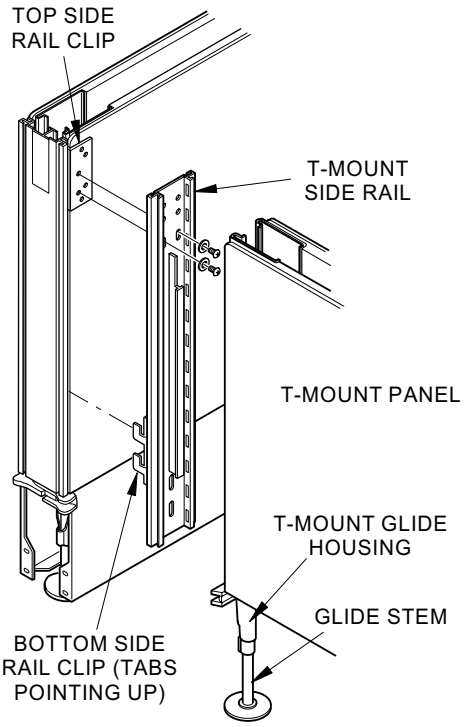


FIG. 4