WOOD PLACES®
PANEL-INTEGRATED CONSOLE ASSEMBLY
Installation Instructions

Tools required

Power Driver with Phillips Bit

Customer Service Phone: 1-800-426-8562

The instructions for assembly of the top to the work surface supports also apply when assembling a freestanding desk. Drawer pedestal attachment instructions also apply to a freestanding credenza case.

1. Assemble side rails and top cap on wall panel per PLACES™ panel installation instructions.

NOTE: When a bridge will be adjoining either side of the console assembly, thread a #12 x 1" modular clip shoulder screw into the hole located nearest that front bottom corner of the end/support panel which will adjoin the bridge (Fig's 1, 1A).

2. Insert the work surface hanger brackets into slots in the side rail.

3. Lift the work surface support up to engage the hooks into the side rail. Adjust glides on work surface support to keep brackets fully seated in side rail (Fig. 2).

NOTE: Bracket position is different on left and right hand surface supports (Fig. 1).

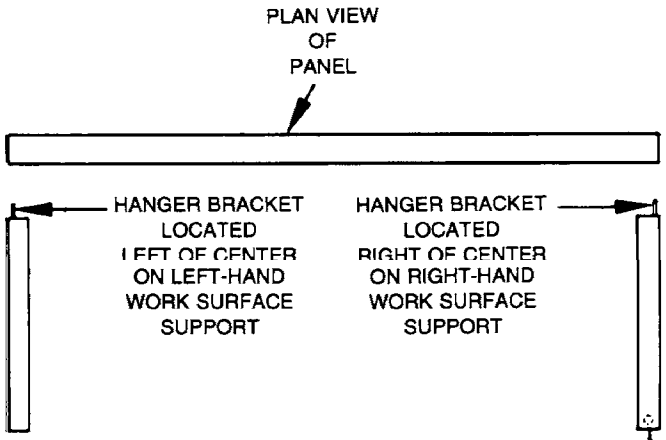


FIG. 1

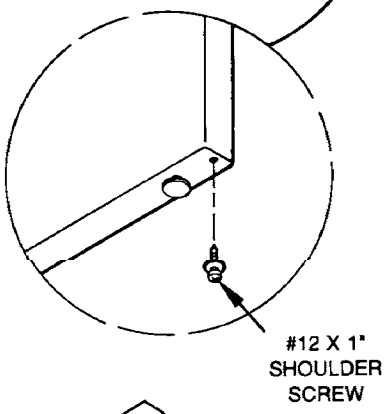


FIG. 1A

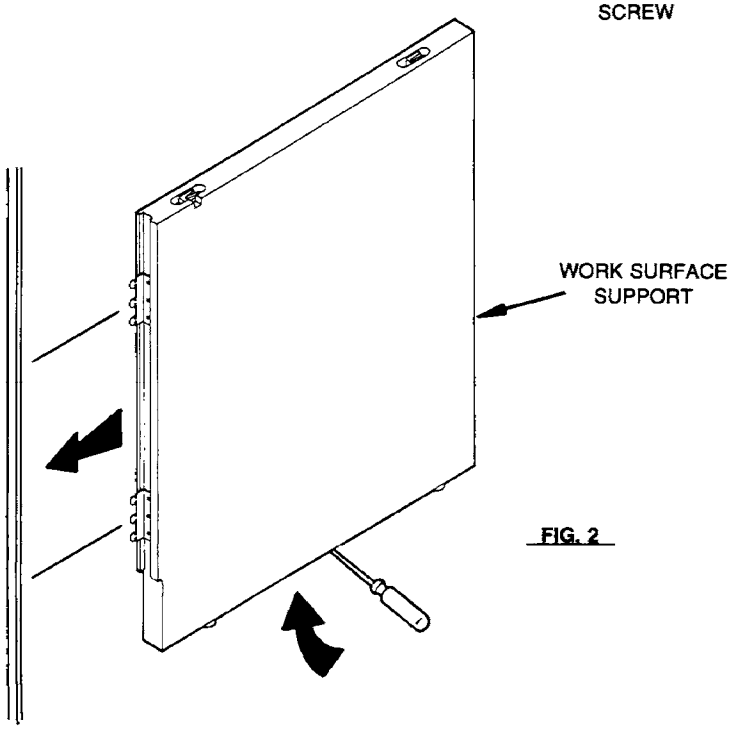


FIG. 2

CUSTOMER SERVICE PHONE: 1-800-426-8562

Part No: 7021-6464	ECO No: 261-541	Page: 1 OF 2	Rev: B	HAWORTH

4. Thread two (2) #12 x 5/8" modular clip shoulder screws into pre-drilled holes in underside of top at each end. See Figure 3 on correct hole location. Set top in place on work surface support panels, aligning modular clips in support panels with screws in top. Slide the top firmly back against the panel to properly engage screws with modular clips.

5. To install drawer pedestal, remove drawers from housing according to installation instructions provided with drawer pedestal. Determine whether drawer pedestal will be right or left hand mounted to underside of top. Set drawer pedestal housing upside down on a clean padded surface. Place L-shaped base on drawer pedestal housing.

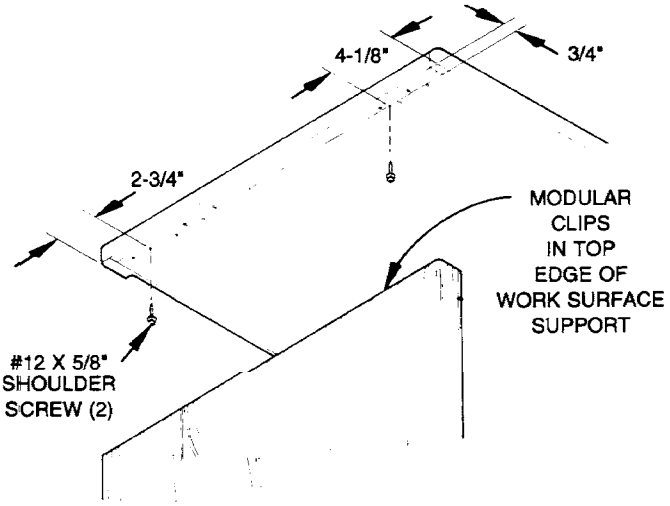


FIG. 3

NOTE: The L-base must align with the edges of the drawer housing. The open end of the L-base must be facing toward the adjoining work surface support panel when the drawer housing is assembled to the console (Fig. 4).

6. Use the L-base as a template to mark holes on underside of drawer housing. Drill seven (7) 5/32" dia. x 3/4" deep holes in base and attach L-base to housing using seven (7) #10 x 1/2" cross recess screws provided.

7. Slide drawer housing under the top, aligning holes in under-side of pre-drilled top with keyhole slots in housing. Attach housing to top using four (4) #14-10 x 1" hex head self-tapping screws (Fig. 5). Screws must engage in narrow portion of keyhole slots when fully tightened.

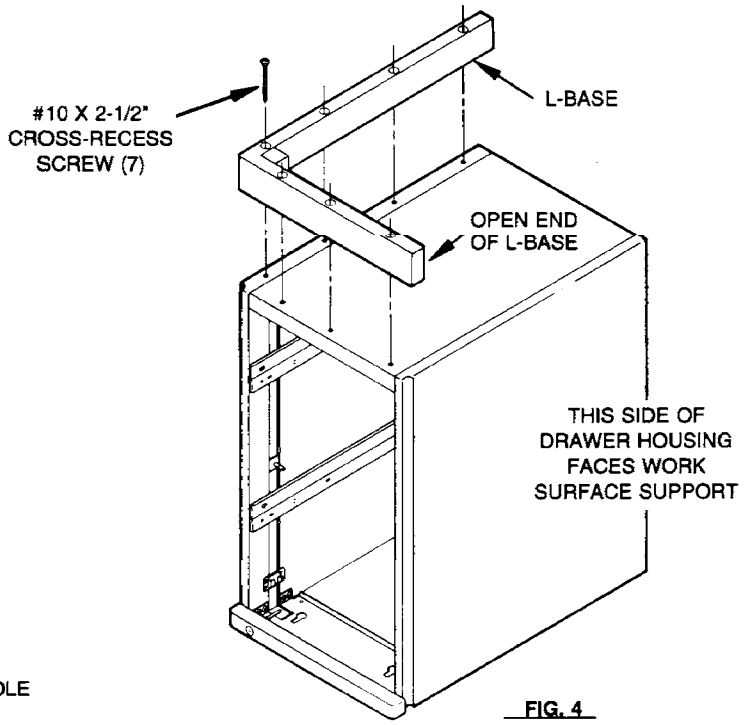


FIG. 4

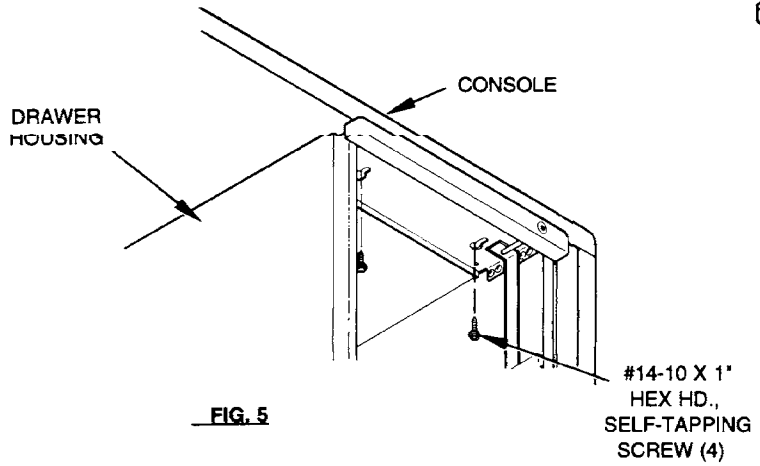


FIG. 5