PLACES® FREESTANDING BRIDGE ASSEMBLY
Installation Instructions

Tools Required
Power driver w/Phillips #2 drill bit

1. Set the bridge work surface holes-up on a clean, carpeted or padded floor. Align three (3) holes in the edge rail of modesty panel with three (3) holes located near one edge of the work surface. Fasten the modesty panel to the work surface using three (3) #12-11 x 1-3/4" truss head screws provided **(Fig. 1)**.

2. Remove adhesive backing from the light block gaskets and press one gasket into place along each side of the modesty panel, centering the gaskets vertically and horizontally **(Fig. 1)**.

3. Fasten a support bracket to the predrilled underside of each adjoining desk top using three (3) #12-11 x 1" truss head screws provided for each bracket **(Fig's. 2 & 3)**.

4. Set the bridge in place between the two desk tops, resting on the support brackets. Fasten the two support brackets to the underside of the bridge work surface using the remaining six (6) #12-11 x 1" truss head screws provided **(Fig's. 3, 4, 4A & 4B)**.

5. Adjust glides to level the desk tops.

6. Slide a lower connector bracket onto the modesty panel flange. Using the bracket as a template, drive two (2) #10 -24 x .625" self drilling screws. To facilitate assembly, use of a pilot hole is recommended. Using the bracket as a template, drill two (2) .147 dia. (#26 drill) pilot holes into the adjoining desk end panel.

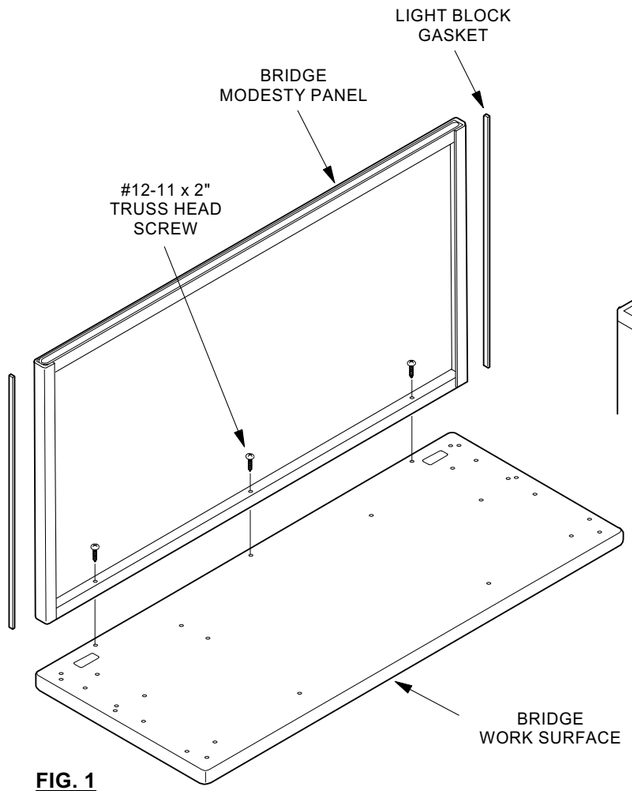


FIG. 1

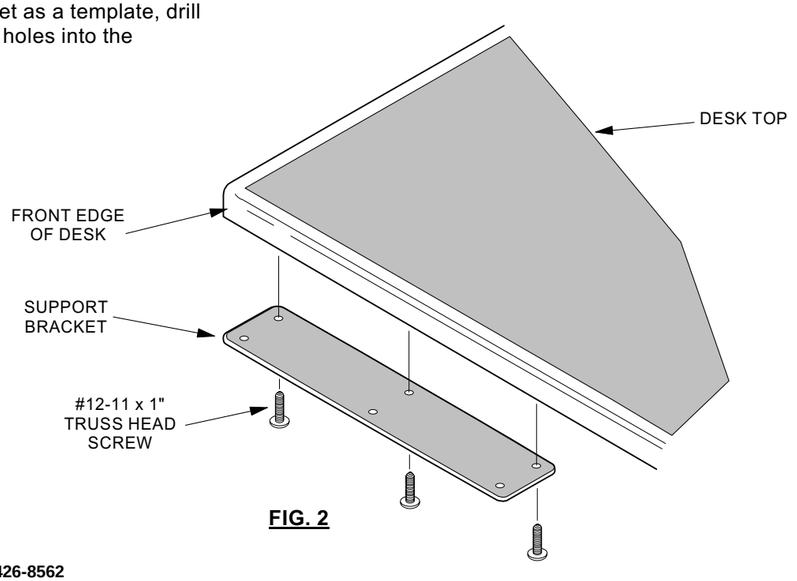


FIG. 2

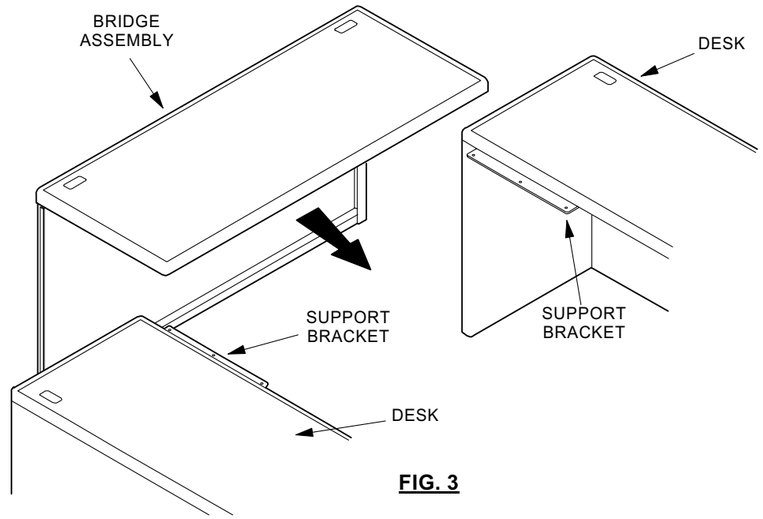


FIG. 3

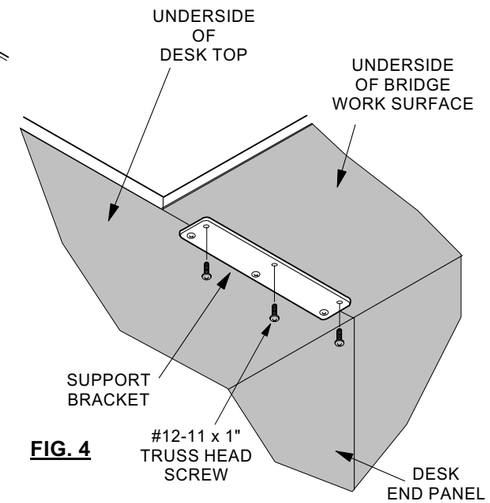


FIG. 4

FIG. 4A

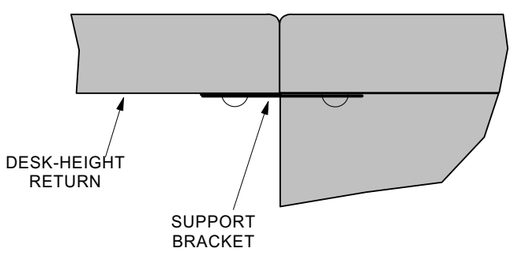


FIG. 4B

FIG. 5

A CONNECTOR BRACKET MUST BE USED TO FASTEN THE MODESTY PANEL TO EACH DESK END PANEL.

CUSTOMER SERVICE PHONE: 1-800-426-8562

HAWORTH®	E.C.O. No: 268-313	Page: 1 OF 1	Part No: 7021-6492	Rev. B