FILLER PANEL KIT


Installation Instructions

NOTE: The filler panel kit consists of one (1) filler panel and one (1) universal retaining clip. The clip retains the interlock mechanism when the filler panel is the uppermost component in the case. No retaining clip is required on credenzas manufactured after 12/1/89, (retaining cover has been factory assembled).

1. Remove the existing filler panel. See installation instruction 7020-8801, page 14. Set the four (4) #10 screws aside.

2. Attach the filler panel near the front of the case using the four (4) #10 screws (Figs. 1, 2, and 3).

3. Align the retaining bracket with the top holes in the interlock channel. Slide hook over one side flange and insert pin into one of the top holes in channel (Figs. 1 and 2).

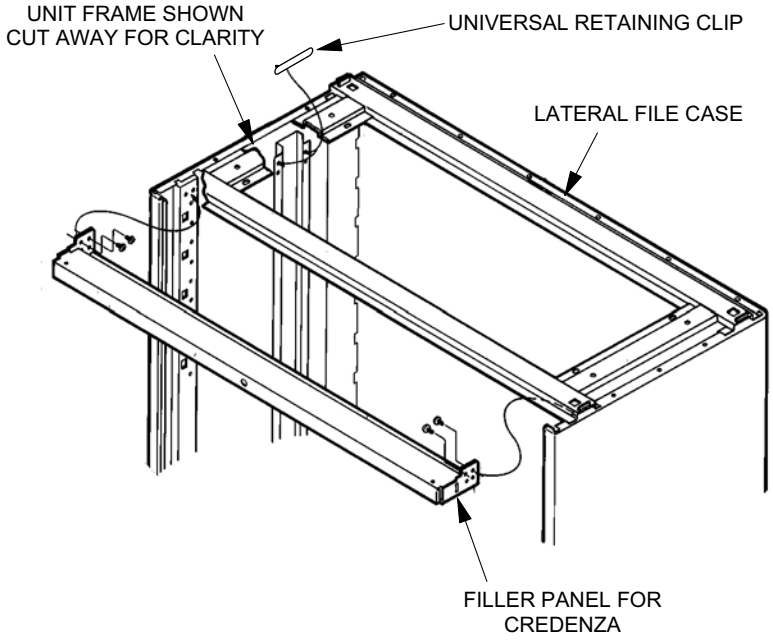

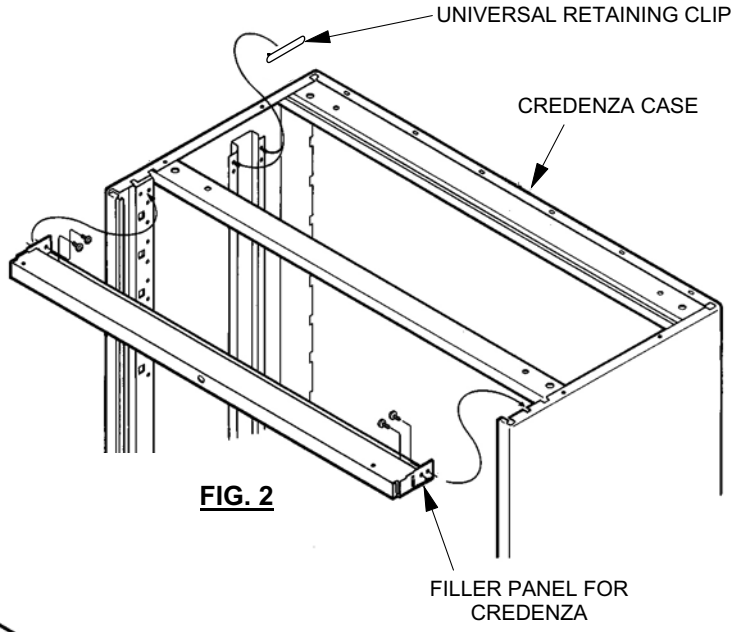


FIG. 2

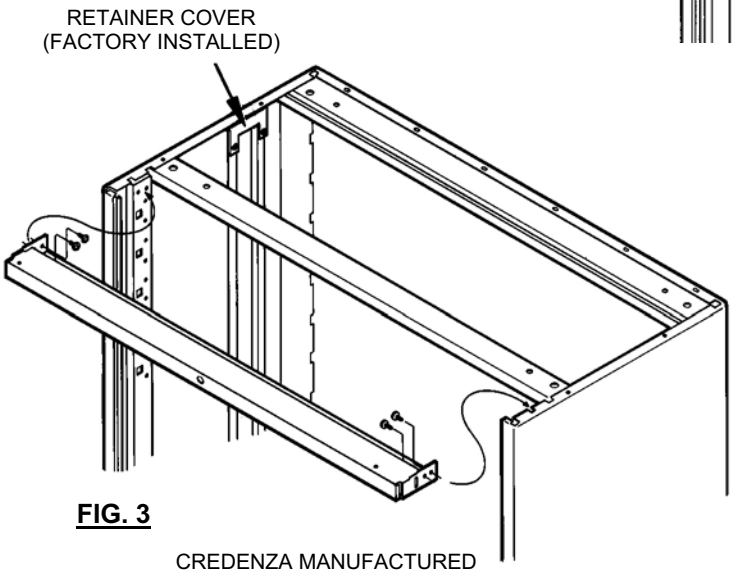


FIG. 3

CREDENZA MANUFACTURED
AFTER 12/1/89

CUSTOMER SERVICE PHONE: 1-800-426-8562