PLACES® FREESTANDING WORK SURFACE SUPPORTED CONVERGENT UNIT

Installation Instruction

The Places Freestanding Worksurface Supported Convergent units are available with two different support columns — the single column style, and the dual leg style.

Single Column Base Support Installation

1. Place work surface upside down on clean, non-abrasive surface.
2. Remove column assembly from installation kit package, and place over pre-drilled holes at round end of work surface. **NOTE:** The 2⅛" x 3¼" rectangular opening should be facing away from the round end of work surface (Fig. 1). Install column assembly with screws supplied in convergent hardware kit.
3. Adjust nylon foot column to work surface height, turning foot clockwise (to raise work surface height), or counterclockwise (to lower work surface height).

Dual-Leg Base Installation

1. Lay convergent worksurface face down on a carpeted area.
2. Place base on worksurface and align holes in base with predrilled holes in worksurface. Attach column with eight (8) #12-11 x 1" truss head screws, provided with dual leg base (Fig. 2).
3. Screw glides into threaded holes at the end of each column. Adjust glides as required to level worksurface.

Bracket Installation

NOTE: Worksurface supported convergent units may only be installed on desk units with full depth end panels or the full depth end panel side of a transition return unit.

1. Fasten convergent support brackets to the predrilled underside of the desk top, using the #12-11 x 1" truss head screws provided with the convergent hardware kit (Fig. 3).

NOTE: The number and location of the convergent support brackets varies depending on the width of the convergent top. 30" wide convergent tops require 2 large brackets and 4 screws per bracket. 36" wide tops require 2 large brackets, one small bracket and 4 screws per bracket. Brackets must be positioned as shown on undersides of tops (Figs. 4A, 4B).

2. Adjust the glides on the desk or transition return unit to level it. Set the convergent unit in place by resting the open end of the convergent top on the convergent support brackets. Slide the convergent top tight against the desk top (Fig. 5).
3. Fasten the convergent unit to the support using the #12-11 x 1" truss head screws provided (Fig. 5).

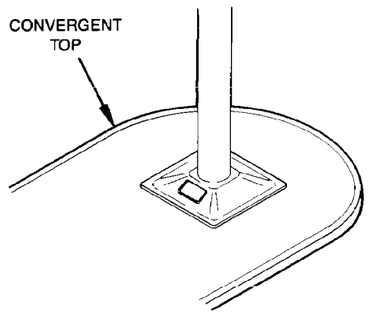


FIG. 1

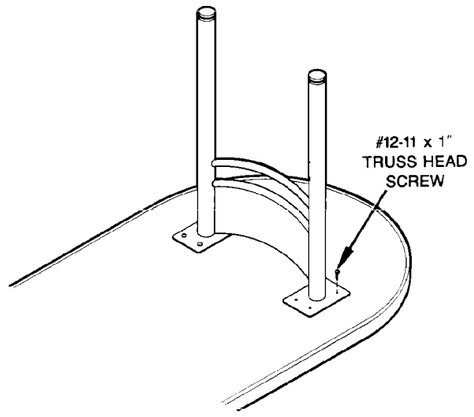


FIG. 2

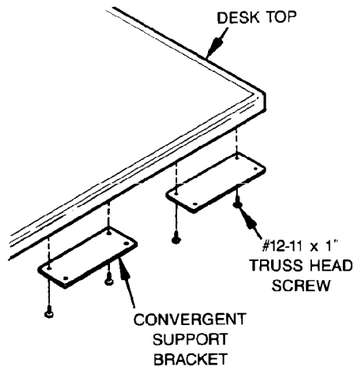


FIG. 3

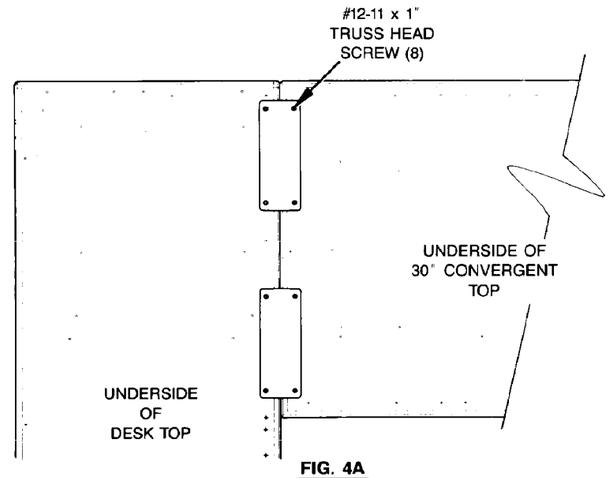


FIG. 4A

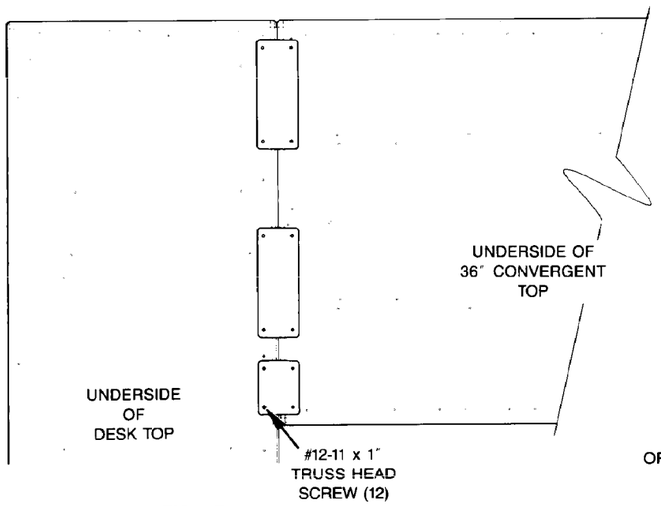


FIG. 4B

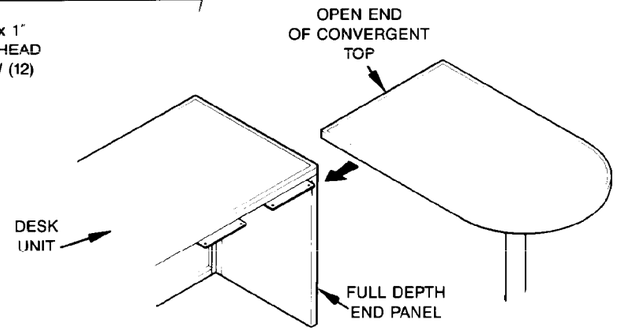


FIG. 5