

ENHANCED PREMISE®/MOXIE™


T-Mount Panel Kit


Installation Instructions


Tools Required




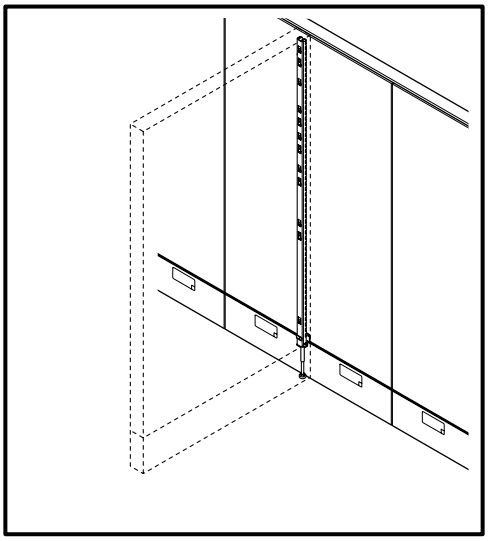

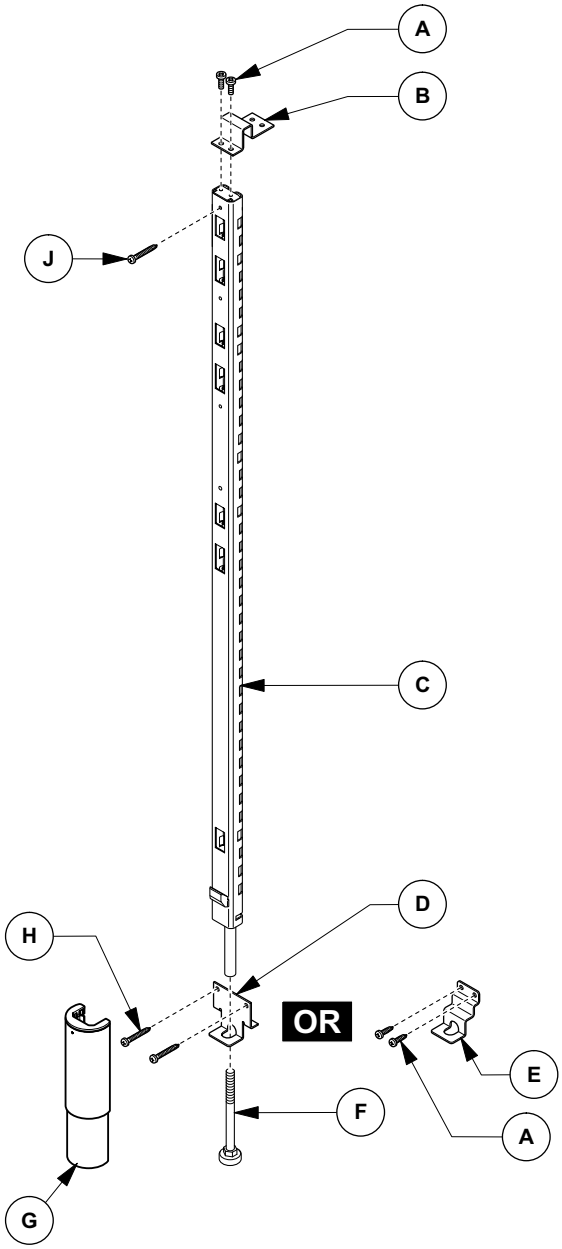

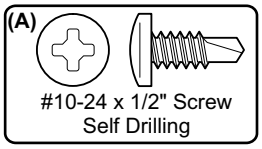

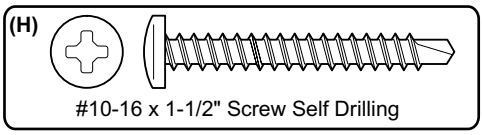

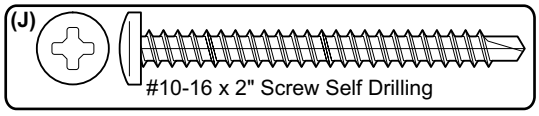



MONO PANEL


1 **Determine location and install bracket (D)**

2 **Install T-mount (C)**

3 **Screw T-mount (C) onto panel (K)**

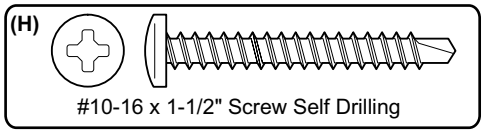

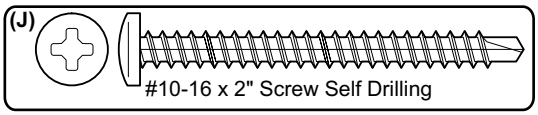

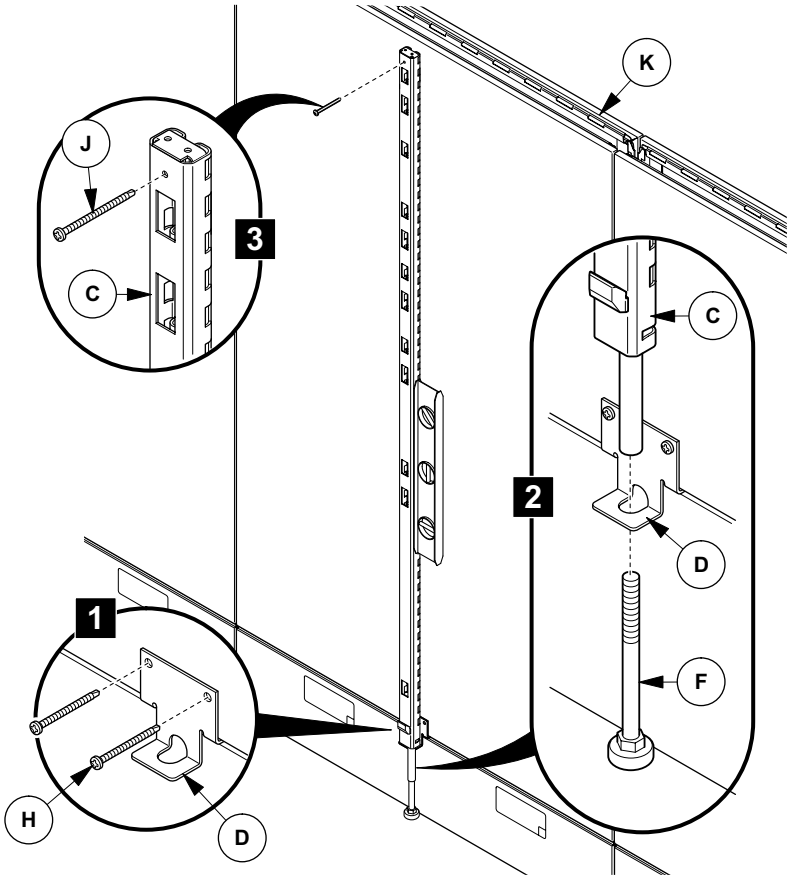



STACK PANEL

1 **Determine location and remove lower pad**

2 **Modify raceway cover (L) as shown**

3 **Install bracket (E)**

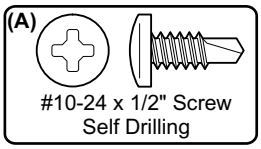

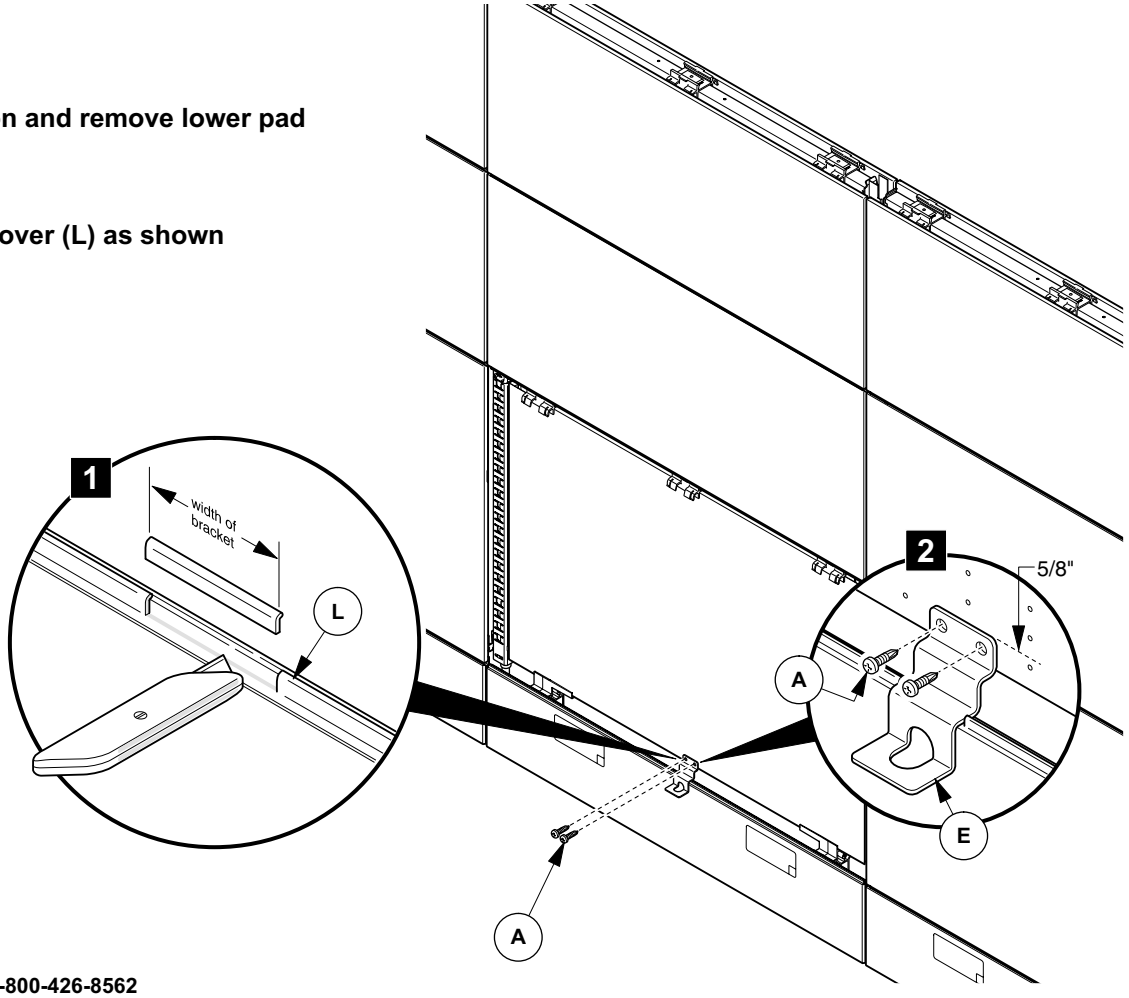


CUSTOMER SERVICE PHONE: 1-800-426-8562

4 **Reinstall lower pad**


5 **Install T-mount (C) through bottom bracket (E)**

6 **Install top bracket (B)**


(A)
#10-24 x 1/2" Screw
Self Drilling

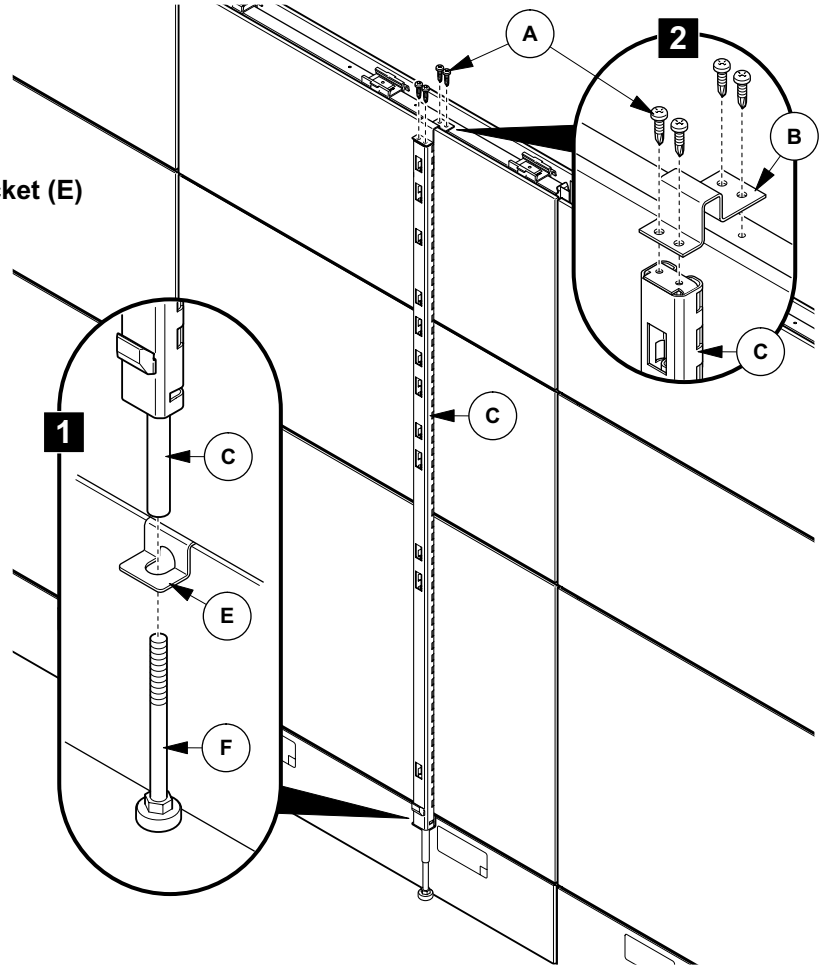

OPEN BASE APPLICATIONS ONLY

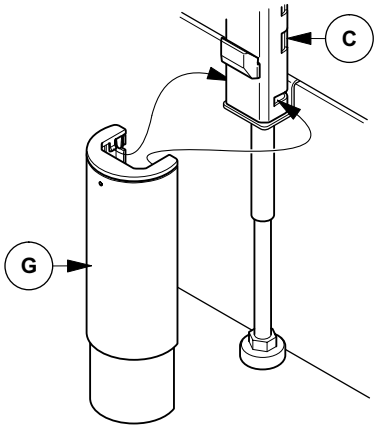

INSTALLING PANEL TO T-MOUNT

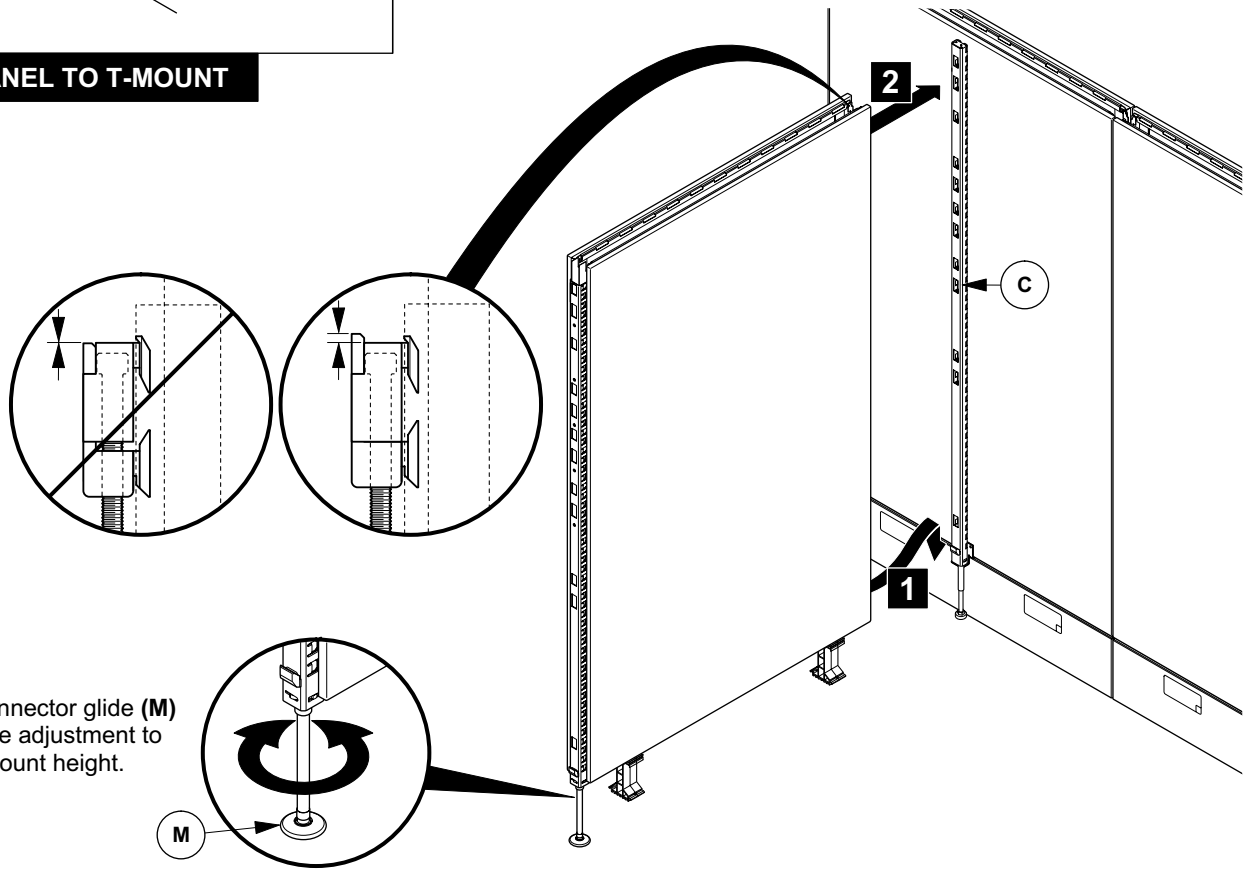

NOTE: Connector glide **(M)** may require adjustment to match T-mount height.