

SERIES K/ PROFILE/ TRIPOLI
3 CLUSTER BASE
CONFERENCE TABLES

Installation Instructions

Tools Required

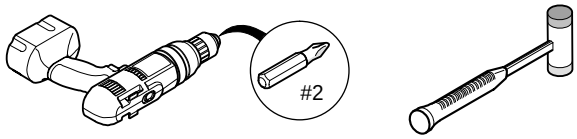

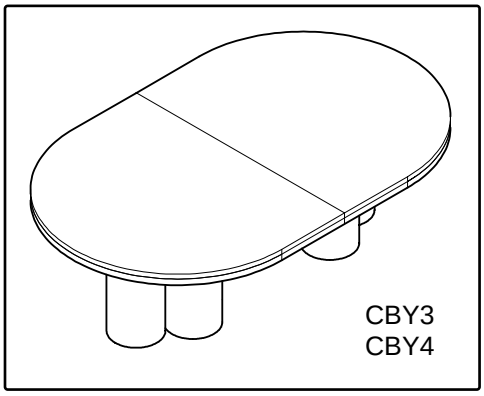

(D)




#8 x 1.50" Pan Head Screw

(L)




#8 x 1.50" Flat Head Screw

(J)





#8 x 3/4" Flat Head Screw

(B)

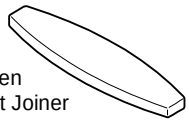

Wooden
Biscuit Joiner

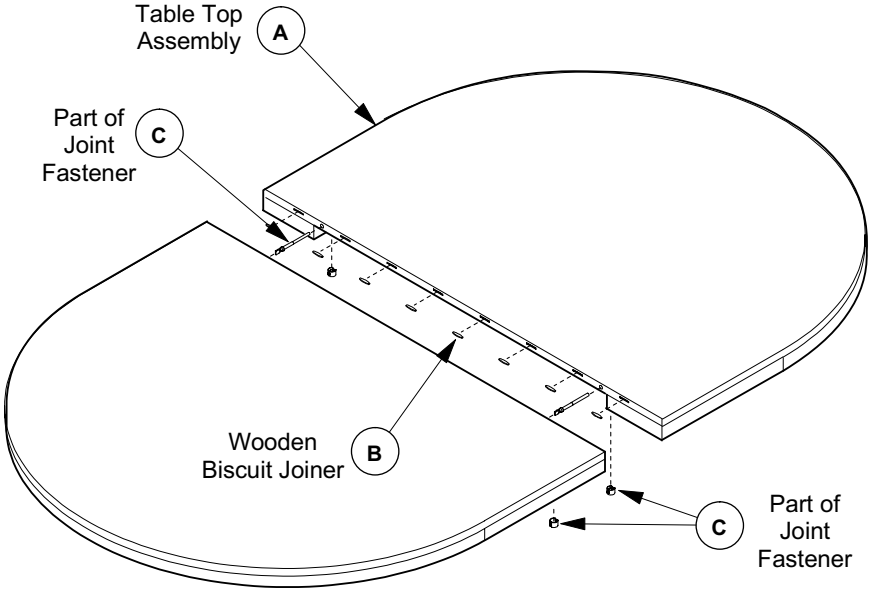

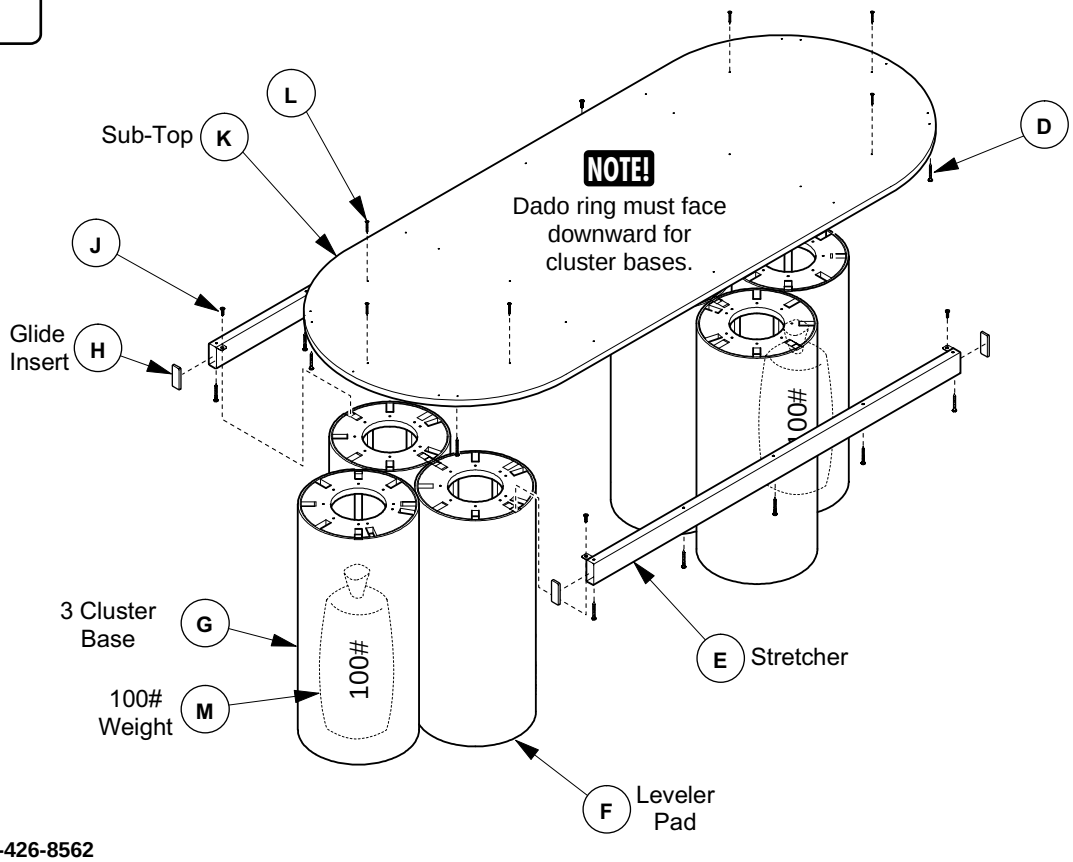


CUSTOMER SERVICE PHONE: 1-800-426-8562

1 Install stretchers (E)


NOTE!
Repeat step for other base.

(J)
#8 x 3/4" Flat Head Screw

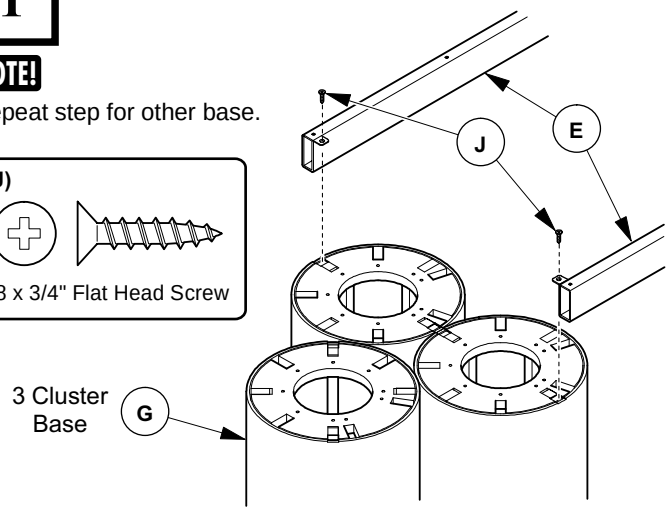

2 Install stretcher inserts (H)


NOTE!
Repeat step for other end.

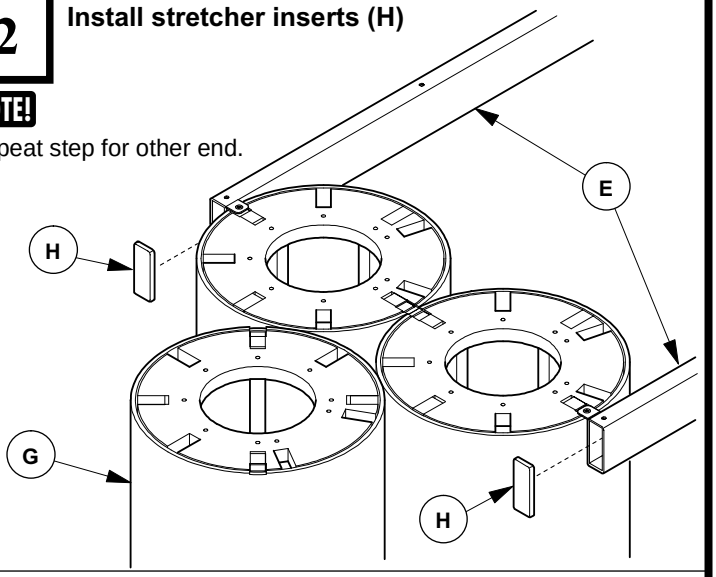


3 Add weights and align sub top (K)

(L)
#8 x 1.50" Flat Head Screw

NOTE!
Dado ring must face downward for cluster bases. Align flat brackets with dado ring.

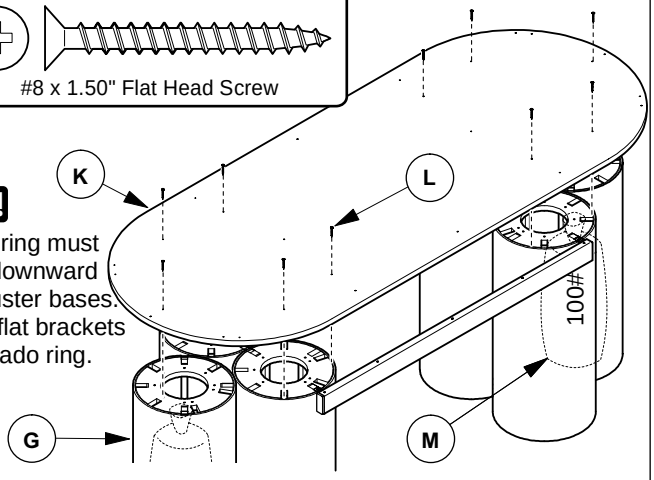

4 If necessary install tops (A) together

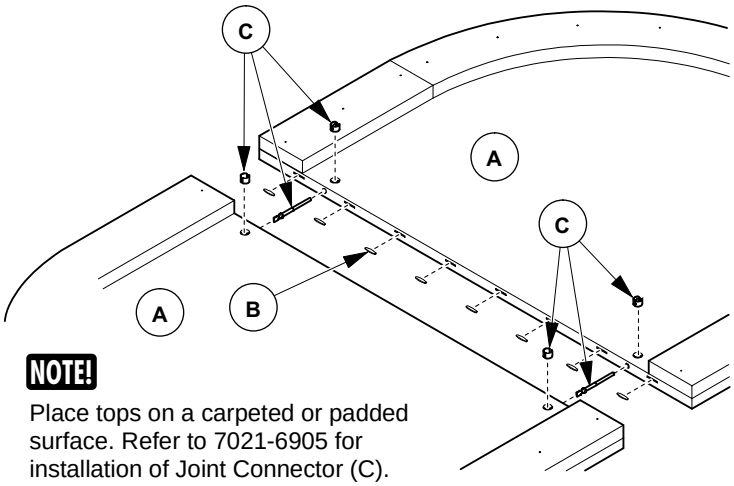

NOTE!
Place tops on a carpeted or padded surface. Refer to 7021-6905 for installation of Joint Connector (C).

5 Install top (A) and level table

(D)
#8 x 1.50" Pan Head Screw

