


SERIES K/ PROFILE/ TRIPOLI
CYLINDER BASE
CONFERENCE TABLES

Installation Instructions

Tools Required

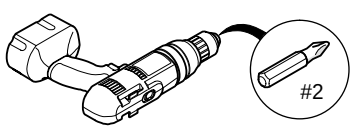

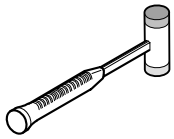

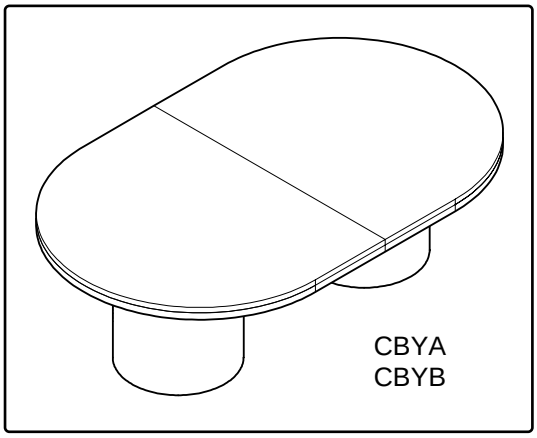

(D)




#8 x 1.50" Pan Head Screw

(L)




#8 x 1.50" Flat Head Screw

(J)




#8 x 3/4" Flat Head Screw

(B)

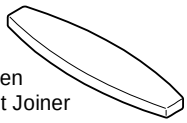

Wooden
Biscuit Joiner

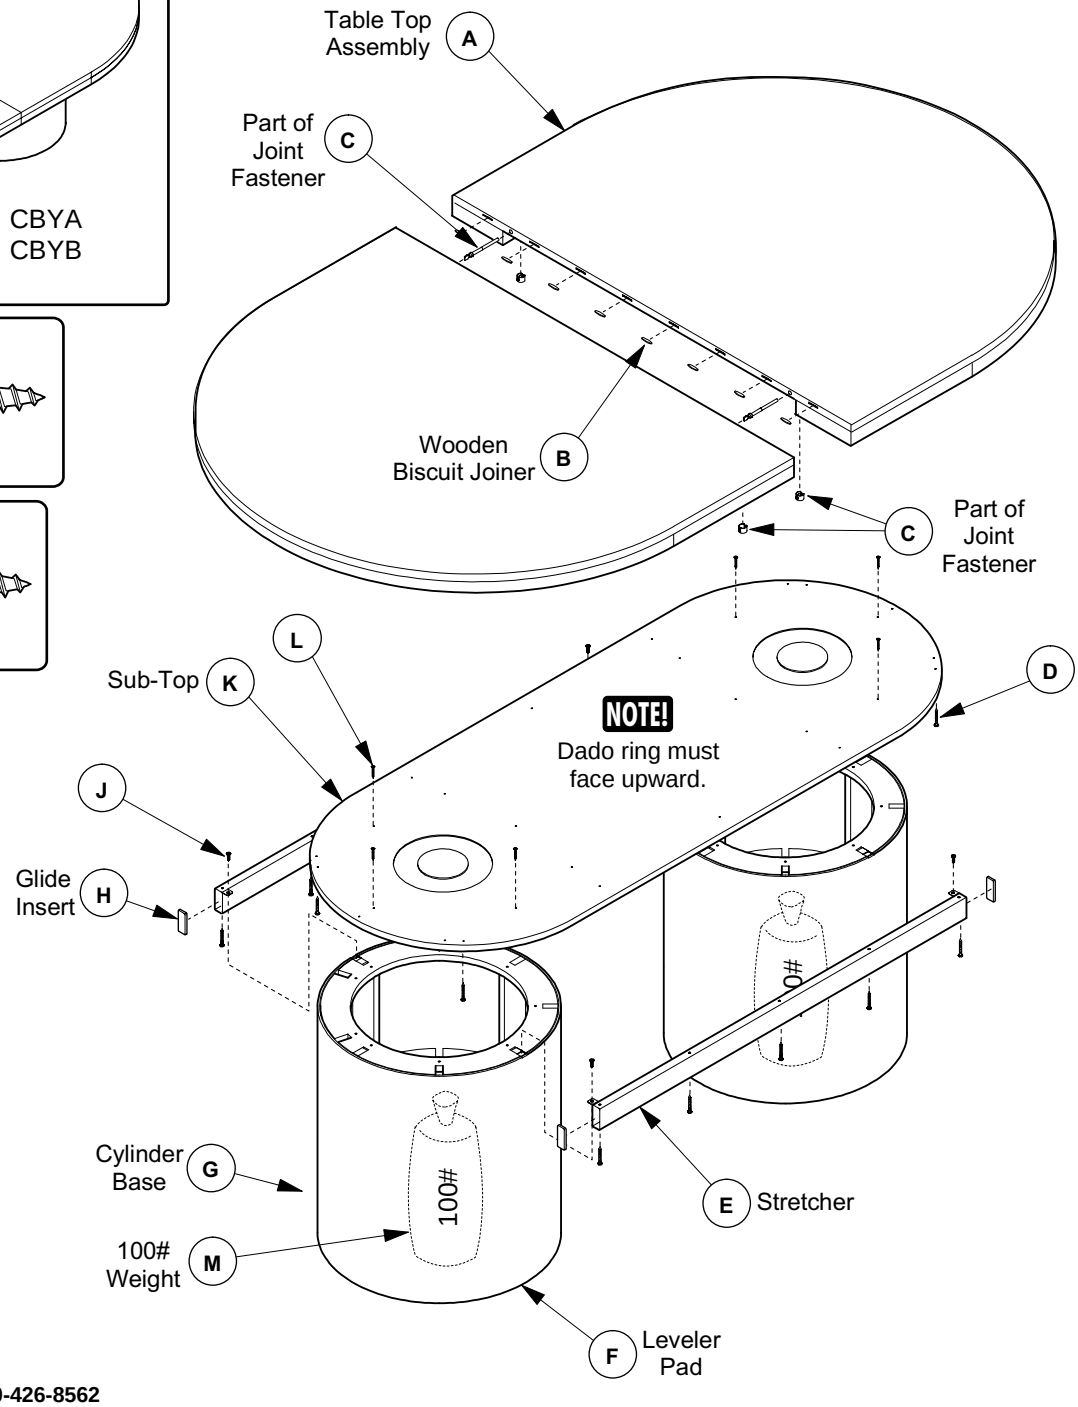


1 Install stretchers (E)


NOTE!

Repeat step for other base.

(J)




#8 x 3/4" Flat Head Screw

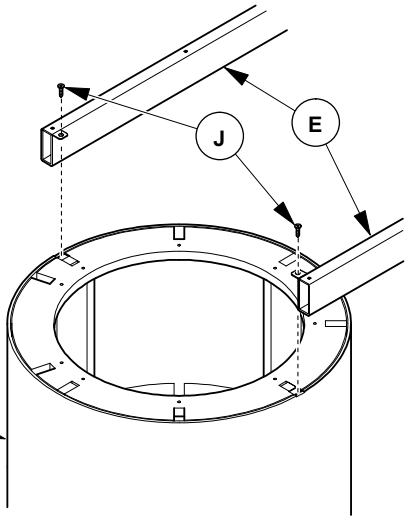

2 Install stretcher inserts (H)


NOTE!

Repeat step for other end.

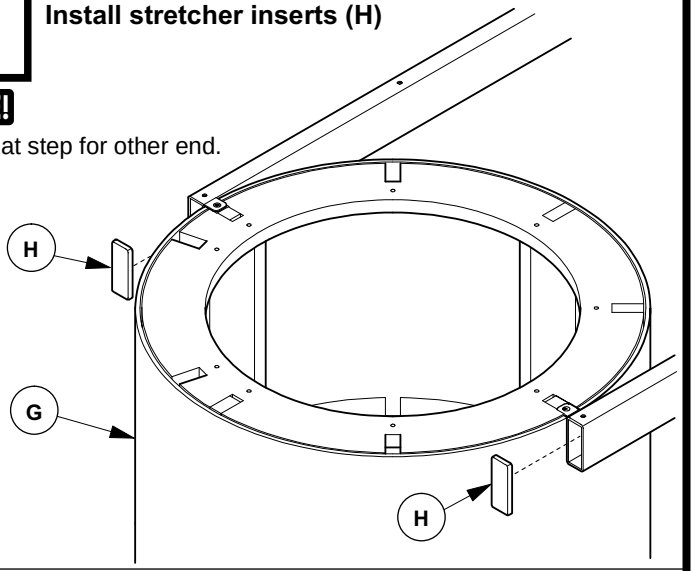

3 Add weights and align sub top (K)

(L)




#8 x 1.50" Flat Head Screw

NOTE!

Dado ring must face upward.

4 If necessary install tops (A) together

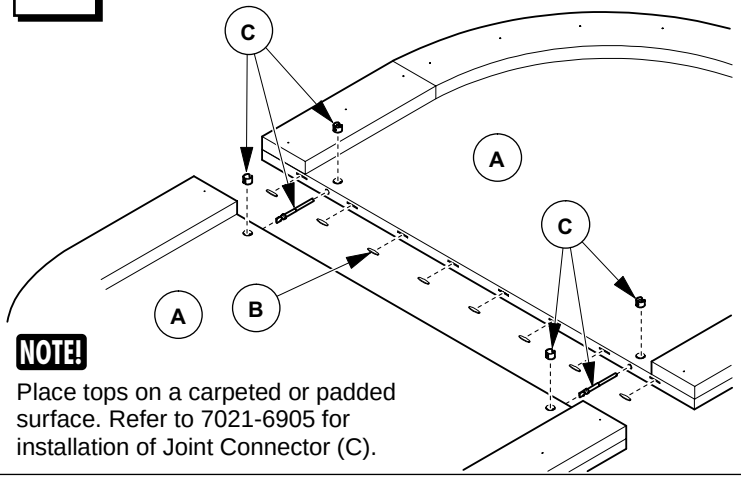

NOTE!


Place tops on a carpeted or padded surface. Refer to 7021-6905 for installation of Joint Connector (C).

5 Install top (A) and level table

(D)



#8 x 1.50" Pan Head Screw

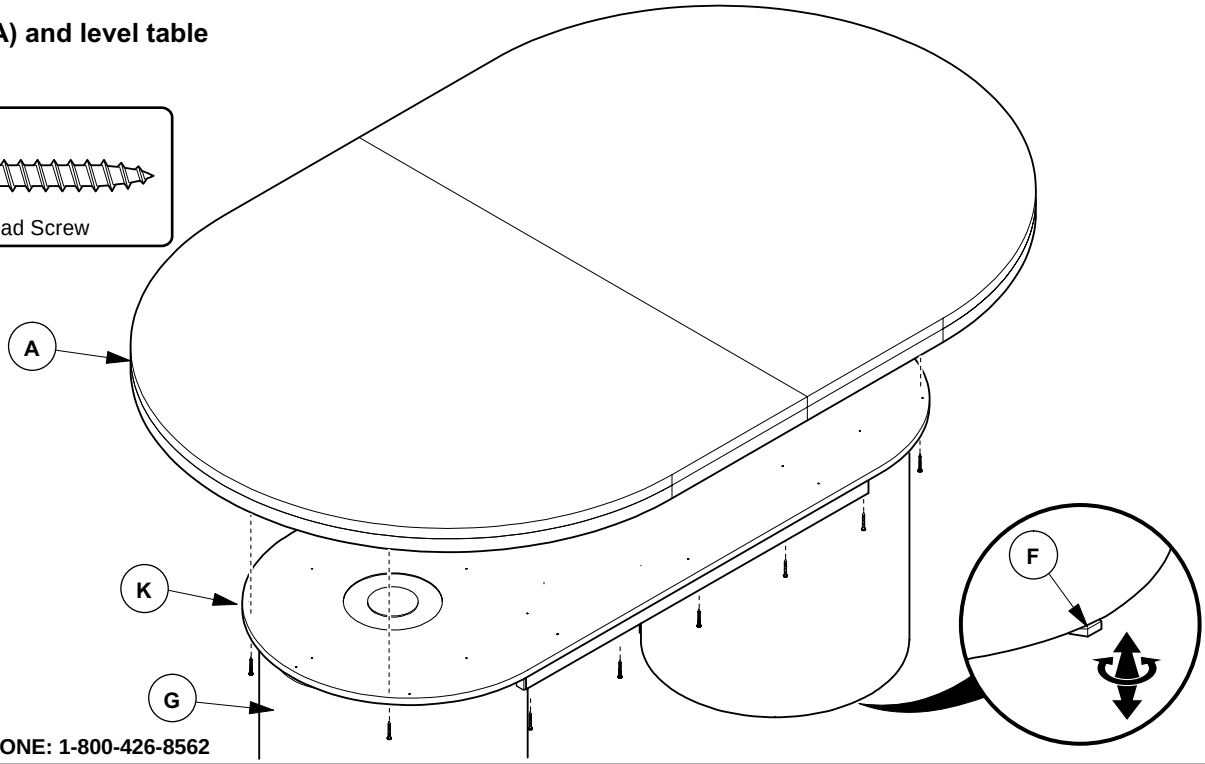

CUSTOMER SERVICE PHONE: 1-800-426-8562