


SERIES K/ PROFILE/ TRIPOLI
HALF CYLINDER BASE
CONFERENCE TABLES

Installation Instructions

Tools Required

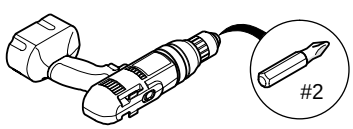

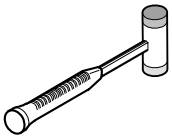

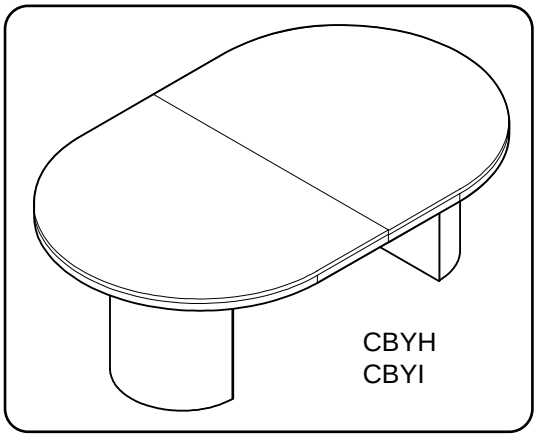

(D)




#8 x 1.50" Pan Head Screw

(L)




#8 x 1.50" Flat Head Screw

(J)




#8 x 3/4" Flat Head Screw

(B)

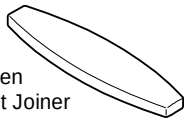


Wooden
Biscuit Joiner

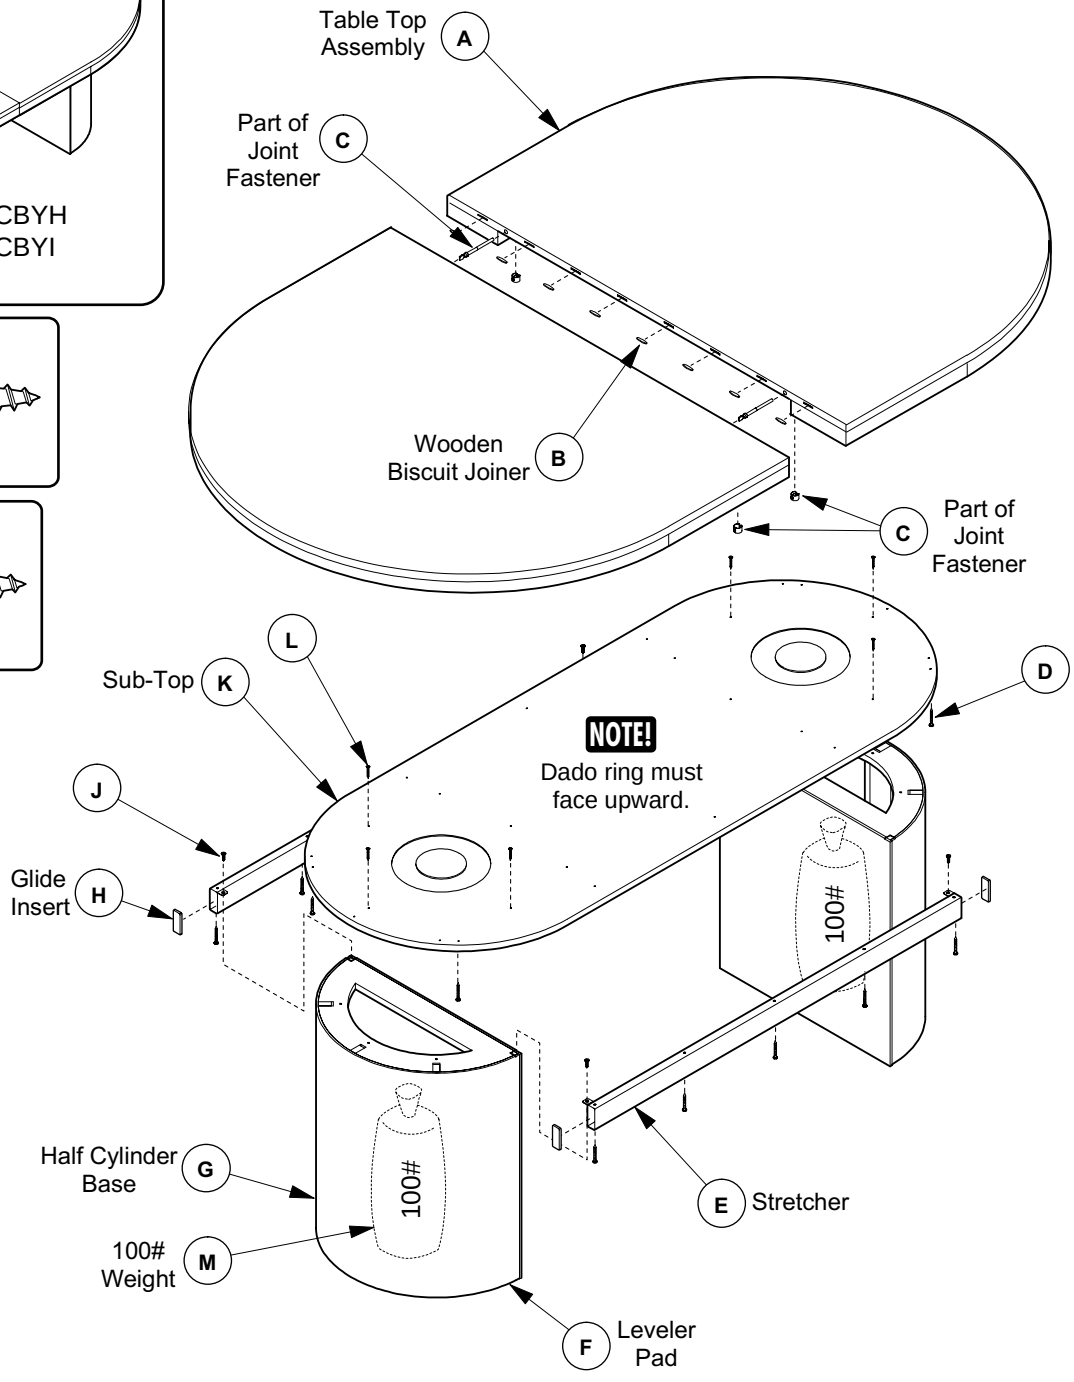


1 Install stretchers (E)

(J)




#8 x 3/4" Flat Head Screw

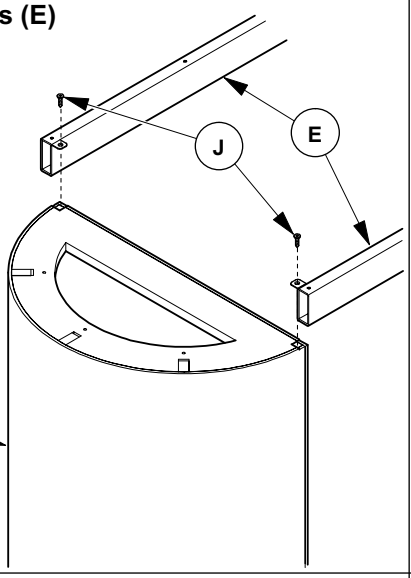


2 Install stretcher inserts (H)

NOTE!

Repeat step for other base.

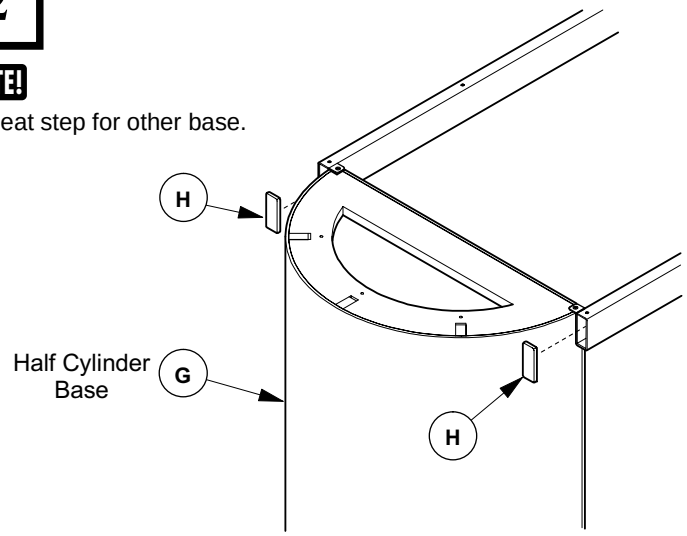


3 Add weights and align sub top (K)

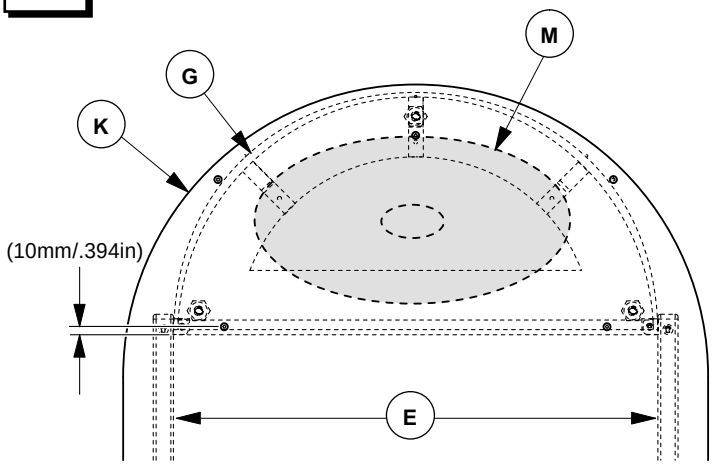

4 Secure sub top (K)


(L)




#8 x 1.50" Flat Head Screw

NOTE!

Dado ring must face upward.

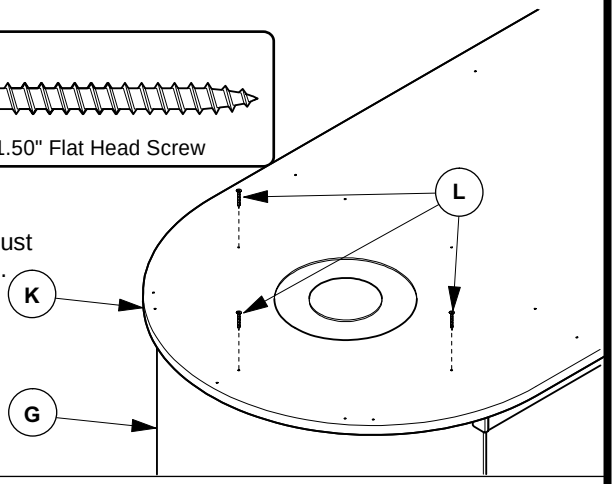

5 If necessary install tops (A) together

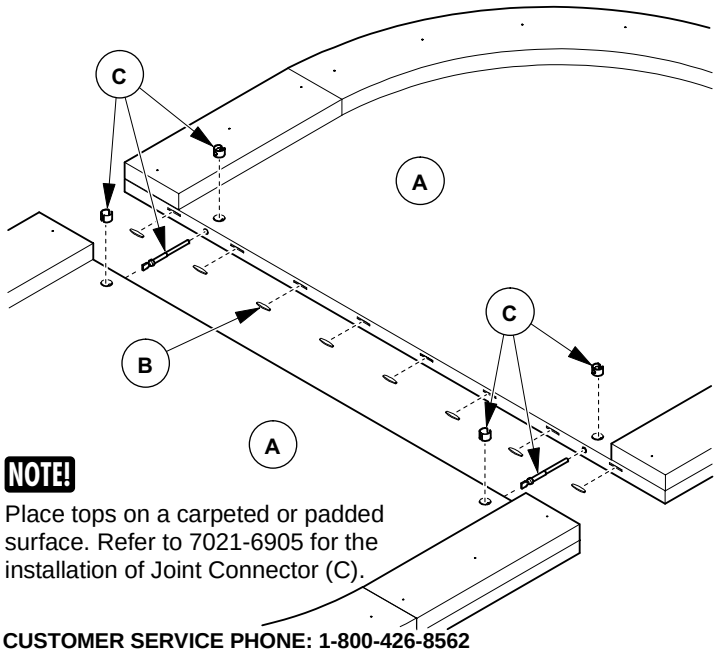


NOTE!

Place tops on a carpeted or padded surface. Refer to 7021-6905 for the installation of Joint Connector (C).

6 Install top (A) and level table

(D)

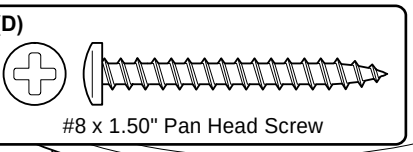

#8 x 1.50" Pan Head Screw

CUSTOMER SERVICE PHONE: 1-800-426-8562