

SERIES K/ PROFILE/ TRIPOLI
"X" BASE CONFERENCE
TABLES

Installation Instructions

Tools Required

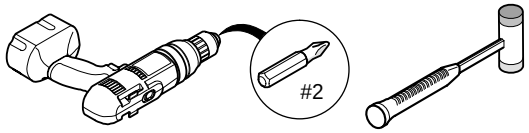

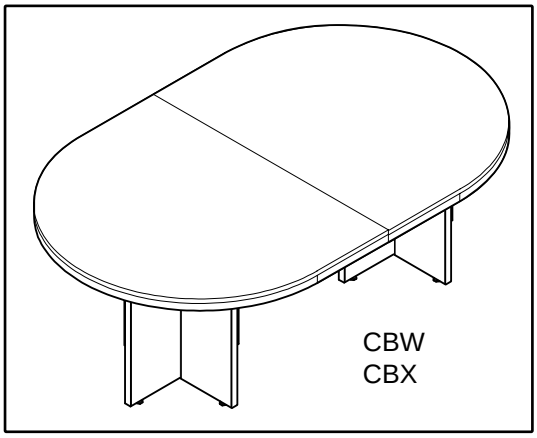

(D)




#8 x 1.50" Pan Head Screw

(M)




#8 x 1.50" Flat Head Screw

(K)




#8 x 3/4" Flat Head Screw

(G)





#14 x 1/2" Cross Recess Modular Clip Screw

(B)

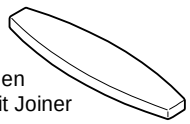


Wooden Biscuit Joiner

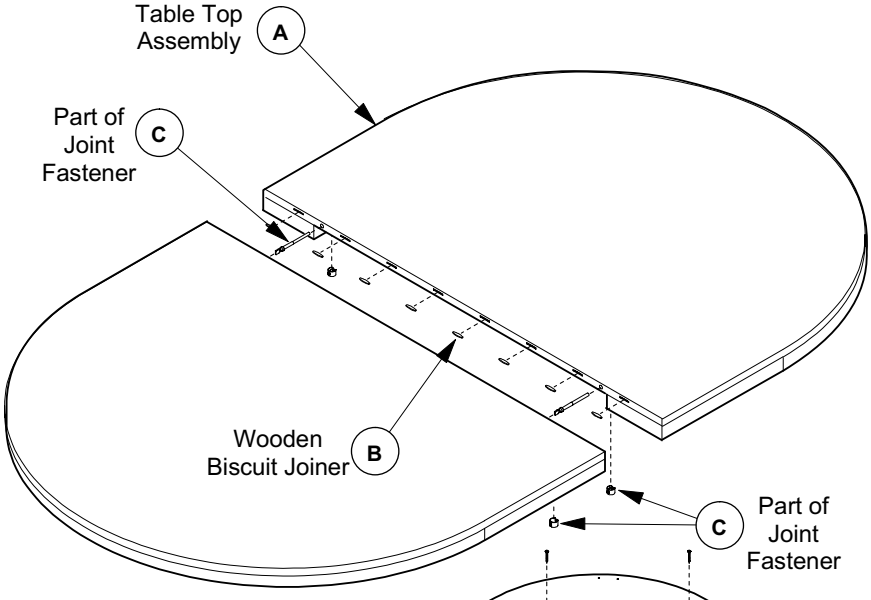


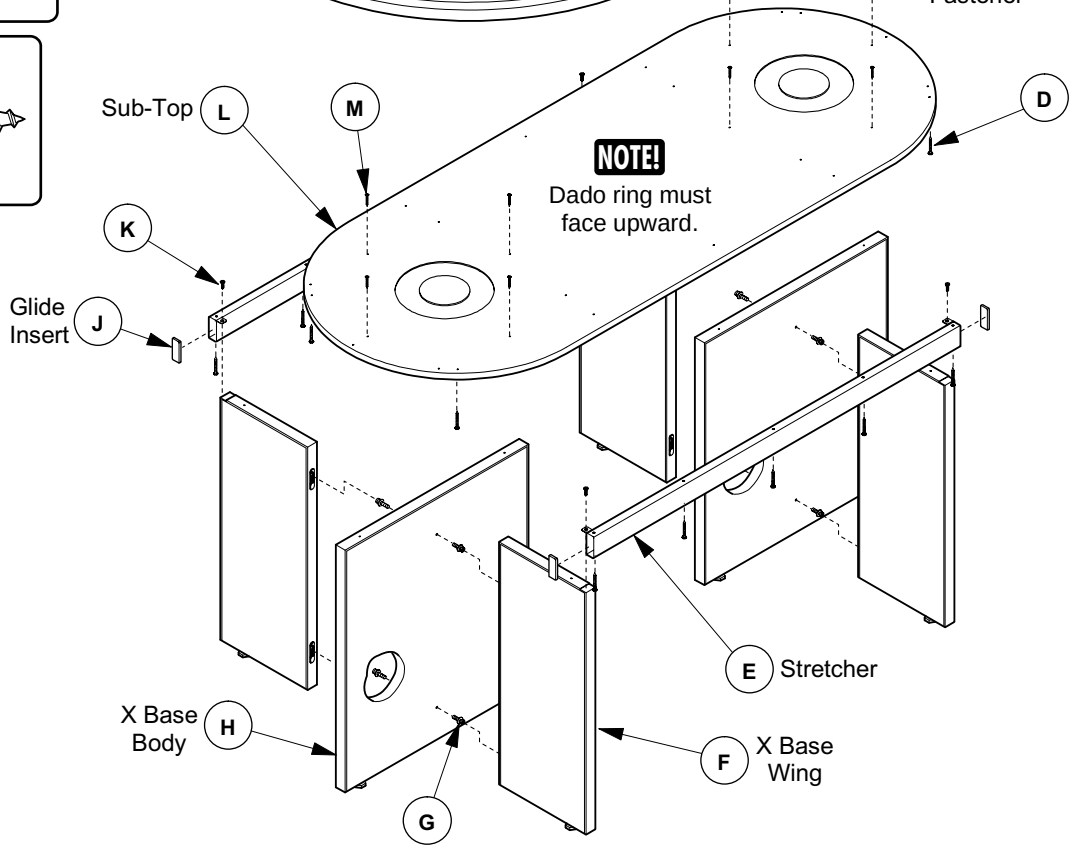

1 Install X base wings (F) to X base body (H)

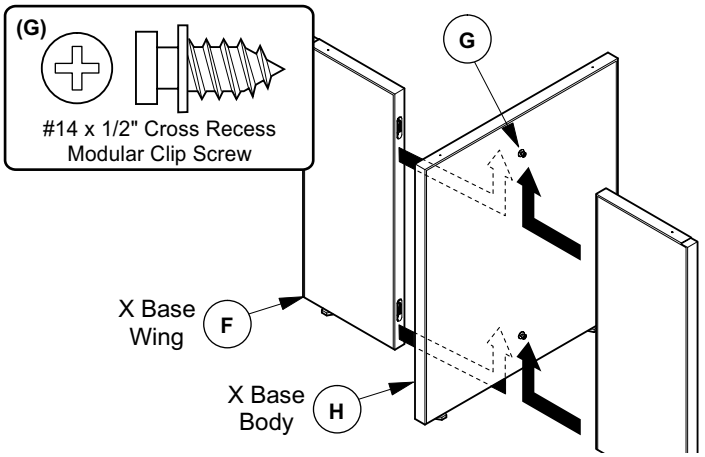


2 Install stretchers (E)

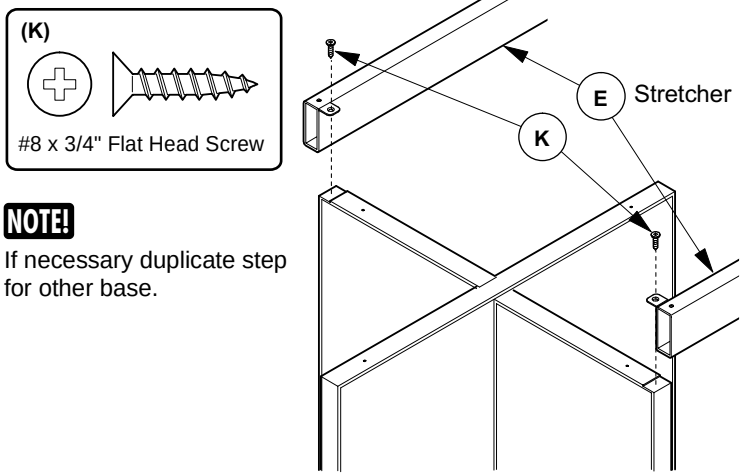


NOTE!
If necessary duplicate step for other base.

3 Install stretcher inserts (J)

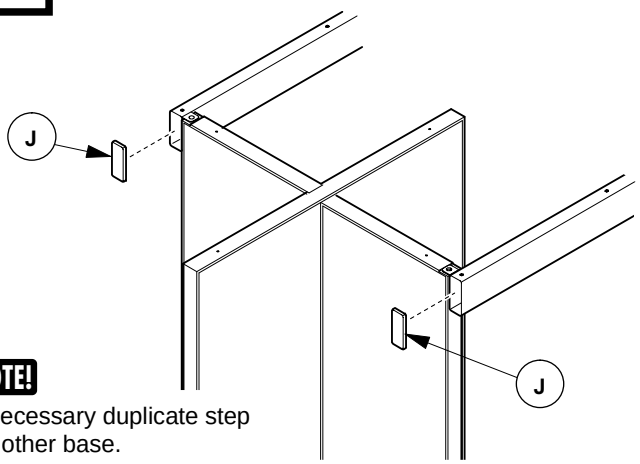


NOTE!
If necessary duplicate step for other base.

4 Install sub top (L)

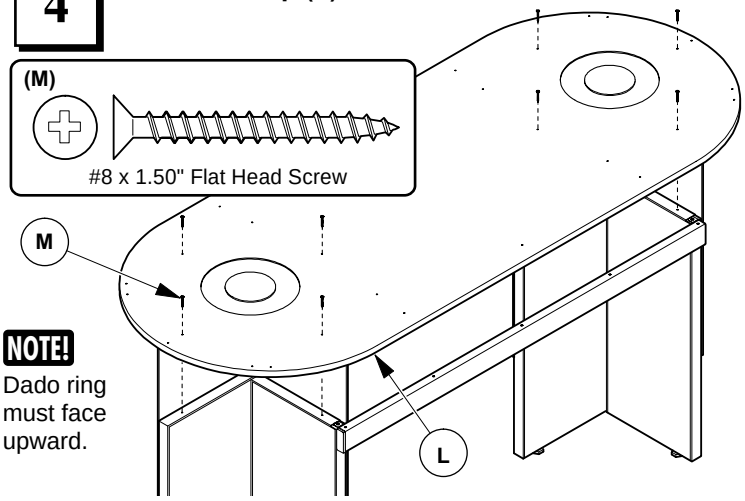


NOTE!
Dado ring must face upward.

5 If necessary install tops (A) together

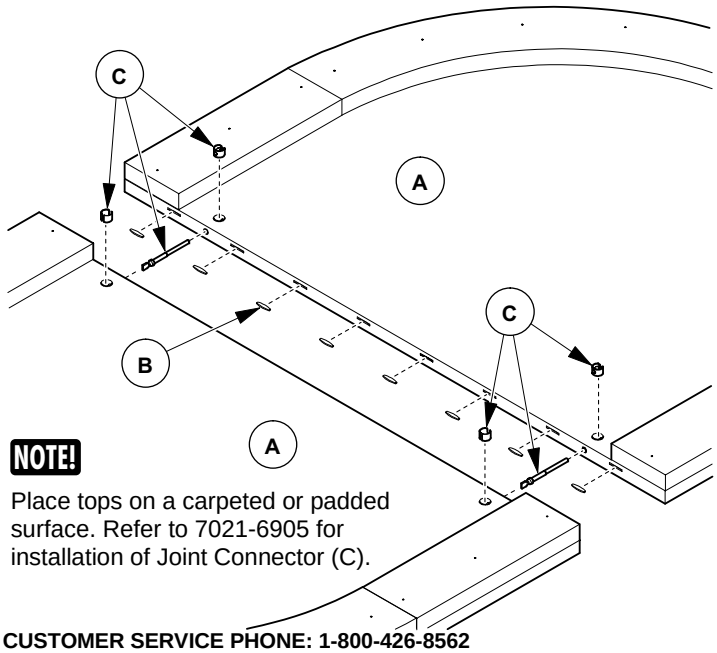

NOTE!
Place tops on a carpeted or padded surface. Refer to 7021-6905 for installation of Joint Connector (C).

6 Install top (A) and level table

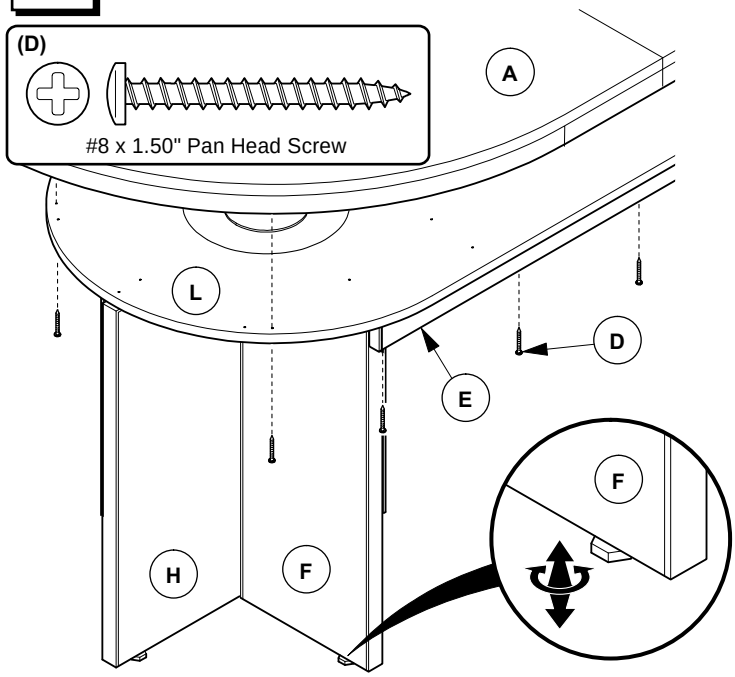

CUSTOMER SERVICE PHONE: 1-800-426-8562