


SERIES K/ PROFILE/ TRIPOLI
SLAB BASE CONFERENCE
TABLES

Installation Instructions

Tools Required

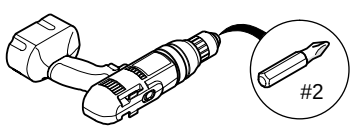

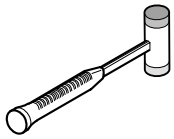

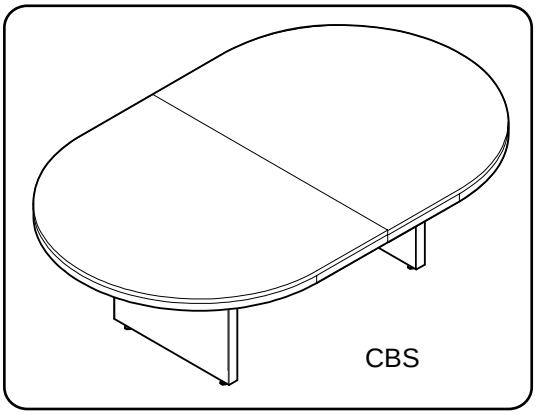

(D)



#8 x 1.50" Pan Head Screw

(L)




#8 x 1.50" Flat Head Screw

(J)




#8 x 3/4" Flat Head Screw

(N)





#8 x 3/4" Pan Head Screw

(B)

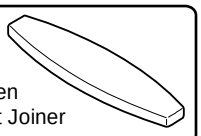


Wooden
Biscuit Joiner

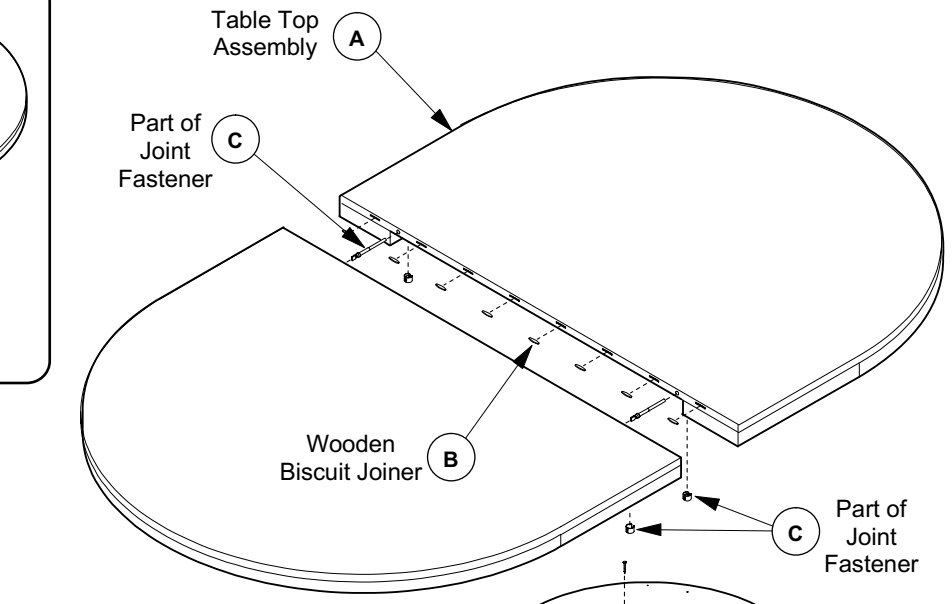

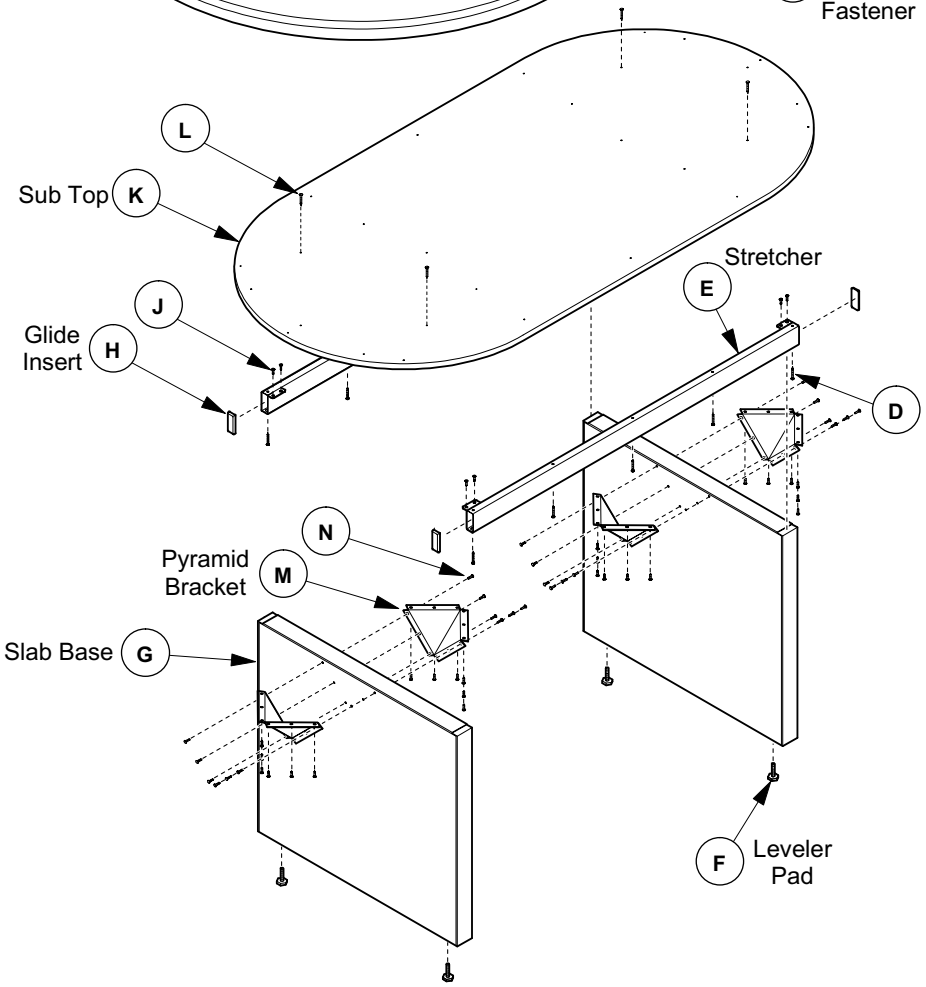


1 Install stretchers (E) and inserts (H)

NOTE!
Repeat step for other base.

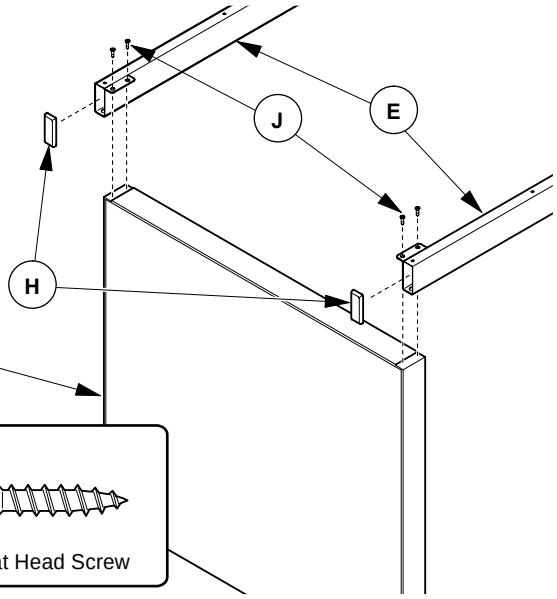


(J)



#8 x 3/4" Flat Head Screw


2 Install sub top (K)

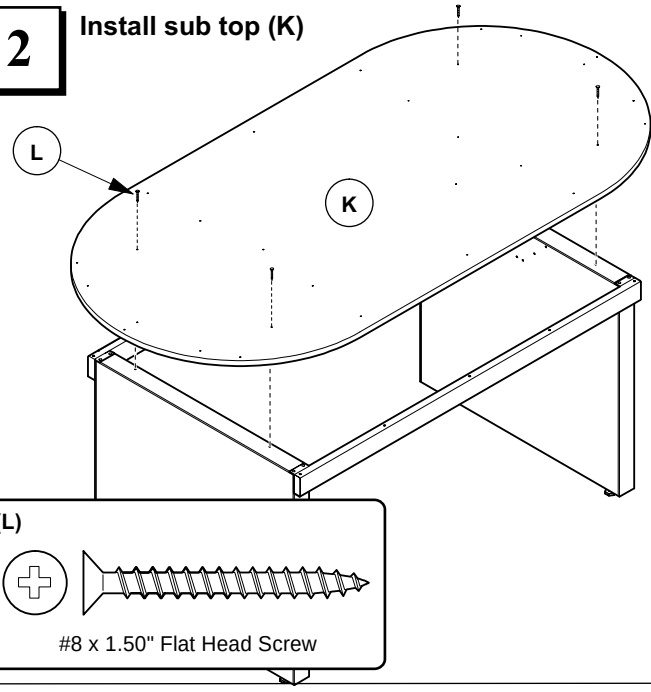

(L)

#8 x 1.50" Flat Head Screw


3 If necessary install tops (A) together

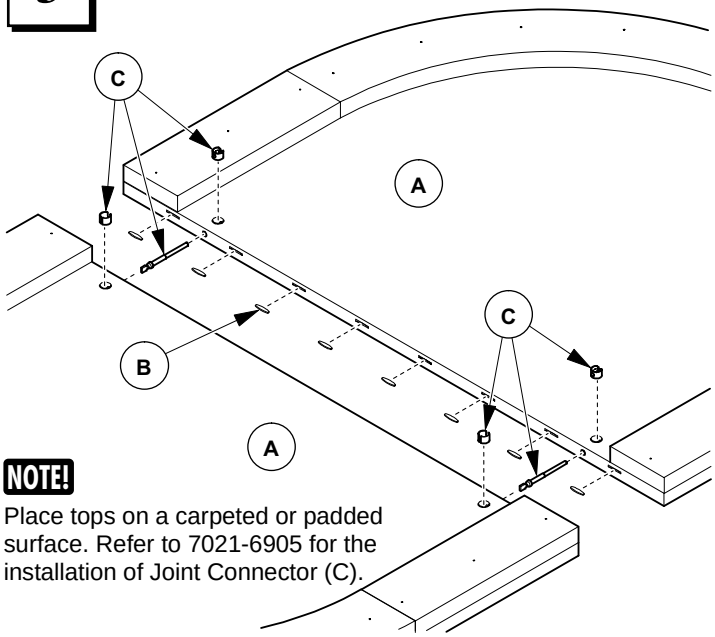

NOTE!
Place tops on a carpeted or padded surface. Refer to 7021-6905 for the installation of Joint Connector (C).

4 install top (A) and level table

NOTE!
Ensure top is equally spaced on both sides and ends.

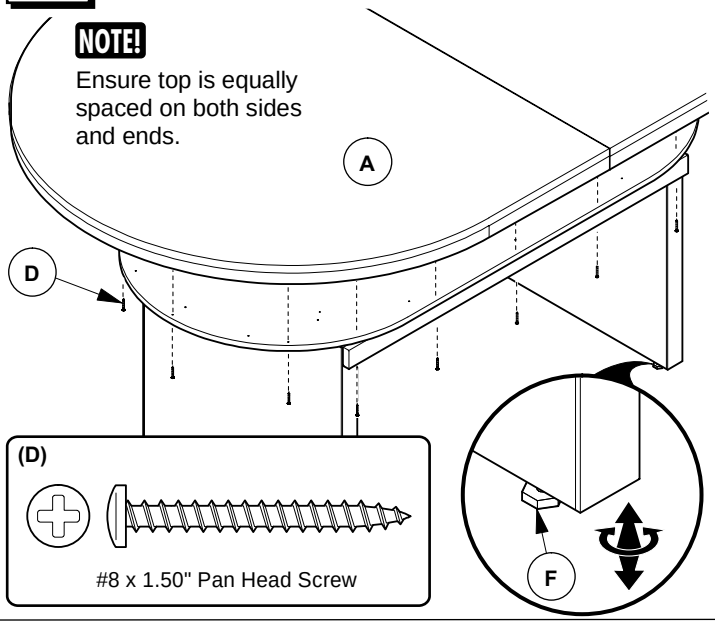



(D)

#8 x 1.50" Pan Head Screw


5 Install pyramid brackets (M)

NOTE!
Use two pyramid brackets for each slab base. Repeat step for other base.

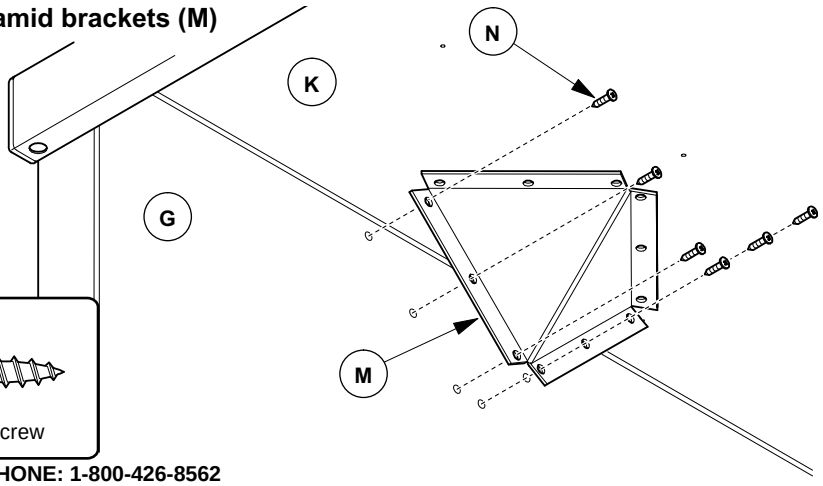

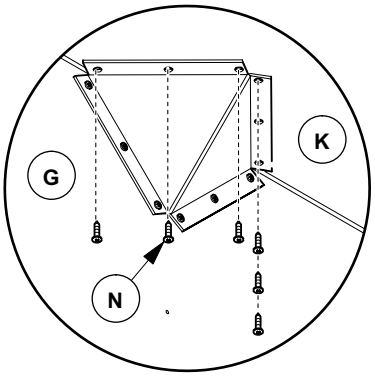

(N)



#8 x 3/4" Pan Head Screw